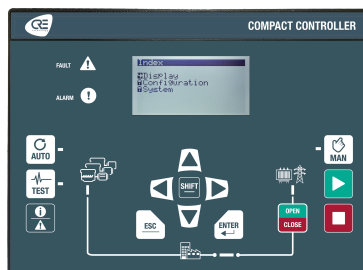




# OPERATOR MANUAL

## MASTER COMPACT 1B



CRE TECHNOLOGY  
Zone des Templiers - SOPHIA ANTIPOLIS  
130 allée Charles-Victor Naudin  
06410 BIOT - FRANCE  
Phone: +33 (0)4.92.38.86.82  
[www.cretechnology.com](http://www.cretechnology.com)  
[info@cretechnology.com](mailto:info@cretechnology.com)

COPYRIGHT © CRE TECHNOLOGY. ALL RIGHTS RESERVED

## TABLE OF CONTENTS

<b>LIST OF FIGURES.....</b>	<b>4</b>
<b>DESCRIPTION.....</b>	<b>6</b>
Front face.....	6
Rear face.....	9
Panel mounting.....	10
UL requirements.....	12
<b>USAGE.....</b>	<b>14</b>
Password.....	14
LCD.....	15
Wiring.....	17
Digital inputs.....	24
Digital/Relays outputs.....	26
Analog inputs.....	27
Hysteresis (digital input).....	32
Hysteresis.....	33
<b>SETTINGS.....</b>	<b>35</b>
Circuit breakers.....	35
Synchronization.....	39
Load/Unload ramp.....	42
kW/kVAR regulation.....	43
Protections.....	44
Events.....	47
Control loop PID.....	48
<b>ADVANCED SETTINGS.....</b>	<b>49</b>
Static paralleling.....	49
Load shedding.....	50
Unload breakers configuration.....	52
<b>MAINS APPLICATION.....</b>	<b>56</b>
Change over mode.....	56
No break change over.....	61
Permanent.....	66
With hybrid power plants.....	70
Multiple mains.....	71
<b>ADVANCED FUNCTIONS.....</b>	<b>73</b>
Easy Flex®.....	73
User variables.....	81
Alternative selection.....	82
Scheduler.....	84
Modbus TCP Mapping.....	87
Logger.....	88
<b>COMMUNICATIONS.....</b>	<b>89</b>
Network.....	89
Modbus TCP/IP.....	91
CRE-Link®.....	94
CANopen.....	95
Modbus client.....	97

# OPERATOR MANUAL

CAN bus good practices.....	100
<b>APPENDICES.....</b>	<b>103</b>
Enter a code.....	103
Troubleshooting.....	104
Certifications.....	108
Software variables.....	109

## LIST OF FIGURES


Figure 1: Front face of a MASTER COMPACT 1B controller.....	6
Figure 2: Rear face of a MASTER COMPACT 1B controller.....	9
Figure 3: Simplified wiring diagram.....	9
Figure 4: Panel cutout.....	11
Figure 5: Index menu.....	15
Figure 6: Wiring recommendations.....	18
Figure 7: Wiring of the lower terminals.....	20
Figure 8: Diagram high leg delta.....	22
Figure 9: 12VDC power supply wiring.....	23
Figure 10: Chronogram of the digital inputs delays.....	25
Figure 11: Chronogram of the digital/relays outputs pulse length and activation delay.....	26
Figure 12: Analog input configuration.....	27
Figure 13: Analog input curve library.....	28
Figure 14: A-1 : 2 wires analog sensor.....	28
Figure 15: A-2 : 1 wire analog sensor.....	29
Figure 16: Digital input configuration.....	29
Figure 17: B-1 : Digital sensor 2 wires.....	30
Figure 18: B-2 : Digital sensor 1 wire.....	30
Figure 19: Coil control chronogram.....	37
Figure 20: Synchronization chronogram.....	39
Figure 21: Application example using phase offset.....	41
Figure 22: Load/Unload ramp chronogram.....	42
Figure 23: Reattempt to close after an electrical fault.....	46
Figure 24: Sequence of load shedding.....	51
Figure 25: Example of application with unload breakers.....	54
Figure 26: Unload breakers behavior.....	55
Figure 27: Change over mode functions.....	56
Figure 28: Change over mode during a Mains failure.....	57
Figure 29: Change over mode with remote start.....	58
Figure 30: Change over : operating mode diagram.....	60
Figure 31: No break change over with remote start.....	61
Figure 32: No break change over when the remote start is off.....	62
Figure 33: No break change over : operating mode diagram.....	64
Figure 34: Permanent mode.....	66
Figure 35: Permanent : operating mode diagram.....	68
Figure 36: Multiple mains.....	71
Figure 37: Easy Flex® list of variables.....	73
Figure 38: Using read only and read/write variables.....	73
Figure 39: Adding a variable block to the Easy Flex® variables area.....	74
Figure 40: Drag and drop of a variable in an instruction.....	74

Figure 41: Easy Flex® list of operators.....	74
Figure 42: Drag and drop of an operator in an instruction.....	75
Figure 43: Example of equation.....	75
Figure 44: Setting the NOT function of a variable block.....	76
Figure 45: Setting the Timer ON/Timer OFF function of a variable block.....	76
Figure 46: Setting the assignment type of an instruction.....	76
Figure 47: Example of assignment.....	77
Figure 48: Adding an instruction to a condition.....	77
Figure 49: Adding an instruction to a function.....	78
Figure 50: Editing a function.....	78
Figure 51: Deleting an instruction through drag and drop.....	79
Figure 52: Easy Flex® debug mode.....	79
Figure 53: Page of the function Alternative selection.....	82
Figure 54: Adding variables button.....	82
Figure 55: Equation block definition.....	82
Figure 56: Scheduler icons definition.....	84
Figure 57: Scheduler with an event without periodicity.....	84
Figure 58: Form of the scheduler.....	85
Figure 59: Scheduler supervision.....	85
Figure 60: Modbus connection settings menu.....	97
Figure 61: Modbus server settings menu.....	98
Figure 62: Modbus reception menu.....	98
Figure 63: Modbus transmission menu.....	98
Figure 64: CAN bus accepted wiring topologies.....	100
Figure 65: CAN bus wiring example.....	100
Figure 66: Wrong placement of the termination resistor on the CAN bus.....	101
Figure 67: Declaration of conformity.....	108

## DESCRIPTION

### FRONT FACE



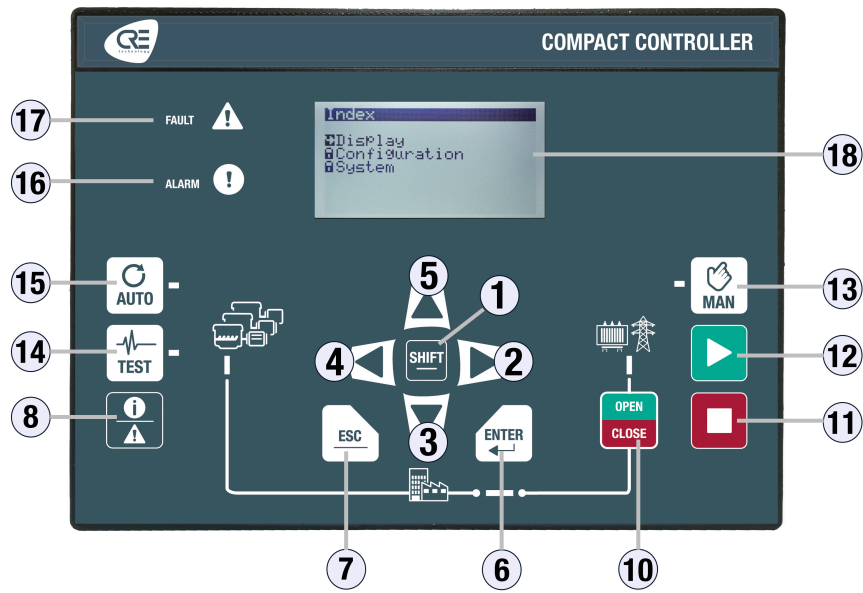






Figure 1. Front face of a MASTER COMPACT 1B controller



## OPERATOR MANUAL

PIN	Buttons	Functions
1	SHIFT button	Additional functions.
2	Right arrow button	Navigation button (Right).
3	Down arrow button	Navigation button (Down).
4	Left arrow button	Navigation button (Left).
5	Up arrow button	Navigation button (Up).
6	ENTER button	Validating entry / <b>MENU</b> .
7	ESC button	Cancel entry / escape <b>MENU</b> .
8	Information button	Allows access to the active faults, active alarms, events history or information pages.
10	Mains circuit breaker button	Can only be used in <b>MAN</b> mode. Mains circuit breaker control. Press to Open. Press to close (synchronization & load transfer will be done automatically if Bus is powered & configuration is setup for paralleling operation).
11	Stop button	Can only be used in <b>MAN</b> mode. Press to stop the Power plant. Pressing once this button will set the Generator off load and initiate cooling down sequence
12	Start button	Can only be used in <b>MAN</b> mode. Press to start the Power plant.
13	MAN button	<b>MAN</b> mode. The associated LED lights up when the mode is activated.
14	TEST button	<b>TEST</b> mode. The associated LED lights up when the mode is activated.
15	AUTO button	<b>AUTO</b> mode. The associated LED lights up when the mode is activated.
16	Alarm indicator	The LED flashes when an alarm appears. The LED is lit when an alarm is acknowledged, but not reseted.
17	Fault indicator	The LED flashes when a fault occurs. The LED is lit when a fault is acknowledged, but not reseted.
18	LCD screen	Screen size: 40mm x 70mm; Back-light : typical 50cd/m <sup>2</sup> , configurable. Type: STN; 256 x 128 pixels.

## Navigation keys

Buttons	Navigation mode	Edition mode
	Scrolling menus/parameters	Modifying parameters values once selected: When up/down arrow buttons are used to modify values, holding the button will accelerate the entry scrolling.
	<p>Right arrow:</p> <ul style="list-style-type: none"> <li>• Accessing a menu.</li> <li>• Navigating right in display/parameters pages</li> </ul> <p>Left arrow:</p> <ul style="list-style-type: none"> <li>• Return to previous menu.</li> <li>• Navigating left in display/parameters pages.</li> </ul>	NA
	<p> +  will increase/decrease the brightness of the LCD display.</p> <p> +  will increase/decrease the contrast of the LCD display.</p>	NA
	Returns to previous menu.	Cancels the settings and returns to <b>Navigation</b> mode.
	Accessing a menu / Switching to <b>Edition</b> mode.	Validation of the modified parameter and return to <b>Navigation</b> mode.

## Button inhibition

To inhibit front panel buttons, use the **Controller settings** ⇒ **System** ⇒ **Buttons inhibition (i4Gen)** page. This page shows the list of front panel buttons, tick the corresponding box to inhibit actions on the button.

It is also possible to inhibit the buttons by Modbus by modifying the variable [8102]. Each bit of the variable corresponds to a button. To know the bit associated to each button, please refer to the chapter [Software variables \(on page 109\)](#). Ex : Bit number 6 will inhibit the "Enter" button, bit number 1 will inhibit the "Shift" button.

## External requests for button activation

It is possible to remotely activate button actions by Modbus TCP, for a remote manual control for example. If a button action is controlled by Modbus TCP, the last request received (external or from the front panel) is treated in priority and cancel the previous request.

**MAN / AUTO:** If the 2 modes are requested, the **MAN** mode request cancels the **AUTO** mode one. The buttons on the front panel can be replaced by external commands via digital inputs.



REAR FACE

Figure 2. Rear face of a MASTER COMPACT 1B controller


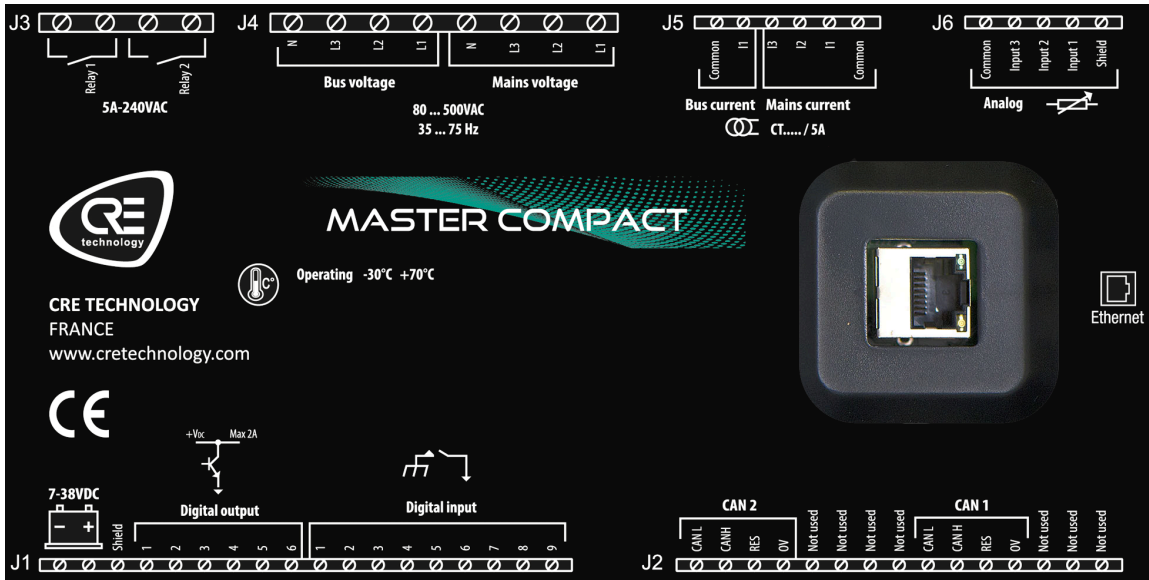


Figure 3. Simplified wiring diagram

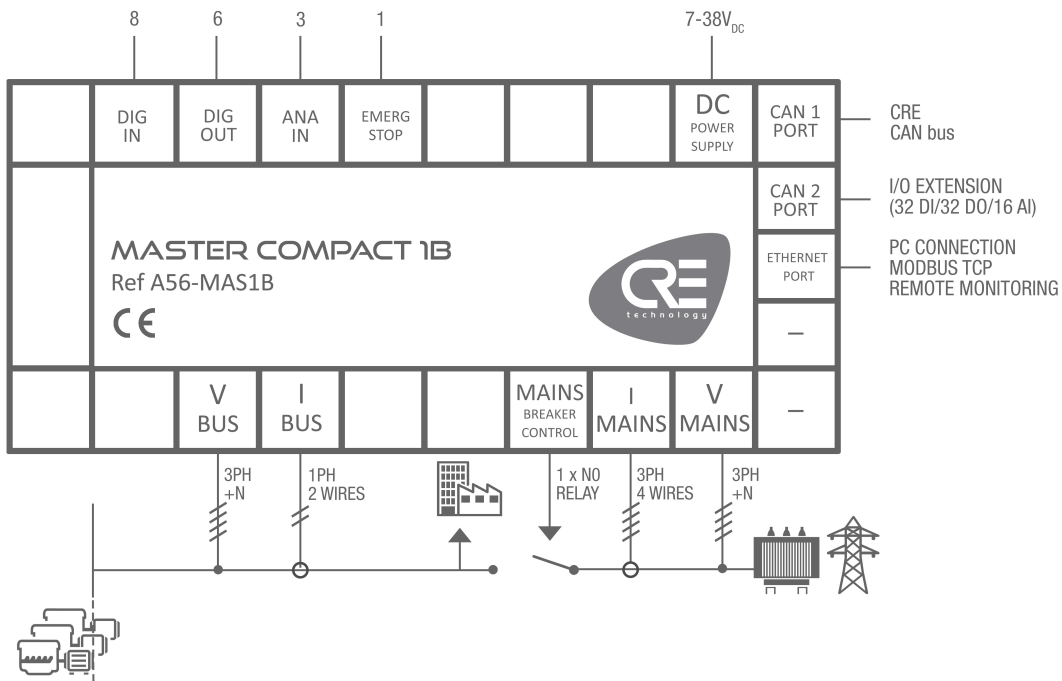

## PANEL MOUNTING

This unit is designed to be panel mounted, which provides user with access only to the front panel.

### WARNING



#### **THIS UNIT IS NOT GROUNDED**

**Failure to follow these instructions may damage the unit.**

- Take all measures against Electronic Static Discharges.
- Do not try to open the unit.

## Environmental requirements

- Operating temperature: -20...70°C (-4...158°F); LCD display slows down a bit under -5°C (23°F). Avoid direct exposure to the sun.
- Storage temperature: -40...70°C (-40...158°F).
- Altitude: ≤ 4000m (13123ft) for a max AC voltage of 480VAC; ≤ 5000m (16404ft) for a max AC voltage of 400VAC.

## Unpacking

Make sure the packaging contains:

- The unit
- 6 connectors.
- 1 fixing kit composed of 2 parts.
- 4 screws.
- A delivery bill.

Unpack and keep the packaging in case of return.


Make sure the unit does not show scratches or visible defaults. Otherwise describe them on the RMA sheet (available on [CRE TECHNOLOGY website](#)) and return it with the product to your distributor.

## Installation

### Preparation

- Torque of mounting brackets: 0.4Nm.
- Cut the panel with a dimension of 220x160mm (8.7x6.3in) minimum.
- Make sure the cut-out is smooth and clean.

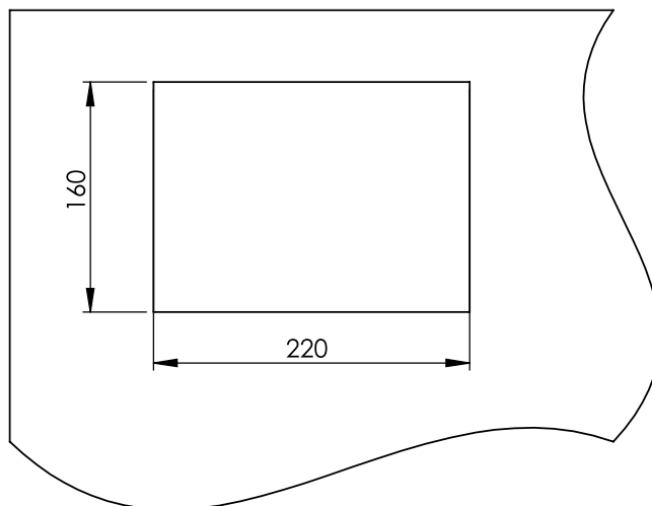Figure 4. Panel cutout



### Mounting

0	Tool : cross-head screwdriver size 1.	
1	Pass the unit through the mounting surface.	
2	In the rear, cover each of the four spacers using the 2 parts of the fixing kit.	
3	Screw a first corner against the mounting surface.	
4	Repeat on the diagonally opposite spacer.	
5	Repeat on the other diagonal and tighten equally (do not overtighten).	

## UL REQUIREMENTS



**Note:** Skip this chapter if your application does not require to follow the UL specification.

### Circuit separation

---

The wires connected to the terminal blocks for communication, for sensors and for the battery should be separated and secured to maintain at least 1/4" (6mm) separation between the wires connected to the Mains those connected to the Bus unless all conductors are rated 600V or greater.

### Other circuits specifications

---

For information on circuits ratings, see chapter [Wiring \(on page 17\)](#).

### Mains specifications

---

#### Over-voltage Category

III, 300VAC system voltage.

#### Mains / Bus Voltage Measurements (J4)

300VAC max P-N, 2 phases; 500VAC P-P 3 phases, 35...75Hz.

#### Current Inputs (J5)

Must be connected through listed or recognized isolating current transformers with secondary rating of 5A max 50/60Hz. (XODW2.8) Instrument transformers (according to IEEE C57.13 standard or the equivalent).

#### Communication Circuits

Must be connected to UL listed equipments.

#### Output Pilot Duty (J3)

250VAC, 5A max general purpose, 240VAC, 1/4HP for NO contact, 1/6HP for NC contact, Output pilot duty: C150, C300.

#### Digital outputs (J1)

FET: Fuel shutoff: 63VA, 1.8A max current.

### Overcurrent protection (DC supply and L1, L2, L3, N)

---

Installer shall protect DC supply and L1, L2, L3, N by fuse Type: R/C (JDYX2/7), or R/C (JDYX2) and CSA Certified Class 1422-30.

Rating of fuses:

- DC supply to be protected by 5A, 40VDC max.
- L1, L2, L3, N, fuse protection 100mA/600VAC max.

## Wiring of the terminals

---

Terminal (screw type):

- Tightening Torque: 3.5lb.in (0.4Nm)

Wires:

- 28-14 AWG, Cu, 75°C min.

Conductor protection must be provided in accordance with NFPA 70, Article 240.

Low voltage circuits (35VDC or less) must be supplied from the engine starting battery or an isolated secondary circuit.

## Environment

---

Device must be installed in an unventilated or filtered ventilation enclosure to maintain a pollution degree 2 environment.

Maximum surrounding air temperature rating: 45°C.

## Advanced wiring diagram

---

Wiring diagrams are available on the website [CRE TECHNOLOGY](#).

## Installation

---


For information on installing the product, see chapter [Panel mounting \(on page 10\)](#).

## USAGE

### PASSWORD

The menus will be automatically locked if no operation is performed during the time set in the *Controller settings* ⇒ *System* ⇒ *Password* page (Factory setting: 30 minutes).  
The standby screen will be displayed.






The module provides secured password access to protect configuration changes and limit data accessibility:

Level	Default password	Authorization	Accessible pages and items
0	No password. Press 	By default, this level is not password protected, but one can be set.	Pages of the <b>Controller supervision</b> menu only.
1	1	User level, settings and commissioning.	Pages of the <b>Controller supervision</b> and <b>Controller settings</b> menus.
2	1234	Used to change advanced settings.	Advanced settings.

Passwords can be changed using *i4Gen Suite* software.

To access the **Controller supervision** menu, press .

To access the **Controller settings** menu, the padlock must be unlocked:

1. Press  to select **Controller settings**.
2. Press  to switch to password input mode (as for other settings).
3. Change the character by pressing .
4. Move to the next character by pressing .
5. Repeat the operation for each character.
6. Confirm the password by pressing .


## LCD

### Navigation

---

Press , then, select the required menu, then press  and enter the level 1 password if necessary (Settings):

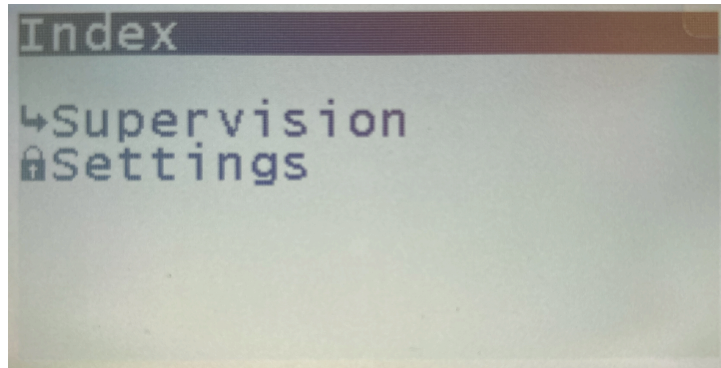

Figure 5. Index menu





A black pointer spots the currently selected item/setting.

Two main menus are available on the LCD screen and three in the **i4Gen Suite** software:

- The menu **Controller supervision** gives all product measurements in real time.
- The menu **Controller settings** is used to adjust the controller and system settings (date/time, screen features, ...).
- The menu **i4Gen** (only available in the configuration software) is used to adjust the software settings.






To cycle through the menus and menu items, press  or .

To cycle through the pages of the actual menu, press  or .

### Edition

---

To change a setting:





1. Navigate to the setting to be changed.
2. Press  to switch to **Edition** mode; the current value blinks.
3. Press  or  to get the new value.
4. Press  to validate the new value,  to reject it. Module returns to **Navigation** mode.

It is also possible to modify the parameters using the Modbus TCP protocol.


### Dedicated pages



---

Dedicated pages includes:

- Active fault: currently active or unacknowledged faults. To reset faults, press  + .
- Active alarm: currently active or unacknowledged alarms. To reset alarms, press  + .

- History: a list of all alarms/faults/events that happened with their state and timestamp.
- Information pages.

Press  to access the dedicated pages menu. It is then possible to navigate through these dedicated pages using the arrow buttons.

To return to the previous page, press  or .

## History

---

Up to 500 archived events can be displayed on the screen.

Each event is time-stamped as follows:

**jj/mm/yy hh:mn:ss protection name On (or Off).**

## Information

---

These pages show the current status of the controller state with the time elapsed in each state.

**Controller state** [4000] displays the current status of the unit regarding the management of the system's automatism.

**Information variables:** to display any variable, enter the code of the variable to be displayed.



## WIRING

Tool: insulated screwdriver Ø1.5 mm (0.04 in), tightening torque: 0.8 Nm (7 lb-in) max.

Accessories: 4, 5, 6, 8, 15 & 18-terminal cable connectors, protective gloves, carpet if the floor is wet.

### ⚠ WARNING

#### THE UNIT IS NOT PROTECTED

Failure to follow these instructions may damage the unit.

Use external fuses:



- Mains and Bus phases: 100mA/600VAC
- Battery positive: 5A/40VDC

Install the fuses as near as possible to the unit, in a place easily accessible to the user.

### ⚠ DANGER

#### RISK OF ELECTRIC SHOCK, EXPLOSION OR ARCING

Failure to follow these recommendations may result in death or serious injury.



- The module may only be installed and maintained by qualified electricians.
- Use personal protective equipment (PPE).
- Follow good safety practices for electrical work.
- Turn off the power before installing or replacing a fuse, and before installing the module.
- Use equipment adapted to check the absence of voltage.
- Do not use a resettable fuse.

## General procedure

1. Make sure the cable connectors are not plugged in.
2. Take on protective gloves.
3. Connect the wires on each cable connector in accordance with the National Wiring Regulations.
4. Plug each cable connector onto the related connector.
5. Plug a direct Ethernet cord (RJ45, male-male, 100m max., 100Ω; a crossover cable such as 3-m long A53W1 is OK as long as your switch uses auto MDI/MDIX technology or if the link to PC is direct) and lock the rear door.

## Recommendations


Wires section: 1.5mm<sup>2</sup>(AWG15).

To avoid ElectroMagnetic Interferences, shield cables appropriately; for CAN bus, see [CAN bus good practices \(on page 100\)](#).

Isolation : keep the power cable separate from the CAN bus cables. The latter can be installed in the same duct as the low level I/O wires (under 10V DC).

If power and communication cables have to cross each other, do it at right angles to avoid crosstalk:

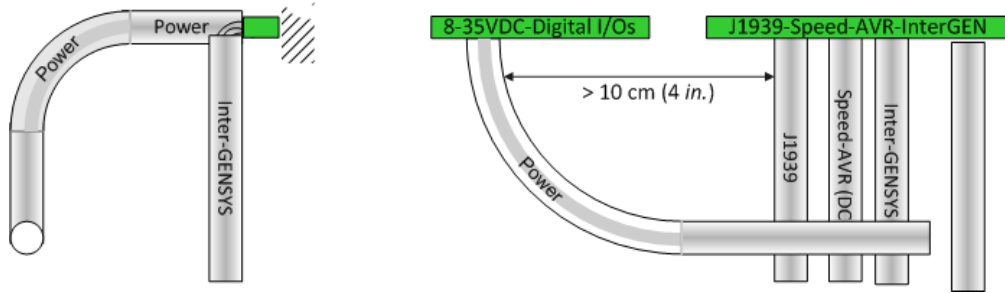Figure 6. Wiring recommendations



Wiring diagrams are available on the website [CRE TECHNOLOGY](http://www.cretechnology.com).

## Upper terminals

**⚠ DANGER**



### EXPOSED TERMINALS

Failure to follow this instruction may result in death, serious injury or equipment damage. Do not touch L1, L2, L3 terminals nor use non-insulated tools near them. These terminals are unprotected and will expose the user to dangerous voltages.

Terminal blocks	Label	Description	Note
<b>Relay outputs (J3)</b>			Normally open. Breaking capacity: 5A, 240VAC.
Relay 1		Relay 1 +	
		Relay 1 –	
Relay 2		Relay 2 +	
		Relay 2 –	
<b>AC voltage (J4)</b>			100...480VAC, 35...75Hz, 100mA max; accuracy: 1% fsd.
Bus voltage	N	Neutral of the Bus	Optional.
	L3	Voltage of the phase 3 of the Bus	These lines must be protected externally with 100mA/600VAC fuses.
	L2	Voltage of the phase 2 of the Bus	
	L1	Voltage of the phase 1 of the Bus	
Mains voltage	N	Neutral of the Mains	Optional.
	L3	Voltage of the phase 3 of the Mains	These lines must be protected externally with 100mA/600VAC fuses.
	L2	Voltage of the phase 2 of the Mains	
	L1	Voltage of the phase 1 of the Mains	
<b>Current inputs (J5)</b>			Short-circuit protection available.

Terminal blocks	Label	Description	Note
Bus current	Common	Common point of the electrical currents.	<p>Connect the common point of the electrical currents to this terminal.</p> <p><b>!</b> <b>Important:</b> This terminal must also be connected to the ground. Failure to follow this instruction may damage the controller.</p>
	I1	Current of the phase 1 of the Bus	<p>0...5A. Maximum rating: 15A during 10s.</p> <ul style="list-style-type: none"> <li>• Load: 1VA. Keep the lead length short to preserve accuracy (up to 0.5% full scale deviation).</li> <li>• Maximum value of the external CT ratio and other details can be found in <b>i4Gen Suite</b>.</li> </ul>
Mains current	I3	Current of the phase 3 of the Mains	<p>0...5A. Maximum rating: 15A during 10s.</p> <ul style="list-style-type: none"> <li>• Load: 1VA. Keep the lead length short to preserve accuracy (up to 0.5% full scale deviation).</li> <li>• Maximum value of the external CT ratio and other details can be found in <b>i4Gen Suite</b>.</li> </ul>
	I2	Current of the phase 2 of the Mains	
	I1	Current of the phase 1 of the Mains	
	Common	Common point of the electrical currents.	<p>Connect the common point of the electrical currents to this terminal.</p> <p><b>!</b> <b>Important:</b> This terminal must also be connected to the ground. Failure to follow this instruction may damage the controller.</p>
<b>Analog inputs (J6)</b>			0...500Ω.
Analog	Common	Common of the analog inputs	Connect it to the battery minus terminal.
	Input 3	Analog input 3	
	Input 2	Analog input 2	
	Input 1	Analog input 1	
	Shield	Ground	Connect to the ground.

## Lower terminals

**⚠ WARNING**




**RISK OF EQUIPMENT DAMAGE**

**Failure to follow this instruction can damage the controller.**

Connect battery negative to the module terminal 8...35VDC– with 1.5mm<sup>2</sup> (AWG15) cable.

# OPERATOR MANUAL

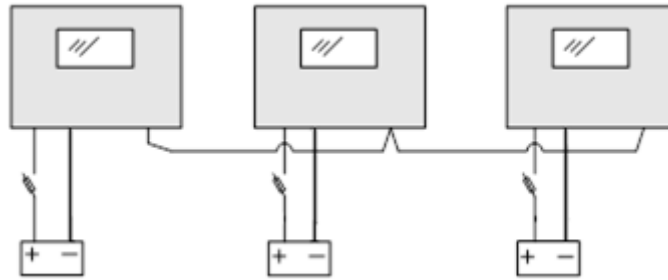Figure 7. Wiring of the lower terminals



Terminal block	Label	Description	Notes
<b>Power supply and digital inputs/outputs (J1)</b>			
Power supply (7-38VDC)	-	Power supply -	1.5mm <sup>2</sup> (AWG15).
	+	Power supply +	7...38VDC, consumed current: 130mA at 24V (standby and operation).
	Shield	Ground	Connect to the ground.
Digital outputs	1	Digital output 1	Free digital output (max: 1.8A). Protected against short circuits. A reactive load is supported. Not isolated from power supply.
	2	Digital output 2	
	3	Digital output 3	
	4	Digital output 4	
	5	Digital output 5	
	6	Digital output 6	
Digital inputs	1	Digital input 1	Free digital input with 10kΩ pull-up. Accepts NO or NC contact to 0V. Not isolated from power supply.
	2	Digital input 2	
	3	Digital input 3	
	4	Digital input 4	
	5	Digital input 5	
	6	Digital input 6	
	7	Digital input 7	
	8	Digital input 8	
	9	Digital input 9	
<b>CAN 2, CAN 1, speed output, AVR output, magnetic pick-up (J2)</b>			
<b>CAN 2</b> (for J1939 and CANopen)	CAN L	CAN low	Blue wire.
	CAN H	CAN high	White wire.
	RES	Resistor -	Connect to the "CAN H" terminal when the inner resistor must be inserted (bus ends).

Terminal block	Label	Description	Notes
	0V	Shield	<p>Use twisted pair cables.</p> <p>There are two possible wiring for this terminal.</p> <p>First wiring (<b>recommended in most cases</b>): do not connect this terminal.</p> <p>Second wiring:</p> <ul style="list-style-type: none"> <li>• Connect the shield to the 0V terminal on all controllers. CAN1 and CAN2 has galvanic separation, so no ground loops are created.</li> <li>• Do not connect the 0V terminal to the ground.</li> </ul>
<b>CAN 1</b> (for <b>CRE-Link®</b> )	CAN L	CAN low	White wire with blue strip (when using a <b>CRE TECHNOLOGY</b> cable).
	CAN H	CAN high	Blue wire with white strip (when using a <b>CRE TECHNOLOGY</b> cable).
	RES	Resistor - terminal	Connect to the "CAN H" terminal when the inner resistor must be inserted (bus ends).
	0V	Shield	<p>Use twisted pair cables.</p> <p>There are two possible wiring for this terminal.</p> <p>First wiring (<b>recommended in most cases</b>): do not connect this terminal.</p> <p>Second wiring:</p> <ul style="list-style-type: none"> <li>• Connect the shield to the 0V terminal on all controllers. CAN1 and CAN2 has galvanic separation, so no ground loops are created.</li> <li>• Do not connect the 0V terminal to the ground.</li> </ul>

**⚠ WARNING**



**RISK OF EQUIPMENT DAMAGE**

**Failure to follow this instruction can damage the CAN transmitter/receiver.**

Switch off the unit before plugging or unplugging the CAN bus connector or disconnecting wires.



**Note:** In case of a power outage, the unit remains functional for 70ms at 24V, and 20ms at 12V.

## Potential transformers ratio definition

The potential transformer can be connected in various ways. According to the type of potential transformer connection, the potential transformer ratio to set in the controller may be different:

- If the primary winding is connected in star(wye) and the secondary winding is connected in delta, the ratio is:  $PTratio = \frac{U_{nom}}{100\sqrt{3}}$
- If the primary and secondary windings are both connected in star(wye), the ratio is:  $PTratio = \frac{U_{nom}}{100}$


## Other systems of voltage

For a **bi-phase 180°** application, connect voltages and currents to L1-L3 terminals (and N). The same logic applies for I1-I3 (and common).

For a **mono-phase** application, connect voltages and currents to L1-N terminals. The same logic applies for I1 and common.

There are 3 triphase high leg delta systems:

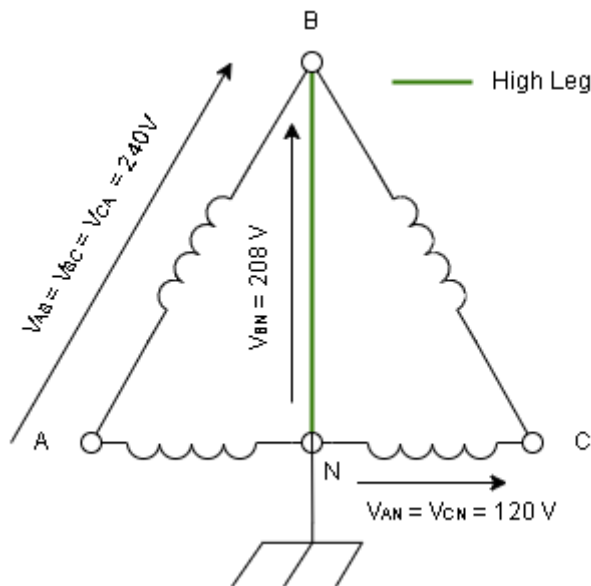Figure 8. Diagram high leg delta



A wiring to neutral is required to use these systems.

If **Triphase L1-N-L2** is selected, connect the "High leg" voltage (B-N) on L3, both other phases on L1 and L2.  
 If **Triphase L2-N-L3** is selected, connect the "High leg" voltage (B-N) on L1, both other phases on L2 and L3.  
 If **Triphase L3-N-L1** is selected, connect the "High leg" voltage (B-N) on L2, both other phases on L3 and L1.

### ⚠ WARNING



#### OVER VOLTAGE RISK WITH HIGH LEG DELTA VOLTAGE SYSTEMS

Failure to follow these instructions may damage the unit.


The maximal P-N voltage of the product is 270 VAC (which is equal to 310 VAC for P-P voltage). If higher voltages are required, potential transformers should be used. See [Potential transformers ratio definition \(on page 21\)](#).

## Powering the module with a 12VDC battery

A voltage drop from 12V to 6V can occur when the power consumption of the starter is too high and the battery undersized. This drop can reset the module. To counter this problem, a capacitor and a diode need to be wired as indicated in the schematic below:

The diode needs to be able to handle high currents (ex: Littelfuse DST2045AX). Typically select a 24000µF capacitor that handles at least 25V or higher (ex : KEMET ALS71A243DB040).

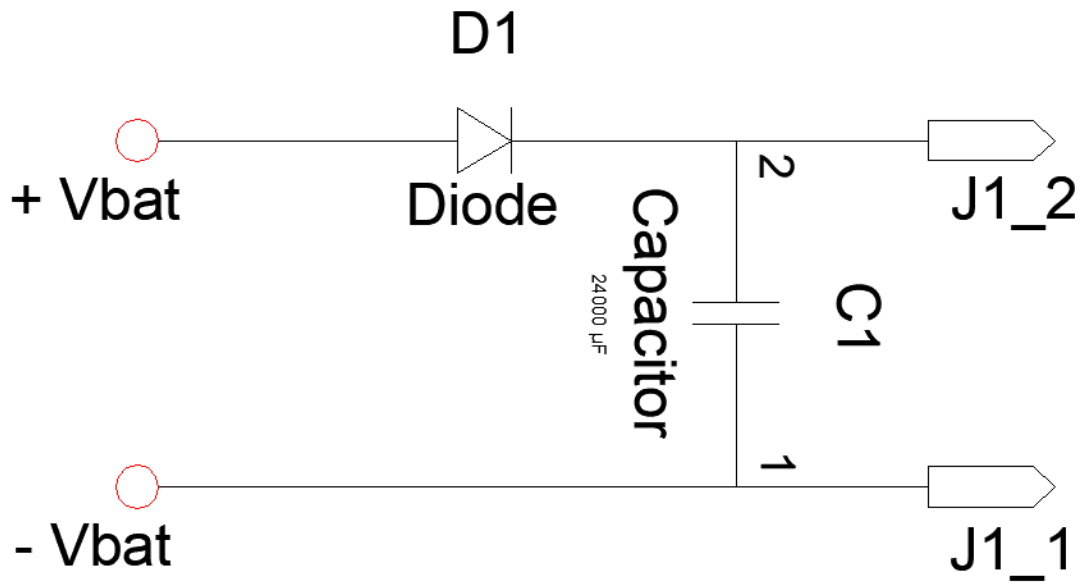Figure 9. 12VDC power supply wiring



## DIGITAL INPUTS

Several parameters can be configured for each digital input:

- **Label** (only in *i4Gen Suite* software)
- **Function**
- **Direction**
- **Validity**
- **Timer ON**
- **Timer OFF**

### Label

This is the name you give to the input. If programmed accordingly, the label will be shown in the following pages: digital inputs, information, alarm, and fault.

### Validity

Validity indicates when the digital input is taken into account. This parameter can take four values:

Value	Validity	Description
0	Never	Never active: must be selected if you do not use the input.
1	Always	Always active: the input is monitored as long as the module is powered.
2	After valid protect	The input is monitored at the end of the <i>Delay before activation of the protections</i> [2004] delay. <sup>(1)</sup>
3	When gen ready	The input is monitored when the Power plant is ready for use.

<sup>(1)</sup>Configure the protection inhibition time in **Controller settings** ⇒ **General** ⇒ **Timers**.

### Direction

For each input, two options are available:


Value	Label	Function
0	Normally opened	To be used for standard cases unless the input is used as protection.
1	Normally closed	Must be selected if the input is normally connected to 0V (open when active).

### Delays

For each input, two delays can be defined in 100ms steps between 0 and 6553s:



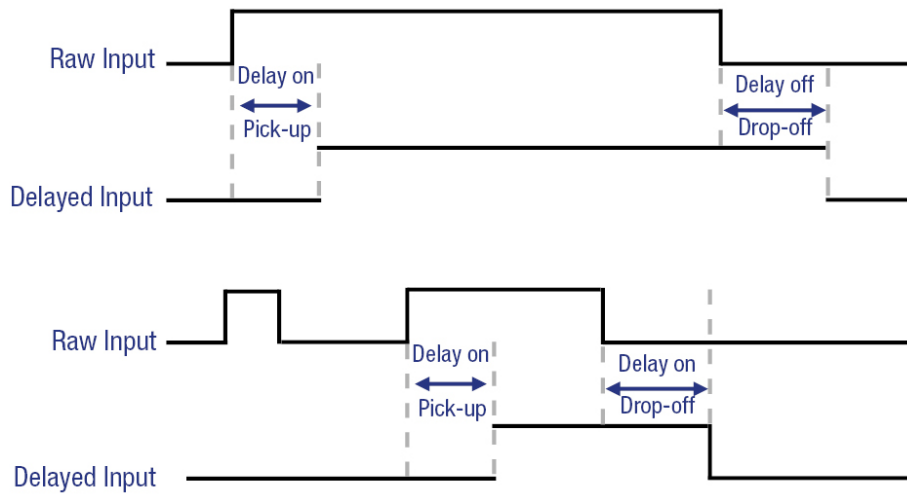Figure 10. Chronogram of the digital inputs delays



## Functions

---

Each input can be configured. To access all functions, use **i4Gen Suite**.  
 Function list is available in the chapter [Software variables \(on page 109\)](#).

## DIGITAL/RELAYS OUTPUTS

Several parameters can be configured for each digital/relay output:

- **Label** (only in *i4Gen Suite* software)
- **Function**
- **Polarity** (sometimes referred to as **Direction**)
- **Pulse length: 0 means no pulse**
- **Timer ON**

### Polarity

Each output can be:

- **Normally energized:** the output is de-energized when its function is activated.
- **Normally de-energized:** the output is energized when its function is activated.

### Pulse length and activation delay


Each digital/relays output can be configured to act as a pulse. The pulses lengths are defined with the parameters [2761] to [2766] for digital outputs and [2767] to [2768] for relays output. As soon as a pulse begins, it will last for the configured duration even if the associated function is not active anymore.

Set to 0 in order to have a continuous output (no pulse).

It is also possible to delay the output activation using parameters [2793] to [2798] for digital outputs and [8250] to [8251] for relays output.

Setting the activation delay to 0 means there will be no delay.

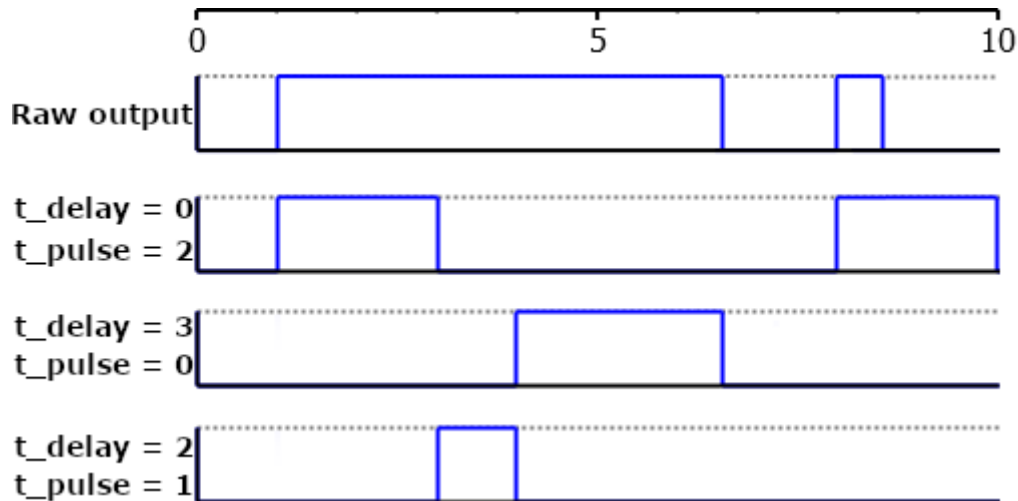Figure 11. Chronogram of the digital/relays outputs pulse length and activation delay



### Functions

Each output can be configured. To access all functions, use *i4Gen Suite*. Function list is available in the chapter [Software variables \(on page 109\)](#).

## ANALOG INPUTS

### General analog input configuration

1. **Label:** Analog input's label (limited to 14 characters).
2. **Type:** Defines the way you want to use your analog input : unused, analog input, digital input.


The analog input configuration page changes according to the selected type.

### Type set to unused

No configuration available.

### Type set to analog input

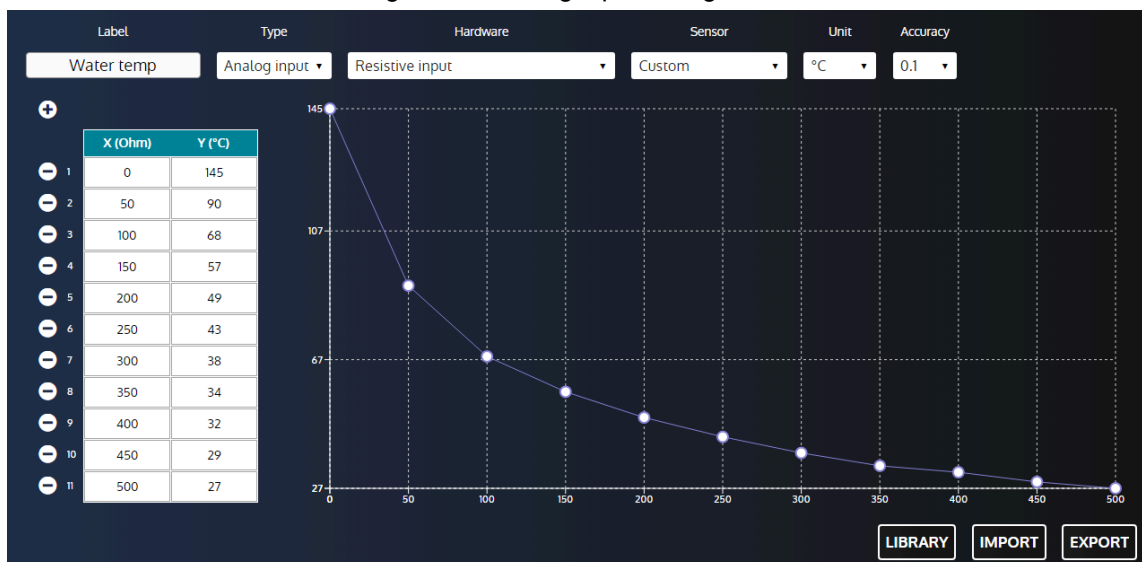Figure 12. Analog input configuration



1. **Hardware:** Defines the hardware type of the analog input (resistive / 20mA transducer).
2. **Unit:** Defines the unit of the analog input.
3. **Accuracy:** Defines the accuracy of the analog input (i.e. number of decimal digits to display the measured value).
4. **Calibration points table** (up to 31 points):


Calibration is used to estimate a reading from a resistance/current value by interpolation between 2 resistance/current values. Negative values are supported.

To set calibration points:

- Press the + button to add a new point.
- Press the - button to remove an existing point.
- To set the X-axis coordinate of a point, fill the corresponding X input.
- To set the Y-axis coordinate of a point, fill the corresponding Y input.

5. **Curve display:** Display of the calibration points on a curve in X-axis ascending order.
6. **Library:** Opens the curve library.

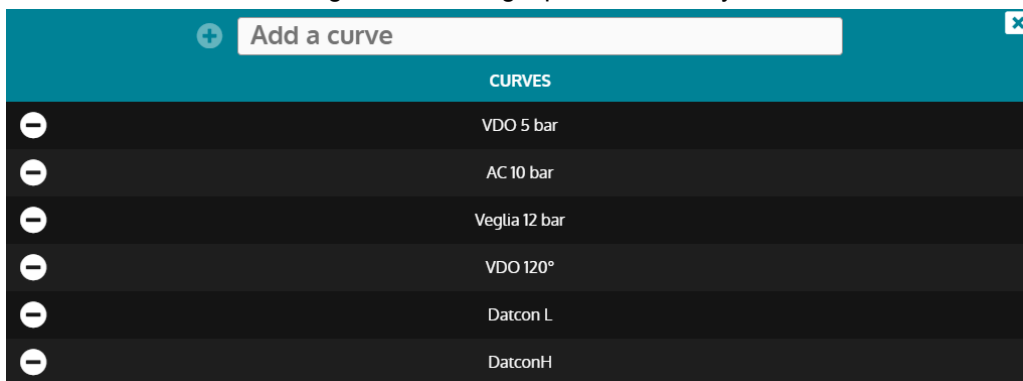Figure 13. Analog input curve library



Enter a name in the input and press the + button to save the current curve into the library. Press the - button to remove a saved curve (not available for factory curves). Click on a curve to load it into the analog input configuration.

- 7. **Import:** Opens the file browser to import a curve file into the analog input configuration.
- 8. **Export:** Opens the file browser to export a curve file.

## How to connect analog sensors

You can use 1 or 2-wire analog sensors, or 1-wire or 2-wire logical sensors.



**Note: Our recommendations:** In each case you must always connect the analog inputs' "common" terminal (J6) to the power supply minus terminal (J1) and also connect it to the engine block in the case of 1-wire sensor. You must use the following wiring (Incorrect wiring of the analog inputs can cause damage to the module, or cause a wrong measurement).

Figure 14. A-1 : 2 wires analog sensor


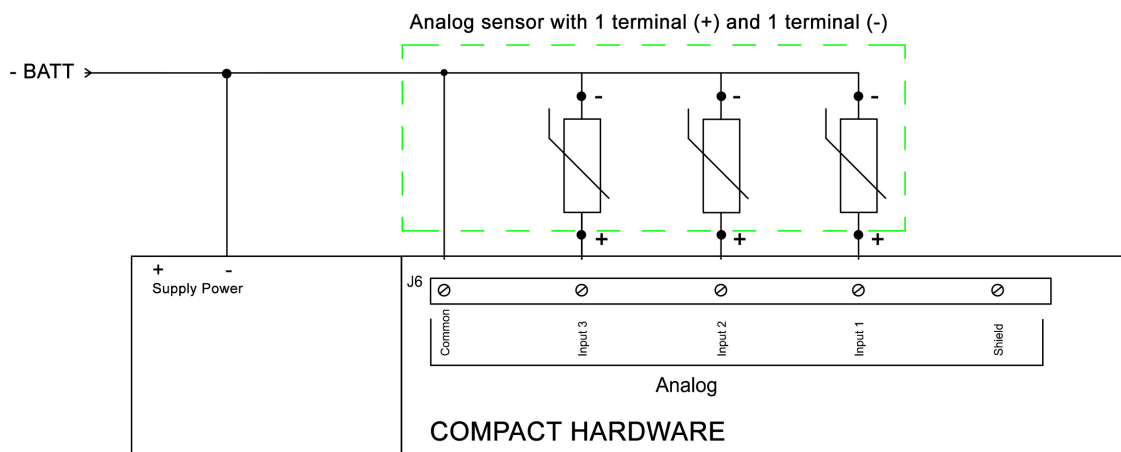


Figure 15. A-2 : 1 wire analog sensor

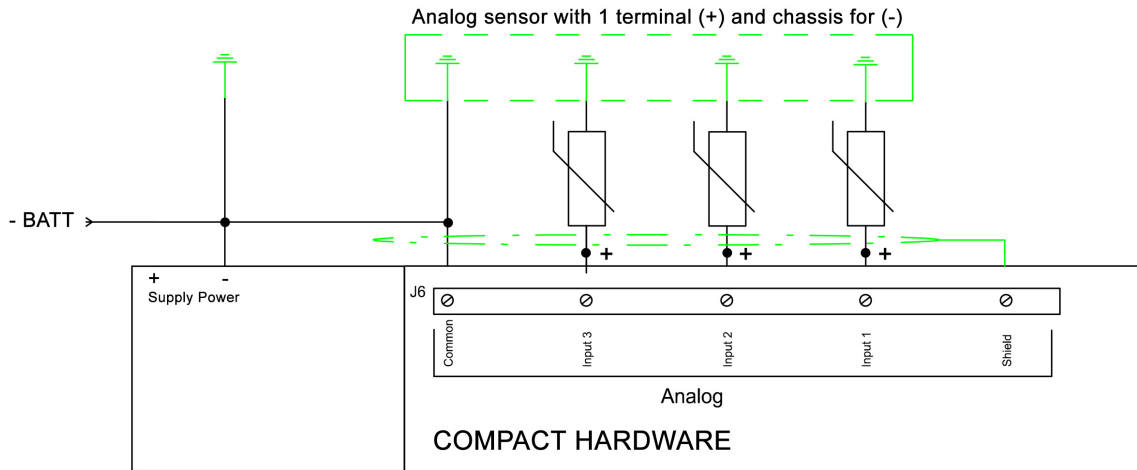

**⚠ WARNING**




**THE WARRANTY WILL BE VOIDED IF THE MANUFACTURER'S INSTRUCTIONS ARE NOT RESPECTED.**

To act as a 0...20mA input or 4...20mA, connect the input with a 39Ω resistor between the analog input and the analog common.

The calibration of the 20mA transducer can then be performed as on a resistive analog input depending on the characteristics of the sensor.

## Type set to digital input

Figure 16. Digital input configuration



1. **Function:** Defines the digital input function.
2. **Validity:** Condition to take the digital input into account.
  - Never: The input will never be taken into account.
  - Always: The input will always be taken into account.
  - When gen ready: The input will be taken into account when the Power plant is ready.
  - After valid protect: The input will be taken into account when the variable *Protection validation* [4681] is equal to 1. (check the chapter [Digital inputs \(on page 24\)](#) for more information)
3. **Polarity:** Digital input's polarity.
4. **Delay:** Delay until the input becomes active.

## How to connect digital sensors

When an analog input is used as a logic input, applying a 0V to the input enables it, applying nothing disables it.

Figure 17. B-1 : Digital sensor 2 wires


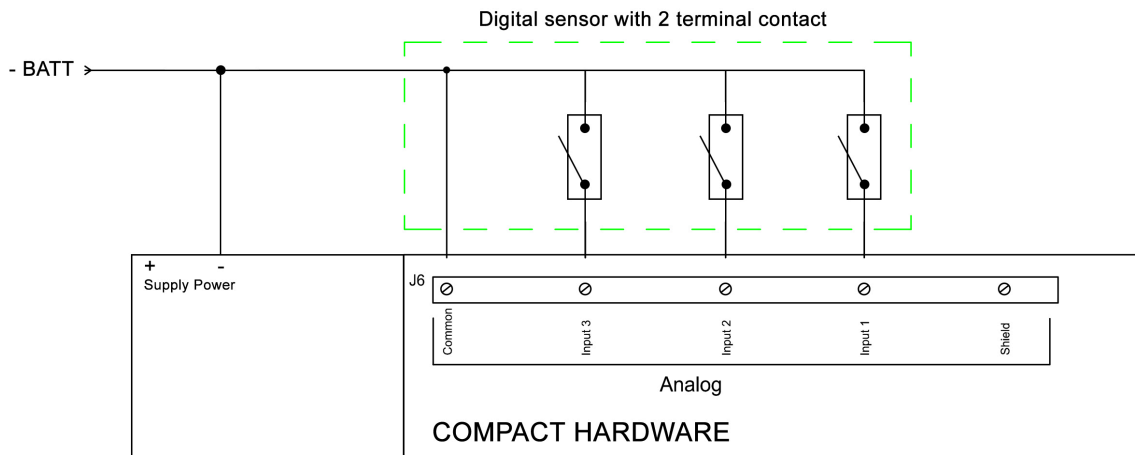


Figure 18. B-2 : Digital sensor 1 wire

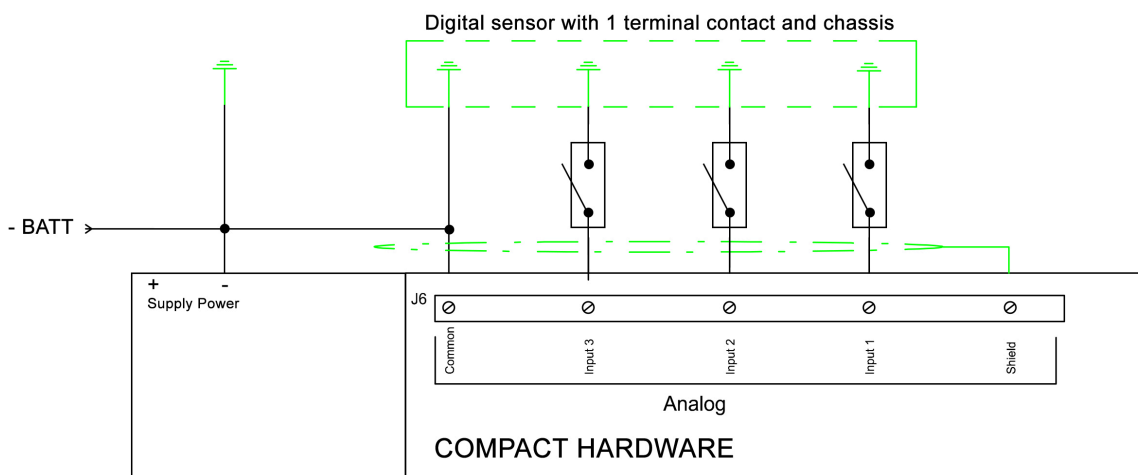

**⚠ WARNING**



**THE WARRANTY WILL BE VOIDED IF THE MANUFACTURER'S INSTRUCTIONS ARE NOT RESPECTED.**

## Protections

Several parameters can be configured from the **Controller settings** ⇒ **Protections** ⇒ **Other protections** ⇒ **Analog inputs** page:

- Level (LV): Limit value before triggering the protection. It can be a low or high threshold.
- Delay (TM): Time after which the protection is triggered.
- Control (CT): Control of the protection. It defines the action related to the protection
- Direction (SS): Polarity of the protection. It defines if the limit value is a low or high threshold

These parameters are available in the **Controller settings** ⇒ **Protections** ⇒ **Other protections** ⇒ **Analog inputs** page.

## OPERATOR MANUAL

	Protections				
	Threshold	Timer	Control	Direction	Function
Analog input 1 level 1	[2600]	[2601]	[2602]	[2606]	[2678]
Analog input 1 level 2	[2603]	[2604]	[2605]		
Analog input 2 level 1	[2608]	[2609]	[2610]	[2614]	[2679]
Analog input 2 level 2	[2611]	[2612]	[2613]		
Analog input 3 level 1	[2616]	[2617]	[2618]	[2622]	[2680]
Analog input 3 level 2	[2619]	[2620]	[2621]		

## HYSTERESIS (DIGITAL INPUT)

For a given hysteresis, three different digital signals are required:

- Two digital inputs are used respectively as low threshold and high threshold signals.
- One digital output is used to control an equipment with a hysteresis

The hysteresis settings can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital inputs** ⇒ **Hysteresis on digital input** page. Each hysteresis proposes the following parameters (the first hysteresis is taken as example):

- **Hysteresis 1 enable for digital input**
- **Pulse length DO 1**
- **Direction hysteresis 1**

### Hysteresis 1 enable for digital input

Enables/disables the hysteresis.

### Pulse length DO 1

The delay to wait when the condition is met (reaching the low/high threshold) before activating the hysteresis output.

### Direction hysteresis 1

For each hysteresis, two options are available:

Value	Label	Function
0	Set on low threshold, reset on high	<p>The associated digital output will be set when the digital input assigned to the low threshold is activated and it will reset once the digital input assigned to the high threshold is activated.</p> <p>Please note that once the digital output is activated, the state of the digital input assigned to the low threshold will not matter. The digital output state can only change when the digital input assigned to the high threshold is activated.</p>
1	Set on high threshold, reset on low	<p>The associated digital output will be set when the digital input assigned to the high threshold is activated and it will reset once the digital input assigned to the low threshold is activated.</p> <p>Please note that once the digital output is activated, the state of the digital input assigned to the high threshold will not matter. The digital output state can only change when the digital input assigned to the low threshold is activated.</p>

### Setting inputs for your hysteresis

To select the required digital input signals, please refer to [Digital inputs \(on page 24\)](#). The digital input functions to be used can be found in the **Hysteresis** section of the search engine.

### Setting an output for your hysteresis

To select the digital output controlled by the hysteresis, please refer to [Digital/Relays outputs \(on page 26\)](#). The digital output function to be used can be found in the **Hysteresis** section of the search engine.



## HYSTERESIS

For a given Hysteresis, two different signals are required:

- One variable for the measure
- One digital output for the hysteresis to activate

Open the **Controller settings** ⇒ **Programming** ⇒ **Hysteresis (i4Gen)** page. Each hysteresis proposes the following parameters (the first hysteresis is taken as example):

- **Enable Hysteresis 1**
- **Hysteresis 1**
- **Low level threshold**
- **Timer on low level threshold**
- **High level threshold**
- **Timer on high level threshold**
- **Hysteresis Direction 1**

### Enable Hysteresis 1

---

Enables/disables the hysteresis.

### Hysteresis 1

---

Chooses one among all of the variables of the product to bind the hysteresis with.

### Low level threshold

---

The hysteresis output will be activated when the variable reaches a value lower than or equal to the configured low level threshold value.

### Timer on low level threshold

---

The delay to wait once the variable value reaches the low level threshold before activating the hysteresis output.

### High level threshold

---

The hysteresis output will be activated when the variable reaches a value greater than or equal to the configured high level threshold value.

### Timer on high level threshold

---

The delay to wait once the variable value reaches the high level threshold before activating the hysteresis output.

### Hysteresis Direction 1

---

For each hysteresis, two options are available:

Value	Label	Function
0	Set on low threshold, reset on high	<p>The associated digital output will be set when the low threshold value is reached and it will reset on reaching the high threshold value.</p> <p>Please note that once the digital output is activated, the low threshold value will not matter. The digital output state can only change on reaching the high threshold value.</p>
1	Set on high threshold, reset on low	<p>The associated digital output will be set when the high threshold value is reached and it will reset on reaching the low threshold value.</p> <p>Please note that once the digital output is activated, the high threshold value will not matter. The digital output state can only change on reaching the low threshold value.</p>

## Setting an output for your hysteresis

To set a digital output, please refer to [Digital/Relays outputs \(on page 26\)](#). The functions to use can be found in the **Hysteresis** section of the search engine.

## SETTINGS

### CIRCUIT BREAKERS

#### **Circuit breakers operating modes**

---

Two digital outputs (relay or transistor) are used to control the circuit breakers - 1 for opening and 1 for closing. These outputs allow different types of circuit-breakers to be controlled.

The Mains circuit breaker settings are accessible from **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Mains breaker**.



**Important:** Failure to comply with the following recommendations may cause malfunctions.



**Note:** Never switch from one operating mode to another while the power plant is running.

### Circuit breaker control mode

Value	Mode	Circuit breakers chronogram
0	1: Continuous contact to open. 2: Pulse to close.	
1	1: Continuous contact to open. 2: Continuous contact to close.	
2	1: Under-voltage (MN) coil opening. 2: Pulse to close.	
3	1: Under-voltage coil opening. 2: Continuous contact to close.	
4	1: Pulse to open. 2: Pulse to close.	
5	1: Pulse to open. 2: Continuous contact to close.	

### Pulse configuration

The settings can be accessed from **i4Gen Suite** software.

### Pulse

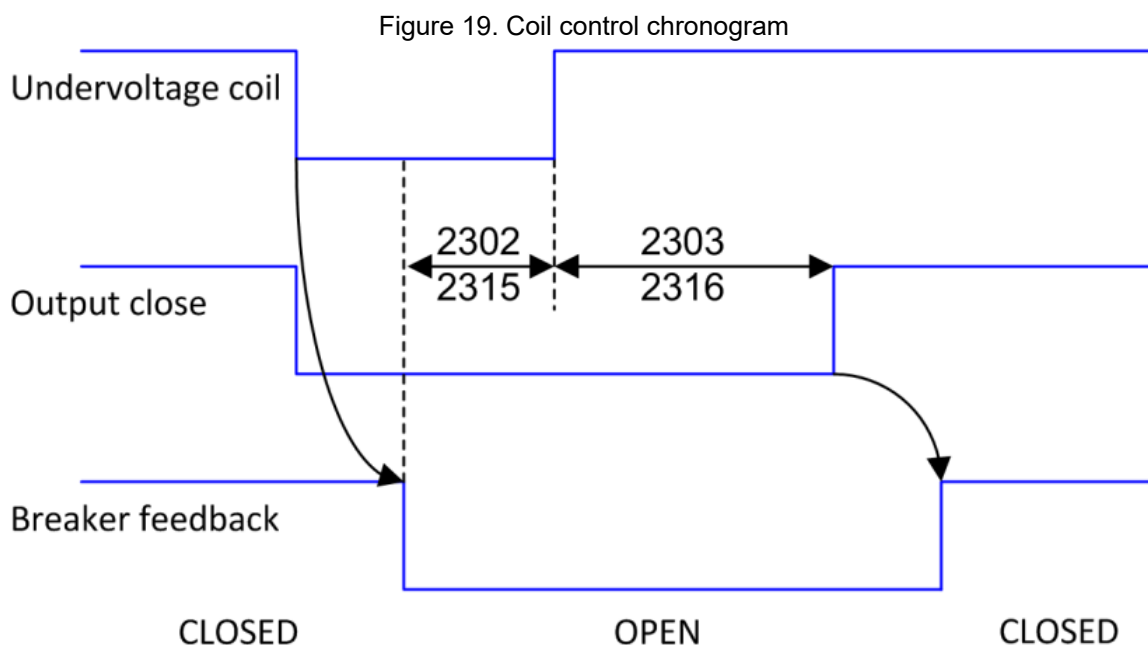
The settings of the Mains breaker pulse can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Mains breaker** page.

For the pulse control of the Mains breaker, set the parameter [2314].

### Coil Control

The settings of the Mains breaker coil can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Mains breaker** page.

For the fail-safe control of the Mains breaker, set the parameters [2315] and [2316].



To detect the position of the circuit breaker, a logic input must be configured as:

Function	Value
Circuit breaker position feedback	1 = circuit breaker closed (LED displayed on the front panel).



**Note:** If the circuit breaker position feedback is not assigned to a digital input then the breaker position will always be assumed to match the breaker control output of the module.

### Configuration of circuit breaker commands

Two digital outputs (relay or transistor) must be configured as described in the table below and connected to the circuit breaker.

Function	Description
<i>Mains breaker close</i>	Command to close the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings. (continuous, pulse, MNcoil).
<i>Mains breaker open</i>	Command to open the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings. (continuous, pulse, MNcoil).

## Verification

### DANGER





#### RISK OF ELECTRIC SHOCK, EXPLOSION OR ARCING

Failure to follow these recommendations may result in death or serious injury.



- The module may only be installed and maintained by qualified electricians.
- Use personal protective equipment (PPE).
- Follow good safety practices for electrical work.
- Turn off the power before installing or replacing a fuse, and before installing the module.
- Use equipment adapted to check the absence of voltage.
- Do not use a resettable fuse.

Follow these instructions in order to check the Mains breaker:

1. Connect the circuit breaker position feedbacks and check them on the product. The corresponding LED should light up when the circuit breaker is closed.
2. Press  to be in **MAN** mode.
3. Check that the Power plant isn't running. If it isn't the case, stop the Power plant by pressing .
4. Press the button Mains breaker  to close the breaker.
5. Check that the Mains circuit breaker is closed and that the Mains circuit breaker LED is lit.
6. If possible, apply a load bank (active and reactive) on the Mains and check the powers, currents, voltages and  $\cos(\phi)$ .
7. Press the button Mains breaker  to open the breaker.
8. Check that the Mains circuit breaker is open and that the Mains circuit breaker LED is off.

# SYNCHRONIZATION

## Functioning

The module launches the synchronization only if the Mains provides at least 80% of the nominal voltage. It manages a correction on frequency and voltage to go and stay on the acceptance windows (can be handled in **Controller settings** ⇒ **Electrical** ⇒ **Synchronisation check**). When the Mains voltage and the Bus voltage are synchronized, the module allows to close the circuit breaker.

In case of synchronization fails, the action can be set with the variable [2804] in **Controller settings** ⇒ **Electrical** ⇒ **Synchronisation check**.

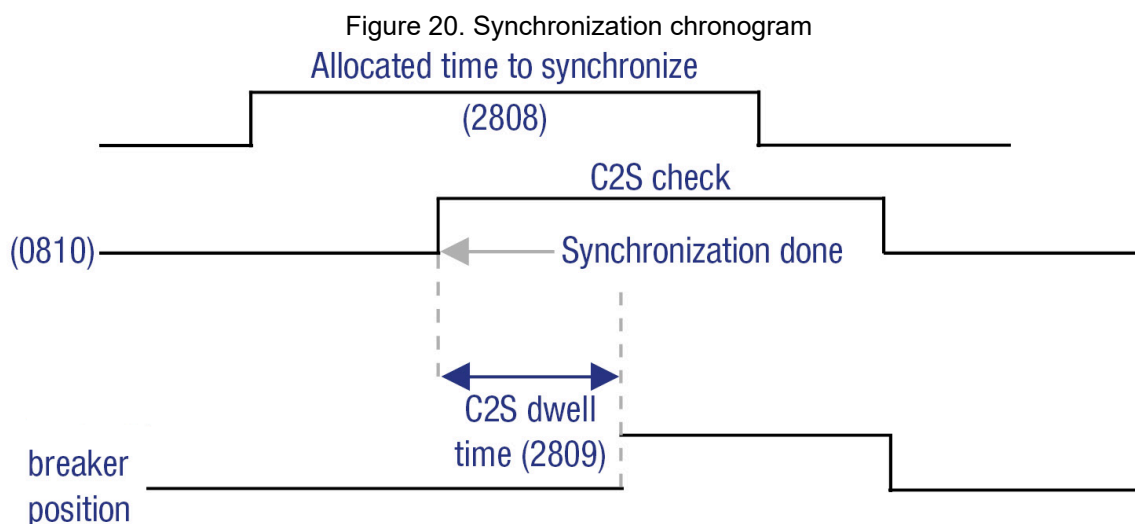
## Condition

- *Voltage acceptance* [2800].
- *Frequency acceptance* [2801].
- *Phase Angle acceptance* [2802].
- *C2S dwell time* (Synchronization dwell time before authorizing to close the breaker) [2809].

## Visualization

Label	Description	Variables
<i>Phase sequence match</i>	Identical phase order on both sides of the circuit breaker (OK = 1 or NOK = 0)	[306]
<i>Voltage match</i>	Identical voltage amplitudes on both sides of the circuit breaker (OK = 1 or NOK = 0)	[307]
<i>Frequency match</i>	Identical frequencies on both sides of the circuit breaker (OK = 1 or NOK = 0)	[308]
<i>Phase match</i>	The phase difference between the voltages on either side of the circuit breaker is zero (OK = 1 or NOK = 0)	[309]
<i>Synch check relay OK</i>	Active if the sources are synchronized on both sides of circuit breaker (OK = 1 or Not OK = 0). Do not confuse with the closing order.	[310]

## Chronogram



## Adjustments

Prerequisite: In order for the module to correctly control the Power plant (which is controlled with **GENSYS COMPACT PRIME** units), the parameter [2017] must be properly set in each **GENSYS COMPACT PRIME** unit. Each **GENSYS COMPACT PRIME** unit must be in **AUTO** mode without a remote start input activated (The generator is started by the MASTER via CAN bus).

### DANGER




#### RISK OF ELECTRIC SHOCK, EXPLOSION OR ARCING

Failure to follow these recommendations may result in death or serious injury.







- The module may only be installed and maintained by qualified electricians.
- Use personal protective equipment (PPE).
- Follow good safety practices for electrical work.
- Turn off the power before installing or replacing a fuse, and before installing the module.
- Use equipment adapted to check the absence of voltage.
- Do not use a resettable fuse.




## Adjustment procedure

1. Disconnect the Mains circuit breaker control output on the module.
2. Make sure that there is some voltage on the Mains side. The Mains LED should be lit.
3. Press  to be in **MAN** mode.
4. Start the Power plant by pressing  and check the **Controller supervision** ⇒ **Synchronization (i4Gen)** page.
5. Press the button Mains breaker  in order to start the synchronization.
6. If the Power plant does not synchronize, change the PID of phase of the **MASTER COMPACT 1B** product (assuming that the PID of the **GENSYS COMPACT PRIME** product are correctly set).

## Verification

1. Disconnect the Mains circuit breaker control output on the module.
2. Make sure that there is voltage on the Mains side. The Mains LED should be lit.
3. Press  to be in **MAN** mode.
4. Start the Power plant by pressing the button  and check the **Controller supervision** ⇒ **Synchronization (i4Gen)** page.
5. Once the Power plant is ready, press the button Mains breaker .
6. Press  to go to the Information page and check if the module is in synchronizing mode.
7. Go to the menu **Controller supervision** ⇒ **Synchronization (i4Gen)** and check the phase difference. When the phase difference is 0° follow the instructions below:
  - a. Check the phase sequence and the concordance of the phases upstream and downstream of the circuit breaker.
  - b. Check the wiring of the Bus and Mains voltage references.
  - c. Check the potential difference between Ph1 Bus and Ph1 Mains. The potential difference must be below 10% of the nominal voltage. Check the potential difference between Ph2 Bus and Ph2 Mains as well.




8. Stop the Power plant by pressing .
9. Reconnect the Mains circuit breaker control.
10. Start the Power plant by pressing .
11. Once the Power plant is ready, press the button Mains breaker . The Power plant should synchronize and then, the product will close the Mains breaker.

## Phase offset

This advanced function, only available when the option is enabled, allows a phase offset between the Mains and the Bus during the synchronization phase. In this setup, the module will command the breaker to close with the selected phase angle shift. The phase offset modification can be done in **Controller settings** ⇒ **Electrical** ⇒ **Synchronisation check**. An example of an application can be seen in the schematic below.

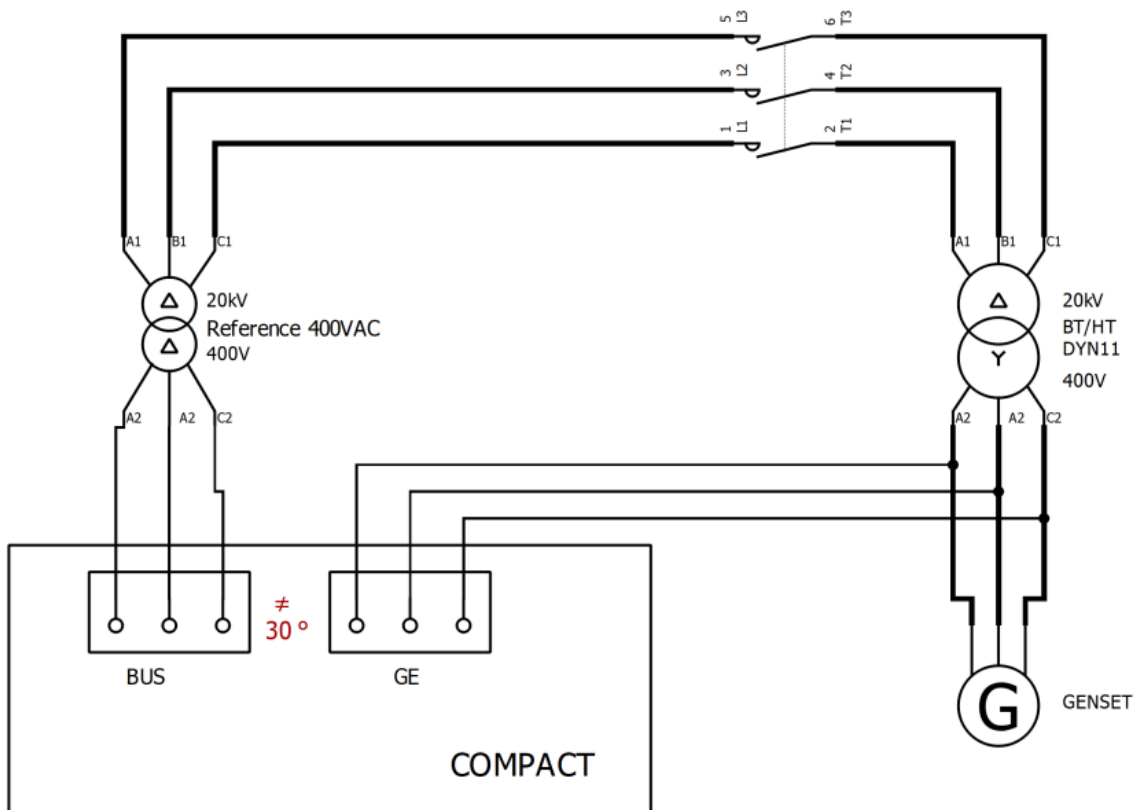Figure 21. Application example using phase offset



### WARNING



**MODIFYING THE SETTING IN AN APPLICATION WHERE PHASE SHIFTING IS NOT REQUIRED WILL DAMAGE YOUR ENGINE. BE CAUTIOUS WHEN MODIFYING THIS SETTING.**

## LOAD/UNLOAD RAMP

### Functioning

After a synchronization, the module ramps up the Power plant load to avoid overload or a load impact.

The module calculates the active power setpoint according to the configuration (base load, peak shaving and No break change over). It then starts a load ramp to progressively reach this value.


During the ramp, the module keeps a constant power factor, set by the power factor setpoint [2253] parameter, in order to start a reactive power ramp.

If the production request is stopped, the module starts an unload ramp to progressively reach the Power plant low limit.

The parameters to be set are the following: *Low kW active power threshold* [2866], *High kW active power threshold* [2867], *Load ramp timer* [2853], *Unload ramp timer* [2856]. The timers [2853] and [2856] correspond to the time required to reach the nominal load.

Example: Power rating of the Power plant = 500KW, Load Ramp time = 50 seconds, Unload Ramp time = 22 seconds:

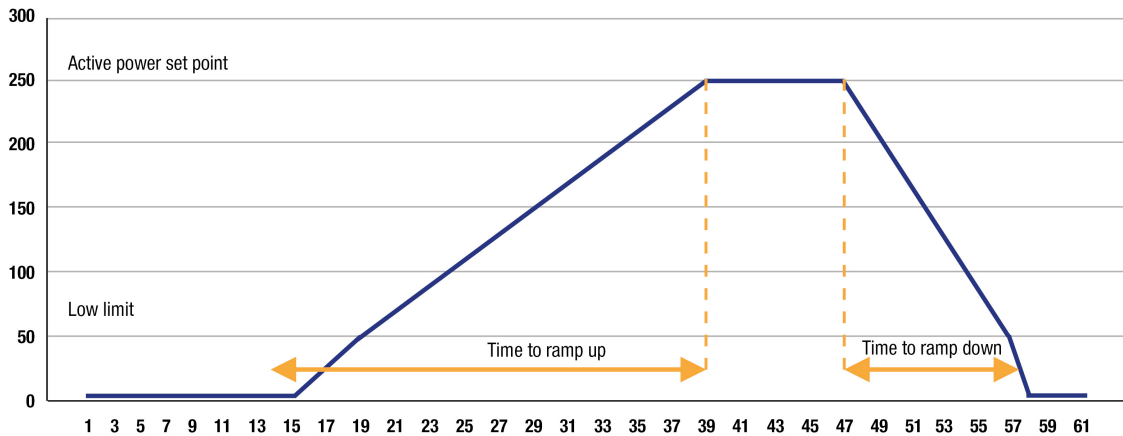Figure 22. Load/Unload ramp chronogram



Before stopping the Power plant, the module reduces its load to the low limit and then opens the circuit breaker. If the breaker opening fails at the end of the ramp, the Power plant continues to share the load and shows a breaker opening fault on display.

### Verification

For this test, an available load is important.

1. Check that the power measured per phase is positive and balanced.
  - Go to the menu **Controller supervision**. Otherwise check the currents connections.
2. Check that the current power follows the setpoint of KW and KVAR during ramps.

## KW/KVAR REGULATION

### Functioning

---

The module switches to active and reactive power regulation mode around its setpoint after a load ramp.

The KW setpoint is calculated differently depending on the following modes:

- Base load mode: Power plant KW setpoint.
- Peak shaving mode: Mains KW setpoint.
- No break change over: alternatively: Power plant KW set-point and Mains KW setpoint.

The module regulates the reactive power according to the power factor setpoint [2253]. The parameter *High kW active power threshold* [2867], configurable in **Controller settings** ⇒ **Electrical** ⇒ **Bus** ⇒ **General**, forbids the Power plant to take more active power than the **active power high threshold**. The remaining active power goes directly to the Mains.

# PROTECTIONS

## Functioning

The protections are triggered by an internal or external event (internal protection, digital inputs, CAN bus loss, etc.). In order to protect the system, an action can be associated with the triggering of a protection. These actions are of different kinds :

- These actions can just trigger an alarm. An orange LED will flash on the product and the title of the triggered protection will appear in the alarms/faults page.
- These actions can protect the different equipments by carrying out actions that depend on the type of action configured. In this case, the LED will blink orange as long as no human intervention is required, the LED will blink red if a human intervention is required. If the LED flashes orange, the title of the protection that has been triggered can be consulted in the alarms page. If the LED flashes red, the name of the protection that has been tripped can be viewed in the faults page.
- These actions can launch automated sequences to perform the main functions of the product. In this case, no LEDs are flashing. The title of the protection can be consulted in the events page.

Value	Type	Action	Description
0	–	Unused (no action)	–
2	Event	Mains failure	<p>This event will automatically starts the generator and close it on the load in case of loss of Mains power. The Mains circuit breaker will be opened once the generator is ready so if Mains power comes back before that, the controller will just stops the generator. The Mains circuit breaker behavior on Mains failure can be set using the variable [2312].</p> <p>Once Mains power is back, the Mains failure event will be automatically reset after the timer [2009] has elapsed and the module will allow the power plant to stop after its configured sequence (synchronization and load transfer or change over).</p>
3	Alarm	Alarm	The protection is displayed in the alarm page. No action is performed.
4	Fault	Fault (soft shutdown)	The generators open their circuit breaker, they cool down for the duration of the cool down timer, then they stop.
9	Alarm/ Fault	Mains electrical fault	<p>The protection opens the Mains circuit breaker and tries to re-synchronize again after the timer [2806].</p> <p>The number of resynch attempts is set by variable [2807], it means that if the fault that has tripped the Mains circuit breaker is happening again after each attempt, the protection will keep triggering.</p> <p>Once the number of resynch attempts has been reached, the Mains circuit breaker will remain open.</p> <p>The reset function will automatically reset the number of attempts and will automatically close the Mains circuit breaker.</p>

These actions have to be configured in **i4Gen Suite** software. List of potential alarms/faults can be downloaded using the SAVE button beside "Protections configuration" in the **i4Gen** ⇒ **File transfer** page. A digital output can be configured to indicate that a protection is active.



**Note:** The protections are active whatever the operating mode is (**MAN, AUTO, TEST**)

All the protections available for the product are explained in the chapter [Software variables \(on page 109\)](#).

Specific protections are explained below.

## Emergency stop

The emergency stop function can be performed in two ways:

- Connect an **Emergency stop** button to an **Emergency stop** logic input. It is a software treated emergency stop.
- Action on an alarm or a fault : select **Fault (soft shutdown)**.

## Communication

Alarm/Fault	Description	Setting
CANopen	Communication error on the CANopen protocol.	[3059]

For **CRE-Link®** protocol errors, check [CRE-Link® \(on page 94\)](#).

## Breaker

Depending on the status of the module, an alarm or circuit breaker fault may occur. This can be a failure closing circuit breaker, failure opening circuit breaker, unexpected opening of the circuit breaker, unexpected closing of the circuit breaker. Alarm or fault depends of the severity of the event.

## Reattempt to close after an electrical fault


In the event of an electrical fault:

1. The module opens the circuit breaker.
2. The module will try X times according to the value configured in the parameter [2807].
3. The module will wait X seconds between each attempt according to the value configured in the parameter *Delay before new attempt* [2806].

### Example:

Example with [2807] = 2:

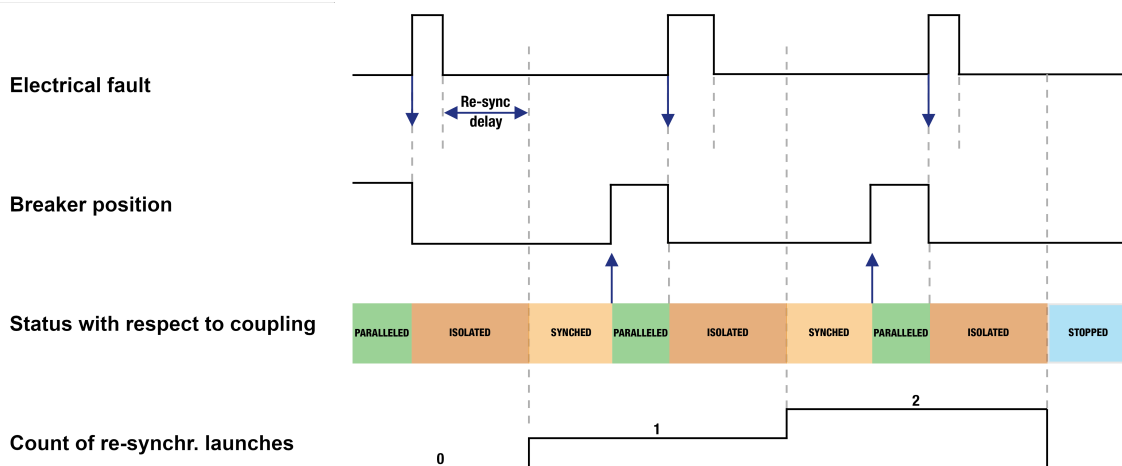Figure 23. Reattempt to close after an electrical fault



## Custom fault and alarm

User variables [8000] to [8099] can be set as alarm or fault using *i4Gen Suite*. The label of the alarms/faults can be customized by changing the label of the related user variable. A user variable set as alarm or fault can be triggered via Modbus or **Easy Flex®**.

## Audible or visual warning device

To trigger an external alarm when a protection trips, connect the alarm to a logic output configured as **Horn**. The signal duration is configurable with the parameter *Horn timer* [2478] (0 means that the alarm will be activated until a manual shutdown); alternatively, an input can be configured as **Stop horn** to manually stop the horn.

## Reset of alarms and faults

To perform an alarms/faults reset:

- Locally:  + 
- Remote: use the "**Reset faults**" input function.

## EVENTS

### Functioning

Events are actions performed on the installation that can be monitored by the controller. They are managed in the same way as an alarms and faults, thus they can be seen in the "history" menu where all alarms/faults/events history is listed. Events are also included in the log file together with alarms and faults. Each event can be enabled/disabled in the **Controller settings** ⇒ **General** ⇒ **Events** page.

Variable number	Label	Description
[5000]	<i>Power up</i>	This event is recorded each time the controller is powered on.
[5003]	<i>Mains failure</i>	This event is recorded when the Mains failure protection trigger (see <a href="#">Protections (on page 44)</a> chapter for more information).
[5004]	<i>Mains back</i>	This event is recorded when the Mains failure protection triggered and is no longer active (see <a href="#">Protections (on page 44)</a> chapter for more information).
[5007]	<i>Mains breaker closed</i>	This event is recorded if the controller can read the "closed breaker feedback" from the mains' breaker (even if the controller didn't close the mains' breaker by itself).  If breaker position feedbacks are not used, the event is triggered on breaker close command instead.
[5008]	<i>Mains breaker opened</i>	This event is recorded if the controller can read the "opened breaker feedback" from the mains' breaker (even if the controller didn't open the mains' breaker by itself).  If breaker position feedbacks are not used, the event is triggered on breaker open command instead.
[5009]	<i>Manual mode</i>	This event is recorded when the controller is switched to <b>MAN</b> mode (Pressing <b>MAN</b> when the controller is already in <b>MAN</b> mode won't trigger the event).
[5010]	<i>Automatic mode</i>	This event is recorded when the controller is switched to <b>AUTO</b> mode (Pressing <b>AUTO</b> when the controller is already in <b>AUTO</b> mode won't trigger the event).
[5011]	<i>Test mode</i>	This event is recorded when the controller is switched to <b>TEST</b> mode (Pressing <b>TEST</b> when the controller is already in <b>TEST</b> mode won't trigger the event).

## CONTROL LOOP PID

### Empirical adjustment of a PID control loop

---

1. Set all the gains to 0 (except G gain).
2. Increase the P gain until you have a stable oscillation.
3. Increase the gain D until the oscillation is no longer present.
4. Repeat steps 2 and 3 until the D gain can't cancel the oscillation caused by the P gain.
5. Go back to the previous values of the P and D gains where the D gain cancels the oscillation caused by the P gain.
6. Increase the I gain in order to correct the error between the actual value and the set-point.  
Warning: A too high I gain might cause oscillations to the system. The I gain must correct the static error rapidly without oscillations (or small oscillations in order to gain some response time).



## ADVANCED SETTINGS

### STATIC PARALLELING

#### Power plant in static paralleling

---

In order to ensure that the Mains breaker is open before initiating the static paralleling sequence, set the following parameter:

- Variable *Mains breaker tripping mode on mains failure* [2312] available in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Mains breaker** page set to **Immediately** (only available in Advanced mode).

#### WARNING



#### **MAINS BREAKER MANAGEMENT**

If the Mains breaker doesn't open immediately on a Mains failure event, the grid and generators will be coupled during the static paralleling sequence until enough generators have their excitation up to satisfy the Power plant minimum number of GE parameter. If the grid power comes back during that sequence, serious damage will be caused to alternators, engines and surrounding electrical equipments.

The above settings are mandatory for static paralleling. Failure to follow these instructions may cause serious damage to the installation.

# LOAD SHEDDING

## Functioning

---

The load shedding function is the ability to disconnect less important consumers if the Power plant is overloaded even when the full capacity is engaged; this prevents a blackout.

Any module – generally one – in the Power plant can take care of the excessive demand. If the KW demand exceeds the Power plant capacity and/or the frequency has dropped below a threshold for a given time, the dedicated module activates outputs to shed non-essential loads.

You can setup your system to react more or less rapidly depending on the severity of the situation using two levels of thresholds and delays.

## Settings

---

**All the settings are explained in the chapter [Software variables \(on page 109\)](#).**

They are set in the **Controller settings** ⇒ **Electrical** ⇒ **Power management** ⇒ **Load shedding** page.

Using the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital/relays outputs** page, preset up to 5 outputs to **1st non essential trip...5th non essential trip**.

In the same manner as for protections, you can trigger an action when the shedding capacity runs out (a specific output "Trip alarm" is signaled if [2862] = 3).

## Sequence

---


When one of the two levels is reached and its associated delay has expired, a trip alarm is set and a five-tier shedding starts (level 1) or escalates (level 2): at the end of a cycle based on the parameter [2861] an extra non-essential consumer is phased out till the threshold is reversely passed.

When the active power of the generator exceeds the maximum kW threshold configured or when the frequency drops below the minimum frequency threshold configured:

1. Trip alarm is raised after the related delay, as long as one of the threshold is exceeded.
2. The trip outputs are activated successively after an additional delay; they are locked until a manual reset; they can activate a preset output on a non-essential direct trip.

The charts show the trip alarm and trip outputs depending on the Generator load or frequency:

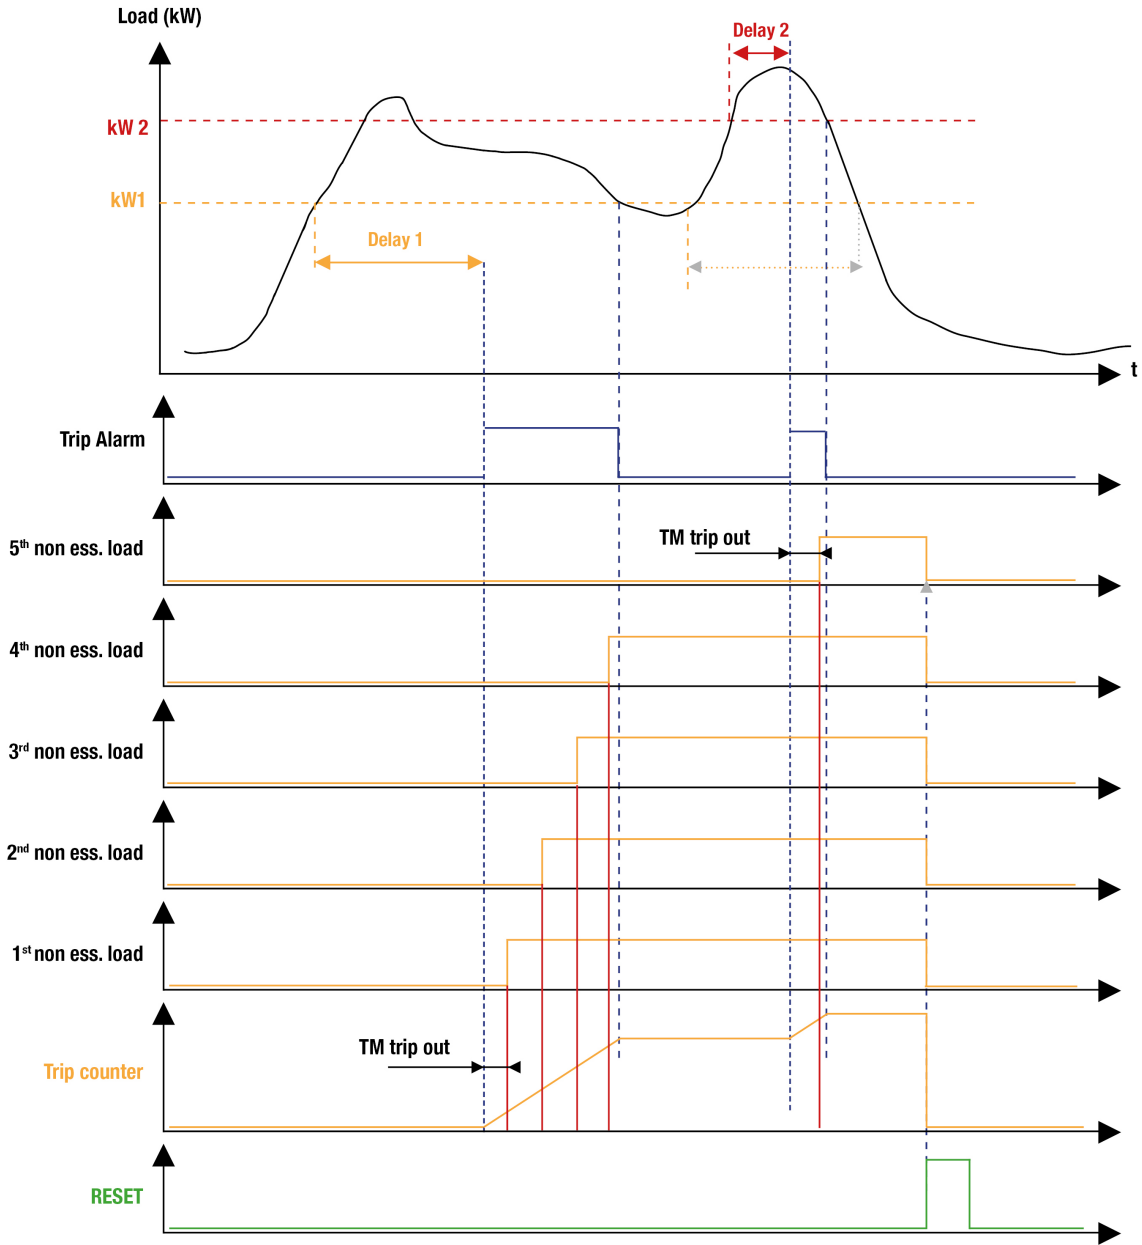Figure 24. Sequence of load shedding



## UNLOAD BREAKERS CONFIGURATION

### Functioning

Several power management applications require the Power plant to gradually take the load depending on the current nominal power available. The unload breakers configuration allows the user to control, with the module, up to ten additional breakers. These breakers can then be closed according to a "**nominal power available in the Power plant**" threshold and a preset time. The unload breaker priority follows an ascending order (from 1 to 10). All the unload breakers are closed when the Mains is available and the Mains breaker closed. **The Load Dependant Start/Stop** must not be enabled when this functionality is being used.

### Settings

Variables	Label	Description
[3730]	<i>Enable unload breakers</i>	Enable unload breakers
[3731]	<i>Unload breaker kW 1</i>	Active power threshold before closing the breaker of the load n°1
[3732]	<i>Unload breaker kW 2</i>	Active power threshold before closing the breaker of the load n°2
[3733]	<i>Unload breaker kW 3</i>	Active power threshold before closing the breaker of the load n°3
[3734]	<i>Unload breaker kW 4</i>	Active power threshold before closing the breaker of the load n°4
[3735]	<i>Unload breaker kW 5</i>	Active power threshold before closing the breaker of the load n°5
[3736]	<i>Unload breaker kW 6</i>	Active power threshold before closing the breaker of the load n°6
[3737]	<i>Unload breaker kW 7</i>	Active power threshold before closing the breaker of the load n°7
[3738]	<i>Unload breaker kW 8</i>	Active power threshold before closing the breaker of the load n°8
[3739]	<i>Unload breaker kW 9</i>	Active power threshold before closing the breaker of the load n°9
[3740]	<i>Unload breaker kW 10</i>	Active power threshold before closing the breaker of the load n°10
[3720]	<i>Unload breaker timer 1</i>	Time before closing the breaker of the load n°1
[3721]	<i>Unload breaker timer 2</i>	Time before closing the breaker of the load n°2
[3722]	<i>Unload breaker timer 3</i>	Time before closing the breaker of the load n°3
[3723]	<i>Unload breaker timer 4</i>	Time before closing the breaker of the load n°4
[3724]	<i>Unload breaker timer 5</i>	Time before closing the breaker of the load n°5
[3725]	<i>Unload breaker timer 6</i>	Time before closing the breaker of the load n°6
[3726]	<i>Unload breaker timer 7</i>	Time before closing the breaker of the load n°7
[3727]	<i>Unload breaker timer 8</i>	Time before closing the breaker of the load n°8
[3728]	<i>Unload breaker timer 9</i>	Time before closing the breaker of the load n°9
[3729]	<i>Unload breaker timer 10</i>	Time before closing the breaker of the load n°10
[4721]	<i>Unload breaker n°1</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°1 are met
[4722]	<i>Unload breaker n°2</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°2 are met
[4723]	<i>Unload breaker n°3</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°3 are met
[4724]	<i>Unload breaker n°4</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°4 are met

Variables	Label	Description
[4725]	<i>Unload breaker n°5</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°5 are met
[4726]	<i>Unload breaker n°6</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°6 are met
[4727]	<i>Unload breaker n°7</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°7 are met
[4728]	<i>Unload breaker n°8</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°8 are met
[4729]	<i>Unload breaker n°9</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°9 are met
[4730]	<i>Unload breaker n°10</i>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°10 are met

### Configuration with i4Gen Suite software


The settings are available here : **Controller settings** ⇒ **Electrical** ⇒ **Power management** ⇒ **Unload breakers**. The outputs functions must be configured to *Unload breaker n°1* with the number corresponding to the wanted unload breaker. Outputs functions can be configured here : **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital/relays outputs**.

### Example

Consider the example of an application with 10 generators with a nominal power of 500KW each. The user has configured his unload breakers as followed:

Variables	Value
[3730]	1
[3731]	1000
[3732]	700
[3733]	500
[3734]	200
[3735]	1200
[3736]	50
[3737]	170
[3738]	350
[3739]	20
[3740]	800
[3720]	3
[3721]	3
[3722]	3
[3723]	3
[3724]	3
[3725]	3
[3726]	3
[3727]	3
[3728]	3
[3729]	3

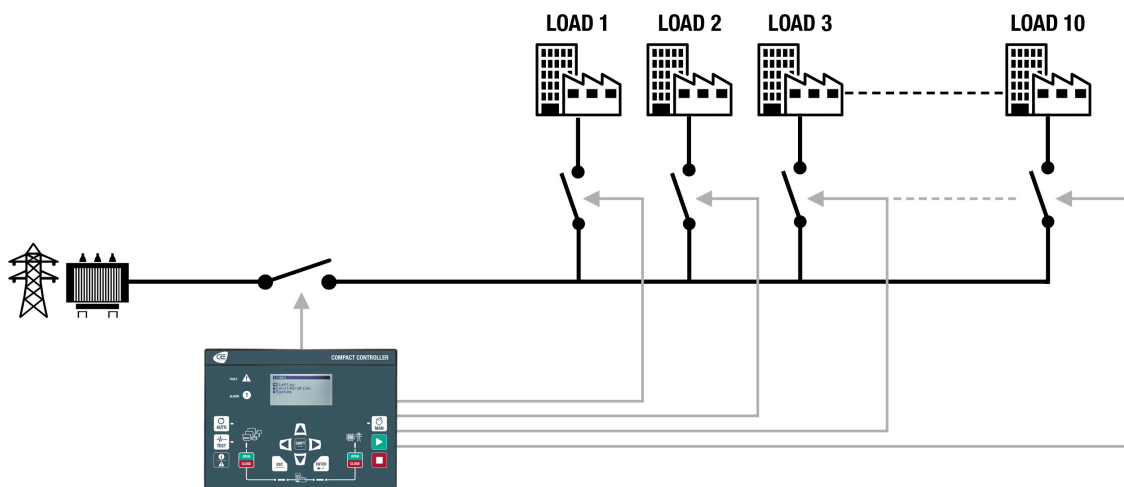
Figure 25. Example of application with unload breakers



The Power plant will take the load as such: When only one Generator is connected to the Bus, the Power plant has a nominal power of 500KW. Even though the load connected to the third breaker could be handled by the Power plant, the third unload breaker will not close due to the fact that the conditions for the first unload breaker to close are not respected. If a second Generator is connected to the Bus, the Power plant will have a nominal power of 1000 KW. The first unload breaker will close after 3 seconds. The second breaker will only close if the Power plant has at least a nominal power of 1700 KW and so on. The first breaker to open will always be the breaker with the highest number.

The behavior of the first three breakers are shown in the figure below:

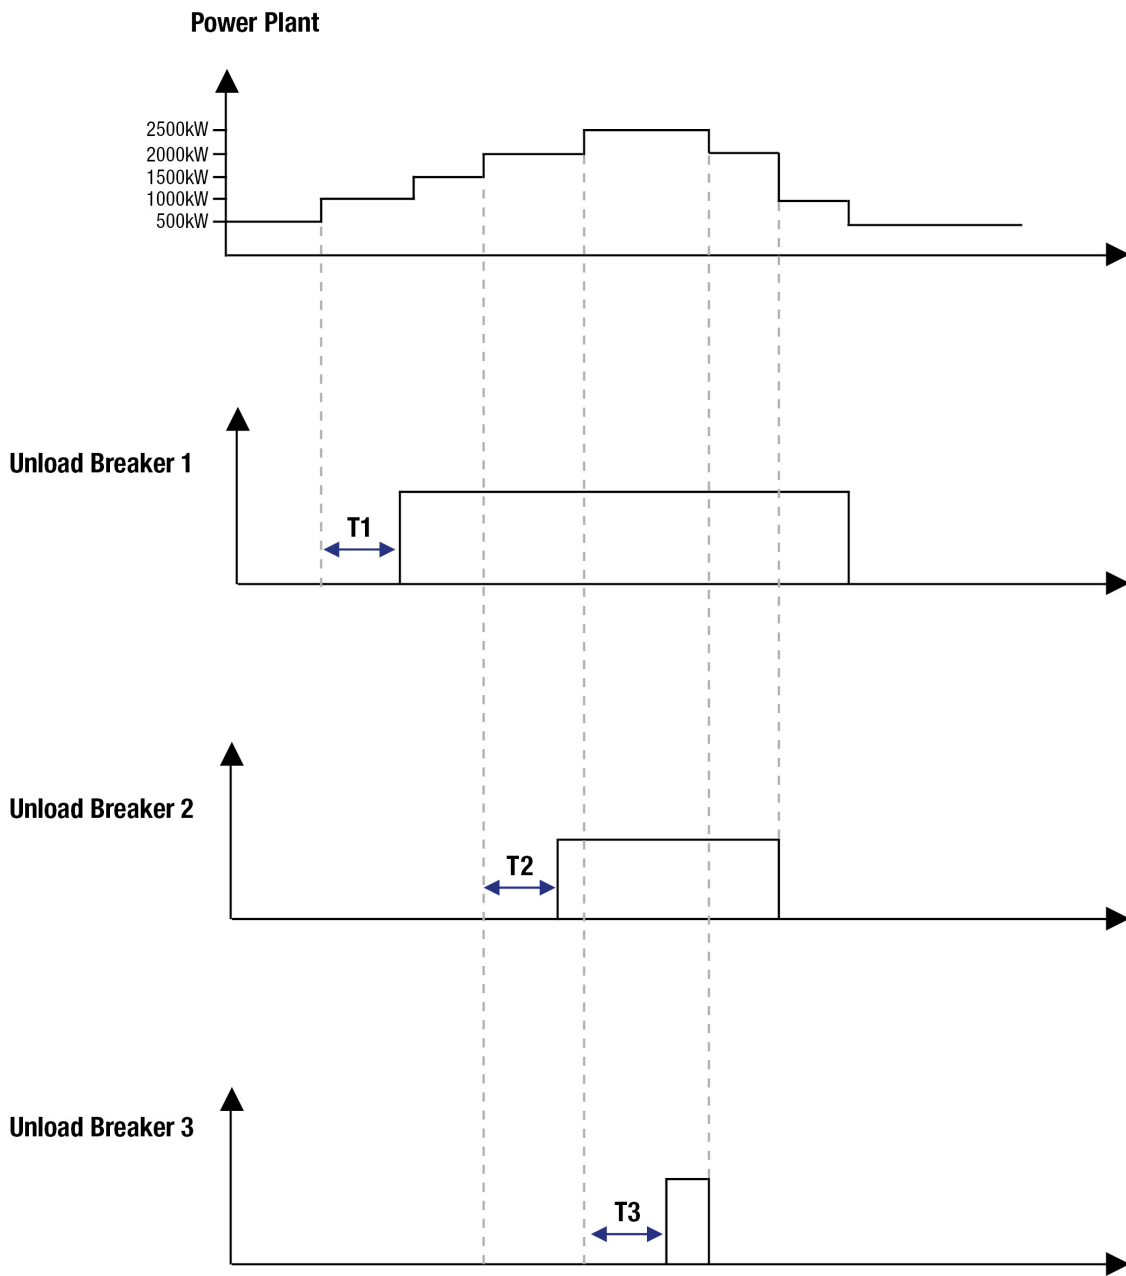Figure 26. Unload breakers behavior




## MAINS APPLICATION

In Mains paralleling applications, if a "Mains failure" fault is managed (with protections or logic inputs), the Power plant starts and takes the load when the Mains fail, even if the remote start is deactivated. In all cases, a Mains protection must be set to start the Power plant if the Mains disappears.

## CHANGE OVER MODE

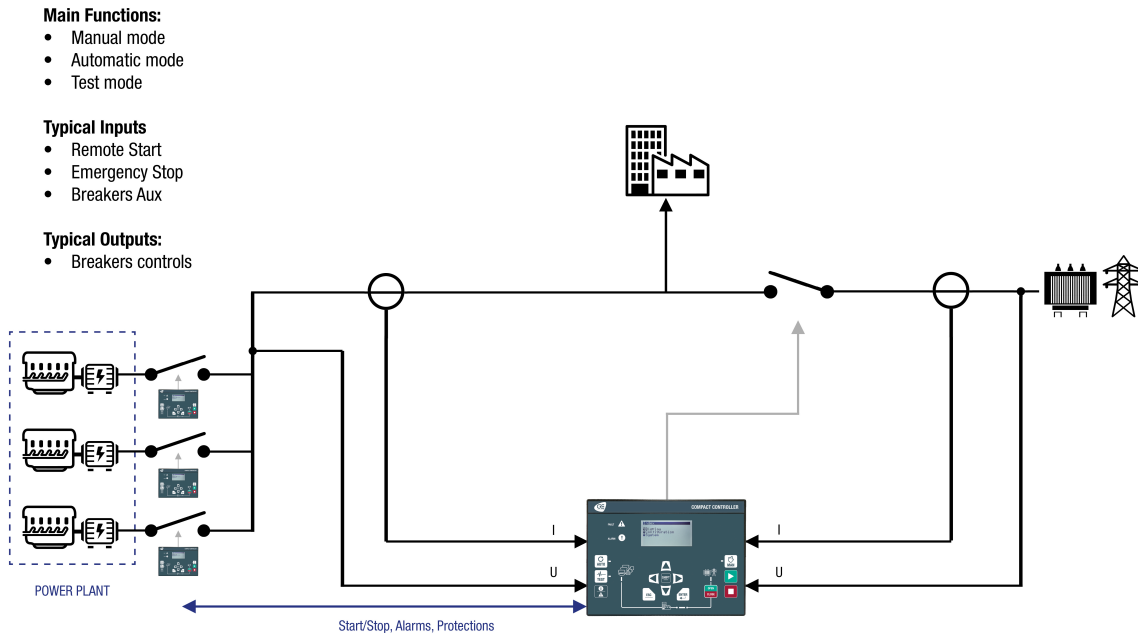
Figure 27. Change over mode functions



In change over mode the module orders the Power plant to start in the event of a Mains failure. The module opens its breaker then waits until the requirements needed for the Power plant to be ready are met (configurable with the parameter [2109]) to order the **GENSYS COMPACT PRIME** units of the Power plant to close the breakers of the generators. When the Mains returns, the module orders the Power plant to open its Generator circuit-breakers after a preset time. Then, the module closes its Breaker.



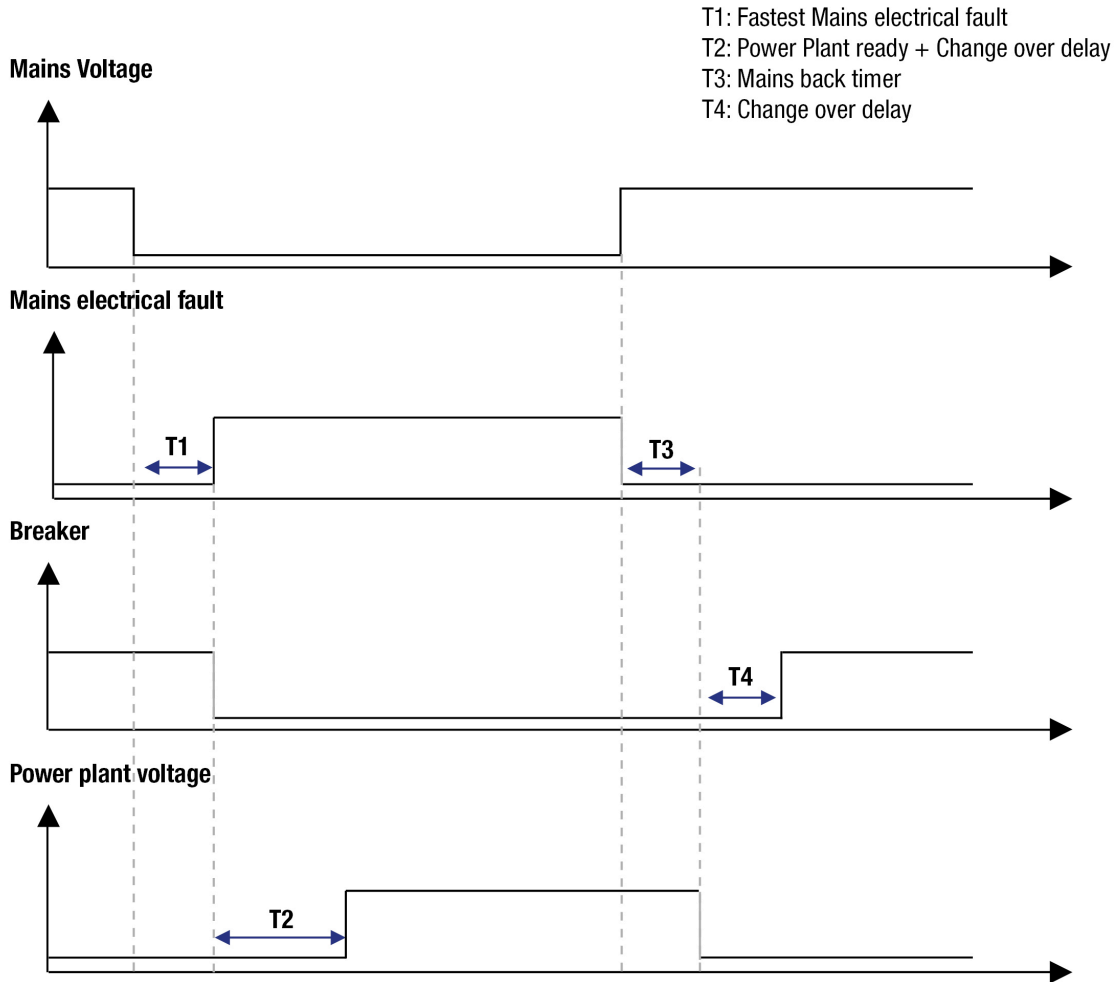
Figure 28. Change over mode during a Mains failure



If a remote start is activated when the Mains is present, the module orders the Power plant to start its generators, opens the breaker and orders the Power plant to close its Generator breakers. The module then waits until the requirements needed for the Power plant to be ready are met (configurable with the parameter [2109]) after a preset time and takes the load.

# OPERATOR MANUAL

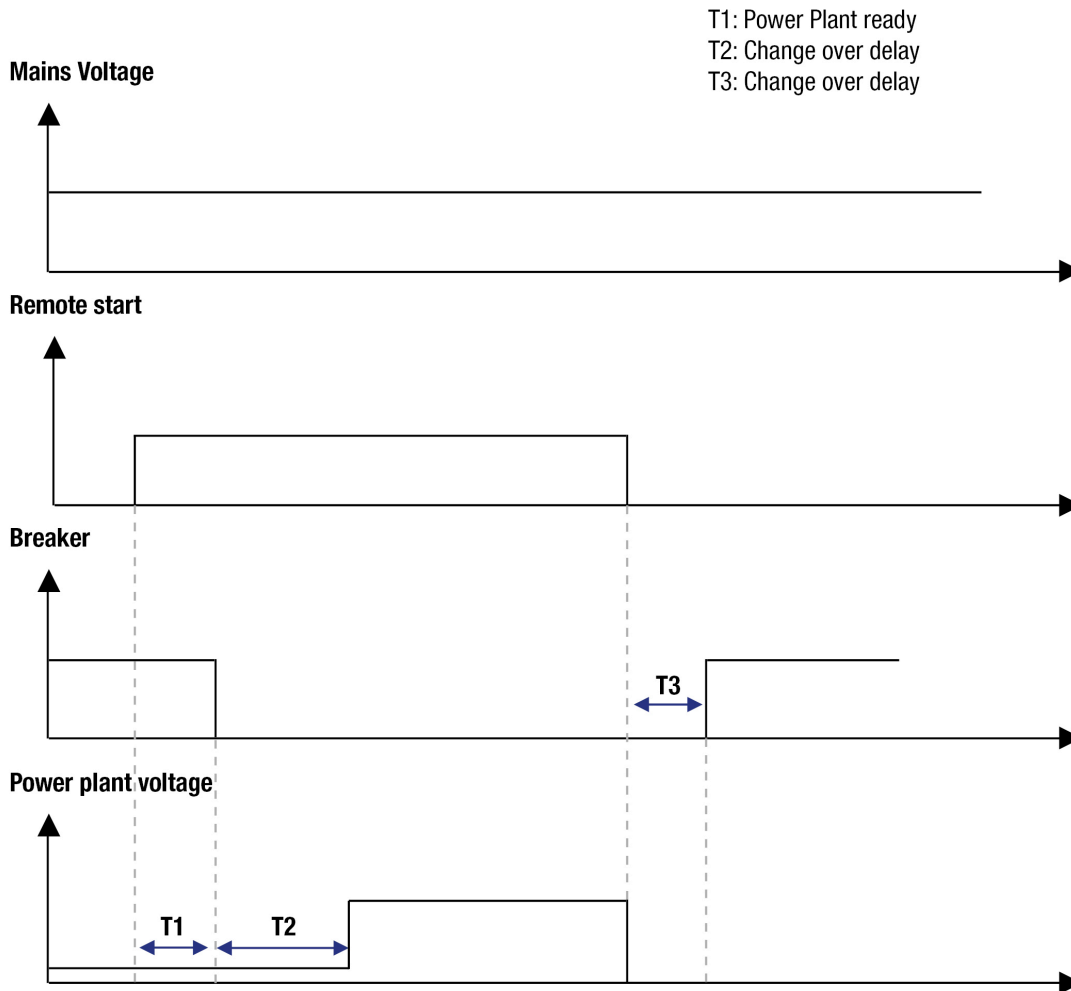Figure 29. Change over mode with remote start



## Settings

Variables	Label	Description
[2005]	<i>Type of application</i>	This parameter is used to select the mode of operation between the generator(s) and the mains. 3 values can be selected: - Change over : Load transfer between the generator(s) and the mains without synchronization/paralleling. - No break change over : Load transfer between the generator(s) and the mains with synchronization/paralleling/progressive power transfer. - Permanent: Synchronization/paralleling to the mains permanently. This mode has to be selected to set a fixed power to the mains (Peak shaving) or to set a fixed power to the generator (Base load). Caution: In this mode of operation, the activation of the df/dt protection is strongly recommended to detect the loss of the mains during permanent paralleling.
[2009]	<i>Mains back timer</i>	Waiting time between the moment when the mains returns (no longer any protection configured as mains failure is active) and the moment when the sequence to return to the mains is started.
[2007]	<i>Change over timer</i>	This timer corresponds to the waiting time between the opening of the generator/bus breaker and the closing of the mains breaker or vice versa.
[2000]	<i>Number of GENSYS COMPACT PRIME</i>	Number of GENSYS COMPACT PRIME on the power plant. This parameter is used for the CAN communication between products.
[2109]	<i>Power plant minimum number of GE</i>	This parameter defines the minimum number of generators required to consider the power plant ready. The controller will transfer the load as soon as the number of generators on the bus is greater than or equal to the value set in this parameter.




**Note:** In order for the module to correctly control the Power plant (which is controlled with **GENSYS COMPACT PRIME** units), the parameter [2017] must be correctly configured in each **GENSYS COMPACT PRIME** unit. Each **GENSYS COMPACT PRIME** unit must be in **AUTO** mode without a remote start input activated.



## Operating mode

### MAN

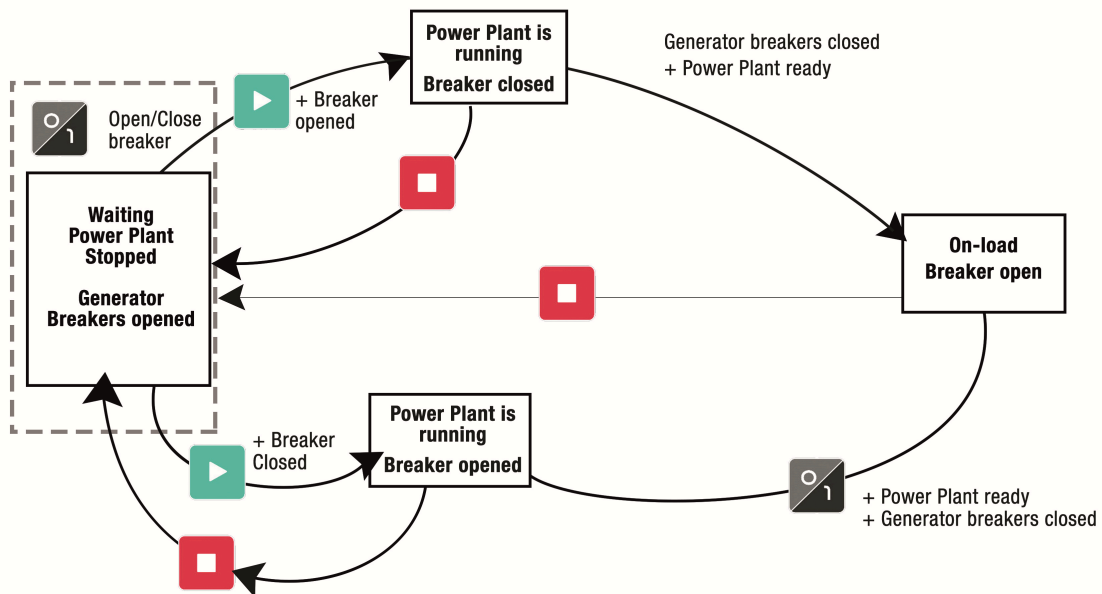Figure 30. Change over : operating mode diagram





### Supplying the load with Power plant

1. Press  : the associated LED lights up.
2. Press  : the module orders the Power plant to start. When the Power plant is ready, the breaker opens and the circuit breakers of the generators close and take the load (assuming the Mains is present at the start of operation).

### Switching back the load to the Mains

The Power plant powers the load.

1. Press  to stop the Power plant.
2. Press  to close the Mains breaker (only possible if all the circuit breakers of the generators are open).


### AUTO

The **AUTO** mode requires the use of a digital input configured as *Remote start on load*.

## NO BREAK CHANGE OVER

When the remote start is on, the Power plant starts, synchronizes and parallels to the Mains while being in low limit. When the Power plant is ready (configurable with the parameter [2109]) the Power plant takes the load. Once the Mains is unloaded, the module opens the breaker as described in the following figure:

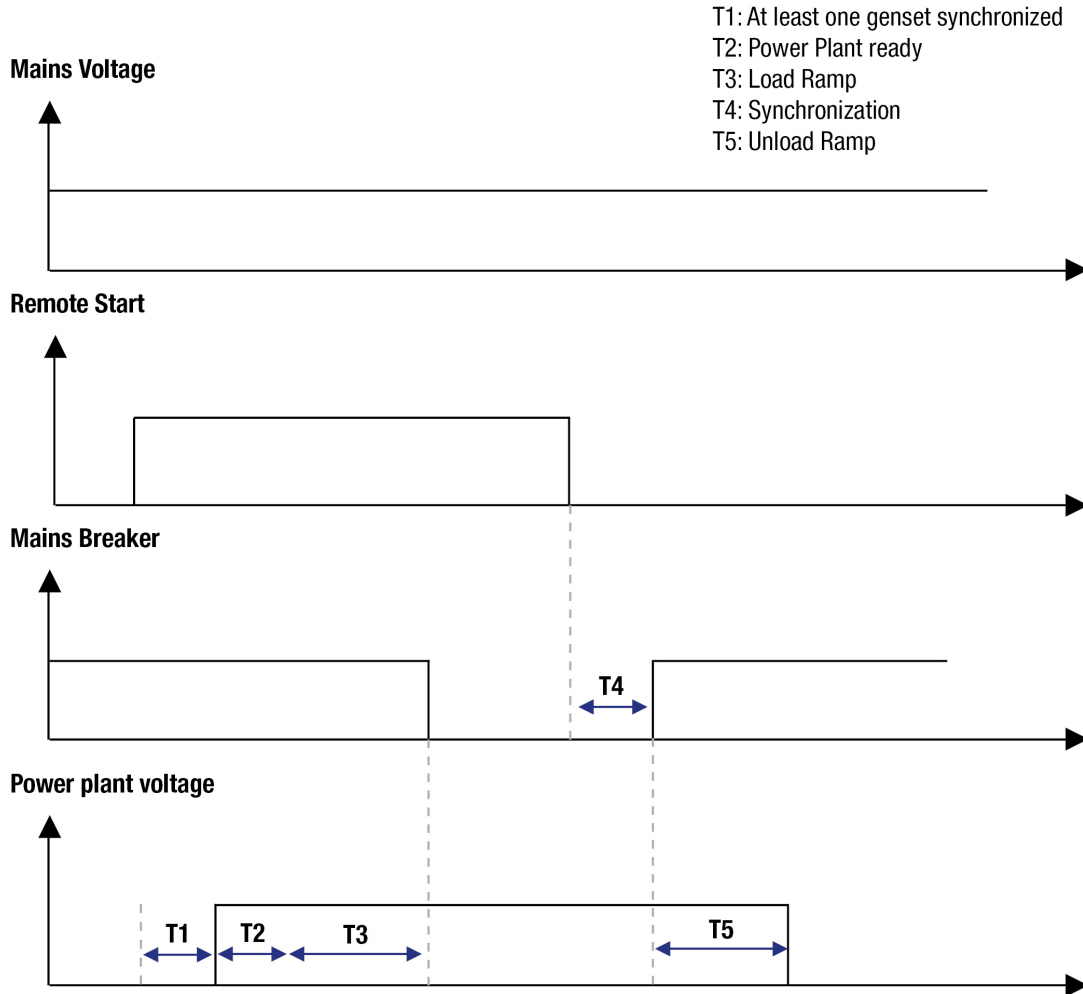
Figure 31. No break change over with remote start



When the remote start is off, the module synchronizes the Power plant to Mains, closes its breaker, parallels with the Power plant and order the Mains to take the load. The module then orders the Power plant to open its Generator breakers as described below:

When the remote start is off, the Mains takes the load in the same way as the Generator did previously. If the generator(s) started because of a Mains failure, the module synchronizes the generator(s) to the Mains when the Mains power returns, closes its Mains breaker, transfers the load from the generator to the Mains (unload ramp), opens the generator breaker(s) and stops the generator(s) as described below:

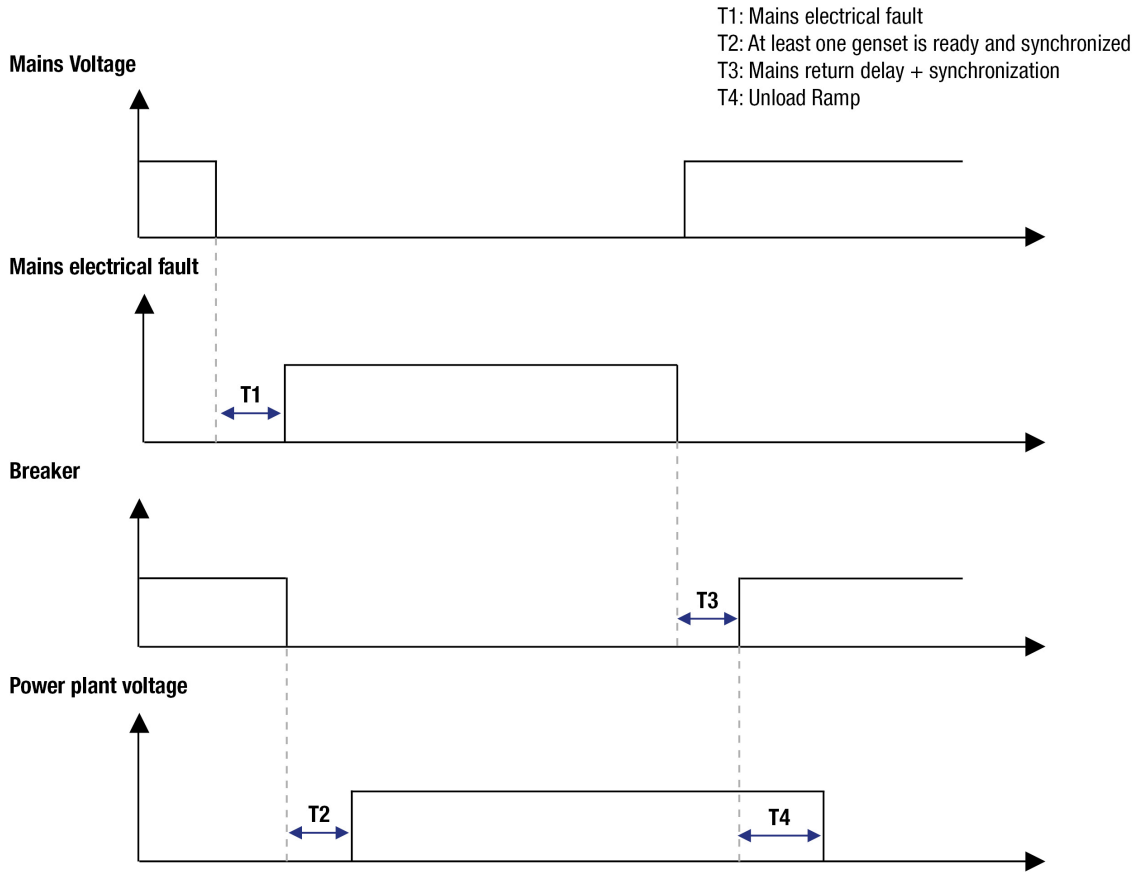Figure 32. No break change over when the remote start is off



## Settings

Variables	Label	Description
[2005]	<i>Type of application</i>	This parameter is used to select the mode of operation between the generator(s) and the mains. 3 values can be selected: - Change over : Load transfer between the generator(s) and the mains without synchronization/paralleling. - No break change over : Load transfer between the generator(s) and the mains with synchronization/paralleling/progressive power transfer. - Permanent: Synchronization/paralleling to the mains permanently. This mode has to be selected to set a fixed power to the mains (Peak shaving) or to set a fixed power to the generator (Base load). Caution: In this mode of operation, the activation of the df/dt protection is strongly recommended to detect the loss of the mains during permanent paralleling.
[2253]	<i>Power factor set-point (inductive)</i>	This parameter is used to set the generator/power plant $\cos(\varphi)$ set point that will be applied when paralleling to the mains. The imposed $\cos(\varphi)$ is an inductive $\cos(\varphi)$ .
[2009]	<i>Mains back timer</i>	Waiting time between the moment when the mains returns (no longer any protection configured as mains failure is active) and the moment when the sequence to return to the mains is started.
[2108]	<i>Power plant minimum kW</i>	Minimum active nominal power needed to consider the power plant ready
[2109]	<i>Power plant minimum number of GE</i>	This parameter defines the minimum number of generators required to consider the power plant ready. The controller will transfer the load as soon as the number of generators on the bus is greater than or equal to the value set in this parameter.




**Note:** In order for the module to correctly control the Power plant (which is controlled with **GENSYS COMPACT PRIME** units), the parameter [2017] must be correctly configured in each **GENSYS COMPACT PRIME** unit. Each **GENSYS COMPACT PRIME** unit must be in **AUTO** mode without a remote start input activated.

## Operating mode

### MAN

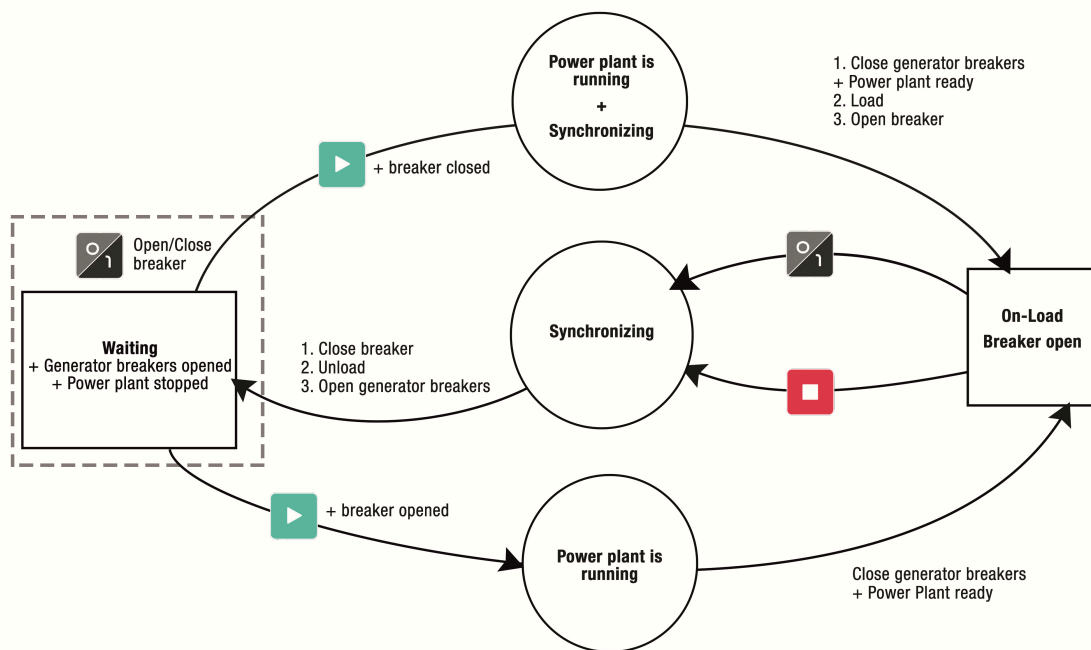Figure 33. No break change over : operating mode diagram



**Note:** The **MAN** mode does not allow manual control of speed and voltage to synchronize or load control. Synchronization and load control are automatic even in **MAN** mode.

### Supplying the load with Power plant

1. Press to close the breaker.
2. Press : the module starts the Power plant. The **MASTER COMPACT 1B** unit synchronizes the Power plant to the Mains, closes the generators breakers and starts a load ramp. When the Mains takes all the load the module breaker opens.

### Switching back the load to the Mains

The Power plant is on load:

Press or to synchronize the Power plant to the Mains, start an unload ramp, open the breaker and order the Power plant to stop running.

### AUTO

The **AUTO** mode requires using a logic input configured as **Remote start**. All sequences are managed automatically, as on the previous picture.



## Failure to synchronize

After a Mains fault, the Power plant is alone on the load. When the Mains comes back and the return to Mains temporization is over, the module tries to synchronize the Power plant to the Mains.

If a failure to synchronize is configured as Fault (soft shutdown), the Power plant opens its Generator breakers and the module breaker closes.

## Operator controlled return to mains

Normal operation: In case of Mains failure, the Power plant starts and takes the load. When the Mains voltage returns, the Power plant re-synchronizes to the Mains and automatically gives back the load.

The **"Operator controlled return to mains"** special function allows the operator to control the moment the Power plant will return the load to the Mains.


To do this, a digital input of the module should be set as **"Manual mains back"**. The unit will wait the synchronization order provided by the digital input before re-synchronizing the Power plant to the Mains.



**Note:** If the synchronization order is issued by Modbus TCP, the parameter *Manual mains back* [2010] should be set to **"Yes"** (1).

# PERMANENT

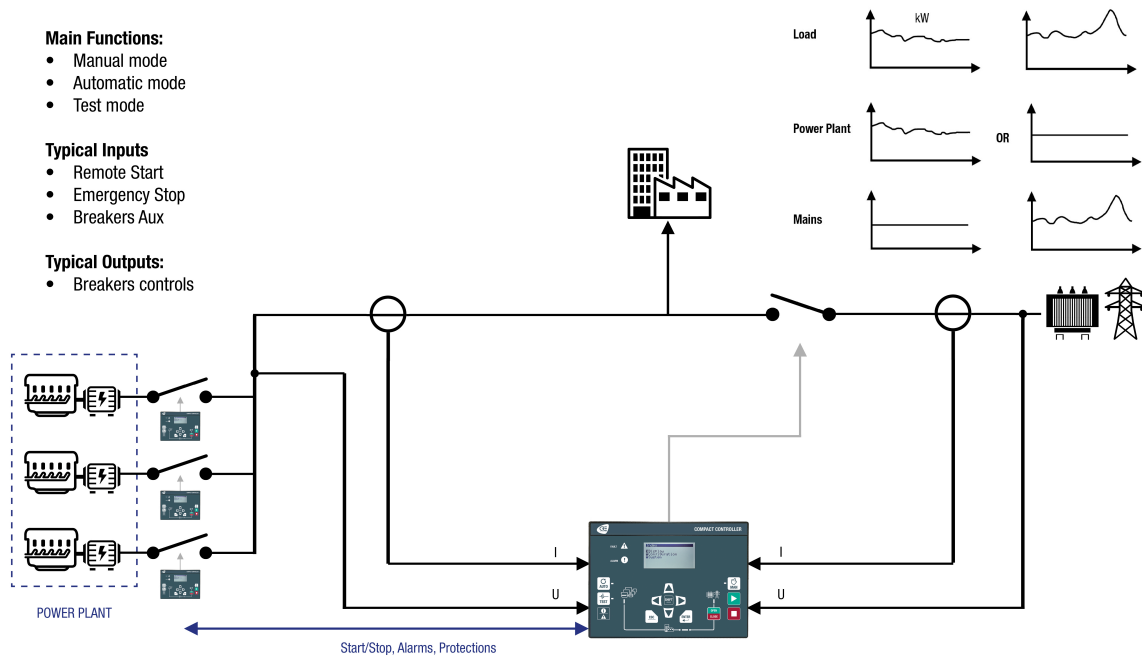Figure 34. Permanent mode



When the remote start is on, the module starts the Power plant, synchronizes and parallels the Power plant to the Mains when it is ready (configurable with the parameter [2109]), then ramps up load until it reaches its setpoint.

On base load mode, the Power plant has a constant load and the Mains takes the load variations. If the load is less than the Power plant set-point, the Mains is in reverse power

In the peak shaving mode, the Mains has a constant load and the Power plant takes the load variations.

## Settings

Variables	Label	Description
[2005]	<i>Type of application</i>	This parameter is used to select the mode of operation between the generator(s) and the mains. 3 values can be selected: - Change over : Load transfer between the generator(s) and the mains without synchronization/paralleling. - No break change over : Load transfer between the generator(s) and the mains with synchronization/paralleling/progressive power transfer. - Permanent: Synchronization/paralleling to the mains permanently. This mode has to be selected to set a fixed power to the mains (Peak shaving) or to set a fixed power to the generator (Base load). Caution: In this mode of operation, the activation of the df/dt protection is strongly recommended to detect the loss of the mains during permanent paralleling.
[2006]	<i>Type of regulation</i>	This parameter is used to select the type of consignment when the generator(s) is(are) permanently paralleled to the mains. 2 values can be selected: - Peak shaving : Fixed active power on the mains, the active power of the generator(s) changes with the load. If the generator(s) reach(s) the high limit, the mains consignment will no longer be respected. - Base load : Fixed active power on the generator(s), the active power of the mains changes with the load.
[2253]	<i>Power factor setpoint (inductive)</i>	This parameter is used to set the generator/power plant $\cos(\varphi)$ set point that will be applied when paralleling to the mains. The imposed $\cos(\varphi)$ is an inductive $\cos(\varphi)$ .
[2154]	<i>Peak shaving kW setpoint</i>	This parameter is used to set the active power setpoint of the mains when the product is configured in peak shaving mode. If you have a BAT COMPACT or a HYBRID COMPACT in your powerplant, they will try to respect this setpoint both in peak shaving AND base load.
[2107]	<i>Base load Generator(s) kW setpoint</i>	This parameter is used to set the active power setpoint of the generator/power plant when the product is configured in base load mode.
[2009]	<i>Mains back timer</i>	Waiting time between the moment when the mains returns (no longer any protection configured as mains failure is active) and the moment when the sequence to return to the mains is started.
[2109]	<i>Power plant minimum number of GE</i>	This parameter defines the minimum number of generators required to consider the power plant ready. The controller will transfer the load as soon as the number of generators on the bus is greater than or equal to the value set in this parameter.




**Note:** In order for the module to correctly control the Power plant (which is controlled with **GENSYS COMPACT PRIME** units), the parameter [2017] must be correctly configured in each **GENSYS COMPACT PRIME** unit. Each **GENSYS COMPACT PRIME** unit must be in **AUTO** mode without a remote start input activated.

## Operating mode



### MAN

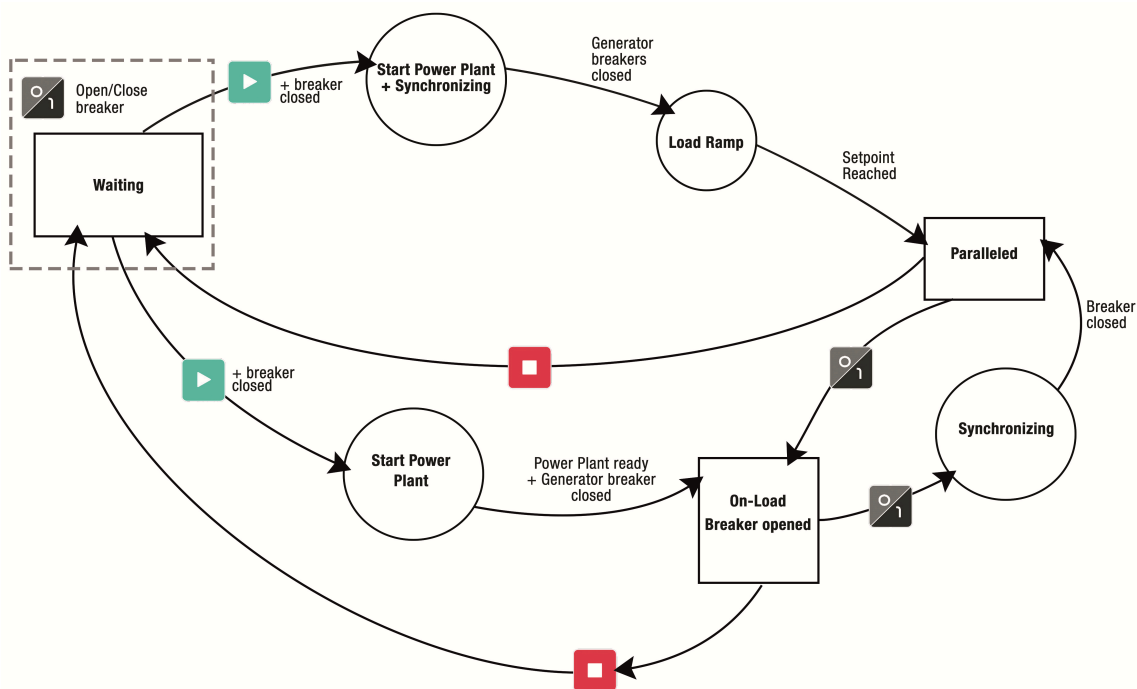Figure 35. Permanent : operating mode diagram



**Note:** The **MAN** mode does not allow manual control of speed and voltage to synchronize or load control. Synchronization and load control are automatic even in **MAN** mode.

### Supplying the load with Power plant

1. Press : the associated LED lights up.
2. Press : the module orders the **GENSYS COMPACT PRIME** units of the Power plant to synchronize and close their circuit breaker. The Power plant does a load ramp to the KW set-point (Bus KW setpoint in Base Load mode or Mains KW setpoint in Peak shaving mode) when it is ready.

### Switching back the load to the Mains

The Power plant is in parallel with the Mains and provides active power according to its configuration

Press  to order the **GENSYS COMPACT PRIME** units to unload the kW, open their circuit breaker and stop their Generator.

### AUTO

The **AUTO** mode requires using a logic input configured as **Remote start**. All sequences are managed automatically, as on the previous picture.

## Failure to synchronize

After a Mains fault, the Power plant is alone on the load. When the Mains comes back and the return to Mains temporization is over, the module tries to synchronize the Power plant to the Mains.

If a failure to synchronize is configured as Fault (soft shutdown), the Power plant opens its Generator breakers and the module breaker closes.

## Operator controlled return to mains

Normal operation: In case of Mains failure, the Power plant starts and takes the load. When the Mains voltage returns, the Power plant re-synchronizes to the Mains and automatically gives back the load.

The **"Operator controlled return to mains"** special function allows the operator to control the moment the Power plant will return the load to the Mains.

To do this, a digital input of the module should be set as **"Manual mains back"**. The unit will wait the synchronization order provided by the digital input before re-synchronizing the Power plant to the Mains.



**Note:** If the synchronization order is issued by Modbus TCP, the parameter *Manual mains back* [2010] should be set to **"Yes"** (1).

## WITH HYBRID POWER PLANTS

If you have a renewable energy inverter in your power plant, the **MASTER COMPACT 1B** can control the export of the surplus of renewable energy on the mains. You can either:

- Limit the export of renewable energy on the mains:
  - The renewable energy inverter will limit its power
- Export all the surplus of renewable energy on the mains:
  - All the renewable energy power not needed in your installation will be exported

Go to **Controller settings** ⇒ **Electrical** ⇒ **Mains** and configure the desired behavior in the parameter *Limit inverter power export* [2159]



### Note: Mains setpoint

In both cases, you can set a mains setpoint in *Peak shaving kW setpoint* [2154]. However, if you decide to export all the surplus of renewable energy, this setpoint may be exceeded.

Check the following chapter to set limitations and prevent this scenario.

## Mains nominal power limitation

You can set nominal power limitations in order to make sure that the mains import or export power will never exceed these configured values. For example, if you set a mains setpoint but want to export as much renewable energy surplus as possible, in some cases the export power could be higher than the setpoint. You can therefore set an export limit to the same value as the setpoint, in this way the exported power will never be higher than the setpoint.


To do so, go to **Controller settings** ⇒ **Electrical** ⇒ **Mains**, set the parameter *Limit mains nominal power* [2161] to "Yes" and set the import and export limits in:

- *Active power export limit* [2162]
- *Active power import limit* [2160]

## MULTIPLE MAINS

### General information

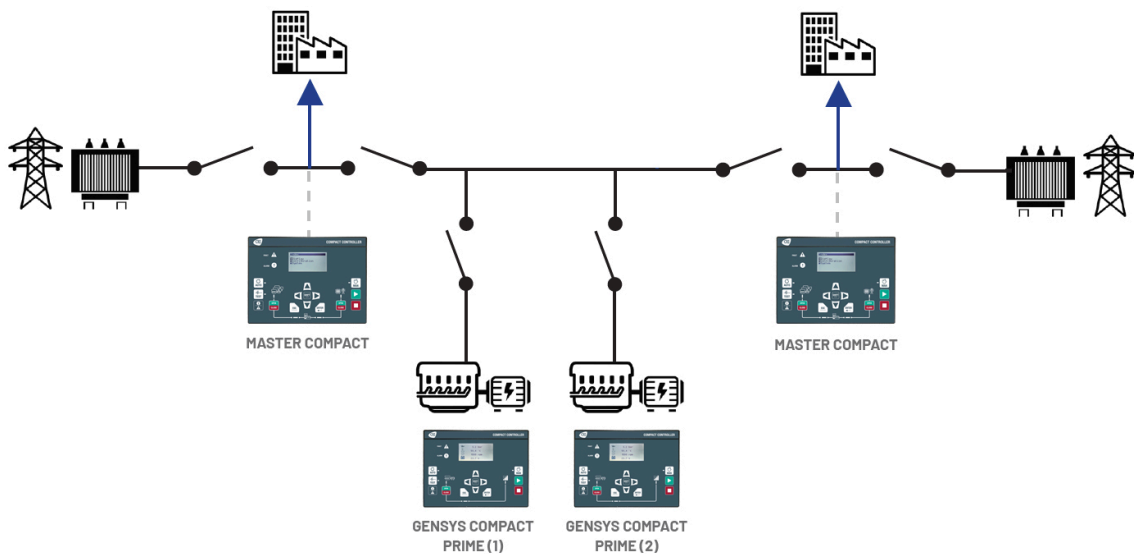Figure 36. Multiple mains



The **MASTER COMPACT** controllers can handle most of the multiple mains applications. If **MASTER COMPACT 1B** controllers are used to manage a multiple mains application, an external PLC is required to manage all desired sequences.

All **MASTER COMPACT** controllers communicate with each other to ensure that Mains are never paralleled (except in **MAN** mode).

There are 2 different cases in which the **MASTER COMPACT** units communicate with each other in order to avoid paralleling between multiple Mains:

1. The generators are stopped, each Mains provides KW to its load. In this case, if the remote start of the **MASTER COMPACT** units are activated at the same time (less than 2 seconds between each activation), the **MASTER COMPACT** units communicate with each other so that the first to perform its sequence is the one with the lowest number. The global sequence will always be **MASTER COMPACT 1, MASTER COMPACT 2, MASTER COMPACT 3, etc...**
2. The 2 Mains circuit breakers are open. The 2 loads are supplied by the generators. In this case, if the remote start of the **MASTER COMPACT** units are disabled at the same time (less than 2 seconds between each deactivation), the **MASTER COMPACT** units communicate with each other so that the first to perform its sequence is the one with the highest number. The global sequence will always be **MASTER COMPACT XX, ..., MASTER COMPACT 3, MASTER COMPACT 2, MASTER COMPACT 1, etc...** The rule is the same when multiple Mains reappear simultaneously.

Here are several rules to respect which depend on the 2 cases seen above:

- The number of each **MASTER COMPACT** is not important if all **MASTER COMPACT** controllers are configured in no break change over mode.
- In the case of several **MASTER COMPACT** (2 circuit-breakers), there can only be one **MASTER COMPACT** in permanent mode. The **MASTER COMPACT** which is in permanent mode must have the highest number in order not to block the sequence (the Mains cannot be in parallel).
- The **MASTER COMPACT** controllers perform their sequence immediately no matter the number of the controllers since there is no risk of paralleling between the Mains.

## Settings

---

Variables	Label	Description
[2001]	<i>My number</i>	Parameter used to prioritize the sequences of the <b>MASTER COMPACT</b> controller.
[2005]	<i>Type of application</i>	Only 1 <b>MASTER COMPACT</b> controller in permanent mode per application. Must have the highest number [2001].



## ADVANCED FUNCTIONS


### EASY FLEX®

**Easy Flex®** offers a simple and innovative programming mode, allowing you to adapt the controller to your needs. Its consists of several types of instructions that can be completed with variables and operators to add specific behaviours to the controller.

### Variables

The **Easy Flex®** page has an area that contains the list of variables that can be used in the variable fields of the different instructions. Click on the **Variables** tab to display the list of variables.

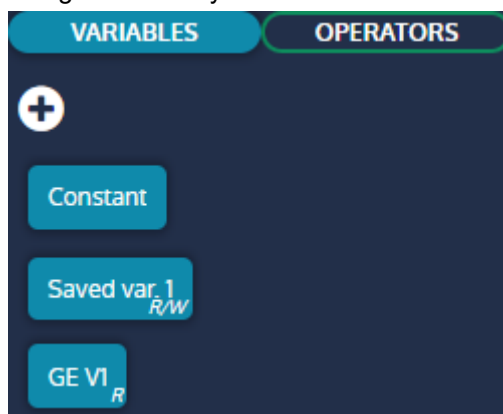Figure 37. Easy Flex® list of variables



### Constant block

A Constant block is defined by default and must be used when a constant value is required in an instruction.

### Variable block

The variables of the controller can be added to the area as variable blocks. This blocks can then be used in the different instructions. there are two types of variable:

- **Read/Write:** Can be used in the read only (R) or write (W) variable fields of an instruction
- **Read only:** Can only be used in the read only (R) variable fields of an instruction (marked with the R letter)

Figure 38. Using read only and read/write variables




### How to add a variable block

To add a variable block to the variables area:

1. Click on the plus button to open the variables search engine
2. Click on a variable with a plus icon
3. Close the search engine

The variable block should now be visible in the area.

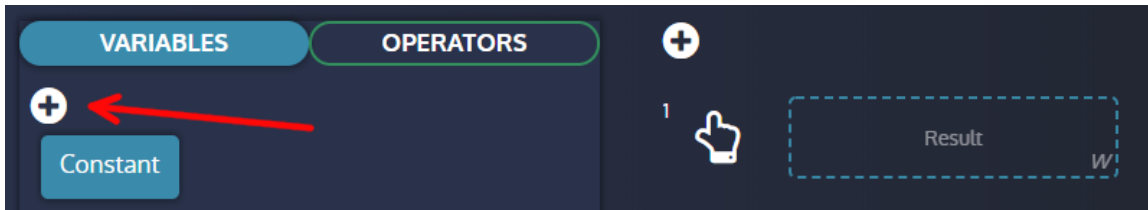Figure 39. Adding a variable block to the Easy Flex® variables area



## How to use a variable block in an instruction

To use a variable block in an instruction:

1. Hold the click on the variable block to be used
2. Move the variable block to a variable field of an instruction
3. Release the click to drop the variable block in the field

The variable now belong to the instruction and will be interpreted by it.

Figure 40. Drag and drop of a variable in an instruction



## Operators

The **Easy Flex®** page has an area that contains the list of operators that can be used in the operator field of the different instructions. Click on the **Operators** tab to display the list of operators.

Figure 41. Easy Flex® list of operators



## Test operator

A test operator return a **boolean** value in the result variable.

## Calculation operator

A calculation operator return an **analog** value in the result variable.


## How to use an operator block in an instruction

To use an operator block in an instruction:

1. Hold the click on the operator block to be used
2. Move the operator block to the operator field of an instruction
3. Release the click to drop the operator block in the field

The operator now belong to the instruction and will be interpreted by it.

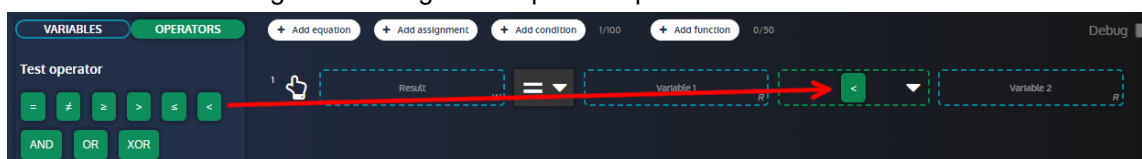Figure 42. Drag and drop of an operator in an instruction



## Instructions

There are many types of instructions available in **Easy Flex®**.

## Equations

The **equation** instruction is an operation between two variables whose result is stored in a result variable.

Click on the **Add equation** button to add a new equation. A counter is displayed beside the button to indicate the number of equations defined and the maximum number of equations allowed.



**Note:** The counter is common to the equations, assignments and conditions.

Figure 43. Example of equation



## NOT

When a variable field of an equation is filled with a variable block and the operator field is filled with a test operator, it is possible to add a NOT function to the variable to revert its boolean value.

## How to set a NOT

To set a NOT function:

1. Click on the arrow beside the variable block
2. Click on the NOT checkbox to enable/disable the function

Figure 44. Setting the NOT function of a variable block



### Timer ON/Timer OFF

When the operator field of an equation is filled with a test operator, it is possible to add a Timer ON function to delay the update of the result when the test operation is true. Following the same principle, it is also possible to add a Timer OFF to delay the update of the result when the test operation is false.

### How to set a Timer ON/Timer OFF

To set a Timer ON/Timer OFF function:

1. Click on the arrow beside the operator block
2. Set the Timer ON value in the input (in seconds) and toggle the checkbox to enable/disable the function
3. Set the Timer OFF value in the input (in seconds) and toggle the checkbox to enable/disable the function

Figure 45. Setting the Timer ON/Timer OFF function of a variable block



### Type of assignment

When the operator field of an equation is filled with a test operator, it is possible to change the type of assignment:


- **Equal:** The result of the test operation is stored in the result variable
- **Set:** The result variable is set only when the test operation becomes true
- **Reset:** The result variable is reset only when the test operation becomes true

### How to set the type of assignment

To set the type of assignment:

1. Click on the type of assignment list to display the list items
2. Click on the type of assignment you want

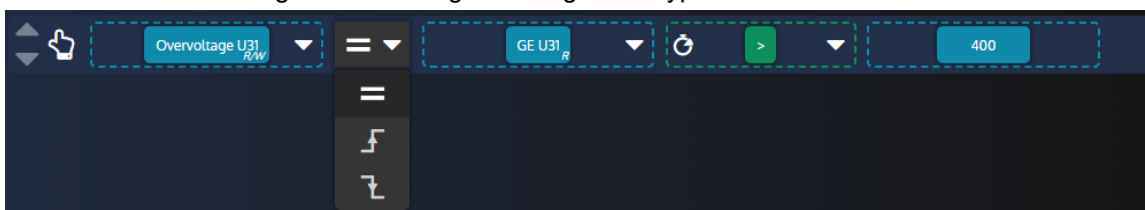Figure 46. Setting the assignment type of an instruction



### Assignments

The **assignment** instruction assigns the value of a variable to a result variable.

Click on the **Add assignment** button to add a new assignment. A counter is displayed beside the button to indicate the number of assignments defined and the maximum number of assignments allowed.



**Note:** The counter is common to the equations, assignments and conditions.

Figure 47. Example of assignment



## Conditions

The **condition** instruction executes a group of instructions according to a test condition. As for equations, the NOT, Timer ON and Timer OFF functions can be used in the condition instruction.

Click on the **Add condition** button to add a new condition. A counter is displayed beside the button to indicate the number of conditions defined and the maximum number of conditions allowed.




**Note:** The counter is common to the equations, assignments and conditions. The maximum number of instructions per condition is 10.

## How to add/remove instructions to a condition

- Drag and drop instructions into the condition to add them to the condition
- Drag and drop an instruction out of the condition to remove it from the condition

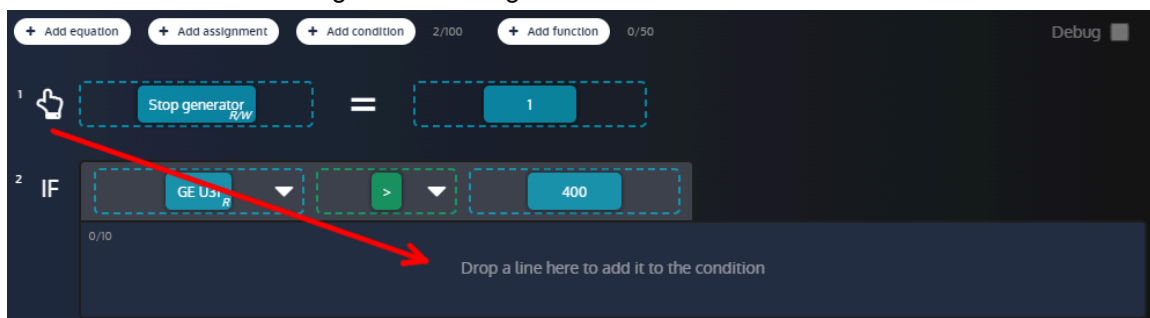Figure 48. Adding an instruction to a condition



## Functions


The **function** instruction allows you to group instructions together and to assign a title and a description to this group.

Click on the **Add function** button to add a new function. A counter is displayed beside the button to indicate the number of functions defined and the maximum number of functions allowed.

## Add existing instructions to a function

Drag and drop an existing instruction into the function to add it in.

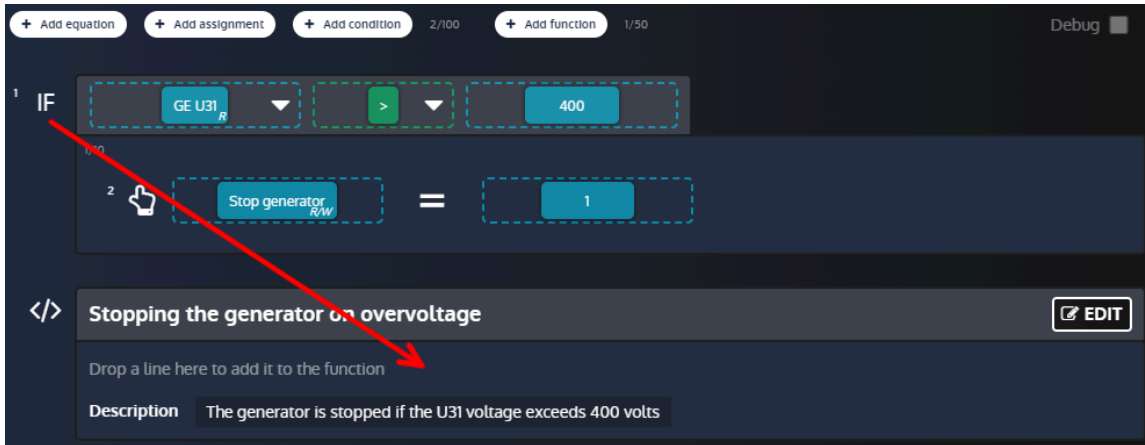Figure 49. Adding an instruction to a function




### Edit a function

Click on the Edit button of a function to open the editing window:

1. Type in the title field to edit the title of the function (up to 100 characters per title for each function).
2. Type in the description field to edit the description of the function (up to 12500 characters shared across all functions).
3. Use the **Add** buttons to add new instructions to the function.
4. Drag and drop an instruction into the dotted area to move it out of the function.
5. Click on the **Save/Back** button to save the parameters of the function and to close the editing window.

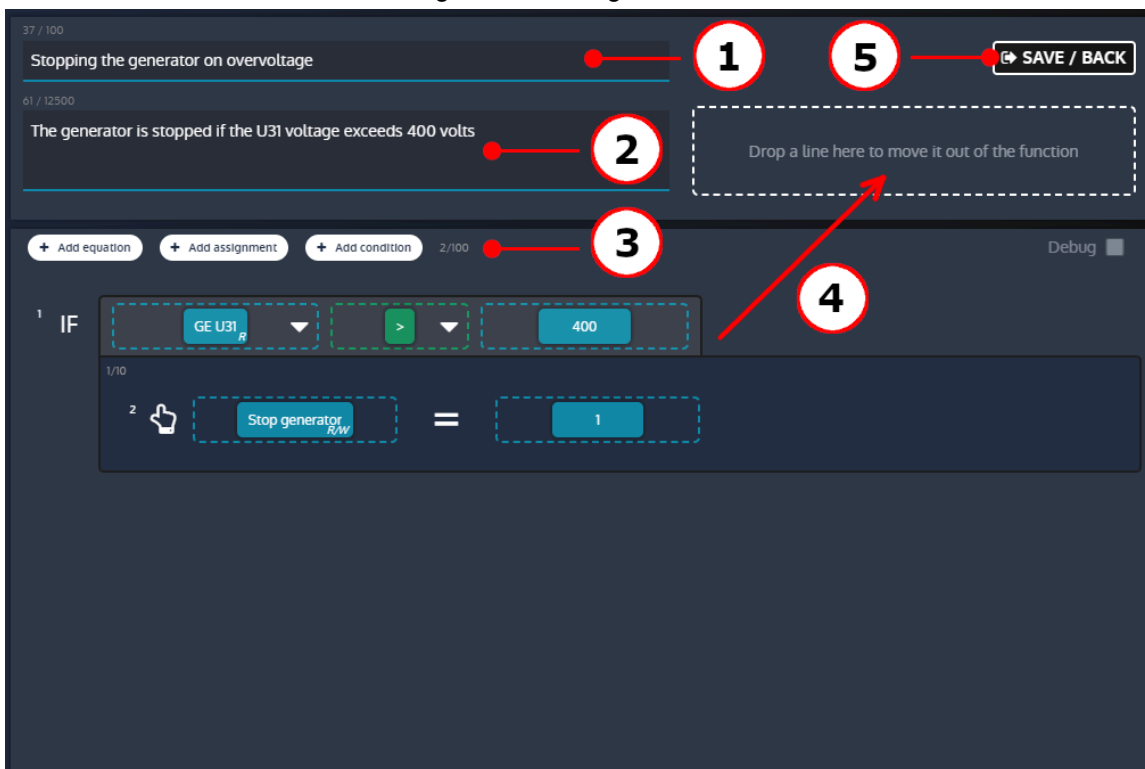Figure 50. Editing a function



### Moving a bloc or an instruction

The declared blocks and instructions can be moved using drag and drop:


- Operators and variables blocks can be move from a line to another
- Any instruction can be moved above or below other instructions to change the execution order

## Deleting a bloc or an instruction

Blocks and instructions can be deleted in different way. To delete a block or instruction:



- Drag and drop the element to delete into the **Trash** area
- Click on the element to delete and click on the **Trash** area
- Click on the element to delete and press the **Delete** key of the keyboard

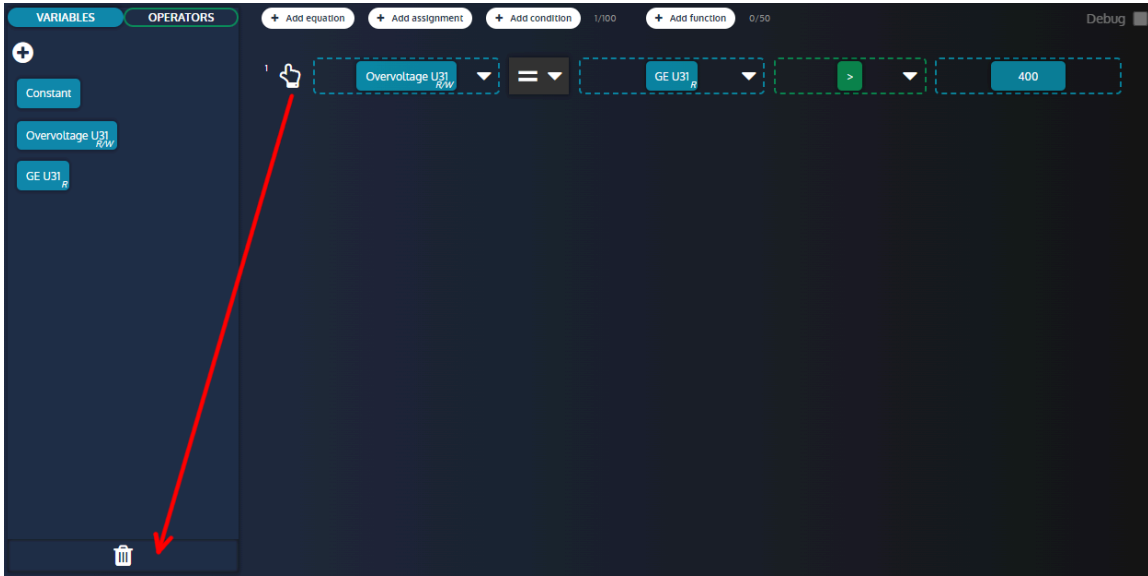Figure 51. Deleting an instruction through drag and drop



## Confirm/Cancel your changes


Once you are done setting the various instructions, you can confirm or cancel your changes.

- To confirm your changes, click on the confirm button 
- To cancel your changes, click on the cancel button 

## Debug mode

It is possible to activate a debug mode to watch in real time the values of the variables used in the **Easy Flex®** lines. Toggle the check box to enable/disable the debug mode. The debug mode can't be activated while modifications are in progress. Modifications can't be done while debug mode is activated.

Figure 52. Easy Flex® debug mode



## Warnings with Easy Flex®

Variable [4214] *Easyflex error code* provides more information in case of an **Easy Flex®** warning alarm. Its value is calculated with the following formula:

$$[4214] = (100 * \text{line concerned}) + \text{type of error}$$

List of different types of errors:

**Error 1**

Operand 1 or 2 is invalid.

**Error 2**

Unknown operator.

**Error 3**

The result variable is empty.

**Error 4**

The result variable is read-only.

**Error 5**

The result is outside the range of the target variable.

**Error 6**

Overflow on at least one equation.

**Error 7**

Division by 0.



## USER VARIABLES

A range of user variables is available to be used in equations.

Starting from the firmware version 2.22, this range has been split into two sub-ranges:

- Saved user variables [8000] to [8049]
- Unsaved user variables [8050] to [8099]

Unsaved user variables values are lost when the module's power supply is switched off while Saved user variables values are saved in a non volatile memory so their values are kept even in case of power loss.

Prefer using Unsaved user variables for better performance if you don't need to save the value of a data in case of power cycling. Otherwise, Saved user variables and Unsaved user variables share the same behaviour as is described below.

### User variables properties

---

Each property of a user variable can be set.

- Label
- Unit
- Accuracy
- Variable type. It defines the way you want to use the user variable:
  - For equations
  - To trigger alarms or faults (depending on the variable type value)



**Note:** Label, unit and accuracy will change the display of the user variable in the information page.

### User variable used for equations

---

The variable can be used:

- To store the result of an equation line (to be used in another equation line, to be displayed in the information page, to be read by modbus...).
- As an operand in an equation line.

### User variable used to trigger alarms and faults

---

In that case, the value of the user variable is used to trigger an alarm or a fault according to the user variable value:


- If the user variable = 0, the alarm/fault is not active.
- If the user variable > 0, the alarm/fault is active and is displayed in the alarms/faults log (with the label set before).

## ALTERNATIVE SELECTION

The **Alternative selection** page offers a supplement to **Easy Flex®** programming.

This function is presented as 16 selections between two values:

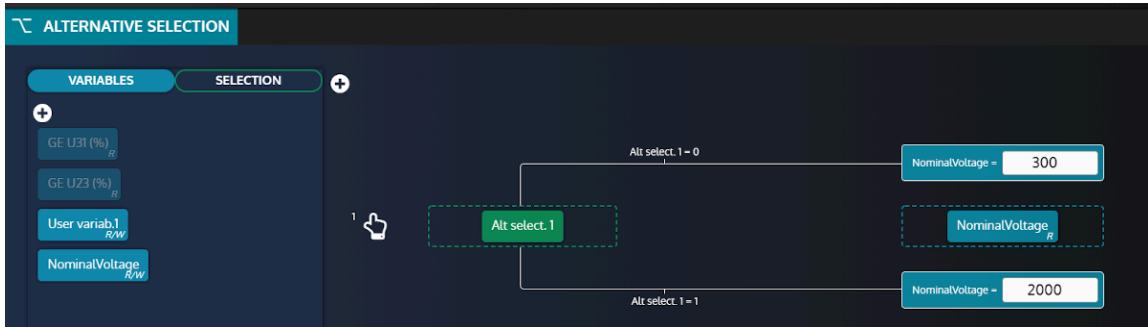Figure 53. Page of the function Alternative selection



### Adding variables

To add new variables from the list of variables, click on the "+" button in the "Variables" tab(see below) :

Figure 54. Adding variables button




Use the **search engine** to find and select the variables you want to use.

### Adding selections

Selection variables are **booleans** (0 or 1) used to assign different values to the associated parameter (see below):

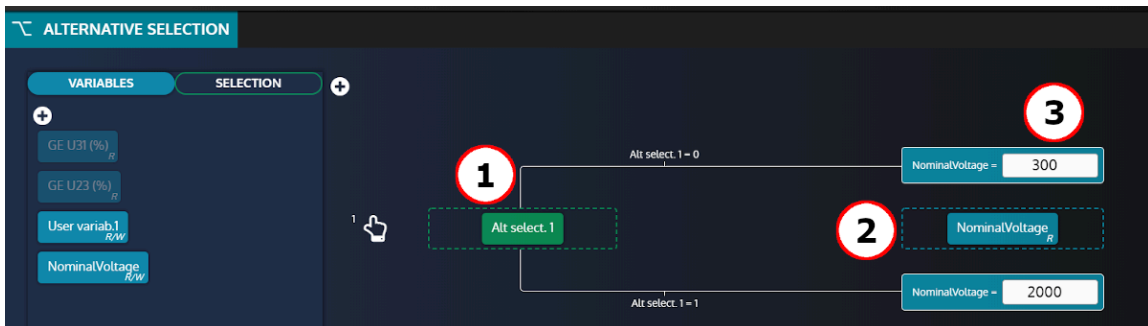Figure 55. Equation block definition



1. Selection variable (one among the 16 proposed in the SELECTION section).
2. Associated parameter.
3. Value to assign to the associated parameter depending on the value of the selection variable

Using the example above, **NominalVoltage** parameter will take 2 different values depending on **Alt select 1** :

- When **Alt select 1 = 0** then **NominalVoltage** will be set to **300**.
- When **Alt select 1 = 1** then **NominalVoltage** will be set to **2000**.



**Note:** If a variable is set in the "Alternative selection" mode, modifying its value from the front face, via Modbus or any other source will always result of the overwrite of the value by the "Alternative selection" mode.

## SCHEDULER


The scheduler can activate any function that can be controlled by a digital input. These functions can be activated one or many times.

Scheduled items are presented as a list. Each line (item) in this list corresponds to a scheduled event.

### Scheduler list

In the **Controller settings** ⇒ **Programming** ⇒ **Scheduler (i4Gen)** page, you will have access to all events that you created.

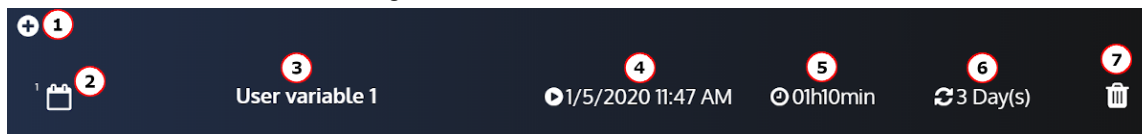
Figure 56. Scheduler icons definition



1. Add an event.
2. Number of the event.
3. Active function during the event.
4. First time the event will take effect.
5. Duration of the event.
6. Frequency.
7. Delete the event.

It is also possible to have an event without periodicity. The event will occur only once:

Figure 57. Scheduler with an event without periodicity



### Scheduler settings

By clicking on the event you want to modify, you will have access to these parameters which will allow you to configure the event:

Figure 58. Form of the scheduler

The screenshot shows a dark-themed configuration form for a scheduler. It contains the following elements:

- Function:** A text input field containing "Led test".
- Starting date/time:** A date and time input field showing "4/17/2019 - 11:47 AM".
- Duration:** Two input fields for "24" and "10", with "h" and "min" labels respectively.
- Periodicity:** A dropdown menu currently set to "Daily".
- Every:** An input field containing "1" followed by the text "Day(s)".
- Confirmation:** A green square button with a white checkmark and a red square button with a white 'X'.

1. Function active during the event.
2. First date and time the event will take effect.
3. Duration of the event.
4. Expected periodicity (Only once or period on a daily, weekly, monthly basis).
5. Setting the repetition of the periodicity (X period (s)).
6. Confirm or cancel the event settings.

## Scheduler supervision

Available in the **Controller supervision** ⇒ **Scheduler (i4Gen)** page.

Figure 59. Scheduler supervision



1. Number of the event.
2. Function active during the event.

3. The next time the event will take effect (the value can be different from the configuration because this one is actualised).
4. Duration of the event.
5. Periodicity.
6. Indicator On / Off.

# MODBUS TCP MAPPING

## Configurable block

---

To create your own Modbus blocks, use variables [10000]...[10299] in the **Controller settings** ⇒ **Programming** ⇒ **Modbus** ⇒ **Modbus redirection (i4Gen)** page.

There are two ways to configure these blocks:

1. Configuration in the **Controller settings** ⇒ **Programming** ⇒ **Modbus** ⇒ **Modbus redirection (i4Gen)** page: enter the codes of the variables to read; Modbus readings on registers [10000]...[10299] will be the values of the pointed variables.
2. Configuration by an external device; this device must follow the following steps:
  - Write 1 in the variable [3016] to enter the modbus redirection configuration mode.
  - Write the codes of the variables to be read to the desired registers ([10000]...[10299]).
  - Write 0 in the variable [3016] to switch back to the modbus redirection display mode.

You can then read your own block, by reading the registers [10000]...[10299] through Modbus TCP.

### Example:

If the configuration is as follows [10000] = 14; [10001]=15; [10002]=16, reading these 3 registers through Modbus TCP will give you the hours/minutes/seconds of the module (respectively the values of variables [14], [15] and [16]).

## LOGGER

The **Logger** tool is used to track value or status changes up to 10 variables at the user's choice.

The variable *State* is always recorded as long as the Logger is not set to Off.

This function is available in the **Controller settings** ⇒ **Programming** ⇒ **Logger** ⇒ **Activation (i4Gen)** page.

### Logger recording modes

---

Several modes are available to capture events depending on the Generator status:

#### Off

No recording of selected variables

#### Always ON

FIFO recording of selected variables until the Logger is Off.

#### Post starting

FIFO recording of selected variables when the Generator is running.

#### Stabilized

FIFO recording of selected variables as long as the Generator is in a stabilized state.

### Additional Functions

---

For each variable you can set a log period down to the second (example: 1s).

To use this function, select **Interval** in the **Log variable 1 on** field.

The **Erase Logger** button will delete all recorded variables from the module.

A lot of variables can be recorded. The list of the available variables can be found in the [Software variables \(on page 109\)](#) appendix.



# COMMUNICATIONS

## NETWORK

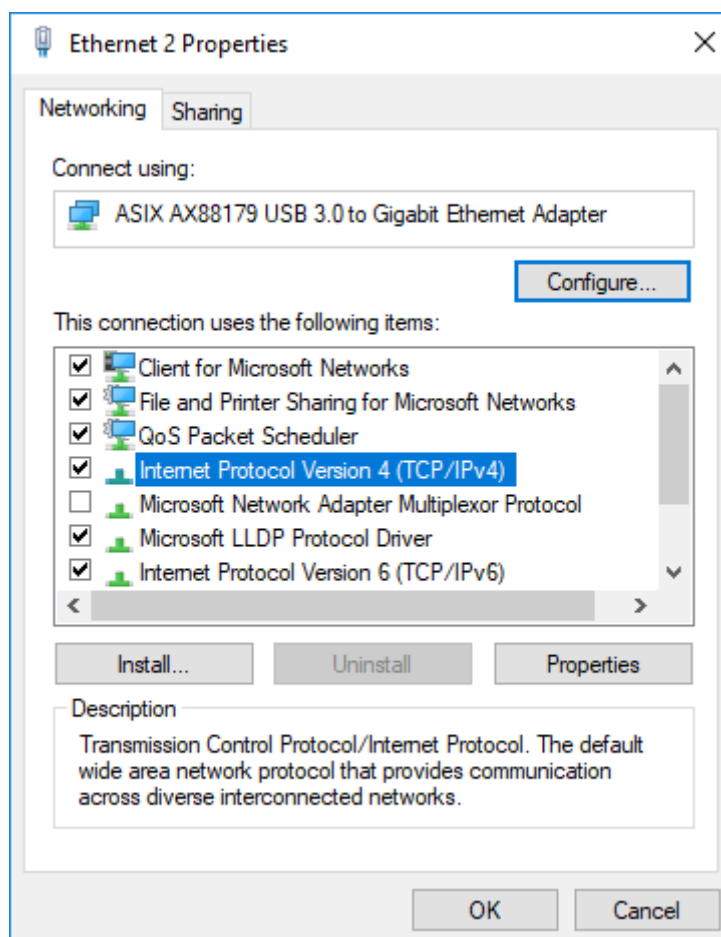
### Setting up PC connection

Materials required:

- A CAT 5 cross Ethernet cable (marked CROSSOVER CABLE along its sheath) for direct connection to the module from your computer.
- A CAT 5 straight Ethernet cable (marked PATCH CABLE or STRAIGHT-THROUGH CABLE along its sheath) can only be used with an Ethernet switch.

### Configuring the computer IP address

1. Connect the module with a 100Ω Ethernet cord  
Direct connection to PC: use a crossover cord. Connection through a switch: you can use either a direct or a crossover cable such as 3-m long A53W1, as long as your switch uses auto MDI/MDIX technology.
2. Power up the module using a stabilized power supply.
3. Open Windows control panel
4. Open the network interface properties window. For this do the following steps:
  - a. Open the page **Network and Sharing Center**
  - b. Click on **Change adapter settings**
  - c. Right click on your network interface and select **Properties** (Windows 7 and above)



## Change the IP address of the module

---

IP settings of the module can be modified in **Controller settings** ⇒ **System** ⇒ **Network**.

There are two different types of configuration:

- **DHCP (automatic)**: The module supports DHCP. If DHCP is enabled, the module must be connected to a network equipped with a DHCP server to obtain an IP address.  
On power-up, the module obtains an IP address from the DHCP Server.  
If the DHCP protocol fails, the fixed IP address of the module is used (Factory setting: 192.168.11.1).
- **Manual setup**: To manually configure the device network settings, disable the **DHCP** setting, then fill in the **IP address** and **Subnet Mask** fields.

Modbus/TCP port and HTTP port numbers can be set in both configurations.

On CORE modules, you can reset the IP address (to 192.168.11.1) by holding the button on the rear face when the module is powered on.



**Note:** For most networks, it is not necessary to set the gateway or to change port numbers. For complex networks, please contact your network administrator to configure your router and/or the units according to your needs.

## MODBUS TCP/IP

### Abilities

An Ethernet communication can be established between a Modbus master device and the controller which acts as a Modbus slave.

The complete list of variables accessed through *i4Gen* is described in the chapter [Software variables \(on page 109\)](#).

The complete list of every variable is described in the documentation **Modbus table** available in our website.

The Modbus master device can read/write many internal variables of the controller according to their access rights described below.

Type	Range	Default access right
Readings (measurements, states,..).	[0000] ... [1999]	Read only.
Parameters.	[2000] ... [3999]	Read/Write.
Modes, statuses, settings,... Readings associated with digital inputs.	[4000] ... [9999] [4500] ... [4649], [4950]...[4999]	Read. Write (subject to activation).

In addition, the following functions are supported:

- Reading bit fields, listed in a dedicated tab of the file and organized in 16-bit words. These variables are listed in the **Modbus table** documentation.
- Reading contiguous configurable data block.

Those functions allow a significant performance gain and help reducing the load on an Ethernet network.

### Configuration

To communicate through Modbus/TCP, define the following settings:

- The module IP address set in the **Controller settings** ⇒ **System** ⇒ **Network** page.
- The *Modbus TCP port* [3014], generally 502, set in the **Controller settings** ⇒ **System** ⇒ **Network** page.
- The Modbus/TCP rights: see further.

The module handles up to 6 simultaneous connections. This can be used for multiple HMIs for example. For more details on the Ethernet configuration, see the chapter [Network \(on page 89\)](#).



**Warning:**

Connecting the controller to an *i4Gen* device or the *i4Gen Suite* software will utilize one Modbus connection.

### Functions

The module supports the following Modbus functions:

Functions	Description
01, 02	Read logical data (Coil status, discrete input status).
03, 04	Read holding/input registers (16 bit).
05	Write logical value (single coil).
06	Write single register (16-bit variable).
15 (0x0F)	Write multiple logical values (multiple coils).
16 (0x10)	Write multiple registers.

All module variables are 16-bit registers. Yet it might be useful to consider them as logical values (if they are only set to 0 or 1) to simplify the Modbus/TCP protocol communication with some external PLC. If function 01 or 02 is used to read an internal register that is different from 0, then returned value will be 1.

The module registers start from address 0. Depending on your Modbus/TCP client equipment-software, you may need to use an offset of 1 when reading/writing registers as addresses may start from address 1. In this case, request address/register number 1 to access variable 0000 inside the module.

The 32-bit variables can only be written using 0x10 function.

If a digital input modifies a piece of data also to be written via Modbus, the latest request takes over the other.

Data [10000]...[10299] can be read by block (see further).

## Access rights

The access rights depend on the parameter type and on Modbus access permissions. To manage access rights, set to 1 the corresponding bits in the register [3015]:

Description	Bit #	Default value
Writing date/ time	0	0
Writing engine counters	1	0
Not used	2	0
Writing digital input function register	3	1
Not used	4	0
Not used	5	0
Not used	6	0
Not used	7	0
Reading via Modbus/TCP	8	1
Writing via Modbus/TCP	9	1

Using the **Controller settings** ⇒ **Programming** ⇒ **Modbus** ⇒ **Modbus rights (i4Gen)** page, you can tick check-boxes to set those:

Bit #	Label	Description
0	Writing to date/ time	Module time synchronization.
1	Writing to Engine counters	Manual counters adjustment (see following table).
3	Writing to digital input function register	Opens the possibility to activate a digital input function using Modbus/TCP protocol.
8	Reading using Modbus/TCP protocol	Opens the possibility to grant reading individual permissions.
9	Writing using Modbus/TCP protocol	Opens the possibility to grant writing individual permissions.

The counters, encoded on 32 bits, include:

Meters (MSB LSB)	Label
[80]   [79]	
[82]   [81]	
[84]   [83]	<i>Number of hours generator running</i>

## Bit fields

Bit fields are meant for decreasing communication bus load. They pack up to 16 logic variables inside a single register. This way, a single Modbus/TCP request can be used to read a group of information. Each variable contains the current value of 16 logic variables such as breaker positions, faults, alarms...

They are listed out in the chapter [Software variables \(on page 109\)](#).

The bit fields [956]...[969] have latched values: a reset is required for them to return to 0.



**Note:** Available data are related only to faults that occurred after the latest power up sequence. Events that occurred before the module has been power cycled are listed in the fault pages but not among the variables.

### Example:

The table below shows a Modbus/TCP client sending a reading request (function 04) of 6 registers starting from variable [79].

Client request		Module server response	
Field	Value	Field	Value
Function code	04	Required function.	04
Starting Register (MSB)	00	Data bytes (= 2 * Number of requested registers).	6
Starting Register (LSB)	79	Value of register 0079 (MSB).	D0
Count of registers (MSB)	00	Value of register 0079 (LSB).	D1
Count of registers (LSB)	06	Value of register 0080 (MSB).	D2
		Value of register 0080 (LSB).	D3
		Value of register 0081 (MSB).	D4
		Value of register 0081 (LSB).	D5

## CRE-LINK®

### Presentation

---

This CAN bus is used as a communication means between units of a single Power plant to provide the following features:

- Active and reactive load sharing.
- Automatic load/unload ramp.
- Static paralleling.
- Dead bus management.
- Management of segments and Power plant.
- Other data exchange.

Standard CAN bus rules apply here. Refer to [CAN bus good practices \(on page 100\)](#) to connect units properly on CAN bus.

### Alarms/faults of the CAN bus

---

The CAN communication between all **CRE TECHNOLOGY** units is continuously checked by each unit on the CAN bus. The count of units connected to CAN bus must be the same as the count of units declared in each unit. In case of a problem on the bus, alarms or faults can occur:

#### **Missing GENSYS COMPACT PRIME**

The **CRE-Link®** protocol cannot see one or several **GENSYS COMPACT PRIME**. The controllers might not be correctly wired on the bus CAN1 or misconfigured.

#### **Missing MASTER COMPACT or BTB COMPACT**

The **CRE-Link®** protocol cannot see one or several **MASTER COMPACT/BTB COMPACT/MASTER COMPACT 1B**. The controllers might not be correctly wired on the bus CAN1 or misconfigured.

#### **Missing HYBRID COMPACT**

The **CRE-Link®** protocol cannot see one or several **HYBRID COMPACT**. The controllers might not be correctly wired on the bus CAN1 or misconfigured.

#### **Missing BAT COMPACT**

The **CRE-Link®** protocol cannot see one or several **BAT COMPACT**. The controllers might not be correctly wired on the bus CAN1 or misconfigured.

#### **Controller communication fault**

The communication with the other products is lost. Check that the 120Ω termination resistors are used correctly (see [CAN bus good practices \(on page 100\)](#)). Check that CAN bus cable is properly connected.

#### **CAN1 unknown**

An incompatible product is connected on the CAN bus. The module will not start the Generator.

#### **Mismatch vers.**

A module with an incompatible version is connected on the CAN bus. The module will share the load using droop control.



**Note:** Problems can occur if two or more unit have the same Generator number.

For *Missing GENSYS COMPACT PRIME*, *Missing MASTER COMPACT or BTB COMPACT*, *Missing BAT COMPACT*, *Missing HYBRID COMPACT* and *Controller communication fault*, you can configure the behavior to be adopted in case of a CAN fault.

## CANOPEN

CANopen extension modules (i.e. CANopen couplers) can be used to increase the number of digital inputs/outputs and analog inputs of the module. Overall max. count of added inputs/outputs: 64 digital inputs, 64 digital outputs and 16 analog inputs. The CANopen protocol inputs/outputs are read/written every 100ms.

### Configuration

Setting	Label	Value	Description
[3153]	<i>Coupler ID #1</i>	0 ... 255	Identifier of the first coupler.
[3154]	<i>Number of digital inputs #1</i>	0 ... 64	Number of digital inputs on the first coupler.
[3155]	<i>Number of digital outputs #1</i>	0 ... 64	Number of digital outputs on the first coupler.
[3165]	<i>Number of analog inputs #1</i>	0 ... 16	Number of analog inputs on the first coupler.
[3156]	<i>Coupler ID #2</i>	0 ... 255	Identifier of the second coupler.
[3157]	<i>Number of digital inputs #2</i>	0 ... 64	Number of digital inputs on second coupler.
[3158]	<i>Number of digital outputs #2</i>	0 ... 64	Number of digital outputs on the second coupler.
[3166]	<i>Number of analog inputs #2</i>	0 ... 16	Number of analog inputs on the second coupler.
[3159]	<i>Coupler ID #3</i>	0 ... 255	Identifier of the third coupler.
[3160]	<i>Number of digital inputs #3</i>	0 ... 64	Number of digital inputs on the third coupler.
[3161]	<i>Number of digital outputs #3</i>	0 ... 64	Number of digital outputs on the third coupler.
[3167]	<i>Number of analog inputs #3</i>	0 ... 16	Number of analog inputs on the third coupler.
[3162]	<i>Coupler ID #4</i>	0 ... 255	Identifier of the fourth coupler.
[3163]	<i>Number of digital inputs #4</i>	0 ... 64	Number of digital inputs on the fourth coupler.
[3164]	<i>Number of digital outputs #4</i>	0 ... 64	Number of digital outputs on the fourth coupler.
[3168]	<i>Number of analog inputs #4</i>	0 ... 16	Number of analog inputs on the fourth coupler.



**Note:** The CANopen couplers ID max range changes according to the number of configured inputs/outputs (for more details, refer to **CiA 301** standard).

The assignment of I/Os is done by order of the couplers declared in the settings (not by id). The lowest variable number is associated to the lowest message number configured.

The digital inputs/outputs of the CANopen protocol have the same attributes as regular inputs/outputs except for the delay at the drop of inputs.

Each CANopen analog input value can be adjusted using a gain and an offset.

Setting	Attribute
<b>Digital inputs 1 ... 64</b>	
[3200] ... [3231], [8550] ... [8581]	Function
[3232] ... [3263], [8582] ... [8613]	Delay
[3264] ... [3295], [8614] ... [8645]	Validity
[3296] ... [3327], [8646] ... [8677]	Polarity
<b>Digital outputs 1 ... 64</b>	
[3350] ... [3381], [8700] ... [8731]	Function
[3382] ... [3413], [8732] ... [8763]	Polarity: <ul style="list-style-type: none"> <li>• 0: Normally de-energized</li> <li>• 1: Normally energized</li> </ul>
<b>Analog inputs 1 ... 16</b>	
[8351], [8353], [8355] ... [8381]	Gain
[8350], [8352], [8354] ... [8380]	Offset

An overflow alarm (variable [609]) is available for analog inputs. When it is active, you can look at the variable [610] to know which analog inputs triggered the alarms. If you have several analog inputs causing a problem, you'll have to solve each problem one by one.

On power-up, the configuration of the CANopen extension modules is automatically initialized. The status (variable [3150]) turns to 1.

The CANopen protocol error time-out (variable [3152]) is 10.0s by default.

## Variable mapping and inputs/outputs

The CANopen protocol inputs and outputs are accessed by their code:

- Digital inputs: [800]...[831], [1250]...[1281]
- Digital outputs: [4751]...[4782], [5100]...[5131]
- Analog inputs: [1050]...[1065]



# MODBUS CLIENT

## Overview

A Modbus/TCP client is implemented in the product in order to communicate with an external device that provides Modbus communication.

You may send and retrieve data to and from a unit that is connected through Modbus/TCP or through Modbus RTU if you use a Modbus/TCP to RTU gateway between the devices.

## Supported Modbus functions

Different Modbus functions may be used to read/write different kind of data in your remote device as listed below:

### Function code 01

Read coils

### Function code 02

Read discrete inputs

### Function code 03

Read holding registers

### Function code 04

Read input registers

### Function code 05

Write single coil

### Function code 06


Write single register

## Setup

Setup is done in page **Controller settings** ⇒ **Programming** ⇒ **Modbus (i4Gen)**. Note that you must be connected to the **COMPACT** unit in order to fully setup the communication parameters, more specifically for the remote Modbus/TCP server IP and communication port.


1. Enable communication to a Modbus/TCP server, input a name for the remote unit and optionally setup an alarm/fault in case of communication timeout. The server name will be used as alarm/fault label in case of a communication incident.

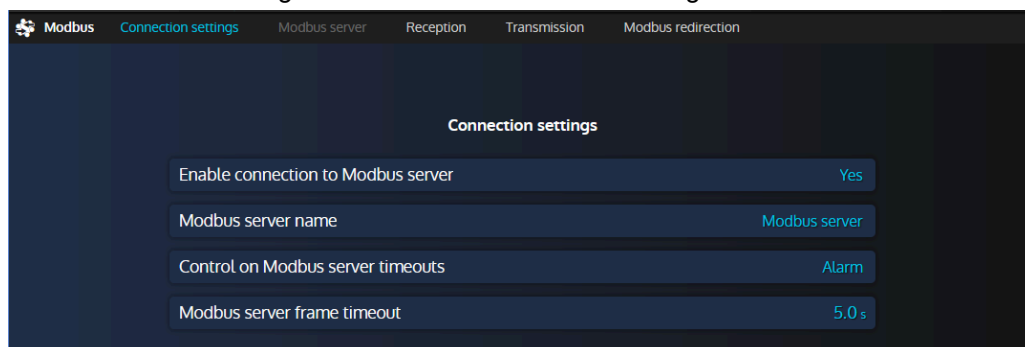Figure 60. Modbus connection settings menu



2. Input the server communication parameters (Ethernet IP address and Modbus port). The standard Modbus/TCP protocol port is 502 but this may vary according to your remote device and desired configuration.

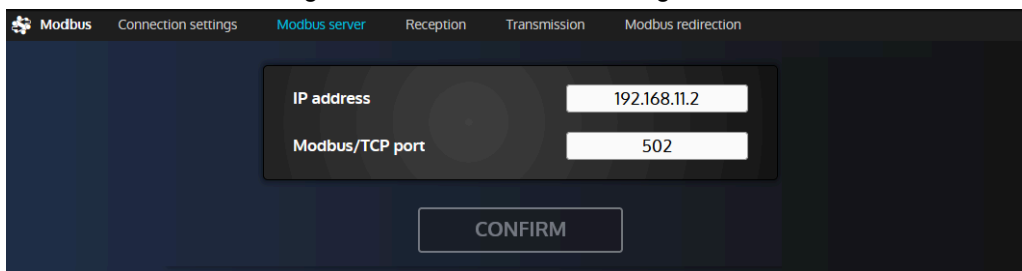
Figure 61. Modbus server settings menu



3. You may now switch to the Reception/Transmission pages in order to setup the registers you want to respectively read and write.
  - Reception: a remote register is read and its computed value is written into an internal variable of the **COMPACT** unit.
  - Transmission: an internal variable is computed and sent into a remote register.

You may setup up to 10 reception and 10 transmission lines.

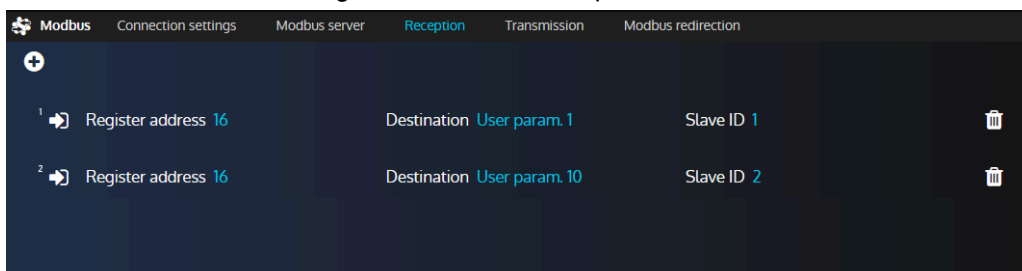
Figure 62. Modbus reception menu



4. Click on the '+' button at the top left corner of the page to add a new reception/transmission line, or click on an existing line in order to modify its setup.

## Modbus reception/transmission settings

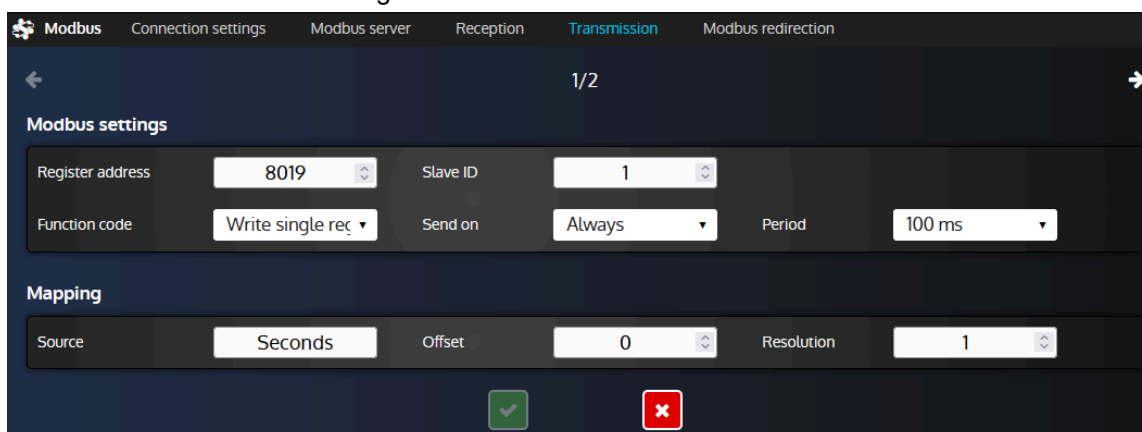Figure 63. Modbus transmission menu



### Modbus settings

#### Function code

Modbus function code used to read/write bits, inputs or registers.

#### Register address

Address of the Modbus register inside the remote Modbus server. Note that register 1 is located at address 0.

**Slave ID**

This parameter is typically useful if you need to access a Modbus RTU (RS485) device through a Modbus/TCP to RTU gateway. This way, you can access different Modbus RTU slave devices using a single gateway (server).

**Sending condition (transmission lines only)**

**Always** will send a value at the selected period. If **Value change** is selected, register will be written only if the source value has changed. Setting this parameter to **Never** disables the transmission without deleting the whole line: it may be useful for example for testing purposes.

**Period (transmission lines only)**

Choose the transmission period when the sending parameter is set to **Always**. Different values are proposed in order to let you choose between a light communication traffic or responsiveness.

**Mapping settings****Destination (reception lines only)**

Internal variable of the **COMPACT** controller where the result of a computed read register will be written.

**Source (transmission lines only)**

Internal variable of the **COMPACT** controller that will be used for computation. The result will be sent into the selected remote register in the Modbus server.

**Offset and Resolution**

These two parameters allow you to set a calculation rule between Modbus registers and **COMPACT** variables as detailed below. For a reception line, destination variable inside the **COMPACT** controller will get the following value: **Result = (Modbus register value) \* Resolution + Offset**. For a transmission line, the value sent to the Modbus server will be: **Register value = (Source value) \* Resolution + Offset**

**Note: Determining the proper gain when reading values**

It is possible to always use the same formula to determine the gain (as long as the values are linear) for a value you're reading: **gain = value expected / value read via Modbus**.

When reading values, do not forget to set the accuracy (and optionally the unit if there is any, for display purpose only) of the user variable in use via the menu **Controller settings** ⇒ **Programming** ⇒ **User variables (i4Gen)**

Example:

The controller is set to read the register 123 from another Modbus/TCP device and to store it in the variable "Saved var. 1" [8000]. The value is expected to have a precision of 2 digits so we did set the "Saved var. 1" variable with an accuracy of 0.01. The controller reads 5000.00 but the expected value should be 25.00. Assuming that it is a linear value, we simply use the formula as stated before to determine the gain to apply:  $25/5000 = 0.005$ . Note that if you want to scrap everything after the comma to have the value as an integer number, you can simply change the accuracy of the "Saved var. 1" to 1 (but the gain should remain unchanged).

## CAN BUS GOOD PRACTICES


This chapter describes rules to be used to ensure reliable CAN communication. These rules must be applied to all CAN protocol communications, including the **CRE-Link®** protocol and the ECU/remote I/O CAN bus. **CRE TECHNOLOGY** recommends to always use a shielded cable to connect CAN bus.

### Cables

⚠ WARNING	
	<p><b>RISK OF EQUIPMENT DAMAGE</b>  <b>Failure to follow this instruction can damage the CAN transmitter/receiver.</b>                  Switch off the unit before plugging or unplugging the CAN bus connector or disconnecting the wires.</p>

Cables used must be selected to respond to CAN bus specificities. Always use shielded twisted wire pairs. Deploy the CAN bus (no mesh, ring or star topology) as shown below:

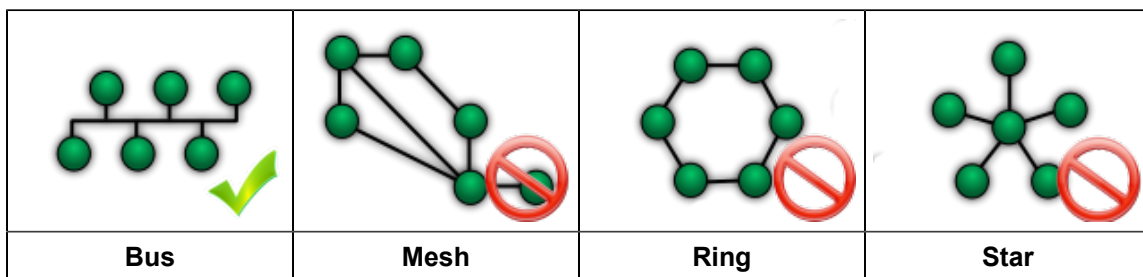Figure 64. CAN bus accepted wiring topologies



Both ends of the CAN bus must be terminated with a 120Ω resistor. The module has a 120Ω resistor for this purpose. Wiring the terminal RES to CAN H will link CAN L and CAN H with a resistor.

The next figure gives the example of three units connected through a CAN bus. Do NOT install any resistor nor link the terminal RES and CAN H together in the middle unit.

Figure 65. CAN bus wiring example


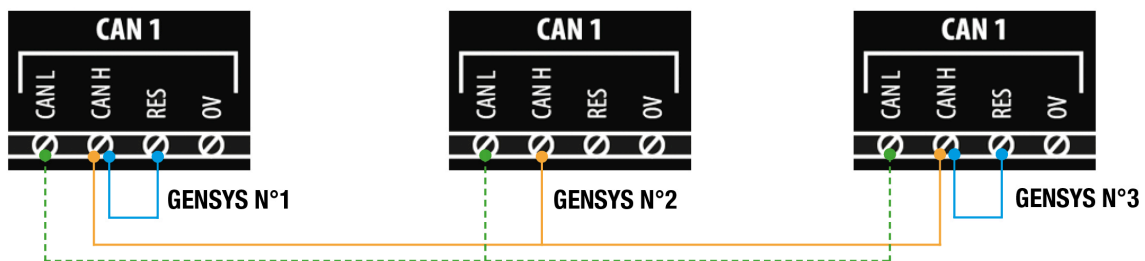


Figure 66. Wrong placement of the termination resistor on the CAN bus

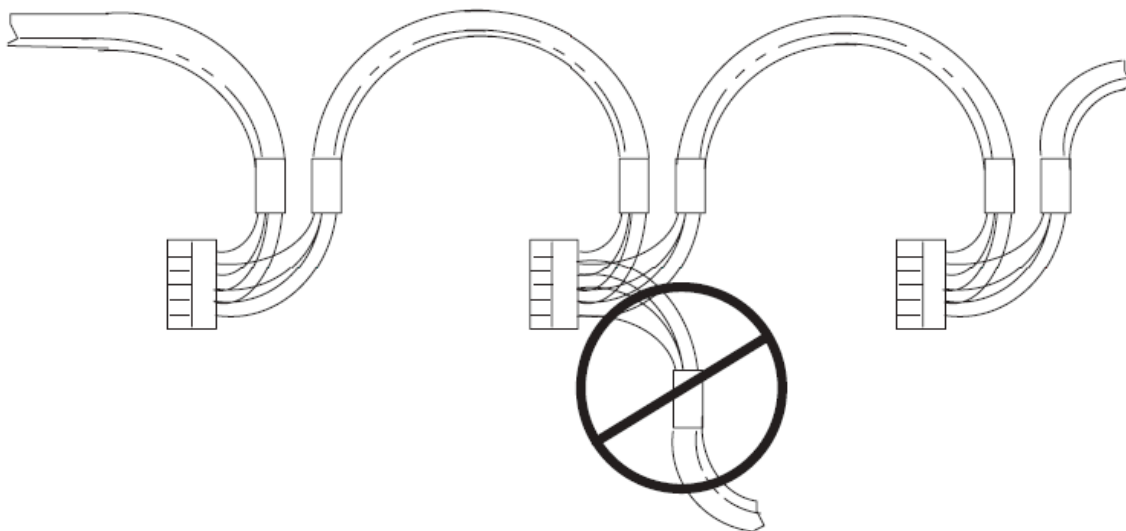

**⚠ WARNING**



**RISK OF EQUIPMENT DAMAGE**

Failure to follow this instruction may damage the CAN transmitter/receiver and the controller itself.

Do not, in any cases, connect the "0V" pin to the "-" pin of the power supply.



**Note:** CRE TECHNOLOGY provides a complete range of products aimed at installing your CAN bus (cords, wires, connectors...). Please contact your local CRE TECHNOLOGY distributor to help you to choose equipment that fits your needs.

## Maximum length and bit rate

The maximal length of a CAN bus depends mostly on the communication speed, but also on the quality of wires and connectors used.

The following table shows the maximal length of a CAN bus depending on the bit rate:

Bit rate (kbit/s)	Maximal length (m)
10	5000
20	2500
50	1000
125	500
250	250
500	100
800	50

The next table lists the standard bit rate of each CAN protocol that can be used by a CRE TECHNOLOGY unit:

## OPERATOR MANUAL

Bus	Protocol	Bit rate (kbit/s)	Note
CAN1	<b>CRE-Link®</b>	125	125 kbit/s recommended. Can be changed using parameter [3050].
CAN2	CANopen	125 (default)	Can be selected between 125/250/500/1000 kbit/s using parameter [3051] in the <b>Controller settings</b> ⇒ <b>General</b> ⇒ <b>CAN</b> page.

## APPENDICES

### ENTER A CODE

A code can be used to change a controller type into another (for example, a **GENSYS COMPACT PRIME** can be transformed into a **HYBRID COMPACT**) or to add an option to your controller (i.e. MTU MDEC compatibility). Please contact **CRE TECHNOLOGY** for further information on how to obtain a code.



**Note:** When entering a code, it is preferable that no other devices than **i4Gen Suite** is connected to the controller.

1. To enter a code, go to the **Controller settings** ⇒ **System** ⇒ **Code (i4Gen)** page.
2. Click the "Confirm" button to send the code to the controller. A success message will show and the controller will restart.

You can now reconnect to the controller:

- If the code entered was to add an option, see the list of active options in the About page.
- If the code entered was to change the controller type, start a firmware update with the appropriated firmware version from the **Controller settings** ⇒ **System** ⇒ **Update (i4Gen)** page.

## TROUBLESHOOTING

To get a history of alarms-faults, stop the Generator, connect to **i4Gen** ⇒ **File transfer** and click on the **Save** button beside **History - Alarms/Faults/Events/Logger**.

To restore factory settings from **i4Gen Suite** software, navigate to the **Controller settings** ⇒ **System** ⇒ **Reset factory settings (i4Gen)** page, and click on the **Reset** button.

### Alarm/Fault messages

---

#### Message "Isolated product"

Check the related connections, including the one of internal resistor (Connect the "RES" terminal and the "CAN H" terminal).

Check the related settings: Quantity of generators, number of each Generator.

#### Message "Missing product"

Check the other products. One of them is not supplied or disconnected.

#### Message "Missing master"

Check the **MASTER COMPACT/MASTER COMPACT 1B/BTB COMPACT** products. One of them is not supplied or disconnected.

#### Message "Missing HYBRID"

Check the **HYBRID COMPACT** products. One of them is not supplied or disconnected.

#### Message "Missing BAT"

Check the **BAT COMPACT** products. One of them is not supplied or disconnected.

#### Message "Unknown product"

Check the other products. One of them is not compatible.

#### Message "Mismatch version"

Check the other products. One of them uses a version which is not compatible.

#### Message "Breaker" fault

Check the type of breaker against the selection in **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital/relays outputs**.

Stop the other generators.

Make sure the digital input set with the function "" is connected.

Start the generators in **MAN** mode (or just press ). Make sure the breaker LED turns on (green); otherwise, increase the "breaker feedback" time-out [2304] (default value 5.0s).

#### Cannot connect with PC

Consider deactivating the firewall and adding an Anti-virus exception.

Check the network wiring, see [Network \(on page 89\)](#)



## Error Messages When Transferring a File to the Module



**Note:** "... " indicate a variable number, a label number or a text number according the error message. It will help you to locate your error in your configuration file.

### **ERROR 002: Unknown file type**

The file type sent is unknown. Check the selected file.

### **ERROR 004: Write data or checksum error**

### **ERROR 008: Update failed. Please restart update.**

Writing memory error during update process. Restart module update.

### **ERROR 011: No write right on variable ....**

Access to this variable is not allowed. Only parameters can be modified.

### **ERROR 012: No write right on label ....**

Access to this label is not allowed. Check your configuration file.

### **ERROR 013: Text .... doesn't exist.**

Access to this text is not possible because it does not exist. Check compatibility of the version/type of the module and the configuration file.

### **ERROR 014: No write right on .... Unit**

Access to this unit is not allowed. Check your configuration file.

### **ERROR 015: Need password level 2 to write on .... Variable**

Actual password is not sufficient to access such configuration/control level.

### **ERROR 017: Configuration not allowing .... variable value**

The actual setting of the module does not allow modifying this parameter with this value. Check your configuration file and the value of the parameter before sending again your configuration file.

### **ERROR 018: Variable .... out of range**

The value of the parameter is out of range. Check your configuration file before sending again.

### **ERROR 019: Wrong value for .... variable**

An unexpected value has been detected on this parameter. Check the value of the parameter before sending again.

Ex: a text character has been detected instead of a number.

### **ERROR 020: Unknown language file**

The language file sent does not correspond to a language file for the module. Check the selected language file.

### **ERROR 021: Too many languages already downloaded**

The maximum number of language supported by the module has been reached.

### **ERROR 022: Wrong language file version**

The language file version is above the module version. Update your module to the latest version or get the language file compatible with your module version.

**ERROR 023: Label .... does not exist.**

Modifying this label is not allowed. Check the label number before sending the configuration file again.

**ERROR 024: Unit .... does not exist.**

Modifying this unit is not allowed. Check the unit number before sending the configuration file again.

**ERROR 025: Wrong accuracy value on .... (0,1,2 or 3)**

The value of the accuracy is out of range. The value must be between 0 and 3.

**ERROR 026: Wrong unit value on .... (from 0 to xxx)**

The value of the unit is out of range. The value must be between 0 and xxx.

**ERROR 027: No header in language file**

No header or wrong header of the language file. Check the selected language file before send it again.

**ERROR 028: No filename found or too long**

No filename or filename is too long. The maximum size of a filename is 40 characters. Rename file and send it again.

**ERROR 029: Wrong accuracy on parameter ....**

The value of the modified parameter has not the right accuracy. Check the value of your parameter before sending again your configuration file.

Ex: Below, it is missing the digit at the tenth 5.00

V02205 5.0\_ ESG amplitude +000.00 +010.00V

**ERROR 030: Data out of range in Easy Flex®**

The result of the operation is outside the range value of the output variable.

**ERROR 031: Invalid TXT file version**

The TXT file is not valid because it comes from a non-compatible firmware.

For example: TXT file from 1.xx version are only compatible with product using 1.xx version. TXT file from 2.xx version are only compatible with product using 2.xx version. Etc...

## Warning

---

Warnings do not prevent the module to work but inform the user of a potential problem in its configuration file.

**WARNING 001: Wrong size of label ....****WARNING 002: Wrong character entered in label ....****WARNING 003: Wrong size of text ....****WARNING 004: Wrong character entered in text ....**

These warnings indicate that the entered labels/texts are too long or that a character is not supported by the module.

Invalid characters will be replaced by "?". The valid characters are the followings:

- 0123456789.-
- ABCDEFGHIJKLMNOPQRSTUVWXYZ

- `!#$()*+/:;=>[]^_?`
- `abcdefghijklmnopqrstuvwxy`

The maximum size of a label is 14 characters and 28 characters for a text.

Modify labels/texts according to the rules above.

**WARNING 005: Too many errors...**

All errors/warnings messages could not be displayed. There are probably other problems in your configuration file. Solve displayed problems and send your configuration file again in order to display the additional error/warning messages.

**WARNING 006: No unit specify on unit ....**

**WARNING 007: No value specify on parameter ....**

**WARNING 008: No text specify on text ....**

**WARNING 009: No label specify on label ....**


These warnings indicate that no value has been filled inside the configuration file for a unit/parameter/text or label. The values will stay unchanged.

**WARNING 011: Variable .... does not exist.**


The parameter does not exist. Check compatibility of the version/type of the module and the configuration file.

# CERTIFICATIONS

Figure 67. Declaration of conformity



**DECLARATION UE DE CONFORMITE**  
**EU DECLARATION OF CONFORMITY**



Cette Déclaration de Conformité est conforme à la norme européenne EN17050-1 :2004 "Critères généraux pour les déclarations de conformité des fournisseurs". This Declaration of Conformity is suitable to the European Standard EN 17050-1:2004 "General criteria for supplier's declaration of conformity".

**Nous,**  
**We,** **CRE Technology**

**Adresse du fabricant :** 130, Allée Charles Victor NAUDIN  
**Manufacturer's Address:** Zone des Templiers - Sophia Antipolis  
 06410 BIOT  
 FRANCE

déclarons sous notre seule responsabilité, que les produits délivrés:  
*declare under our sole responsibility that the products as originally delivered:*

**Nom du produit :** MASTER Compact 1B HMI  
**Product Name:** MASTER Compact 1B CORE

**Référence produit :** A56-MAST1-00-x (HMI)  
**Regulatory Model:** A56-MAST1-10-x (CORE)

**Version(s) produit :** All  
**Product Version:**

satisfont aux exigences essentielles des Directives Européennes ci-dessous et portent en conséquence le marquage CE :  
*Comply with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:*


Low Voltage Directive 2014/35/EU  
 EMC Directive 2014/30/EU

CEM/EMC	Standard	Date	Description
	EN61326-1 CISPR11 EN55011 EN55022	2013 2010 + A1 (2011) 2012	EMC general requirements – Industrial environment - class A
	EN61000-4-2	2009	Electrostatic Discharges
	EN61000-4-3	2006 + A2 (2010)	Radiated, RF, electromagnetic field immunity test
	EN61000-4-4	2013	Electrical Fast Transients
	EN61000-4-5	2014	Surge immunity test
	EN61000-4-6	2014	Conducted disturbances immunity
	EN61000-6-2	2006	Generic standards. Immunity for industrial environments
	EN61000-6-4	2010	Generic standards. Emissions for industrial environments
Sécurité/Safety	Standard	Date	Description
	EN60950	2013	Information technology equipment. Safety. General requirements

Cette Déclaration de Conformité s'applique aux produits listés ci-dessus et placés sur le marché après le:  
*This DoC applies to above-listed products placed on the market after:*

January 31, 2019

**SIGNATURE**



**BIOT – France for CRE technology**  
**Responsible Qualité**  
**Quality Manager**

**CRE Technology** - Allée Charles Victor NAUDIN - Zone des Templiers, Sophia Antipolis - 06410 BIOT - FRANCE  
 Tél: +33 (0) 4 92 38 86.82 / Fax: +33 (0) 4 92 38 86.83  
 SARL au Capital de 1000 Euros - RCS Antibes 488 625 583 - TVA : FR 54 488 625 583

Certifications are available for download as PDF files at [www.cretechnology.com](http://www.cretechnology.com) in the download area.

## SOFTWARE VARIABLES



# SOFTWARE VARIABLES

CRE TECHNOLOGY  
130, allée Charles-Victor Naudin  
Zone des Templiers - SOPHIA ANTIPOLIS  
06410 BIOT - FRANCE  
Phone: + 33 (0)4 .92.38.86.82  
[www.cretechnology.com](http://www.cretechnology.com)  
[info@cretechnology.com](mailto:info@cretechnology.com)

COPYRIGHT © CRE TECHNOLOGY. ALL RIGHTS RESERVED.

## TABLE OF CONTENTS

<b>DYNAMIC</b> .....	<b>149</b>
<b>Synchronization PID</b> .....	<b>149</b>
Gain Synch [2904] .....	149
Proport. Synch [2905] .....	149
Integral Synch [2906] .....	150
Derivate Synch [2907] .....	151
<b>GENERAL</b> .....	<b>152</b>
<b>Application</b> .....	<b>152</b>
<b>General</b> .....	<b>152</b>
My number [2001] .....	152
Number of GENSYS COMPACT PRIME [2000] .....	152
Number of MASTER COMPACT/BTB COMPACT [2017] .....	152
Number of HYBRID COMPACT [2025] .....	153
Number of BAT COMPACT [2030] .....	153
Type of application [2005] .....	153
Type of regulation [2006] .....	154
Connection type [2003] .....	154
<b>Mode</b> .....	<b>155</b>
Power on mode [2012] .....	155
Limited time test mode [2015] .....	155
Test mode duration [2016] .....	155
<b>Synchronization &amp; Load Sharing only</b> .....	<b>156</b>
Synchronization & Load sharing only [2024] .....	156
<b>Timers</b> .....	<b>157</b>
<b>Start sequence</b> .....	<b>157</b>
Stabilization timer on can fault [3469] .....	157
Delay before activation of the protections [2004] .....	157
<b>Ramp timer</b> .....	<b>157</b>
Load ramp timer [2853] .....	157
Unload ramp timer [2856] .....	158
<b>Others</b> .....	<b>158</b>
Horn timer [2478] .....	158
<b>Mains timers</b> .....	<b>158</b>
Mains back timer [2009] .....	158
Change over timer [2007] .....	159
<b>CAN</b> .....	<b>160</b>
<b>CAN 1</b> .....	<b>160</b>
CAN 1 baud rate [3050] .....	160
Inhibition remote start from CAN [2018] .....	160
<b>CAN 2</b> .....	<b>161</b>
CAN 2 baud rate [3051] .....	161

# OPERATOR MANUAL

<b>Segment .....</b>	<b>161</b>
Segment number [2020] .....	161
<b>Events .....</b>	<b>162</b>
Record power up [8300] .....	162
Record mains status [8302] .....	162
Record circuit breaker status (Open/Closed) [8303] .....	162
Record operating mode [8304] .....	162
<b>Meters .....</b>	<b>163</b>
Mains kWh [120] .....	163
Mains kVARh energy [122] .....	163
<b>ELECTRICAL .....</b>	<b>164</b>
<b>Bus .....</b>	<b>164</b>
<b>General .....</b>	<b>164</b>
Power plant measure [2110] .....	164
Nominal active power [2111] .....	164
Nominal reactive power [2112] .....	164
Nominal voltage [2102] .....	165
Nominal frequency [2153] .....	165
PT ratio [2100] .....	165
CT ratio [2101] .....	166
Power plant minimum number of GE [2109] .....	166
Low kW active power threshold [2866] .....	166
High kW active power threshold [2867] .....	167
<b>Control .....</b>	<b>167</b>
Base load Generator(s) kW setpoint [2107] .....	167
Power factor setpoint (inductive) [2253] .....	167
<b>Mains .....</b>	<b>168</b>
<b>General .....</b>	<b>168</b>
Mains kW measure type [2155] .....	168
Nominal voltage [2152] .....	168
Nominal frequency [2153] .....	169
PT ratio [2150] .....	169
CT ratio [2151] .....	169
External MCB low kW trip [2156] .....	170
<b>Setpoint .....</b>	<b>170</b>
Peak shaving kW setpoint [2154] .....	170
Limit inverter power export [2159] .....	170
<b>Mains nominal power limitation .....</b>	<b>170</b>
Limit mains nominal power [2161] .....	170
Active power export limit [2162] .....	171
Active power import limit [2160] .....	171
<b>Synchronisation check .....</b>	<b>172</b>

# OPERATOR MANUAL

Voltage acceptance [2800] .....	172
Frequency acceptance [2801] .....	172
Phase Angle acceptance [2802] .....	172
Fail to synchronize timer [2803] .....	172
Action on fail to synchronize [2804] .....	173
Phase offset [2812] .....	173
<b>Power management .....</b>	<b>174</b>
<b>Load shedding .....</b>	<b>174</b>
Opening load on under frequency [3702] .....	174
Under frequency threshold 1 [3700] .....	174
Under frequency threshold 2 [3701] .....	174
Opening of the load on maximum kW [3705] .....	174
Maximum kW threshold 1 [3703] .....	175
Maximum kW threshold 2 [3704] .....	175
Timer for threshold 1 [3706] .....	175
Timer for threshold 2 [3707] .....	175
Minimum delay between 2 openings [2861] .....	175
Action after last opening [2862] .....	176
<b>Unload breakers .....</b>	<b>176</b>
<b>Enable/disable unload breakers .....</b>	<b>176</b>
Enable unload breakers [3730] .....	176
<b>Unload breaker 1 .....</b>	<b>176</b>
Unload breaker kW 1 [3731] .....	176
Unload breaker timer 1 [3720] .....	176
<b>Unload breaker 2 .....</b>	<b>177</b>
Unload breaker kW 2 [3732] .....	177
Unload breaker timer 2 [3721] .....	177
<b>Unload breaker 3 .....</b>	<b>177</b>
Unload breaker kW 3 [3733] .....	177
Unload breaker timer 3 [3722] .....	177
<b>Unload breaker 4 .....</b>	<b>178</b>
Unload breaker kW 4 [3734] .....	178
Unload breaker timer 4 [3723] .....	178
<b>Unload breaker 5 .....</b>	<b>178</b>
Unload breaker kW 5 [3735] .....	178
Unload breaker timer 5 [3724] .....	178
<b>Unload breaker 6 .....</b>	<b>179</b>
Unload breaker kW 6 [3736] .....	179
Unload breaker timer 6 [3725] .....	179
<b>Unload breaker 7 .....</b>	<b>179</b>
Unload breaker kW 7 [3737] .....	179
Unload breaker timer 7 [3726] .....	179
<b>Unload breaker 8 .....</b>	<b>180</b>



Unload breaker kW 8 [3738] .....	180
Unload breaker timer 8 [3727] .....	180
<b>Unload breaker 9 .....</b>	<b>180</b>
Unload breaker kW 9 [3739] .....	180
Unload breaker timer 9 [3728] .....	180
<b>Unload breaker 10 .....</b>	<b>181</b>
Unload breaker kW 10 [3740] .....	181
Unload breaker timer 10 [3729] .....	181
<b>INPUTS/OUTPUTS .....</b>	<b>182</b>
<b>Digital inputs .....</b>	<b>182</b>
<b>Digital inputs .....</b>	<b>182</b>
<b>Input 1 (Customisable) [250] .....</b>	<b>182</b>
Function configured on DI 1 [2700] .....	182
Polarity NO/NC on DI 1 [2736] .....	182
Validity on digital input 1 [2727] .....	182
Timer ON Digital Input 1 [2709] .....	182
Timer OFF Digital Input 1 [2718] .....	183
<b>Input 2 (Customisable) [251] .....</b>	<b>183</b>
Function configured on DI 2 [2701] .....	183
Polarity NO/NC on DI 2 [2737] .....	183
Validity on digital input 2 [2728] .....	183
Timer ON Digital Input 2 [2710] .....	184
Timer OFF Digital Input 2 [2719] .....	184
<b>Input 3 (Customisable) [252] .....</b>	<b>184</b>
Function configured on DI 3 [2702] .....	184
Polarity NO/NC on DI 3 [2738] .....	184
Validity on digital input 3 [2729] .....	185
Timer ON Digital Input 3 [2711] .....	185
Timer OFF Digital Input 3 [2720] .....	185
<b>Input 4 (Customisable) [253] .....</b>	<b>185</b>
Function configured on DI 4 [2703] .....	185
Polarity NO/NC on DI 4 [2739] .....	186
Validity on digital input 4 [2730] .....	186
Timer ON Digital Input 4 [2712] .....	186
Timer OFF Digital Input 4 [2721] .....	186
<b>Input 5 (Customisable) [254] .....</b>	<b>187</b>
Function configured on DI 5 [2704] .....	187
Polarity NO/NC on DI 5 [2740] .....	187
Validity on digital input 5 [2731] .....	187
Timer ON Digital Input 5 [2713] .....	187
Timer OFF Digital Input 5 [2722] .....	188
<b>Input 6 (Customisable) [255] .....</b>	<b>188</b>

Function configured on DI 6 [2705] .....	188
Polarity NO/NC on DI 6 [2741] .....	188
Validity on digital input 6 [2732] .....	188
Timer ON Digital Input 6 [2714] .....	189
Timer OFF Digital Input 6 [2723] .....	189
<b>Input 7 (Customisable) [256] .....</b>	<b>189</b>
Function configured on DI 7 [2706] .....	189
Polarity NO/NC on DI 7 [2742] .....	189
Validity on digital input 7 [2733] .....	190
Timer ON Digital Input 7 [2715] .....	190
Timer OFF Digital Input 7 [2724] .....	190
<b>Input 8 (Customisable) [257] .....</b>	<b>190</b>
Function configured on DI 8 [2707] .....	190
Polarity NO/NC on DI 8 [2743] .....	191
Validity on digital input 8 [2734] .....	191
Timer ON Digital Input 8 [2716] .....	191
Timer OFF Digital Input 8 [2725] .....	191
<b>Input 9 (Customisable) [258] .....</b>	<b>192</b>
Function configured on DI 9 [2708] .....	192
Polarity NO/NC on DI 9 [2744] .....	192
Validity on digital input 9 [2735] .....	192
Timer ON Digital Input 9 [2717] .....	192
Timer OFF Digital Input 9 [2726] .....	193
<b>Hysteresis on digital input .....</b>	<b>193</b>
<b>Hysteresis on digital input 1 .....</b>	<b>193</b>
Hysteresis 1 enable for digital input [2769] .....	193
Timer ON hysteresis 1 [2777] .....	193
Direction hysteresis 1 [2785] .....	194
<b>Hysteresis on digital input 2 .....</b>	<b>194</b>
Hysteresis 2 enable for digital input [2770] .....	194
Timer ON hysteresis 2 [2778] .....	194
Direction hysteresis 2 [2786] .....	195
<b>Hysteresis on digital input 3 .....</b>	<b>195</b>
Hysteresis 3 enable for digital input [2771] .....	195
Timer ON hysteresis 3 [2779] .....	195
Direction hysteresis 3 [2787] .....	196
<b>Hysteresis on digital input 4 .....</b>	<b>196</b>
Hysteresis 4 enable for digital input [2772] .....	196
Timer ON hysteresis 4 [2780] .....	196
Direction hysteresis 4 [2788] .....	197
<b>Hysteresis on digital input 5 .....</b>	<b>197</b>
Hysteresis 5 enable for digital input [2773] .....	197
Timer ON hysteresis 5 [2781] .....	197

Direction hysteresis 5 [2789] .....	198
<b>Hysteresis on digital input 6 .....</b>	<b>198</b>
Hysteresis 6 enable for digital input [2774] .....	198
Timer ON hysteresis 6 [2782] .....	198
Direction hysteresis 6 [2790] .....	199
<b>Hysteresis on digital input 7 .....</b>	<b>199</b>
Hysteresis 7 enable for digital input [2775] .....	199
Timer ON hysteresis 7 [2783] .....	199
Direction hysteresis 7 [2791] .....	200
<b>Hysteresis on digital input 8 .....</b>	<b>200</b>
Hysteresis 8 enable for digital input [2776] .....	200
Timer ON hysteresis 8 [2784] .....	200
Direction hysteresis 8 [2792] .....	201
<b>Digital/relays outputs .....</b>	<b>202</b>
<b>Digital outputs .....</b>	<b>202</b>
<b>Output 1 (Customisable) [4350] .....</b>	<b>202</b>
Function configured DO 1 [2745] .....	202
Polarity NE/ND DO 1 [2751] .....	202
Pulse length DO 1 [2761] .....	202
Activation delay DO 01 [2793] .....	202
<b>Output 2 (Customisable) [4351] .....</b>	<b>203</b>
Function configured DO 2 [2746] .....	203
Polarity NE/ND DO 2 [2752] .....	203
Pulse length DO 2 [2762] .....	203
Activation delay DO 02 [2794] .....	203
<b>Output 3 (Customisable) [4352] .....</b>	<b>204</b>
Function configured DO 3 [2747] .....	204
Polarity NE/ND DO 3 [2753] .....	204
Pulse length DO 3 [2763] .....	204
Activation delay DO 03 [2795] .....	204
<b>Output 4 (Customisable) [4353] .....</b>	<b>205</b>
Function configured DO 4 [2748] .....	205
Polarity NE/ND DO 4 [2754] .....	205
Pulse length DO 4 [2764] .....	205
Activation delay DO 04 [2796] .....	205
<b>Output 5 (Customisable) [4354] .....</b>	<b>206</b>
Function configured DO 5 [2749] .....	206
Polarity NE/ND DO 5 [2755] .....	206
Pulse length DO 5 [2765] .....	206
Activation delay DO 05 [2797] .....	206
<b>Output 6 (Customisable) [4355] .....</b>	<b>207</b>
Function configured DO 6 [2750] .....	207
Polarity NE/ND DO 6 [2756] .....	207

Pulse length DO 6 [2766] .....	207
Activation delay DO 06 [2798] .....	207
<b>Relay outputs .....</b>	<b>208</b>
<b>Relay 1 (Customisable) [4356] .....</b>	<b>208</b>
Output function Relay 1 [2757] .....	208
Direction NO/NC Relay 1 [2759] .....	208
Pulse length R 1 [2767] .....	208
Activation delay relay 1 [8250] .....	208
<b>Relay 2 (Customisable) [4357] .....</b>	<b>209</b>
Output function Relay 2 [2758] .....	209
Direction NO/NC Relay 2 [2760] .....	209
Pulse length R 2 [2768] .....	209
Activation delay relay 2 [8251] .....	209
<b>Breaker .....</b>	<b>210</b>
<b>General .....</b>	<b>210</b>
Delay before new attempt [2806] .....	210
Fail to open/close breaker timer [2304] .....	210
Unexpected close/open breaker timer [2317] .....	210
<b>Mains breaker .....</b>	<b>211</b>
<b>Attempts number .....</b>	<b>211</b>
Synchronization Back attempts number [2814] .....	211
<b>Control .....</b>	<b>211</b>
Mains circuit breaker control type [2307] .....	211
<b>Pulse .....</b>	<b>211</b>
Mains breaker control pulse length [2314] .....	211
Undervoltage coil deenergized time [2315] .....	212
Undervoltage coil security timer [2316] .....	212
<b>Mains failure .....</b>	<b>212</b>
Mains breaker tripping mode on mains failure [2312] .....	212
Timer to open mains breaker on mains failure [2313] .....	212
<b>CANopen .....</b>	<b>213</b>
<b>Digital inputs .....</b>	<b>213</b>
<b>CANopen DI 1 (Customisable) [800] .....</b>	<b>213</b>
CANopenFuncI1 [3200] .....	213
CANopenDir I1 [3296] .....	213
Validity on CANopen digital input 1 [3264] .....	213
CANopenTM I1 [3232] .....	213
<b>CANopen DI 2 (Customisable) [801] .....</b>	<b>214</b>
CANopenFuncI2 [3201] .....	214
CANopenDir I2 [3297] .....	214
Validity on CANopen digital input 2 [3265] .....	214
CANopenTM I2 [3233] .....	214
<b>CANopen DI 3 (Customisable) [802] .....</b>	<b>215</b>

CANopenFuncI3 [3202] .....	215
CANopenDir I3 [3298] .....	215
Validity on CANopen digital input 3 [3266] .....	215
CANopenTM I3 [3234] .....	215
<b>CANopen DI 4 (Customisable) [803] .....</b>	<b>216</b>
CANopenFuncI4 [3203] .....	216
CANopenDir I4 [3299] .....	216
Validity on CANopen digital input 4 [3267] .....	216
CANopenTM I4 [3235] .....	216
<b>CANopen DI 5 (Customisable) [804] .....</b>	<b>217</b>
CANopenFuncI5 [3204] .....	217
CANopenDir I5 [3300] .....	217
Validity on CANopen digital input 5 [3268] .....	217
CANopenTM I5 [3236] .....	217
<b>CANopen DI 6 (Customisable) [805] .....</b>	<b>218</b>
CANopenFuncI6 [3205] .....	218
CANopenDir I6 [3301] .....	218
Validity on CANopen digital input 6 [3269] .....	218
CANopenTM I6 [3237] .....	218
<b>CANopen DI 7 (Customisable) [806] .....</b>	<b>219</b>
CANopenFuncI7 [3206] .....	219
CANopenDir I7 [3302] .....	219
Validity on CANopen digital input 7 [3270] .....	219
CANopenTM I7 [3238] .....	219
<b>CANopen DI 8 (Customisable) [807] .....</b>	<b>220</b>
CANopenFuncI8 [3207] .....	220
CANopenDir I8 [3303] .....	220
Validity on CANopen digital input 8 [3271] .....	220
CANopenTM I8 [3239] .....	220
<b>CANopen DI 9 (Customisable) [808] .....</b>	<b>221</b>
CANopenFuncI9 [3208] .....	221
CANopenDir I9 [3304] .....	221
Validity on CANopen digital input 9 [3272] .....	221
CANopenTM I9 [3240] .....	221
<b>CANopen DI 10 (Customisable) [809] .....</b>	<b>222</b>
CANopenFuncI10 [3209] .....	222
CANopenDir I10 [3305] .....	222
Validity on CANopen digital input 10 [3273] .....	222
CANopenTM I10 [3241] .....	222
<b>CANopen DI 11 (Customisable) [810] .....</b>	<b>223</b>
CANopenFuncI11 [3210] .....	223
CANopenDir I11 [3306] .....	223
Validity on CANopen digital input 11 [3274] .....	223

CANopenTM I11 [3242] .....	223
<b>CANopen DI 12 (Customisable) [811] .....</b>	<b>224</b>
CANopenFuncI12 [3211] .....	224
CANopenDir I12 [3307] .....	224
Validity on CANopen digital input 12 [3275] .....	224
CANopenTM I12 [3243] .....	224
<b>CANopen DI 13 (Customisable) [812] .....</b>	<b>225</b>
CANopenFuncI13 [3212] .....	225
CANopenDir I13 [3308] .....	225
Validity on CANopen digital input 13 [3276] .....	225
CANopenTM I13 [3244] .....	225
<b>CANopen DI 14 (Customisable) [813] .....</b>	<b>226</b>
CANopenFuncI14 [3213] .....	226
CANopenDir I14 [3309] .....	226
Validity on CANopen digital input 14 [3277] .....	226
CANopenTM I14 [3245] .....	226
<b>CANopen DI 15 (Customisable) [814] .....</b>	<b>227</b>
CANopenFuncI15 [3214] .....	227
CANopenDir I15 [3310] .....	227
Validity on CANopen digital input 15 [3278] .....	227
CANopenTM I15 [3246] .....	227
<b>CANopen DI 16 (Customisable) [815] .....</b>	<b>228</b>
CANopenFuncI16 [3215] .....	228
CANopenDir I16 [3311] .....	228
Validity on CANopen digital input 16 [3279] .....	228
CANopenTM I16 [3247] .....	228
<b>CANopen DI 17 (Customisable) [816] .....</b>	<b>229</b>
CANopenFuncI17 [3216] .....	229
CANopenDir I17 [3312] .....	229
Validity on CANopen digital input 17 [3280] .....	229
CANopenTM I17 [3248] .....	229
<b>CANopen DI 18 (Customisable) [817] .....</b>	<b>230</b>
CANopenFuncI18 [3217] .....	230
CANopenDir I18 [3313] .....	230
Validity on CANopen digital input 18 [3281] .....	230
CANopenTM I18 [3249] .....	230
<b>CANopen DI 19 (Customisable) [818] .....</b>	<b>231</b>
CANopenFuncI19 [3218] .....	231
CANopenDir I19 [3314] .....	231
Validity on CANopen digital input 19 [3282] .....	231
CANopenTM I19 [3250] .....	231
<b>CANopen DI 20 (Customisable) [819] .....</b>	<b>232</b>
CANopenFuncI20 [3219] .....	232

CANopenDir I20 [3315] .....	232
Validity on CANopen digital input 20 [3283] .....	232
CANopenTM I20 [3251] .....	232
<b>CANopen DI 21 (Customisable) [820] .....</b>	<b>233</b>
CANopenFuncI21 [3220] .....	233
CANopenDir I21 [3316] .....	233
Validity on CANopen digital input 21 [3284] .....	233
CANopenTM I21 [3252] .....	233
<b>CANopen DI 22 (Customisable) [821] .....</b>	<b>234</b>
CANopenFuncI22 [3221] .....	234
CANopenDir I22 [3317] .....	234
Validity on CANopen digital input 22 [3285] .....	234
CANopenTM I22 [3253] .....	234
<b>CANopen DI 23 (Customisable) [822] .....</b>	<b>235</b>
CANopenFuncI23 [3222] .....	235
CANopenDir I23 [3318] .....	235
Validity on CANopen digital input 23 [3286] .....	235
CANopenTM I23 [3254] .....	235
<b>CANopen DI 24 (Customisable) [823] .....</b>	<b>236</b>
CANopenFuncI24 [3223] .....	236
CANopenDir I24 [3319] .....	236
Validity on CANopen digital input 24 [3287] .....	236
CANopenTM I24 [3255] .....	236
<b>CANopen DI 25 (Customisable) [824] .....</b>	<b>237</b>
CANopenFuncI25 [3224] .....	237
CANopenDir I25 [3320] .....	237
Validity on CANopen digital input 25 [3288] .....	237
CANopenTM I25 [3256] .....	237
<b>CANopen DI 26 (Customisable) [825] .....</b>	<b>238</b>
CANopenFuncI26 [3225] .....	238
CANopenDir I26 [3321] .....	238
Validity on CANopen digital input 26 [3289] .....	238
CANopenTM I26 [3257] .....	238
<b>CANopen DI 27 (Customisable) [826] .....</b>	<b>239</b>
CANopenFuncI27 [3226] .....	239
CANopenDir I27 [3322] .....	239
Validity on CANopen digital input 27 [3290] .....	239
CANopenTM I27 [3258] .....	239
<b>CANopen DI 28 (Customisable) [827] .....</b>	<b>240</b>
CANopenFuncI28 [3227] .....	240
CANopenDir I28 [3323] .....	240
Validity on CANopen digital input 28 [3291] .....	240
CANopenTM I28 [3259] .....	240

<b>CANopen DI 29 (Customisable) [828]</b> .....	<b>241</b>
CANopenFuncI29 [3228] .....	241
CANopenDir I29 [3324] .....	241
Validity on CANopen digital input 29 [3292] .....	241
CANopenTM I29 [3260] .....	241
<b>CANopen DI 30 (Customisable) [829]</b> .....	<b>242</b>
CANopenFuncI30 [3229] .....	242
CANopenDir I30 [3325] .....	242
Validity on CANopen digital input 30 [3293] .....	242
CANopenTM I30 [3261] .....	242
<b>CANopen DI 31 (Customisable) [830]</b> .....	<b>243</b>
CANopenFuncI31 [3230] .....	243
CANopenDir I31 [3326] .....	243
Validity on CANopen digital input 31 [3294] .....	243
CANopenTM I31 [3262] .....	243
<b>CANopen DI 32 (Customisable) [831]</b> .....	<b>244</b>
CANopenFuncI32 [3231] .....	244
CANopenDir I32 [3327] .....	244
Validity on CANopen digital input 32 [3295] .....	244
CANopenTM I32 [3263] .....	244
<b>CANopen DI 33 (Customisable) [1250]</b> .....	<b>245</b>
CANopenFuncI33 [8550] .....	245
CANopenDir I33 [8646] .....	245
Validity on CANopen digital input 33 [8614] .....	245
CANopenTM I33 [8582] .....	245
<b>CANopen DI 34 (Customisable) [1251]</b> .....	<b>246</b>
CANopenFuncI34 [8551] .....	246
CANopenDir I34 [8647] .....	246
Validity on CANopen digital input 34 [8615] .....	246
CANopenTM I34 [8583] .....	246
<b>CANopen DI 35 (Customisable) [1252]</b> .....	<b>247</b>
CANopenFuncI35 [8552] .....	247
CANopenDir I35 [8648] .....	247
Validity on CANopen digital input 35 [8616] .....	247
CANopenTM I35 [8584] .....	247
<b>CANopen DI 36 (Customisable) [1253]</b> .....	<b>248</b>
CANopenFuncI36 [8553] .....	248
CANopenDir I36 [8649] .....	248
Validity on CANopen digital input 36 [8617] .....	248
CANopenTM I36 [8585] .....	248
<b>CANopen DI 37 (Customisable) [1254]</b> .....	<b>249</b>
CANopenFuncI37 [8554] .....	249
CANopenDir I37 [8650] .....	249



Validity on CANopen digital input 37 [8618] .....	249
CANopenTM I37 [8586] .....	249
<b>CANopen DI 38 (Customisable) [1255] .....</b>	<b>250</b>
CANopenFuncI38 [8555] .....	250
CANopenDir I38 [8651] .....	250
Validity on CANopen digital input 38 [8619] .....	250
CANopenTM I38 [8587] .....	250
<b>CANopen DI 39 (Customisable) [1256] .....</b>	<b>251</b>
CANopenFuncI39 [8556] .....	251
CANopenDir I39 [8652] .....	251
Validity on CANopen digital input 39 [8620] .....	251
CANopenTM I39 [8588] .....	251
<b>CANopen DI 40 (Customisable) [1257] .....</b>	<b>252</b>
CANopenFuncI40 [8557] .....	252
CANopenDir I40 [8653] .....	252
Validity on CANopen digital input 40 [8621] .....	252
CANopenTM I40 [8589] .....	252
<b>CANopen DI 41 (Customisable) [1258] .....</b>	<b>253</b>
CANopenFuncI41 [8558] .....	253
CANopenDir I41 [8654] .....	253
Validity on CANopen digital input 41 [8622] .....	253
CANopenTM I41 [8590] .....	253
<b>CANopen DI 42 (Customisable) [1259] .....</b>	<b>254</b>
CANopenFuncI42 [8559] .....	254
CANopenDir I42 [8655] .....	254
Validity on CANopen digital input 42 [8623] .....	254
CANopenTM I42 [8591] .....	254
<b>CANopen DI 43 (Customisable) [1260] .....</b>	<b>255</b>
CANopenFuncI43 [8560] .....	255
CANopenDir I43 [8656] .....	255
Validity on CANopen digital input 43 [8624] .....	255
CANopenTM I43 [8592] .....	255
<b>CANopen DI 44 (Customisable) [1261] .....</b>	<b>256</b>
CANopenFuncI44 [8561] .....	256
CANopenDir I44 [8657] .....	256
Validity on CANopen digital input 44 [8625] .....	256
CANopenTM I44 [8593] .....	256
<b>CANopen DI 45 (Customisable) [1262] .....</b>	<b>257</b>
CANopenFuncI45 [8562] .....	257
CANopenDir I45 [8658] .....	257
Validity on CANopen digital input 45 [8626] .....	257
CANopenTM I45 [8594] .....	257
<b>CANopen DI 46 (Customisable) [1263] .....</b>	<b>258</b>

CANopenFuncI46 [8563] .....	258
CANopenDir I46 [8659] .....	258
Validity on CANopen digital input 46 [8627] .....	258
CANopenTM I46 [8595] .....	258
<b>CANopen DI 47 (Customisable) [1264] .....</b>	<b>259</b>
CANopenFuncI47 [8564] .....	259
CANopenDir I47 [8660] .....	259
Validity on CANopen digital input 47 [8628] .....	259
CANopenTM I47 [8596] .....	259
<b>CANopen DI 48 (Customisable) [1265] .....</b>	<b>260</b>
CANopenFuncI48 [8565] .....	260
CANopenDir I48 [8661] .....	260
Validity on CANopen digital input 48 [8629] .....	260
CANopenTM I48 [8597] .....	260
<b>CANopen DI 49 (Customisable) [1266] .....</b>	<b>261</b>
CANopenFuncI49 [8566] .....	261
CANopenDir I49 [8662] .....	261
Validity on CANopen digital input 49 [8630] .....	261
CANopenTM I49 [8598] .....	261
<b>CANopen DI 50 (Customisable) [1267] .....</b>	<b>262</b>
CANopenFuncI50 [8567] .....	262
CANopenDir I50 [8663] .....	262
Validity on CANopen digital input 50 [8631] .....	262
CANopenTM I50 [8599] .....	262
<b>CANopen DI 51 (Customisable) [1268] .....</b>	<b>263</b>
CANopenFuncI51 [8568] .....	263
CANopenDir I51 [8664] .....	263
Validity on CANopen digital input 51 [8632] .....	263
CANopenTM I51 [8600] .....	263
<b>CANopen DI 52 (Customisable) [1269] .....</b>	<b>264</b>
CANopenFuncI52 [8569] .....	264
CANopenDir I52 [8665] .....	264
Validity on CANopen digital input 52 [8633] .....	264
CANopenTM I52 [8601] .....	264
<b>CANopen DI 53 (Customisable) [1270] .....</b>	<b>265</b>
CANopenFuncI53 [8570] .....	265
CANopenDir I53 [8666] .....	265
Validity on CANopen digital input 53 [8634] .....	265
CANopenTM I53 [8602] .....	265
<b>CANopen DI 54 (Customisable) [1271] .....</b>	<b>266</b>
CANopenFuncI54 [8571] .....	266
CANopenDir I54 [8667] .....	266
Validity on CANopen digital input 54 [8635] .....	266

CANopenTM I54 [8603] .....	266
<b>CANopen DI 55 (Customisable) [1272] .....</b>	<b>267</b>
CANopenFuncI55 [8572] .....	267
CANopenDir I55 [8668] .....	267
Validity on CANopen digital input 55 [8636] .....	267
CANopenTM I55 [8604] .....	267
<b>CANopen DI 56 (Customisable) [1273] .....</b>	<b>268</b>
CANopenFuncI56 [8573] .....	268
CANopenDir I56 [8669] .....	268
Validity on CANopen digital input 56 [8637] .....	268
CANopenTM I56 [8605] .....	268
<b>CANopen DI 57 (Customisable) [1274] .....</b>	<b>269</b>
CANopenFuncI57 [8574] .....	269
CANopenDir I57 [8670] .....	269
Validity on CANopen digital input 57 [8638] .....	269
CANopenTM I57 [8606] .....	269
<b>CANopen DI 58 (Customisable) [1275] .....</b>	<b>270</b>
CANopenFuncI58 [8575] .....	270
CANopenDir I58 [8671] .....	270
Validity on CANopen digital input 58 [8639] .....	270
CANopenTM I58 [8607] .....	270
<b>CANopen DI 59 (Customisable) [1276] .....</b>	<b>271</b>
CANopenFuncI59 [8576] .....	271
CANopenDir I59 [8672] .....	271
Validity on CANopen digital input 59 [8640] .....	271
CANopenTM I59 [8608] .....	271
<b>CANopen DI 60 (Customisable) [1277] .....</b>	<b>272</b>
CANopenFuncI60 [8577] .....	272
CANopenDir I60 [8673] .....	272
Validity on CANopen digital input 60 [8641] .....	272
CANopenTM I60 [8609] .....	272
<b>CANopen DI 61 (Customisable) [1278] .....</b>	<b>273</b>
CANopenFuncI61 [8578] .....	273
CANopenDir I61 [8674] .....	273
Validity on CANopen digital input 61 [8642] .....	273
CANopenTM I61 [8610] .....	273
<b>CANopen DI 62 (Customisable) [1279] .....</b>	<b>274</b>
CANopenFuncI62 [8579] .....	274
CANopenDir I62 [8675] .....	274
Validity on CANopen digital input 62 [8643] .....	274
CANopenTM I62 [8611] .....	274
<b>CANopen DI 63 (Customisable) [1280] .....</b>	<b>275</b>
CANopenFuncI63 [8580] .....	275

CANopenDir I63 [8676] .....	275
Validity on CANopen digital input 63 [8644] .....	275
CANopenTM I63 [8612] .....	275
<b>CANopen DI 64 (Customisable) [1281] .....</b>	<b>276</b>
CANopenFuncI64 [8581] .....	276
CANopenDir I64 [8677] .....	276
Validity on CANopen digital input 64 [8645] .....	276
CANopenTM I64 [8613] .....	276
<b>Digital outputs .....</b>	<b>277</b>
<b>CANopen DO 1 (Customisable) [4751] .....</b>	<b>277</b>
CANopenFuncO1 [3350] .....	277
CANopenModeO1 [3382] .....	277
<b>CANopen DO 2 (Customisable) [4752] .....</b>	<b>277</b>
CANopenFuncO2 [3351] .....	277
CANopenModeO2 [3383] .....	277
<b>CANopen DO 3 (Customisable) [4753] .....</b>	<b>278</b>
CANopenFuncO3 [3352] .....	278
CANopenModeO3 [3384] .....	278
<b>CANopen DO 4 (Customisable) [4754] .....</b>	<b>278</b>
CANopenFuncO4 [3353] .....	278
CANopenModeO4 [3385] .....	278
<b>CANopen DO 5 (Customisable) [4755] .....</b>	<b>279</b>
CANopenFuncO5 [3354] .....	279
CANopenModeO5 [3386] .....	279
<b>CANopen DO 6 (Customisable) [4756] .....</b>	<b>279</b>
CANopenFuncO6 [3355] .....	279
CANopenModeO6 [3387] .....	279
<b>CANopen DO 7 (Customisable) [4757] .....</b>	<b>280</b>
CANopenFuncO7 [3356] .....	280
CANopenModeO7 [3388] .....	280
<b>CANopen DO 8 (Customisable) [4758] .....</b>	<b>280</b>
CANopenFuncO8 [3357] .....	280
CANopenModeO8 [3389] .....	280
<b>CANopen DO 9 (Customisable) [4759] .....</b>	<b>281</b>
CANopenFuncO9 [3358] .....	281
CANopenModeO9 [3390] .....	281
<b>CANopen DO 10 (Customisable) [4760] .....</b>	<b>281</b>
CANopenFuncO10 [3359] .....	281
CANopenModeO10 [3391] .....	281
<b>CANopen DO 11 (Customisable) [4761] .....</b>	<b>282</b>
CANopenFuncO11 [3360] .....	282
CANopenModeO11 [3392] .....	282
<b>CANopen DO 12 (Customisable) [4762] .....</b>	<b>282</b>

CANopenFuncO12 [3361] .....	282
CANopenModeO12 [3393] .....	282
<b>CANopen DO 13 (Customisable) [4763] .....</b>	<b>283</b>
CANopenFuncO13 [3362] .....	283
CANopenModeO13 [3394] .....	283
<b>CANopen DO 14 (Customisable) [4764] .....</b>	<b>283</b>
CANopenFuncO14 [3363] .....	283
CANopenModeO14 [3395] .....	283
<b>CANopen DO 15 (Customisable) [4765] .....</b>	<b>284</b>
CANopenFuncO15 [3364] .....	284
CANopenModeO15 [3396] .....	284
<b>CANopen DO 16 (Customisable) [4766] .....</b>	<b>284</b>
CANopenFuncO16 [3365] .....	284
CANopenModeO16 [3397] .....	284
<b>CANopen DO 17 (Customisable) [4767] .....</b>	<b>285</b>
CANopenFuncO17 [3366] .....	285
CANopenModeO17 [3398] .....	285
<b>CANopen DO 18 (Customisable) [4768] .....</b>	<b>285</b>
CANopenFuncO18 [3367] .....	285
CANopenModeO18 [3399] .....	285
<b>CANopen DO 19 (Customisable) [4769] .....</b>	<b>286</b>
CANopenFuncO19 [3368] .....	286
CANopenModeO19 [3400] .....	286
<b>CANopen DO 20 (Customisable) [4770] .....</b>	<b>286</b>
CANopenFuncO20 [3369] .....	286
CANopenModeO20 [3401] .....	286
<b>CANopen DO 21 (Customisable) [4771] .....</b>	<b>287</b>
CANopenFuncO21 [3370] .....	287
CANopenModeO21 [3402] .....	287
<b>CANopen DO 22 (Customisable) [4772] .....</b>	<b>287</b>
CANopenFuncO22 [3371] .....	287
CANopenModeO22 [3403] .....	287
<b>CANopen DO 23 (Customisable) [4773] .....</b>	<b>288</b>
CANopenFuncO23 [3372] .....	288
CANopenModeO23 [3404] .....	288
<b>CANopen DO 24 (Customisable) [4774] .....</b>	<b>288</b>
CANopenFuncO24 [3373] .....	288
CANopenModeO24 [3405] .....	288
<b>CANopen DO 25 (Customisable) [4775] .....</b>	<b>289</b>
CANopenFuncO25 [3374] .....	289
CANopenModeO25 [3406] .....	289
<b>CANopen DO 26 (Customisable) [4776] .....</b>	<b>289</b>
CANopenFuncO26 [3375] .....	289

CANopenModeO26 [3407] .....	289
<b>CANopen DO 27 (Customisable) [4777] .....</b>	<b>290</b>
CANopenFuncO27 [3376] .....	290
CANopenModeO27 [3408] .....	290
<b>CANopen DO 28 (Customisable) [4778] .....</b>	<b>290</b>
CANopenFuncO28 [3377] .....	290
CANopenModeO28 [3409] .....	290
<b>CANopen DO 29 (Customisable) [4779] .....</b>	<b>291</b>
CANopenFuncO29 [3378] .....	291
CANopenModeO29 [3410] .....	291
<b>CANopen DO 30 (Customisable) [4780] .....</b>	<b>291</b>
CANopenFuncO30 [3379] .....	291
CANopenModeO30 [3411] .....	291
<b>CANopen DO 31 (Customisable) [4781] .....</b>	<b>292</b>
CANopenFuncO31 [3380] .....	292
CANopenModeO31 [3412] .....	292
<b>CANopen DO 32 (Customisable) [4782] .....</b>	<b>292</b>
CANopenFuncO32 [3381] .....	292
CANopenModeO32 [3413] .....	292
<b>CANopen DO 33 (Customisable) [5100] .....</b>	<b>293</b>
CANopenFuncO33 [8700] .....	293
CANopenModeO33 [8732] .....	293
<b>CANopen DO 34 (Customisable) [5101] .....</b>	<b>293</b>
CANopenFuncO34 [8701] .....	293
CANopenModeO34 [8733] .....	293
<b>CANopen DO 35 (Customisable) [5102] .....</b>	<b>294</b>
CANopenFuncO35 [8702] .....	294
CANopenModeO35 [8734] .....	294
<b>CANopen DO 36 (Customisable) [5103] .....</b>	<b>294</b>
CANopenFuncO36 [8703] .....	294
CANopenModeO36 [8735] .....	294
<b>CANopen DO 37 (Customisable) [5104] .....</b>	<b>295</b>
CANopenFuncO37 [8704] .....	295
CANopenModeO37 [8736] .....	295
<b>CANopen DO 38 (Customisable) [5105] .....</b>	<b>295</b>
CANopenFuncO38 [8705] .....	295
CANopenModeO38 [8737] .....	295
<b>CANopen DO 39 (Customisable) [5106] .....</b>	<b>296</b>
CANopenFuncO39 [8706] .....	296
CANopenModeO39 [8738] .....	296
<b>CANopen DO 40 (Customisable) [5107] .....</b>	<b>296</b>
CANopenFuncO40 [8707] .....	296
CANopenModeO40 [8739] .....	296

<b>CANopen DO 41 (Customisable) [5108]</b> .....	<b>297</b>
CANopenFuncO41 [8708] .....	297
CANopenModeO41 [8740] .....	297
<b>CANopen DO 42 (Customisable) [5109]</b> .....	<b>297</b>
CANopenFuncO42 [8709] .....	297
CANopenModeO42 [8741] .....	297
<b>CANopen DO 43 (Customisable) [5110]</b> .....	<b>298</b>
CANopenFuncO43 [8710] .....	298
CANopenModeO43 [8742] .....	298
<b>CANopen DO 44 (Customisable) [5111]</b> .....	<b>298</b>
CANopenFuncO44 [8711] .....	298
CANopenModeO44 [8743] .....	298
<b>CANopen DO 45 (Customisable) [5112]</b> .....	<b>299</b>
CANopenFuncO45 [8712] .....	299
CANopenModeO45 [8744] .....	299
<b>CANopen DO 46 (Customisable) [5113]</b> .....	<b>299</b>
CANopenFuncO46 [8713] .....	299
CANopenModeO46 [8745] .....	299
<b>CANopen DO 47 (Customisable) [5114]</b> .....	<b>300</b>
CANopenFuncO47 [8714] .....	300
CANopenModeO47 [8746] .....	300
<b>CANopen DO 48 (Customisable) [5115]</b> .....	<b>300</b>
CANopenFuncO48 [8715] .....	300
CANopenModeO48 [8747] .....	300
<b>CANopen DO 49 (Customisable) [5116]</b> .....	<b>301</b>
CANopenFuncO49 [8716] .....	301
CANopenModeO49 [8748] .....	301
<b>CANopen DO 50 (Customisable) [5117]</b> .....	<b>301</b>
CANopenFuncO50 [8717] .....	301
CANopenModeO50 [8749] .....	301
<b>CANopen DO 51 (Customisable) [5118]</b> .....	<b>302</b>
CANopenFuncO51 [8718] .....	302
CANopenModeO51 [8750] .....	302
<b>CANopen DO 52 (Customisable) [5119]</b> .....	<b>302</b>
CANopenFuncO52 [8719] .....	302
CANopenModeO52 [8751] .....	302
<b>CANopen DO 53 (Customisable) [5120]</b> .....	<b>303</b>
CANopenFuncO53 [8720] .....	303
CANopenModeO53 [8752] .....	303
<b>CANopen DO 54 (Customisable) [5121]</b> .....	<b>303</b>
CANopenFuncO54 [8721] .....	303
CANopenModeO54 [8753] .....	303
<b>CANopen DO 55 (Customisable) [5122]</b> .....	<b>304</b>

CANopenFuncO55 [8722] .....	304
CANopenModeO55 [8754] .....	304
<b>CANopen DO 56 (Customisable) [5123] .....</b>	<b>304</b>
CANopenFuncO56 [8723] .....	304
CANopenModeO56 [8755] .....	304
<b>CANopen DO 57 (Customisable) [5124] .....</b>	<b>305</b>
CANopenFuncO57 [8724] .....	305
CANopenModeO57 [8756] .....	305
<b>CANopen DO 58 (Customisable) [5125] .....</b>	<b>305</b>
CANopenFuncO58 [8725] .....	305
CANopenModeO58 [8757] .....	305
<b>CANopen DO 59 (Customisable) [5126] .....</b>	<b>306</b>
CANopenFuncO59 [8726] .....	306
CANopenModeO59 [8758] .....	306
<b>CANopen DO 60 (Customisable) [5127] .....</b>	<b>306</b>
CANopenFuncO60 [8727] .....	306
CANopenModeO60 [8759] .....	306
<b>CANopen DO 61 (Customisable) [5128] .....</b>	<b>307</b>
CANopenFuncO61 [8728] .....	307
CANopenModeO61 [8760] .....	307
<b>CANopen DO 62 (Customisable) [5129] .....</b>	<b>307</b>
CANopenFuncO62 [8729] .....	307
CANopenModeO62 [8761] .....	307
<b>CANopen DO 63 (Customisable) [5130] .....</b>	<b>308</b>
CANopenFuncO63 [8730] .....	308
CANopenModeO63 [8762] .....	308
<b>CANopen DO 64 (Customisable) [5131] .....</b>	<b>308</b>
CANopenFuncO64 [8731] .....	308
CANopenModeO64 [8763] .....	308
<b>Analog inputs .....</b>	<b>309</b>
<b>Analog inputs 1 .....</b>	<b>309</b>
CANopen AI 1 (Customisable) [1050] .....	309
CANopen Gain AI 01 [8351] .....	309
CANopen Offset AI 01 [8350] .....	309
<b>Analog inputs 2 .....</b>	<b>309</b>
CANopen AI 2 (Customisable) [1051] .....	309
CANopen Gain AI 02 [8353] .....	310
CANopen Offset AI 02 [8352] .....	310
<b>Analog inputs 3 .....</b>	<b>310</b>
CANopen AI 3 (Customisable) [1052] .....	310
CANopen Gain AI 03 [8355] .....	310
CANopen Offset AI 03 [8354] .....	310
<b>Analog inputs 4 .....</b>	<b>311</b>



CANopen AI 4 (Customisable) [1053] .....	311
CANopen Gain AI 04 [8357] .....	311
CANopen Offset AI 04 [8356] .....	311
<b>Analog inputs 5 .....</b>	<b>311</b>
CANopen AI 5 (Customisable) [1054] .....	311
CANopen Gain AI 05 [8359] .....	312
CANopen Offset AI 05 [8358] .....	312
<b>Analog inputs 6 .....</b>	<b>312</b>
CANopen AI 6 (Customisable) [1055] .....	312
CANopen Gain AI 06 [8361] .....	312
CANopen Offset AI 06 [8360] .....	312
<b>Analog inputs 7 .....</b>	<b>313</b>
CANopen AI 7 (Customisable) [1056] .....	313
CANopen Gain AI 07 [8363] .....	313
CANopen Offset AI 07 [8362] .....	313
<b>Analog inputs 8 .....</b>	<b>313</b>
CANopen AI 8 (Customisable) [1057] .....	313
CANopen Gain AI 08 [8365] .....	314
CANopen Offset AI 08 [8364] .....	314
<b>Analog inputs 9 .....</b>	<b>314</b>
CANopen AI 9 (Customisable) [1058] .....	314
CANopen Gain AI 09 [8367] .....	314
CANopen Offset AI 09 [8366] .....	314
<b>Analog inputs 10 .....</b>	<b>315</b>
CANopen AI 10 (Customisable) [1059] .....	315
CANopen Gain AI 10 [8369] .....	315
CANopen Offset AI 10 [8368] .....	315
<b>Analog inputs 11 .....</b>	<b>315</b>
CANopen AI 11 (Customisable) [1060] .....	315
CANopen Gain AI 11 [8371] .....	316
CANopen Offset AI 11 [8370] .....	316
<b>Analog inputs 12 .....</b>	<b>316</b>
CANopen AI 12 (Customisable) [1061] .....	316
CANopen Gain AI 12 [8373] .....	316
CANopen Offset AI 12 [8372] .....	316
<b>Analog inputs 13 .....</b>	<b>317</b>
CANopen AI 13 (Customisable) [1062] .....	317
CANopen Gain AI 13 [8375] .....	317
CANopen Offset AI 13 [8374] .....	317
<b>Analog inputs 14 .....</b>	<b>317</b>
CANopen AI 14 (Customisable) [1063] .....	317
CANopen Gain AI 14 [8377] .....	318
CANopen Offset AI 14 [8376] .....	318

<b>Analog inputs 15</b> .....	<b>318</b>
CANopen AI 15 (Customisable) [1064] .....	318
CANopen Gain AI 15 [8379] .....	318
CANopen Offset AI 15 [8378] .....	318
<b>Analog inputs 16</b> .....	<b>319</b>
CANopen AI 16 (Customisable) [1065] .....	319
CANopen Gain AI 16 [8381] .....	319
CANopen Offset AI 16 [8380] .....	319
<b>PROTECTIONS</b> .....	<b>320</b>
<b>Bus protections</b> .....	<b>320</b>
<b>Over/under frequency</b> .....	<b>320</b>
<b>Over frequency</b> .....	<b>320</b>
Over frequency threshold [2400] .....	320
Over frequency timer [2401] .....	320
Over frequency control [2402] .....	320
<b>Under frequency</b> .....	<b>321</b>
Under frequency threshold [2403] .....	321
Under frequency timer [2404] .....	321
Under frequency control [2405] .....	321
<b>Over frequency 2</b> .....	<b>321</b>
Over frequency threshold 2 [2436] .....	321
Over frequency timer 2 [2437] .....	322
Over frequency control 2 [2438] .....	322
<b>Under frequency 2</b> .....	<b>322</b>
Under frequency threshold 2 [2439] .....	322
Under frequency timer 2 [2440] .....	322
Under frequency control 2 [2441] .....	323
<b>Over/under voltage</b> .....	<b>323</b>
<b>Over voltage</b> .....	<b>323</b>
Over voltage threshold [2406] .....	323
Over voltage timer [2407] .....	323
Over voltage control [2408] .....	323
<b>Under voltage</b> .....	<b>324</b>
Under voltage threshold [2409] .....	324
Under voltage timer [2410] .....	324
Under voltage control [2411] .....	324
<b>Over voltage 2</b> .....	<b>324</b>
Over voltage threshold 2 [2442] .....	324
Over voltage timer 2 [2443] .....	325
Over voltage control 2 [2444] .....	325
<b>Under voltage 2</b> .....	<b>325</b>
Under voltage threshold 2 [2445] .....	325

Under voltage timer 2 [2446] .....	325
Under voltage control 2 [2447] .....	326
<b>Voltage unbalance .....</b>	<b>326</b>
<b>Voltage unbalance .....</b>	<b>326</b>
Voltage unbalance threshold [2486] .....	326
Voltage unbalance timer [2487] .....	326
Voltage unbalance control [2488] .....	326
<b>Voltage unbalance 2 .....</b>	<b>327</b>
Voltage unbalance threshold 2 [2489] .....	327
Voltage unbalance timer 2 [2490] .....	327
Voltage unbalance control 2 [2491] .....	327
<b>Rotophase .....</b>	<b>327</b>
Rotophase protection control [8501] .....	327
Rotophase activation direction (0 = Indirect, 1 = Direct) [8500] .....	328
<b>Mains protections .....</b>	<b>329</b>
<b>Over/under frequency .....</b>	<b>329</b>
<b>Over frequency .....</b>	<b>329</b>
Over frequency threshold [2500] .....	329
Over frequency timer [2501] .....	329
Over frequency control [2502] .....	329
<b>Under frequency .....</b>	<b>330</b>
Under frequency threshold [2503] .....	330
Under frequency timer [2504] .....	330
Under frequency control [2505] .....	330
<b>Over frequency 2 .....</b>	<b>330</b>
Over frequency threshold 2 [2530] .....	330
Over frequency timer 2 [2531] .....	331
Over frequency control 2 [2532] .....	331
<b>Under frequency 2 .....</b>	<b>331</b>
Under frequency threshold 2 [2533] .....	331
Under frequency timer 2 [2534] .....	331
Under frequency control 2 [2535] .....	332
<b>Over/under voltage .....</b>	<b>332</b>
<b>Over voltage .....</b>	<b>332</b>
Over voltage threshold [2506] .....	332
Over voltage timer [2507] .....	332
Over voltage control [2508] .....	332
<b>Under voltage .....</b>	<b>333</b>
Under voltage threshold [2509] .....	333
Under voltage timer [2510] .....	333
Under voltage control [2511] .....	333
<b>Over voltage 2 .....</b>	<b>333</b>
Over voltage threshold 2 [2536] .....	333

Over voltage timer 2 [2537] .....	334
Over voltage control 2 [2538] .....	334
<b>Under voltage 2 .....</b>	<b>334</b>
Under voltage threshold 2 [2539] .....	334
Under voltage timer 2 [2540] .....	334
Under voltage control 2 [2541] .....	335
<b>Voltage/Current unbalance .....</b>	<b>335</b>
<b>Voltage unbalance .....</b>	<b>335</b>
Voltage unbalance threshold [2565] .....	335
Voltage unbalance timer [2566] .....	335
Voltage unbalance control [2567] .....	335
<b>Voltage unbalance 2 .....</b>	<b>336</b>
Voltage unbalance threshold 2 [2568] .....	336
Voltage unbalance timer 2 [2569] .....	336
Voltage unbalance control 2 [2570] .....	336
<b>Current unbalance .....</b>	<b>336</b>
Current unbalance threshold [2572] .....	336
Current unbalance timer [2573] .....	337
Current unbalance control [2574] .....	337
<b>Current unbalance 2 .....</b>	<b>337</b>
Current unbalance threshold 2 [2575] .....	337
Current unbalance timer 2 [2576] .....	337
Current unbalance control 2 [2577] .....	338
<b>Rotophase .....</b>	<b>338</b>
Rotophase protection control [2585] .....	338
Rotophase activation direction (0 = Indirect, 1 = Direct) [2584] .....	338
<b>Reverse kW/kVAR .....</b>	<b>339</b>
<b>Reverse kW .....</b>	<b>339</b>
Reverse kW threshold [2518] .....	339
Reverse kW timer [2519] .....	339
Reverse kW control [2520] .....	339
<b>Reverse kVAR .....</b>	<b>339</b>
Reverse kVAR threshold [2527] .....	339
Reverse kVAR timer [2528] .....	340
Reverse kVAR control [2529] .....	340
<b>Reverse kW 2 .....</b>	<b>340</b>
Reverse kW threshold 2 [2548] .....	340
Reverse kW timer 2 [2549] .....	340
Reverse kW control 2 [2550] .....	341
<b>Reverse kVAR 2 .....</b>	<b>341</b>
Reverse kVAR threshold 2 [2557] .....	341
Reverse kVAR timer 2 [2558] .....	341
Reverse kVAR control 2 [2559] .....	341

<b>Maximum/Minimum kW</b> .....	<b>342</b>
<b>Maximum kW</b> .....	<b>342</b>
Maximum kW threshold [2515] .....	342
Maximum kW timer [2516] .....	342
Maximum kW control [2517] .....	342
<b>Minimum kW</b> .....	<b>342</b>
Minimum kW threshold [2512] .....	342
Minimum kW timer [2513] .....	343
Minimum kW control [2514] .....	343
<b>Maximum kW 2</b> .....	<b>343</b>
Maximum kW threshold 2 [2545] .....	343
Maximum kW timer 2 [2546] .....	343
Maximum kW control 2 [2547] .....	344
<b>Minimum kW 2</b> .....	<b>344</b>
Minimum kW threshold 2 [2542] .....	344
Minimum kW timer 2 [2543] .....	344
Minimum kW control 2 [2544] .....	344
<b>Maxi kVAR/Mini kVAR</b> .....	<b>345</b>
<b>Maximum kVAR</b> .....	<b>345</b>
Maximum kVAR threshold [2524] .....	345
Maximum kVAR timer [2525] .....	345
Maximum kVAR control [2526] .....	345
<b>Minimum kVar</b> .....	<b>345</b>
Minimum kVAR threshold [2521] .....	345
Minimum kVAR timer [2522] .....	346
Minimum kVAR control [2523] .....	346
<b>Maximum kVAR 2</b> .....	<b>346</b>
Maximum kVAR threshold 2 [2554] .....	346
Maximum kVAR timer 2 [2555] .....	346
Maximum kVAR control 2 [2556] .....	347
<b>Minimum kVar 2</b> .....	<b>347</b>
Minimum kVAR threshold 2 [2551] .....	347
Minimum kVAR timer 2 [2552] .....	347
Minimum kVAR control 2 [2553] .....	347
<b>Vector jump/DF/DT</b> .....	<b>348</b>
<b>Vector jump</b> .....	<b>348</b>
Vector jump threshold [2560] .....	348
Vector jump control [2561] .....	348
<b>DF/DT</b> .....	<b>348</b>
df/dt threshold [2562] .....	348
df/dt control [2563] .....	348
<b>Init delay after mains paralleling</b> .....	<b>349</b>
Vector jump and df/dt timer [2564] .....	349

<b>Other protections .....</b>	<b>350</b>
<b>Analog inputs .....</b>	<b>350</b>
<b>Analog input 1 .....</b>	<b>350</b>
Analog input 1 threshold [2600] .....	350
Analog input 1 timer [2601] .....	350
Analog input 1 control [2602] .....	350
Analog input 1 threshold 2 [2603] .....	350
Analog input 1 timer 2 [2604] .....	351
Analog input 1 control 2 [2605] .....	351
Direction analog input 1 protection [2606] .....	351
<b>Analog input 2 .....</b>	<b>351</b>
Analog input 2 threshold [2608] .....	351
Analog input 2 timer [2609] .....	352
Analog input 2 control [2610] .....	352
Analog input 2 threshold 2 [2611] .....	352
Analog input 2 timer 2 [2612] .....	352
Analog input 2 control 2 [2613] .....	353
Direction analog input 2 protection [2614] .....	353
<b>Analog input 3 .....</b>	<b>353</b>
Analog input 3 threshold [2616] .....	353
Analog input 3 timer [2617] .....	353
Analog input 3 control [2618] .....	354
Analog input 3 threshold 2 [2619] .....	354
Analog input 3 timer 2 [2620] .....	354
Analog input 3 control 2 [2621] .....	354
Direction analog input 3 protection [2622] .....	355
<b>Battery .....</b>	<b>355</b>
<b>Maximum battery voltage .....</b>	<b>355</b>
Max. voltage battery threshold [2359] .....	355
Max. voltage battery timer [2360] .....	355
Max. voltage battery control [2361] .....	355
<b>Minimum battery voltage .....</b>	<b>356</b>
Min. voltage battery threshold [2356] .....	356
Min. voltage battery timer [2357] .....	356
Min. voltage battery control [2358] .....	356
<b>Maximum battery voltage 2 .....</b>	<b>356</b>
Max. voltage battery threshold 2 [2377] .....	356
Max. voltage battery timer 2 [2378] .....	357
Max. voltage battery control 2 [2379] .....	357
<b>Minimum battery voltage 2 .....</b>	<b>357</b>
Min. voltage battery threshold 2 [2374] .....	357
Min. voltage battery timer 2 [2375] .....	357
Min. voltage battery control 2 [2376] .....	358

<b>CAN 1</b> .....	<b>358</b>
Control on controllers communication fault [3052] .....	358
Control on missing GENSYS COMPACT PRIME on CAN bus [3054] .....	358
Control on missing MASTER COMPACT/BTB COMPACT on CAN bus [3057] .....	358
Control on missing HYBRID COMPACT on CAN bus [3060] .....	359
Control on missing BAT COMPACT on CAN bus [3061] .....	359
Control on not enough genset available [2399] .....	359
<b>CANopen</b> .....	<b>359</b>
Control on CANopen error [3059] .....	359
CANopen error timer [3152] .....	360
<b>Mismatch rotophase</b> .....	<b>360</b>
Mismatch rotophases protection control [2397] .....	360
<b>PROGRAMMING</b> .....	<b>361</b>
<b>Hysteresis</b> .....	<b>361</b>
<b>Hysteresis 1</b> .....	<b>361</b>
Enable Hysteresis 1 [2657] .....	361
Low level threshold [2660] .....	361
Timer on low level threshold [2666] .....	361
High level threshold [2663] .....	361
Timer on high level threshold [2669] .....	362
Hysteresis Direction 1 [2672] .....	362
<b>Hysteresis 2</b> .....	<b>362</b>
Enable Hysteresis 2 [2658] .....	362
Low level threshold [2661] .....	362
Timer on low level threshold [2667] .....	363
High level threshold [2664] .....	363
Timer on high level threshold [2670] .....	363
Hysteresis Direction 2 [2673] .....	363
<b>Hysteresis 3</b> .....	<b>364</b>
Enable Hysteresis 3 [2659] .....	364
Low level threshold [2662] .....	364
Timer on low level threshold [2668] .....	364
High level threshold [2665] .....	364
Timer on high level threshold [2671] .....	364
Hysteresis Direction 3 [2674] .....	365
<b>Modbus</b> .....	<b>366</b>
<b>Connection settings</b> .....	<b>366</b>
Enable connection to Modbus server [3031] .....	366
Control on Modbus server timeouts [3030] .....	366
Modbus server frame timeout [3032] .....	366
<b>Modbus rights</b> .....	<b>366</b>
Write date/time [3015.0] .....	366

# OPERATOR MANUAL

Write engine meters [3015.1] .....	366
Write input functions [3015.3] .....	366
Reading via Modbus TCP [3015.8] .....	367
Writing via Modbus TCP [3015.9] .....	367
<b>Logger .....</b>	<b>368</b>
<b>Activation .....</b>	<b>368</b>
Activation [3610] .....	368
<b>Variables 1-5 .....</b>	<b>368</b>
<b>Log 1 .....</b>	<b>368</b>
Variable 1 to log [3600] .....	368
Log variable 1 on [3622] .....	368
Logging period variable 1 [3612] .....	369
<b>Log 2 .....</b>	<b>369</b>
Variable 2 to log [3601] .....	369
Log variable 2 on [3623] .....	369
Logging period variable 2 [3613] .....	369
<b>Log 3 .....</b>	<b>370</b>
Variable 3 to log [3602] .....	370
Log variable 3 on [3624] .....	370
Logging period variable 3 [3614] .....	370
<b>Log 4 .....</b>	<b>370</b>
Variable 4 to log [3603] .....	370
Log variable 4 on [3625] .....	371
Logging period variable 4 [3615] .....	371
<b>Log 5 .....</b>	<b>371</b>
Variable 5 to log [3604] .....	371
Log variable 5 on [3626] .....	371
Logging period variable 5 [3616] .....	372
<b>Variables 6-10 .....</b>	<b>372</b>
<b>Log 6 .....</b>	<b>372</b>
Variable 6 to log [3605] .....	372
Log variable 6 on [3627] .....	372
Logging period variable 6 [3617] .....	372
<b>Log 7 .....</b>	<b>373</b>
Variable 7 to log [3606] .....	373
Log variable 7 on [3628] .....	373
Logging period variable 7 [3618] .....	373
<b>Log 8 .....</b>	<b>373</b>
Variable 8 to log [3607] .....	373
Log variable 8 on [3629] .....	374
Logging period variable 8 [3619] .....	374
<b>Log 9 .....</b>	<b>374</b>
Variable 9 to log [3608] .....	374



# OPERATOR MANUAL

Log variable 9 on [3630] .....	374
Logging period variable 9 [3620] .....	375
<b>Log 10 .....</b>	<b>375</b>
Variable 10 to log [3609] .....	375
Log variable 10 on [3631] .....	375
Logging period variable 10 [3621] .....	375
<b>SYSTEM .....</b>	<b>376</b>
<b>LCD display .....</b>	<b>376</b>
<b>Screen saving .....</b>	<b>376</b>
Screensaver timeout [3551] .....	376
<b>Backlight .....</b>	<b>376</b>
Backlight timeout [3552] .....	376
LCD screen backlight [3555] .....	376
LCD screen contrast [3554] .....	376
<b>Date/Time .....</b>	<b>377</b>
Day of the week [10] .....	377
Day [11] .....	377
Month [12] .....	377
Year [13] .....	377
Hours [14] .....	377
Minutes [15] .....	378
<b>Buttons inhibition .....</b>	<b>379</b>
Auto button inhibition [8102.14] .....	379
Test button inhibition [8102.13] .....	379
Man button inhibition [8102.12] .....	379
Start button inhibition [8102.11] .....	379
Stop button inhibition [8102.10] .....	379
Mains breaker button inhibition [8102.8] .....	379
Fault/Alarm/info button inhibition [8102.7] .....	379
Esc button inhibition [8102.6] .....	379
Enter button inhibition [8102.5] .....	379
Up arrow button inhibition [8102.4] .....	379
Left arrow button inhibition [8102.3] .....	380
Down arrow button inhibition [8102.2] .....	380
Right arrow button inhibition [8102.1] .....	380
Shift button inhibition [8102.0] .....	380
<b>LIST OF INPUTS .....</b>	<b>381</b>
<b>Bus .....</b>	<b>381</b>
Remote start on load [4502] .....	381
Power plant ready [4636] .....	381
<b>Mains .....</b>	<b>382</b>
Mains breaker feedback [4500] .....	382

# OPERATOR MANUAL

Manual mains back [4544] .....	382
Mains failure [4638] .....	382
Mains available [4642] .....	382
<b>Inputs/outputs .....</b>	<b>383</b>
Digital output 1 forced [4630] .....	383
Digital output 2 forced [4631] .....	383
Digital output 3 forced [4632] .....	383
Digital output 4 forced [4633] .....	383
Digital output 5 forced [4634] .....	383
Digital output 6 forced [4635] .....	383
Relay 1 forced [4950] .....	383
Relay 2 forced [4951] .....	383
<b>Power Plant .....</b>	<b>384</b>
External non essential trip request [4537] .....	384
<b>Alarms/faults .....</b>	<b>385</b>
Emergency stop [4505] .....	385
Mains fault request [4508] .....	385
Remote soft shut down [4526] .....	385
Remote alarm [4527] .....	385
<b>Alternative selections .....</b>	<b>386</b>
Alternative selection 1 [4594] .....	386
Alternative selection 2 [4595] .....	386
Alternative selection 3 [4596] .....	386
Alternative selection 4 [4597] .....	386
Alternative selection 5 [4598] .....	386
Alternative selection 6 [4599] .....	386
Alternative selection 7 [4600] .....	386
Alternative selection 8 [4601] .....	386
Alternative selection 9 [4602] .....	386
Alternative selection 10 [4603] .....	387
Alternative selection 11 [4604] .....	387
Alternative selection 12 [4605] .....	387
Alternative selection 13 [4606] .....	387
Alternative selection 14 [4607] .....	387
Alternative selection 15 [4608] .....	387
Alternative selection 16 [4609] .....	387
<b>Hysteresis .....</b>	<b>388</b>
Hysteresis low threshold DI1 [4614] .....	388
Hysteresis low threshold DI2 [4615] .....	388
Hysteresis low threshold DI3 [4616] .....	388
Hysteresis low threshold DI4 [4617] .....	388
Hysteresis low threshold DI5 [4618] .....	388
Hysteresis low threshold DI6 [4619] .....	388

## OPERATOR MANUAL

Hysteresis low threshold DI7 [4620] .....	388
Hysteresis low threshold DI8 [4621] .....	388
Hysteresis high threshold DI1 [4622] .....	388
Hysteresis high threshold DI2 [4623] .....	388
Hysteresis high threshold DI3 [4624] .....	389
Hysteresis high threshold DI4 [4625] .....	389
Hysteresis high threshold DI5 [4626] .....	389
Hysteresis high threshold DI6 [4627] .....	389
Hysteresis high threshold DI7 [4628] .....	389
Hysteresis high threshold DI8 [4629] .....	389
<b>Remote buttons .....</b>	<b>390</b>
Remote faults reset [4506] .....	390
Manual start request [4509] .....	390
Manual stop request [4510] .....	390
Manual mode request [4511] .....	390
Manual mode inhibition [4512] .....	390
Auto mode request [4513] .....	390
Mains breaker opening in manual mode [4519] .....	390
Mains breaker closing in manual mode [4521] .....	390
Stop horn [4530] .....	390
Led test [4580] .....	391
Test mode request [4590] .....	391
<b>LIST OF OUTPUTS .....</b>	<b>392</b>
<b>Commands .....</b>	<b>392</b>
Horn [4663] .....	392
Mains breaker close [4676] .....	392
Mains breaker open [4678] .....	392
1st non essential trip [4689] .....	392
2nd non essential trip [4690] .....	392
3rd non essential trip [4691] .....	392
4th non essential trip [4692] .....	392
5th non essential trip [4693] .....	392
Unload breaker n°1 [4721] .....	392
Unload breaker n°2 [4722] .....	393
Unload breaker n°3 [4723] .....	393
Unload breaker n°4 [4724] .....	393
Unload breaker n°5 [4725] .....	393
Unload breaker n°6 [4726] .....	393
Unload breaker n°7 [4727] .....	393
Unload breaker n°8 [4728] .....	393
Unload breaker n°9 [4729] .....	393
Unload breaker n°10 [4730] .....	393

# OPERATOR MANUAL

Faults reset [4737] .....	394
<b>Bus .....</b>	<b>395</b>
Power plant ready [4670] .....	395
<b>Mains .....</b>	<b>396</b>
Fail to close mains breaker [4157] .....	396
Fail to open mains breaker [4158] .....	396
Mains breaker open suddenly [4159] .....	396
Mains breaker close suddenly [4171] .....	396
Mains breaker state [4651] .....	396
Bus/Mains voltage presence [4703] .....	396
<b>Inputs/outputs .....</b>	<b>397</b>
Input 1 (Customisable) [250] .....	397
Input 2 (Customisable) [251] .....	397
Input 3 (Customisable) [252] .....	397
Input 4 (Customisable) [253] .....	398
Input 5 (Customisable) [254] .....	398
Input 6 (Customisable) [255] .....	398
Input 7 (Customisable) [256] .....	399
Input 8 (Customisable) [257] .....	399
Input 9 (Customisable) [258] .....	399
Analog 1 (Customisable) [259] .....	399
Analog 2 (Customisable) [260] .....	399
Analog 3 (Customisable) [261] .....	400
Physical status of digital input 1 [953.0] .....	400
Physical status of digital input 2 [953.1] .....	400
Physical status of digital input 3 [953.2] .....	400
Physical status of digital input 4 [953.3] .....	400
Physical status of digital input 5 [953.4] .....	400
Physical status of digital input 6 [953.5] .....	400
Physical status of digital input 7 [953.6] .....	400
Physical status of digital input 8 [953.7] .....	400
Physical status of digital input 9 [953.8] .....	401
Output 1 (Customisable) [4350] .....	401
Output 2 (Customisable) [4351] .....	401
Output 3 (Customisable) [4352] .....	401
Output 4 (Customisable) [4353] .....	401
Output 5 (Customisable) [4354] .....	401
Output 6 (Customisable) [4355] .....	401
Relay 1 (Customisable) [4356] .....	401
Relay 2 (Customisable) [4357] .....	401
<b>I/O CAN bus expansion .....</b>	<b>402</b>
CANopen DI 1 (Customisable) [800] .....	402
CANopen DI 2 (Customisable) [801] .....	402

# OPERATOR MANUAL

CANopen DI 3 (Customisable) [802] .....	402
CANopen DI 4 (Customisable) [803] .....	402
CANopen DI 5 (Customisable) [804] .....	402
CANopen DI 6 (Customisable) [805] .....	402
CANopen DI 7 (Customisable) [806] .....	402
CANopen DI 8 (Customisable) [807] .....	402
CANopen DI 9 (Customisable) [808] .....	402
CANopen DI 10 (Customisable) [809] .....	402
CANopen DI 11 (Customisable) [810] .....	403
CANopen DI 12 (Customisable) [811] .....	403
CANopen DI 13 (Customisable) [812] .....	403
CANopen DI 14 (Customisable) [813] .....	403
CANopen DI 15 (Customisable) [814] .....	403
CANopen DI 16 (Customisable) [815] .....	403
CANopen DI 17 (Customisable) [816] .....	403
CANopen DI 18 (Customisable) [817] .....	403
CANopen DI 19 (Customisable) [818] .....	403
CANopen DI 20 (Customisable) [819] .....	403
CANopen DI 21 (Customisable) [820] .....	403
CANopen DI 22 (Customisable) [821] .....	404
CANopen DI 23 (Customisable) [822] .....	404
CANopen DI 24 (Customisable) [823] .....	404
CANopen DI 25 (Customisable) [824] .....	404
CANopen DI 26 (Customisable) [825] .....	404
CANopen DI 27 (Customisable) [826] .....	404
CANopen DI 28 (Customisable) [827] .....	404
CANopen DI 29 (Customisable) [828] .....	404
CANopen DI 30 (Customisable) [829] .....	404
CANopen DI 31 (Customisable) [830] .....	404
CANopen DI 32 (Customisable) [831] .....	404
CANopen DI 33 (Customisable) [1250] .....	405
CANopen DI 34 (Customisable) [1251] .....	405
CANopen DI 35 (Customisable) [1252] .....	405
CANopen DI 36 (Customisable) [1253] .....	405
CANopen DI 37 (Customisable) [1254] .....	405
CANopen DI 38 (Customisable) [1255] .....	405
CANopen DI 39 (Customisable) [1256] .....	405
CANopen DI 40 (Customisable) [1257] .....	405
CANopen DI 41 (Customisable) [1258] .....	405
CANopen DI 42 (Customisable) [1259] .....	405
CANopen DI 43 (Customisable) [1260] .....	405
CANopen DI 44 (Customisable) [1261] .....	406
CANopen DI 45 (Customisable) [1262] .....	406

# OPERATOR MANUAL

CANopen DI 46 (Customisable) [1263]	406
CANopen DI 47 (Customisable) [1264]	406
CANopen DI 48 (Customisable) [1265]	406
CANopen DI 49 (Customisable) [1266]	406
CANopen DI 50 (Customisable) [1267]	406
CANopen DI 51 (Customisable) [1268]	406
CANopen DI 52 (Customisable) [1269]	406
CANopen DI 53 (Customisable) [1270]	406
CANopen DI 54 (Customisable) [1271]	406
CANopen DI 55 (Customisable) [1272]	407
CANopen DI 56 (Customisable) [1273]	407
CANopen DI 57 (Customisable) [1274]	407
CANopen DI 58 (Customisable) [1275]	407
CANopen DI 59 (Customisable) [1276]	407
CANopen DI 60 (Customisable) [1277]	407
CANopen DI 61 (Customisable) [1278]	407
CANopen DI 62 (Customisable) [1279]	407
CANopen DI 63 (Customisable) [1280]	407
CANopen DI 64 (Customisable) [1281]	407
CANopen DO 1 (Customisable) [4751]	407
CANopen DO 2 (Customisable) [4752]	408
CANopen DO 3 (Customisable) [4753]	408
CANopen DO 4 (Customisable) [4754]	408
CANopen DO 5 (Customisable) [4755]	408
CANopen DO 6 (Customisable) [4756]	408
CANopen DO 7 (Customisable) [4757]	408
CANopen DO 8 (Customisable) [4758]	408
CANopen DO 9 (Customisable) [4759]	408
CANopen DO 10 (Customisable) [4760]	408
CANopen DO 11 (Customisable) [4761]	408
CANopen DO 12 (Customisable) [4762]	408
CANopen DO 13 (Customisable) [4763]	409
CANopen DO 14 (Customisable) [4764]	409
CANopen DO 15 (Customisable) [4765]	409
CANopen DO 16 (Customisable) [4766]	409
CANopen DO 17 (Customisable) [4767]	409
CANopen DO 18 (Customisable) [4768]	409
CANopen DO 19 (Customisable) [4769]	409
CANopen DO 20 (Customisable) [4770]	409
CANopen DO 21 (Customisable) [4771]	409
CANopen DO 22 (Customisable) [4772]	409
CANopen DO 23 (Customisable) [4773]	409
CANopen DO 24 (Customisable) [4774]	410

# OPERATOR MANUAL

CANopen DO 25 (Customisable) [4775]	410
CANopen DO 26 (Customisable) [4776]	410
CANopen DO 27 (Customisable) [4777]	410
CANopen DO 28 (Customisable) [4778]	410
CANopen DO 29 (Customisable) [4779]	410
CANopen DO 30 (Customisable) [4780]	410
CANopen DO 31 (Customisable) [4781]	410
CANopen DO 32 (Customisable) [4782]	410
CANopen DO 33 (Customisable) [5100]	410
CANopen DO 34 (Customisable) [5101]	410
CANopen DO 35 (Customisable) [5102]	411
CANopen DO 36 (Customisable) [5103]	411
CANopen DO 37 (Customisable) [5104]	411
CANopen DO 38 (Customisable) [5105]	411
CANopen DO 39 (Customisable) [5106]	411
CANopen DO 40 (Customisable) [5107]	411
CANopen DO 41 (Customisable) [5108]	411
CANopen DO 42 (Customisable) [5109]	411
CANopen DO 43 (Customisable) [5110]	411
CANopen DO 44 (Customisable) [5111]	411
CANopen DO 45 (Customisable) [5112]	411
CANopen DO 46 (Customisable) [5113]	412
CANopen DO 47 (Customisable) [5114]	412
CANopen DO 48 (Customisable) [5115]	412
CANopen DO 49 (Customisable) [5116]	412
CANopen DO 50 (Customisable) [5117]	412
CANopen DO 51 (Customisable) [5118]	412
CANopen DO 52 (Customisable) [5119]	412
CANopen DO 53 (Customisable) [5120]	412
CANopen DO 54 (Customisable) [5121]	412
CANopen DO 55 (Customisable) [5122]	412
CANopen DO 56 (Customisable) [5123]	412
CANopen DO 57 (Customisable) [5124]	413
CANopen DO 58 (Customisable) [5125]	413
CANopen DO 59 (Customisable) [5126]	413
CANopen DO 60 (Customisable) [5127]	413
CANopen DO 61 (Customisable) [5128]	413
CANopen DO 62 (Customisable) [5129]	413
CANopen DO 63 (Customisable) [5130]	413
CANopen DO 64 (Customisable) [5131]	413
<b>Power Plant</b>	<b>414</b>
Generator No.1 circuit breaker position [562.0]	414
Generator No.2 circuit breaker position [562.1]	414

## OPERATOR MANUAL

Generator No.3 circuit breaker position [562.2] .....	414
Generator No.4 circuit breaker position [562.3] .....	414
Generator No.5 circuit breaker position [562.4] .....	414
Generator No.6 circuit breaker position [562.5] .....	414
Generator No.7 circuit breaker position [562.6] .....	414
Generator No.8 circuit breaker position [562.7] .....	414
Generator No.9 circuit breaker position [562.8] .....	414
Generator No.10 circuit breaker position [562.9] .....	414
Generator No.11 circuit breaker position [562.10] .....	415
Generator No.12 circuit breaker position [562.11] .....	415
Generator No.13 circuit breaker position [562.12] .....	415
Generator No.14 circuit breaker position [562.13] .....	415
Generator No.15 circuit breaker position [562.14] .....	415
Generator No.16 circuit breaker position [562.15] .....	415
Generator No.17 circuit breaker position [563.0] .....	415
Generator No.18 circuit breaker position [563.1] .....	415
Generator No.19 circuit breaker position [563.2] .....	415
Generator No.20 circuit breaker position [563.3] .....	415
Generator No.21 circuit breaker position [563.4] .....	415
Generator No.22 circuit breaker position [563.5] .....	416
Generator No.23 circuit breaker position [563.6] .....	416
Generator No.24 circuit breaker position [563.7] .....	416
Generator No.25 circuit breaker position [563.8] .....	416
Generator No.26 circuit breaker position [563.9] .....	416
Generator No.27 circuit breaker position [563.10] .....	416
Generator No.28 circuit breaker position [563.11] .....	416
Generator No.29 circuit breaker position [563.12] .....	416
Generator No.30 circuit breaker position [563.13] .....	416
Generator No.31 circuit breaker position [563.14] .....	416
Generator No.32 circuit breaker position [563.15] .....	416
Mains/tie breaker No.1 circuit breaker position [976.0] .....	417
Mains/tie breaker No.2 circuit breaker position [976.1] .....	417
Mains/tie breaker No.3 circuit breaker position [976.2] .....	417
Mains/tie breaker No.4 circuit breaker position [976.3] .....	417
Mains/tie breaker No.5 circuit breaker position [976.4] .....	417
Mains/tie breaker No.6 circuit breaker position [976.5] .....	417
Mains/tie breaker No.7 circuit breaker position [976.6] .....	417
Mains/tie breaker No.8 circuit breaker position [976.7] .....	418
Mains/tie breaker No.9 circuit breaker position [976.8] .....	418
Mains/tie breaker No.10 circuit breaker position [976.9] .....	418
Mains/tie breaker No.11 circuit breaker position [976.10] .....	418
Mains/tie breaker No.12 circuit breaker position [976.11] .....	418
Mains/tie breaker No.13 circuit breaker position [976.12] .....	418



## OPERATOR MANUAL

Mains/tie breaker No.14 circuit breaker position [976.13] .....	418
Mains/tie breaker No.15 circuit breaker position [976.14] .....	419
Mains/tie breaker No.16 circuit breaker position [976.15] .....	419
Mains/tie breaker No.17 circuit breaker position [977.0] .....	419
Mains/tie breaker No.18 circuit breaker position [977.1] .....	419
Mains/tie breaker No.19 circuit breaker position [977.2] .....	419
Mains/tie breaker No.20 circuit breaker position [977.3] .....	419
Mains/tie breaker No.21 circuit breaker position [977.4] .....	419
Mains/tie breaker No.22 circuit breaker position [977.5] .....	420
Mains/tie breaker No.23 circuit breaker position [977.6] .....	420
Mains/tie breaker No.24 circuit breaker position [977.7] .....	420
Mains/tie breaker No.25 circuit breaker position [977.8] .....	420
Mains/tie breaker No.26 circuit breaker position [977.9] .....	420
Mains/tie breaker No.27 circuit breaker position [977.10] .....	420
Mains/tie breaker No.28 circuit breaker position [977.11] .....	420
Mains/tie breaker No.29 circuit breaker position [977.12] .....	421
Mains/tie breaker No.30 circuit breaker position [977.13] .....	421
Mains/tie breaker No.31 circuit breaker position [977.14] .....	421
Mains/tie breaker No.32 circuit breaker position [977.15] .....	421
Mains presence on the common bus bar [4032] .....	421
<b>Bus protections .....</b>	<b>422</b>
Fail to synchronize [4051] .....	422
Mismatch rotophases level 1 [4053.0] .....	422
Mismatch rotophases level 2 [4053.1] .....	422
Bus over frequency level 1 [4250.0] .....	422
Bus over frequency level 2 [4250.1] .....	422
Bus under frequency level 1 [4251.0] .....	422
Bus under frequency level 2 [4251.1] .....	422
Bus over voltage level 1 [4252.0] .....	422
Bus over voltage level 2 [4252.1] .....	422
Bus under voltage level 1 [4253.0] .....	422
Bus under voltage level 2 [4253.1] .....	423
Bus minimum KW level 1 [4254.0] .....	423
Bus minimum KW level 2 [4254.1] .....	423
Bus maximum KW level 1 [4255.0] .....	423
Bus maximum KW level 2 [4255.1] .....	423
Bus reverse KW level 1 [4256.0] .....	423
Bus reverse KW level 2 [4256.1] .....	423
Bus minimum KVAR level 1 [4257.0] .....	423
Bus minimum KVAR level 2 [4257.1] .....	423
Bus maximum KVAR level 1 [4258.0] .....	423
Bus maximum KVAR level 2 [4258.1] .....	423
Bus reverse KVAR level 1 [4259.0] .....	424

## OPERATOR MANUAL

Bus reverse KVAR level 2 [4259.1] .....	424
Bus maximum current level 1 [4260.0] .....	424
Bus maximum current level 2 [4260.1] .....	424
Bus short-circuit level 1 [4262.0] .....	424
Bus short-circuit level 2 [4262.1] .....	424
Bus voltage unbalance level 1 [4268.0] .....	424
Bus voltage unbalance level 2 [4268.1] .....	424
Not enough genset available level 1 [4270.0] .....	424
Not enough genset available level 2 [4270.1] .....	424
No genset available [4271] .....	424
Bus rotophase level 1 [4272.0] .....	425
Bus rotophase level 2 [4272.1] .....	425
<b>Mains protections .....</b>	<b>426</b>
Mains over frequency level 1 [4300.0] .....	426
Mains over frequency level 2 [4300.1] .....	426
Mains under frequency level 1 [4301.0] .....	426
Mains under frequency level 2 [4301.1] .....	426
Mains over voltage level 1 [4302.0] .....	426
Mains over voltage level 2 [4302.1] .....	426
Mains under voltage level 1 [4303.0] .....	426
Mains under voltage level 2 [4303.1] .....	426
Mains minimum KW level 1 [4304.0] .....	426
Mains minimum KW level 2 [4304.1] .....	426
Mains maximum KW level 1 [4305.0] .....	427
Mains maximum KW level 2 [4305.1] .....	427
Mains reverse KW level 1 [4306.0] .....	427
Mains reverse KW level 2 [4306.1] .....	427
Mains minimum KVAR level 1 [4307.0] .....	427
Mains minimum KVAR level 2 [4307.1] .....	427
Mains maximum KVAR level 1 [4308.0] .....	427
Mains maximum KVAR level 2 [4308.1] .....	427
Mains reverse KVAR level 1 [4309.0] .....	427
Mains reverse KVAR level 2 [4309.1] .....	427
Vector jump level 1 [4310.0] .....	427
Vector jump level 2 [4310.1] .....	428
df/dt level 1 [4311.0] .....	428
df/dt level 2 [4311.1] .....	428
Mains voltage unbalance level 1 [4314.0] .....	428
Mains voltage unbalance level 2 [4314.1] .....	428
Bus current unbalance level 1 [4316.0] .....	428
Bus current unbalance level 2 [4316.1] .....	428
Mains rotophase level 1 [4318.0] .....	428
Mains rotophase level 2 [4318.1] .....	428

<b>Other protections</b> .....	<b>429</b>
Battery minimum voltage level 1 [4202.0] .....	429
Battery minimum voltage level 2 [4202.1] .....	429
Battery maximum voltage level 1 [4203.0] .....	429
Battery maximum voltage level 2 [4203.1] .....	429
<b>Communication</b> .....	<b>430</b>
Controller communication fault [600] .....	430
Missing GENSYS COMPACT PRIME [605] .....	430
Missing MASTER COMPACT or BTB COMPACT [608] .....	430
Missing HYBRID COMPACT [612] .....	430
Missing BAT COMPACT [613] .....	430
Modbus server (Customisable) [904] .....	430
CANopen fault [4750] .....	430
<b>Statuses</b> .....	<b>431</b>
Phase sequence match [306] .....	431
Voltage match [307] .....	431
Frequency match [308] .....	431
Phase match [309] .....	431
Synch check relay OK [310] .....	431
Production request [4007] .....	431
Mains electrical fault summary [4657] .....	431
Alarms summary [4658] .....	431
Soft shut down summary [4659] .....	431
Default LED [4664] .....	432
Alarm LED [4665] .....	432
Auto mode LED [4666] .....	432
Test mode LED [4667] .....	432
Manu mode LED [4668] .....	432
Bus LED [4669] .....	432
Protection validation [4681] .....	432
Mains failure summary [4731] .....	432
Mains breaker LED [4735] .....	432
Mains LED [4736] .....	432
<b>Hysteresis</b> .....	<b>433</b>
Hysteresis 1 output [4710] .....	433
Hysteresis 2 output [4711] .....	433
Hysteresis 3 output [4712] .....	433
Hysteresis output activation on DI1 [4713] .....	433
Hysteresis output activation on DI2 [4714] .....	433
Hysteresis output activation on DI3 [4715] .....	433
Hysteresis output activation on DI4 [4716] .....	433
Hysteresis output activation on DI5 [4717] .....	433
Hysteresis output activation on DI6 [4718] .....	433

## OPERATOR MANUAL

Hysteresis output activation on DI7 [4719] .....	434
Hysteresis output activation on DI8 [4720] .....	434
<b>Remote buttons .....</b>	<b>435</b>
Shift button [951.0] .....	435
Right arrow button [951.1] .....	435
Down arrow button [951.2] .....	435
Left arrow button [951.3] .....	435
Up arrow button [951.4] .....	435
Enter button [951.5] .....	435
Esc button [951.6] .....	435
Fault/Alarm/info button [951.7] .....	435
Mains breaker button [951.8] .....	435
Stop button [951.10] .....	435
Start button [951.11] .....	436
Man button [951.12] .....	436
Test button [951.13] .....	436
Auto button [951.14] .....	436

**DYNAMIC**

**SYNCHRONIZATION PID**

<b>Variable</b>	Gain Synch [2904]
<b>Unit</b>	-
<b>Init value</b>	10
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	This variable sets the global Gain of phase synchronization PID. The global Gain is the multiplier of the proportional, integral and derivative values. A too high value will cause a pumping, a too low value will cause a low reaction, We can compare it to a nervousness Gain.

<b>Variable</b>	Proport. Synch [2905]
<b>Unit</b>	-
<b>Init value</b>	10
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	<p>This parameter should only be changed if the system has not been correctly regulated by changing the Gain alone. In this case, refer to the chapter "Control Loop PID" in the technical documentation of your product for a step-by-step method of adjustment.</p> <p>As a general rule :</p> <ul style="list-style-type: none"> <li>- G must remain fixed, neither too low nor too high, it multiplies the 3 other components</li> <li>- Set P, I and D to 0</li> <li>- Increase P until you have a system that corrects quickly enough, without major instabilities. In most cases, an error persists between the measurement and the setpoint (value to be reached).</li> <li>- Increase I to correct this persistent error over time.</li> <li>- Increase D to reduce the oscillations, if they exist.</li> </ul> <p>Phase regulation is active during synchronization if the frequency of the generator(s) is close to the frequency setpoint (value to be reached for coupling). When the generator frequency is too far from the frequency setpoint, the phase regulation is not active, only the frequency regulation is.</p> <p>Therefore, to correctly adjust the phase regulation, it is necessary to have a frequency on the generator close to the frequency setpoint, by modifying the offset for example, or by having correctly adjusted the frequency regulation beforehand.</p>

<b>Variable</b>	Integral Synch [2906]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	<p>This parameter should only be changed if the system has not been correctly regulated by changing the Gain alone. In this case, refer to the chapter "Control Loop PID" in the technical documentation of your product for a step-by-step method of adjustment.</p> <p>As a general rule :</p> <ul style="list-style-type: none"> <li>- G must remain fixed, neither too low nor too high, it multiplies the 3 other components</li> <li>- Set P, I and D to 0</li> <li>- Increase P until you have a system that corrects quickly enough, without major instabilities. In most cases, an error persists between the measurement and the setpoint (value to be reached).</li> <li>- Increase I to correct this persistent error over time.</li> <li>- Increase D to reduce the oscillations, if they exist.</li> </ul> <p>Phase regulation is active during synchronization if the frequency of the generator(s) is close to the frequency setpoint (value to be reached for coupling). When the generator frequency is too far from the frequency setpoint, the phase regulation is not active, only the frequency regulation is.</p> <p>Therefore, to correctly adjust the phase regulation, it is necessary to have a frequency on the generator close to the frequency setpoint, by modifying the offset for example, or by having correctly adjusted the frequency regulation beforehand.</p>

<b>Variable</b>	Derivate Synch [2907]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	<p>This parameter should only be changed if the system has not been correctly regulated by changing the Gain alone. In this case, refer to the chapter "Control Loop PID" in the technical documentation of your product for a step-by-step method of adjustment.</p> <p>As a general rule :</p> <ul style="list-style-type: none"> <li>- G must remain fixed, neither too low nor too high, it multiplies the 3 other components</li> <li>- Set P, I and D to 0</li> <li>- Increase P until you have a system that corrects quickly enough, without major instabilities. In most cases, an error persists between the measurement and the setpoint (value to be reached).</li> <li>- Increase I to correct this persistent error over time.</li> <li>- Increase D to reduce the oscillations, if they exist.</li> </ul> <p>Phase regulation is active during synchronization if the frequency of the generator(s) is close to the frequency setpoint (value to be reached for coupling). When the generator frequency is too far from the frequency setpoint, the phase regulation is not active, only the frequency regulation is.</p> <p>Therefore, to correctly adjust the phase regulation, it is necessary to have a frequency on the generator close to the frequency setpoint, by modifying the offset for example, or by having correctly adjusted the frequency regulation beforehand.</p>

## GENERAL

### APPLICATION

#### General

<b>Variable</b>	My number [2001]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	32
<b>Description</b>	<p>This parameter is used to define the product identifier for communication between products.</p> <p>It must be unique for each controller 'type':</p> <ul style="list-style-type: none"> <li>- Number GENSYS COMPACT from first to last (32 maximum)</li> <li>- Number MASTER COMPACT, MASTER COMPACT 1B and BTB COMPACT from first to last (32 maximum)</li> <li>- Number HYBRID COMPACT from first to last (32 maximum)</li> <li>- Number BAT COMPACT from first to last (max. 32)</li> </ul>

<b>Variable</b>	Number of GENSYS COMPACT PRIME [2000]
<b>Unit</b>	-
<b>Init value</b>	2
<b>Min value</b>	0
<b>Max value</b>	32
<b>Description</b>	Number of GENSYS COMPACT PRIME on the power plant. This parameter is used for the CAN communication between products.

<b>Variable</b>	Number of MASTER COMPACT/BTB COMPACT [2017]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	32
<b>Description</b>	Number of MASTER COMPACT / MASTER COMPACT 1B / BTB (combined) on the power plant. This parameter is used for the CAN communication between products.



## OPERATOR MANUAL

<b>Variable</b>	Number of HYBRID COMPACT [2025]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32
<b>Description</b>	Number of HYBRID COMPACT on the power plant. This parameter is used for the CAN communication between products.

<b>Variable</b>	Number of BAT COMPACT [2030]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Number of BAT COMPACT on the power plant. This parameter is used for the CAN communication between products.

<b>Variable</b>	Type of application [2005]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Change over 1: No break change over 2: Permanent
<b>Description</b>	This parameter is used to select the mode of operation between the generator(s) and the mains. 3 values can be selected: - Change over : Load transfer between the generator(s) and the mains without synchronization/paralleling. - No break change over : Load transfer between the generator(s) and the mains with synchronization/paralleling/progressive power transfer. - Permanent: Synchronization/paralleling to the mains permanently. This mode has to be selected to set a fixed power to the mains (Peak shaving) or to set a fixed power to the generator (Base load). Caution: In this mode of operation, the activation of the df/dt protection is strongly recommended to detect the loss of the mains during permanent paralleling.

## OPERATOR MANUAL

<b>Variable</b>	Type of regulation [2006]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Peak shaving 1: Base load GE
<b>Description</b>	This parameter is used to select the type of consignment when the generator(s) is(are) permanently paralleled to the mains. 2 values can be selected: - Peak shaving : Fixed active power on the mains, the active power of the generator(s) changes with the load. If the generator(s) reach(s) the high limit, the mains consignment will no longer be respected. - Base load : Fixed active power on the generator(s), the active power of the mains changes with the load.

<b>Variable</b>	Connection type [2003]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	0: Monophase 1: Biphase 180° 2: Triphase 120° (3 or 4 wires) 3: Triphase L1-N-L2 4: Triphase L2-N-L3 5: Triphase L3-N-L1
<b>Description</b>	This parameter is used to select the voltage system that will be applied to all the voltage sources managed by the product. 6 values can be selected: - Single phase: Connection of one active phase and one neutral. Connect the voltages on terminals L1-N. Connect the currents on I1-IN. - Two phase 180°: Connection of 2 active phases (and an optional neutral). Connect the voltages to terminals L1-L3 (and optional N). Connect the currents to I1-I3-IN. If the neutral is not connected to the voltage terminal block, the product will calculate a virtual neutral by itself. - Three-phase 120°: Connection of 3 active phases (and an optional neutral). Connect the voltages on terminals L1-L2-L3 (and optional N). Connect the currents to I1-I2-I3-IN. If the neutral is not connected to the voltage terminal block, the product will calculate a virtual neutral by itself. - Three-phase L1-N-L2: Connection of 3 active phases and a neutral. High leg on L3, neutral between L1 and L2. The neutral must be connected. - Three-phase L2-N-L3: Connection of 3 active phases and a neutral. High leg on L1, neutral between L2 and L3. The neutral must be connected. - Three-phase L3-N-L1: Connection of 3 active phases and a neutral. High leg on L2, neutral between L3 and L1. The neutral must be connected.

## Mode

<b>Variable</b>	Power on mode [2012]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Manual 1: Test 2: Auto
<b>Description</b>	This parameter is used to select the mode of the product when the power supply is applied. 3 values can be used : - Manual : The product will switch-on on Manual mode - Test : The product will switch-on on Test mode - Auto : The product will switch-on on Auto mode

<b>Variable</b>	Limited time test mode [2015]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter is used to activate an operation delay in test mode. During this timer, the test mode is activated. At the end of this timer, the product will be forced on auto mode and the generator will stop if there is no active remote start.

<b>Variable</b>	Test mode duration [2016]
<b>Unit</b>	s
<b>Init value</b>	600
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	This parameter allows you to set the time for which the product will remain in test mode if the limited time test mode has been activated.

## Synchronization & Load Sharing only

<b>Variable</b>	Synchronization & Load sharing only [2024]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	<p>This parameter determines if the product should process only synchronization and kW/kVAR management. 2 values can be selected:</p> <ul style="list-style-type: none"> <li>- No: Standard operation of the product with management of the faults when the feedback of the circuit breakers is not in conformity with the orders of the product, management of the engine.</li> <li>- Yes: Circuit-breaker faults are not managed, which leaves more flexibility in sequences when circuit-breaker close/open commands are given by a PLC. The engine sequence is not managed. The product will start the synchronization sequence if voltage and frequency are between 95% and 105% of nominal and a digital input configured as 'Remote start on load' is activated. The kW management function is activated as soon as a digital input configured as 'Generator breaker feedback' is activated. In this operating mode, the product can only be used in automatic mode.</li> </ul>

## TIMERS

### Start sequence

<b>Variable</b>	Stabilization timer on can fault [3469]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This delay corresponds to the time the MASTER waits before closing the bus breaker in case of a CAN fault and after the bus frequency and voltage have reached their nominal values

<b>Variable</b>	Delay before activation of the protections [2004]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Waiting time before activating protections once the power plant is ready.

### Ramp timer

<b>Variable</b>	Load ramp timer [2853]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	1600.0
<b>Description</b>	<p>This setpoint adjusts the load ramp timer, for load sharing or mains paralleling mode.</p> <p>In case of a battery it adjusts the discharge ramp timer.</p> <p>100 % of this timer corresponds to transfer 100% of generator/power plant/battery nominal kW.</p> <p>For a ramp, to transfer, from 10% to 60% of nominal kW, the time will be 50% of the set timer.</p>

<b>Variable</b>	Unload ramp timer [2856]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	1600.0
<b>Description</b>	<p>This setpoint adjusts the unload ramp timer, for load sharing or mains paralleling mode.</p> <p>In case of a battery it adjusts the charge ramp timer.</p> <p>100 % of this timer corresponds to transfer 100% of generator/power plant nominal kW.</p> <p>For a ramp, to transfer, from 60% to 10% of nominal kW, the time will be 50% of the set timer.</p>

## Others

<b>Variable</b>	Horn timer [2478]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	<p>Duration of activation of the horn which is activated each time an alarm or fault occurs on the product. The value 0 means that the horn will sound until the alarms/faults on the product are manually acknowledged.</p>

## Mains timers

<b>Variable</b>	Mains back timer [2009]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	<p>Waiting time between the moment when the mains returns (no longer any protection configured as mains failure is active) and the moment when the sequence to return to the mains is started.</p>

## OPERATOR MANUAL

<b>Variable</b>	Change over timer [2007]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	999.9
<b>Description</b>	This timer corresponds to the waiting time between the opening of the generator/bus breaker and the closing of the mains breaker or vice versa.

## CAN

### CAN 1

<b>Variable</b>	CAN 1 baud rate [3050]
<b>Unit</b>	-
<b>Init value</b>	125
<b>List</b>	125: 125 kBit/s 250: 250 kBit/s 500: 500 kBit/s 1000: 1000 kBit/s
<b>Description</b>	CAN bus speed 1: - Used for communication between products with the proprietary CRE protocol (Only for communicating products). - Used for the connection of inputs/outputs with the CANopen protocol when the MTU MDEC protocol is activated on CAN 2 (Only for products with engine control). Higher speed results in a reduction of the maximum bus distance.

<b>Variable</b>	Inhibition remote start from CAN [2018]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Allows a unit to ignore a remote start request coming from another product connected via CAN



## CAN 2

<b>Variable</b>	CAN 2 baud rate [3051]
<b>Unit</b>	-
<b>Init value</b>	125
<b>List</b>	125: 125 kBit/s 250: 250 kBit/s 500: 500 kBit/s 1000: 1000 kBit/s
<b>Description</b>	<p>CAN bus speed 2:</p> <ul style="list-style-type: none"> <li>- Used for connecting inputs/outputs with the CANopen protocol (Except when using the MDEC protocol, in which case the CANopen inputs/outputs must be connected to CAN 1). If the J1939 protocol is disabled, this parameter determines the communication speed of the CAN 2 bus.</li> <li>- Used for the communication between the product and the ECU with the J1939 protocol (Only for products with engine control). When the J1939 protocol is enabled, the CAN 2 bus speed is forced to 250kb/s. This parameter will not impact the bus speed.</li> <li>- Used for the communication between the product and the ECU with the MDEC protocol (Only for products with engine control). When the MDEC protocol is enabled, the CAN 2 bus speed is forced to 125kb/s. This parameter will not impact the bus speed.</li> </ul> <p>A higher speed results in a reduction of the maximum bus distance.</p>

## Segment

<b>Variable</b>	Segment number [2020]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	33
<b>Description</b>	Segment number of the unit

## EVENTS

<b>Variable</b>	Record power up [8300]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records controller power up event

<b>Variable</b>	Record mains status [8302]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records mains failure and mains back events

<b>Variable</b>	Record circuit breaker status (Open/Closed) [8303]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records breaker closing and opening events

<b>Variable</b>	Record operating mode [8304]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records controller mode switching events (automatic, test, manual)

## METERS

<b>Variable</b>	Mains kWh [120]
<b>Unit</b>	kWh
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Mains kWh (lower bytes)

<b>Variable</b>	Mains kVARh energy [122]
<b>Unit</b>	kVARh
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Mains kVARH (lower bytes)

## ELECTRICAL

### BUS

#### General

<b>Variable</b>	Power plant measure [2110]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: CAN bus 1: CT
<b>Description</b>	0 : The bus power is calculated by summing the generator powers (CAN bus) / 1 : The bus power is calculated using the current inputs (CT)

<b>Variable</b>	Nominal active power [2111]
<b>Unit</b>	kW
<b>Init value</b>	1000
<b>Min value</b>	1
<b>Max value</b>	32500
<b>Description</b>	This setpoint adjusts the kW nominal power of the power plant

<b>Variable</b>	Nominal reactive power [2112]
<b>Unit</b>	kVAR
<b>Init value</b>	730
<b>Min value</b>	1
<b>Max value</b>	32500
<b>Description</b>	This setpoint adjusts the kVAR nominal power of the power plant

## OPERATOR MANUAL

<b>Variable</b>	Nominal voltage [2102]
<b>Unit</b>	V
<b>Init value</b>	400
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	<p>This parameter is used to set the nominal voltage:</p> <ul style="list-style-type: none"> <li>- Three-phase and two-phase: Enter a phase-to-phase voltage.</li> <li>- Single-phase: Enter a phase-to-neutral voltage.</li> </ul> <p>All the protections based on the voltage as well as the control loops are calculated as a percentage of this value. For low voltage (400VAC, 440VAC, 480VAC, etc...) or high voltage (20.000VAC, 33.000VAC, etc...) applications, this variable must be adjusted.</p>

<b>Variable</b>	Nominal frequency [2153]
<b>Unit</b>	Hz
<b>Init value</b>	50.00
<b>Min value</b>	0.00
<b>Max value</b>	100.00
<b>Description</b>	<p>This parameter is used to set the nominal frequency.</p> <p>All the protections based on the frequency as well as the control loops are calculated as a percentage of this value. For 50 or 60 Hz applications, this variable must be adjusted.</p>

<b>Variable</b>	PT ratio [2100]
<b>Unit</b>	-
<b>Init value</b>	1.00
<b>Min value</b>	0.00
<b>Max value</b>	655.35
<b>Description</b>	<p>This parameter allows you to set the ratio between the voltage present on the busbar and the voltage connected to the module.</p> <p>Example: Busbar voltage 20.000Vac / Voltage connected to the module 100 Vac: PT ratio value = <math>20.000/100 = 200</math>.</p> <p>This PT ratio can be calculated or is indicated on the measuring transformers.</p>

## OPERATOR MANUAL

<b>Variable</b>	CT ratio [2101]
<b>Unit</b>	-
<b>Init value</b>	200.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	<p>This parameter is used to set the ratio between the current on the busbar and the current connected to the module.</p> <p>Example: Busbar current 1000A / Current connected to the module 5A: CT ratio value = <math>1000/5 = 200</math>.</p> <p>This CT ratio can be calculated or is indicated on the measuring current transformers.</p>

<b>Variable</b>	Power plant minimum number of GE [2109]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	32
<b>Description</b>	<p>This parameter defines the minimum number of generators required to consider the power plant ready.</p> <p>The controller will transfer the load as soon as the number of generators on the bus is greater than or equal to the value set in this parameter.</p>

<b>Variable</b>	Low kW active power threshold [2866]
<b>Unit</b>	%
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	100.0
<b>Description</b>	<p>This parameter allows you to define the minimum active power that the automatic system will impose on the generator.</p> <p>For example, this is the power that will be taken just after the circuit breaker is closed, before the load ramp.</p> <p>It is also the value at which the automatic system will open the circuit breaker during an unload ramp.</p> <p>This low limit protects against the risk of reverse power.</p> <p>It is recommended to set a low limit between 5 and 10% of the nominal active power.</p>

## OPERATOR MANUAL

<b>Variable</b>	High kW active power threshold [2867]
<b>Unit</b>	%
<b>Init value</b>	95.0
<b>Min value</b>	0.0
<b>Max value</b>	100.0
<b>Description</b>	<p>This parameter allows you to define the maximum active power that the automatic system will impose on the generator when paralleled to the mains.</p> <p>In the case of a permanent mode with peak shaving, if the generator/power plant reaches the high limit, the mains will take the excess load and the peak shaving setpoint will not be respected.</p> <p>It is recommended to set a high limit between 90 and 100% of the nominal active power.</p>

### Control

<b>Variable</b>	Base load Generator(s) kW setpoint [2107]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	<p>This parameter is used to set the active power setpoint of the generator/power plant when the product is configured in base load mode.</p>

<b>Variable</b>	Power factor setpoint (inductive) [2253]
<b>Unit</b>	-
<b>Init value</b>	0.80
<b>Min value</b>	0.00
<b>Max value</b>	1.00
<b>Description</b>	<p>This parameter is used to set the generator/power plant <math>\cos(\varphi)</math> set point that will be applied when paralleling to the mains.</p> <p>The imposed <math>\cos(\varphi)</math> is an inductive <math>\cos(\varphi)</math>.</p>

# MAINS

## General

<b>Variable</b>	Mains kW measure type [2155]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: CT 1: mA - Analog 1 2: mA - Analog 2 3: mA - Analog 3 4: Unused
<b>Description</b>	This parameter is used to determine how the mains active power will be measured. 5 values can be selected: - CT : The mains power will be measured with a current transformer. Earth fault protection not available. - mA - Analog 1 : The mains power will be measured with a 4-20mA converter signal connected to analog input 1. Earth fault protection available. - mA - Analog 2: The mains power will be measured with a 4-20mA converter signal connected to analog input 2. Earth fault protection available. - mA - Analog 3: The mains power will be measured with a 4-20mA converter signal connected to analog input 3. Earth fault protection available. - Not used: No measurement of mains active power. Earth fault protection available.

<b>Variable</b>	Nominal voltage [2152]
<b>Unit</b>	V
<b>Init value</b>	400
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	This parameter is used to set the nominal voltage: - Three-phase and two-phase: Enter a phase-to-phase voltage. - Single-phase: Enter a phase-to-neutral voltage.  All the protections based on the voltage are calculated as a percentage of this value. For low voltage (400VAC, 440VAC, 480VAC, etc...) or high voltage (20.000VAC, 33.000VAC, etc...) applications, this variable must be adjusted.



## OPERATOR MANUAL

<b>Variable</b>	Nominal frequency [2153]
<b>Unit</b>	Hz
<b>Init value</b>	50.00
<b>Min value</b>	0.00
<b>Max value</b>	100.00
<b>Description</b>	This parameter is used to set the nominal frequency. All the protections based on the frequency as well as the control loops are calculated as a percentage of this value. For 50 or 60 Hz applications, this variable must be adjusted.

<b>Variable</b>	PT ratio [2150]
<b>Unit</b>	-
<b>Init value</b>	1.00
<b>Min value</b>	0.00
<b>Max value</b>	655.35
<b>Description</b>	This parameter allows you to set the ratio between the voltage present on the busbar and the voltage connected to the module. Example: Busbar voltage 20.000Vac / Voltage connected to the module 100 Vac: PT ratio value = $20.000/100 = 200$ . This PT ratio can be calculated or is indicated on the measuring transformers.

<b>Variable</b>	CT ratio [2151]
<b>Unit</b>	-
<b>Init value</b>	200.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	This parameter is used to set the ratio between the current on the busbar and the current connected to the module. Example: Busbar current 1000A / Current connected to the module 5A: CT ratio value = $1000/5 = 200$ . This CT ratio can be calculated or is indicated on the measuring current transformers.

<b>Variable</b>	External MCB low kW trip [2156]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter is used to enable opening of the mains breaker on an external active power low threshold. When this parameter is enabled, the automated system will not open the mains breaker when the value of the mains active power reaches 0, but will wait for the digital input configured as 'External mains low threshold' to activate. This function can be used with an external device that measures the 3 mains currents and provides a digital output that is activated when the 3 currents are 0A.

## Setpoint

<b>Variable</b>	Peak shaving kW setpoint [2154]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	This parameter is used to set the active power setpoint of the mains when the product is configured in peak shaving mode. If you have a BAT COMPACT or a HYBRID COMPACT in your powerplant, they will try to respect this setpoint both in peak shaving AND base load.

<b>Variable</b>	Limit inverter power export [2159]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Limit the export of the power generated by the inverter to the mains.

## Mains nominal power limitation

<b>Variable</b>	Limit mains nominal power [2161]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Limit Mains nominal power

## OPERATOR MANUAL

<b>Variable</b>	Active power export limit [2162]
<b>Unit</b>	kW
<b>Init value</b>	1000
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Restrict the power supplied by the bus to the Mains.

<b>Variable</b>	Active power import limit [2160]
<b>Unit</b>	kW
<b>Init value</b>	1000
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Restrict the power supplied by the Mains to the bus.

## SYNCHRONISATION CHECK

<b>Variable</b>	Voltage acceptance [2800]
<b>Unit</b>	%
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	12.0
<b>Description</b>	Maximum voltage difference (in % of the nominal value) between the voltages on either side of the circuit breaker to allow closing.

<b>Variable</b>	Frequency acceptance [2801]
<b>Unit</b>	Hz
<b>Init value</b>	0.10
<b>Min value</b>	0.00
<b>Max value</b>	0.20
<b>Description</b>	Maximum frequency difference between the voltages on either side of the circuit breaker to allow closing.

<b>Variable</b>	Phase Angle acceptance [2802]
<b>Unit</b>	°
<b>Init value</b>	10
<b>Min value</b>	0
<b>Max value</b>	30
<b>Description</b>	Maximum phase difference between the voltages on either side of the circuit breaker to allow closing.

<b>Variable</b>	Fail to synchronize timer [2803]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time after which the product will activate an alarm if it remains in synchronization without ever being able to give the closing command. Activation of this alarm means that the synchronization control loops are incorrectly set.

## OPERATOR MANUAL

<b>Variable</b>	Action on fail to synchronize [2804]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Phase offset [2812]
<b>Unit</b>	°
<b>Init value</b>	0
<b>Min value</b>	-180
<b>Max value</b>	180
<b>Description</b>	Phase offset for synch. check relay (Ex: Dyn11)

## POWER MANAGEMENT

### Load shedding

<b>Variable</b>	Opening load on under frequency [3702]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Disabled 1: Enable
<b>Description</b>	Enables/Disables underfrequency monitoring for non-essential load shedding

<b>Variable</b>	Under frequency threshold 1 [3700]
<b>Unit</b>	%
<b>Init value</b>	96.0
<b>Min value</b>	0.0
<b>Max value</b>	100.0
<b>Description</b>	First underfrequency level

<b>Variable</b>	Under frequency threshold 2 [3701]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	100.0
<b>Description</b>	Second underfrequency level (must be lower than level 1)

<b>Variable</b>	Opening of the load on maximum kW [3705]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Disabled 1: Enable
<b>Description</b>	Enables/Disables overload monitoring for non-essential load shedding

## OPERATOR MANUAL

<b>Variable</b>	Maximum kW threshold 1 [3703]
<b>Unit</b>	%
<b>Init value</b>	95.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	First overload level

<b>Variable</b>	Maximum KW threshold 2 [3704]
<b>Unit</b>	%
<b>Init value</b>	100.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Second overload level (must be higher than level 1)

<b>Variable</b>	Timer for threshold 1 [3706]
<b>Unit</b>	s
<b>Init value</b>	6.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before first level activation (kW and Hz)

<b>Variable</b>	Timer for threshold 2 [3707]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before activation of the second level (kW and Hz). Must be lower than level 1.

<b>Variable</b>	Minimum delay between 2 openings [2861]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Minimum time between two load shedding requests

<b>Variable</b>	Action after last opening [2862]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Unload breakers

### Enable/disable unload breakers

<b>Variable</b>	Enable unload breakers [3730]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable unload breakers

### Unload breaker 1

<b>Variable</b>	Unload breaker kW 1 [3731]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°1

<b>Variable</b>	Unload breaker timer 1 [3720]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°1



## Unload breaker 2

<b>Variable</b>	Unload breaker kW 2 [3732]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°2

<b>Variable</b>	Unload breaker timer 2 [3721]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°2

## Unload breaker 3

<b>Variable</b>	Unload breaker kW 3 [3733]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°3

<b>Variable</b>	Unload breaker timer 3 [3722]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°3

### Unload breaker 4

<b>Variable</b>	Unload breaker kW 4 [3734]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°4

<b>Variable</b>	Unload breaker timer 4 [3723]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°4

### Unload breaker 5

<b>Variable</b>	Unload breaker kW 5 [3735]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°5

<b>Variable</b>	Unload breaker timer 5 [3724]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°5

## Unload breaker 6

<b>Variable</b>	Unload breaker kW 6 [3736]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°6

<b>Variable</b>	Unload breaker timer 6 [3725]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°6

## Unload breaker 7

<b>Variable</b>	Unload breaker kW 7 [3737]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°7

<b>Variable</b>	Unload breaker timer 7 [3726]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°7

### Unload breaker 8

<b>Variable</b>	Unload breaker kW 8 [3738]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°8

<b>Variable</b>	Unload breaker timer 8 [3727]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°8

### Unload breaker 9

<b>Variable</b>	Unload breaker kW 9 [3739]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°9

<b>Variable</b>	Unload breaker timer 9 [3728]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°9

**Unload breaker 10**

<b>Variable</b>	Unload breaker kW 10 [3740]
<b>Unit</b>	kW
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Active power threshold before closing the breaker of the load n°10

<b>Variable</b>	Unload breaker timer 10 [3729]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time before closing the breaker of the load n°10

## INPUTS/OUTPUTS

### DIGITAL INPUTS

#### Digital inputs

##### Input 1 (Customisable) [250]

<b>Variable</b>	Function configured on DI 1 [2700]
<b>Unit</b>	-
<b>Init value</b>	4500
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 1 associated function (Default value: Generator breaker feedback)

<b>Variable</b>	Polarity NO/NC on DI 1 [2736]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 1 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 1 [2727]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 1 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 1 [2709]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 1 activation timer

<b>Variable</b>	Timer OFF Digital Input 1 [2718]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 1 desactivation timer

### Input 2 (Customisable) [251]

<b>Variable</b>	Function configured on DI 2 [2701]
<b>Unit</b>	-
<b>Init value</b>	4502
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 2 associated function (Default value: Remote start)

<b>Variable</b>	Polarity NO/NC on DI 2 [2737]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 2 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 2 [2728]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 2 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 2 [2710]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 2 activation timer

<b>Variable</b>	Timer OFF Digital Input 2 [2719]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 2 desactivation timer

### Input 3 (Customisable) [252]

<b>Variable</b>	Function configured on DI 3 [2702]
<b>Unit</b>	-
<b>Init value</b>	4505
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 3 associated function (Default value: Emergency stop)

<b>Variable</b>	Polarity NO/NC on DI 3 [2738]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 3 (0=Normaly Open/1=Normaly Close)



<b>Variable</b>	Validity on digital input 3 [2729]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 3 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 3 [2711]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 3 activation timer

<b>Variable</b>	Timer OFF Digital Input 3 [2720]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 3 desactivation timer

#### Input 4 (Customisable) [253]

<b>Variable</b>	Function configured on DI 4 [2703]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 4 associated function (Default value: Mains breaker feedback on COMPACT MAINS )

## OPERATOR MANUAL

<b>Variable</b>	Polarity NO/NC on DI 4 [2739]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 4 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 4 [2730]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 4 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 4 [2712]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 4 activation timer

<b>Variable</b>	Timer OFF Digital Input 4 [2721]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 4 desactivation timer

**Input 5 (Customisable) [254]**

<b>Variable</b>	Function configured on DI 5 [2704]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 5 associated function

<b>Variable</b>	Polarity NO/NC on DI 5 [2740]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 5 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 5 [2731]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 5 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 5 [2713]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 5 activation timer

<b>Variable</b>	Timer OFF Digital Input 5 [2722]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 5 desactivation timer

### Input 6 (Customisable) [255]

<b>Variable</b>	Function configured on DI 6 [2705]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 6 associated function

<b>Variable</b>	Polarity NO/NC on DI 6 [2741]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 6 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 6 [2732]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 6 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 6 [2714]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 6 activation timer

<b>Variable</b>	Timer OFF Digital Input 6 [2723]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 6 desactivation timer

### Input 7 (Customisable) [256]

<b>Variable</b>	Function configured on DI 7 [2706]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 7 associated function

<b>Variable</b>	Polarity NO/NC on DI 7 [2742]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 7 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 7 [2733]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 7 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 7 [2715]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 7 activation timer

<b>Variable</b>	Timer OFF Digital Input 7 [2724]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 7 desactivation timer

### Input 8 (Customisable) [257]

<b>Variable</b>	Function configured on DI 8 [2707]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 8 associated function

## OPERATOR MANUAL

<b>Variable</b>	Polarity NO/NC on DI 8 [2743]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 8 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 8 [2734]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 8 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 8 [2716]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 8 activation timer

<b>Variable</b>	Timer OFF Digital Input 8 [2725]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 8 desactivation timer

**Input 9 (Customisable) [258]**

<b>Variable</b>	Function configured on DI 9 [2708]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 9 associated function

<b>Variable</b>	Polarity NO/NC on DI 9 [2744]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 9 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 9 [2735]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 9 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 9 [2717]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 9 activation timer



<b>Variable</b>	Timer OFF Digital Input 9 [2726]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 9 desactivation timer

## Hysteresis on digital input

### Hysteresis on digital input 1

<b>Variable</b>	Hysteresis 1 enable for digital input [2769]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	<p>This parameter enables the first hysteresis function on logic threshold to be activated.</p> <p>To do this:</p> <ul style="list-style-type: none"> <li>- Configure a digital input as 'Hysteresis low threshold DI1' and wire the hysteresis low threshold logic signal to this input.</li> <li>- Configure a digital input as 'Hysteresis high threshold DI1' and wire the hysteresis high threshold logic signal to this input.</li> <li>- Configure a digital output as 'Hysteresis output activation on DI1' and wire this output to the hysteresis control</li> <li>- Select the direction of activation/deactivation of the control</li> </ul>

<b>Variable</b>	Timer ON hysteresis 1 [2777]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 1 [2785]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

## Hysteresis on digital input 2

<b>Variable</b>	Hysteresis 2 enable for digital input [2770]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the second hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI2' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI2' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI2' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 2 [2778]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 2 [2786]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 3

<b>Variable</b>	Hysteresis 3 enable for digital input [2771]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the third hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI3' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI3' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI3' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 3 [2779]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 3 [2787]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 4

<b>Variable</b>	Hysteresis 4 enable for digital input [2772]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the fourth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI4' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI4' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI4' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 4 [2780]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 4 [2788]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 5

<b>Variable</b>	Hysteresis 5 enable for digital input [2773]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the fifth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI5' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI5' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI5' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 5 [2781]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 5 [2789]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 6

<b>Variable</b>	Hysteresis 6 enable for digital input [2774]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the sixth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI6' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI6' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI6' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 6 [2782]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 6 [2790]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 7

<b>Variable</b>	Hysteresis 7 enable for digital input [2775]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the seventh hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI7' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI7' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI7' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 7 [2783]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 7 [2791]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 8

<b>Variable</b>	Hysteresis 8 enable for digital input [2776]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the eighth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI8' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI8' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI8' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 8 [2784]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.



## OPERATOR MANUAL

<b>Variable</b>	Direction hysteresis 8 [2792]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

## DIGITAL/RELAYS OUTPUTS

### Digital outputs

#### Output 1 (Customisable) [4350]

<b>Variable</b>	Function configured DO 1 [2745]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 1 Associated function

<b>Variable</b>	Polarity NE/ND DO 1 [2751]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 1

<b>Variable</b>	Pulse length DO 1 [2761]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 1 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 01 [2793]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 1

**Output 2 (Customisable) [4351]**

<b>Variable</b>	Function configured DO 2 [2746]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 2 Associated function

<b>Variable</b>	Polarity NE/ND DO 2 [2752]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 2

<b>Variable</b>	Pulse length DO 2 [2762]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 2 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 02 [2794]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 2

**Output 3 (Customisable) [4352]**

<b>Variable</b>	Function configured DO 3 [2747]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 3 Associated function

<b>Variable</b>	Polarity NE/ND DO 3 [2753]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 3

<b>Variable</b>	Pulse length DO 3 [2763]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 3 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 03 [2795]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 3

**Output 4 (Customisable) [4353]**

<b>Variable</b>	Function configured DO 4 [2748]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 4 Associated function

<b>Variable</b>	Polarity NE/ND DO 4 [2754]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 4

<b>Variable</b>	Pulse length DO 4 [2764]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 4 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 04 [2796]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 4

**Output 5 (Customisable) [4354]**

<b>Variable</b>	Function configured DO 5 [2749]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 5 Associated function

<b>Variable</b>	Polarity NE/ND DO 5 [2755]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 5

<b>Variable</b>	Pulse length DO 5 [2765]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 5 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 05 [2797]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 5

**Output 6 (Customisable) [4355]**

<b>Variable</b>	Function configured DO 6 [2750]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 6 Associated function

<b>Variable</b>	Polarity NE/ND DO 6 [2756]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 6

<b>Variable</b>	Pulse length DO 6 [2766]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 6 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 06 [2798]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 6

## Relay outputs

### Relay 1 (Customisable) [4356]

<b>Variable</b>	Output function Relay 1 [2757]
<b>Unit</b>	-
<b>Init value</b>	4676
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Relay 1 Associated function

<b>Variable</b>	Direction NO/NC Relay 1 [2759]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Relay 1 Direction (0=Normaly Open / 1=Normaly Closed)

<b>Variable</b>	Pulse length R 1 [2767]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Relay ouput 1 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay relay 1 [8250]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of relay 1



**Relay 2 (Customisable) [4357]**

<b>Variable</b>	Output function Relay 2 [2758]
<b>Unit</b>	-
<b>Init value</b>	4678
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Relay 2 Associated function

<b>Variable</b>	Direction NO/NC Relay 2 [2760]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Relay 2 Direction (0=Normaly Open / 1=Normaly Closed)

<b>Variable</b>	Pulse length R 2 [2768]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Relay ouput 2 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay relay 2 [8251]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of relay 2

# BREAKER

## General

<b>Variable</b>	Delay before new attempt [2806]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before another attempt for an electrical fault. When an electrical fault is detected, the module opens its breaker and waits for an amount of time specified in this variable to attempt to close it again.

<b>Variable</b>	Fail to open/close breaker timer [2304]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Circuit breaker max command delay (timer for discrepancy between command and feedback), is generating a fault.

<b>Variable</b>	Unexpected close/open breaker timer [2317]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	10.0
<b>Description</b>	Timer before taking into account an unexpected change of a breaker feedback input state.

## Mains breaker

### Attempts number

<b>Variable</b>	Synchronization Back attempts number [2814]
<b>Unit</b>	-
<b>Init value</b>	3
<b>Min value</b>	0
<b>Max value</b>	15
<b>Description</b>	This setpoint adjusts the synchronization back attempts number. It sets the attempts number to start again a synchronization of the bus after a "mains electrical fault" protection.

### Control

<b>Variable</b>	Mains circuit breaker control type [2307]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Open Contact - Close Pulse 1: Open Contact - Close Contact 2: Open MNcoil - Close Pulse 3: Open MNcoil - Close Contact 4: Open Pulse - Close Pulse 5: Open Pulse - Close Contact
<b>Description</b>	Control type of the relay for the Mains circuit breaker of the genset (pulse, hold, coil...)

### Pulse

<b>Variable</b>	Mains breaker control pulse length [2314]
<b>Unit</b>	s
<b>Init value</b>	2.5
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Mains circuit breaker pulse length

## OPERATOR MANUAL

<b>Variable</b>	Undervoltage coil deenergized time [2315]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Time during which the coil is no longer energized after a request to open the circuit breaker.

<b>Variable</b>	Undervoltage coil security timer [2316]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Minimum safety time between the moment the coil has been reenergized and the next request to close the circuit breaker.

### Mains failure

<b>Variable</b>	Mains breaker tripping mode on mains failure [2312]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Immediately 2: After power plant ready 3: After timer
<b>Description</b>	Mains breaker opening mode on Mains electrical fault (0: Immediately/1:After start/2:After power plant ready/3:After timer )

<b>Variable</b>	Timer to open mains breaker on mains failure [2313]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before MCB open command on fault if E2312 = 3

# CANOPEN

## Digital inputs

### CANopen DI 1 (Customisable) [800]

<b>Variable</b>	CANopenFuncI1 [3200]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I1 [3296]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 1 [3264]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I1 [3232]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 2 (Customisable) [801]**

<b>Variable</b>	CANopenFuncI2 [3201]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I2 [3297]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 2 [3265]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I2 [3233]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 3 (Customisable) [802]**

<b>Variable</b>	CANopenFuncI3 [3202]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I3 [3298]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 3 [3266]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I3 [3234]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 4 (Customisable) [803]**

<b>Variable</b>	CANopenFuncI4 [3203]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I4 [3299]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 4 [3267]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I4 [3235]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 5 (Customisable) [804]**

<b>Variable</b>	CANopenFuncI5 [3204]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I5 [3300]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 5 [3268]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I5 [3236]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 6 (Customisable) [805]**

<b>Variable</b>	CANopenFuncI6 [3205]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I6 [3301]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 6 [3269]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I6 [3237]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 7 (Customisable) [806]**

<b>Variable</b>	CANopenFuncI7 [3206]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I7 [3302]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 7 [3270]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I7 [3238]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 8 (Customisable) [807]**

<b>Variable</b>	CANopenFuncI8 [3207]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I8 [3303]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 8 [3271]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I8 [3239]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 9 (Customisable) [808]**

<b>Variable</b>	CANopenFuncI9 [3208]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I9 [3304]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 9 [3272]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I9 [3240]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 10 (Customisable) [809]**

<b>Variable</b>	CANopenFuncI10 [3209]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I10 [3305]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 10 [3273]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I10 [3241]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 11 (Customisable) [810]**

<b>Variable</b>	CANopenFuncI11 [3210]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I11 [3306]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 11 [3274]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I11 [3242]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 12 (Customisable) [811]**

<b>Variable</b>	CANopenFunc12 [3211]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I12 [3307]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 12 [3275]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I12 [3243]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 13 (Customisable) [812]**

<b>Variable</b>	CANopenFuncI13 [3212]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I13 [3308]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 13 [3276]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I13 [3244]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 14 (Customisable) [813]**

<b>Variable</b>	CANopenFunc14 [3213]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I14 [3309]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 14 [3277]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I14 [3245]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 15 (Customisable) [814]**

<b>Variable</b>	CANopenFunc15 [3214]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I15 [3310]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 15 [3278]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I15 [3246]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 16 (Customisable) [815]**

<b>Variable</b>	CANopenFunc16 [3215]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I16 [3311]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 16 [3279]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I16 [3247]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 17 (Customisable) [816]**

<b>Variable</b>	CANopenFunc17 [3216]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I17 [3312]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 17 [3280]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I17 [3248]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 18 (Customisable) [817]**

<b>Variable</b>	CANopenFunc18 [3217]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I18 [3313]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 18 [3281]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I18 [3249]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 19 (Customisable) [818]**

<b>Variable</b>	CANopenFunc19 [3218]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I19 [3314]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 19 [3282]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I19 [3250]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 20 (Customisable) [819]**

<b>Variable</b>	CANopenFuncI20 [3219]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I20 [3315]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 20 [3283]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I20 [3251]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 21 (Customisable) [820]**

<b>Variable</b>	CANopenFuncI21 [3220]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I21 [3316]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 21 [3284]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I21 [3252]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 22 (Customisable) [821]**

<b>Variable</b>	CANopenFuncI22 [3221]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I22 [3317]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 22 [3285]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I22 [3253]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 23 (Customisable) [822]**

<b>Variable</b>	CANopenFuncI23 [3222]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I23 [3318]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 23 [3286]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I23 [3254]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 24 (Customisable) [823]**

<b>Variable</b>	CANopenFuncI24 [3223]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I24 [3319]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 24 [3287]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I24 [3255]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 25 (Customisable) [824]**

<b>Variable</b>	CANopenFuncI25 [3224]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I25 [3320]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 25 [3288]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I25 [3256]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 26 (Customisable) [825]**

<b>Variable</b>	CANopenFuncI26 [3225]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I26 [3321]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 26 [3289]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I26 [3257]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 27 (Customisable) [826]**

<b>Variable</b>	CANopenFuncI27 [3226]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I27 [3322]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 27 [3290]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I27 [3258]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 28 (Customisable) [827]**

<b>Variable</b>	CANopenFuncI28 [3227]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I28 [3323]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 28 [3291]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I28 [3259]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 29 (Customisable) [828]**

<b>Variable</b>	CANopenFuncI29 [3228]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I29 [3324]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 29 [3292]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I29 [3260]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 30 (Customisable) [829]**

<b>Variable</b>	CANopenFuncI30 [3229]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I30 [3325]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 30 [3293]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I30 [3261]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 31 (Customisable) [830]**

<b>Variable</b>	CANopenFuncI31 [3230]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I31 [3326]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 31 [3294]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I31 [3262]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 32 (Customisable) [831]**

<b>Variable</b>	CANopenFuncI32 [3231]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I32 [3327]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 32 [3295]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I32 [3263]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 33 (Customisable) [1250]**

<b>Variable</b>	CANopenFuncI33 [8550]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I33 [8646]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 33 [8614]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I33 [8582]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 34 (Customisable) [1251]**

<b>Variable</b>	CANopenFuncI34 [8551]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I34 [8647]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 34 [8615]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I34 [8583]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 35 (Customisable) [1252]**

<b>Variable</b>	CANopenFuncI35 [8552]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I35 [8648]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 35 [8616]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I35 [8584]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 36 (Customisable) [1253]**

<b>Variable</b>	CANopenFuncI36 [8553]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I36 [8649]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 36 [8617]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I36 [8585]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 37 (Customisable) [1254]**

<b>Variable</b>	CANopenFuncI37 [8554]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I37 [8650]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 37 [8618]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I37 [8586]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 38 (Customisable) [1255]**

<b>Variable</b>	CANopenFuncI38 [8555]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I38 [8651]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 38 [8619]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I38 [8587]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 39 (Customisable) [1256]**

<b>Variable</b>	CANopenFuncI39 [8556]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I39 [8652]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 39 [8620]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I39 [8588]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 40 (Customisable) [1257]**

<b>Variable</b>	CANopenFuncI40 [8557]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I40 [8653]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 40 [8621]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I40 [8589]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 41 (Customisable) [1258]**

<b>Variable</b>	CANopenFuncI41 [8558]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I41 [8654]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 41 [8622]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I41 [8590]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 42 (Customisable) [1259]**

<b>Variable</b>	CANopenFuncI42 [8559]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I42 [8655]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 42 [8623]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I42 [8591]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 43 (Customisable) [1260]**

<b>Variable</b>	CANopenFuncI43 [8560]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I43 [8656]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 43 [8624]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I43 [8592]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 44 (Customisable) [1261]**

<b>Variable</b>	CANopenFuncI44 [8561]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I44 [8657]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 44 [8625]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I44 [8593]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 45 (Customisable) [1262]**

<b>Variable</b>	CANopenFuncI45 [8562]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I45 [8658]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 45 [8626]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I45 [8594]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 46 (Customisable) [1263]**

<b>Variable</b>	CANopenFuncI46 [8563]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I46 [8659]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 46 [8627]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I46 [8595]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 47 (Customisable) [1264]**

<b>Variable</b>	CANopenFuncI47 [8564]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I47 [8660]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 47 [8628]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I47 [8596]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 48 (Customisable) [1265]**

<b>Variable</b>	CANopenFuncI48 [8565]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I48 [8661]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 48 [8629]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I48 [8597]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 49 (Customisable) [1266]**

<b>Variable</b>	CANopenFuncI49 [8566]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I49 [8662]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 49 [8630]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I49 [8598]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 50 (Customisable) [1267]**

<b>Variable</b>	CANopenFuncI50 [8567]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I50 [8663]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 50 [8631]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I50 [8599]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 51 (Customisable) [1268]**

<b>Variable</b>	CANopenFuncI51 [8568]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I51 [8664]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 51 [8632]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I51 [8600]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 52 (Customisable) [1269]**

<b>Variable</b>	CANopenFuncI52 [8569]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I52 [8665]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 52 [8633]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I52 [8601]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 53 (Customisable) [1270]**

<b>Variable</b>	CANopenFuncI53 [8570]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I53 [8666]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 53 [8634]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I53 [8602]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 54 (Customisable) [1271]**

<b>Variable</b>	CANopenFuncI54 [8571]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I54 [8667]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 54 [8635]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I54 [8603]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 55 (Customisable) [1272]**

<b>Variable</b>	CANopenFuncI55 [8572]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I55 [8668]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 55 [8636]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I55 [8604]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 56 (Customisable) [1273]**

<b>Variable</b>	CANopenFuncI56 [8573]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I56 [8669]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 56 [8637]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I56 [8605]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 57 (Customisable) [1274]**

<b>Variable</b>	CANopenFuncI57 [8574]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I57 [8670]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 57 [8638]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I57 [8606]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 58 (Customisable) [1275]**

<b>Variable</b>	CANopenFuncI58 [8575]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I58 [8671]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 58 [8639]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I58 [8607]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 59 (Customisable) [1276]**

<b>Variable</b>	CANopenFuncI59 [8576]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I59 [8672]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 59 [8640]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I59 [8608]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 60 (Customisable) [1277]**

<b>Variable</b>	CANopenFuncI60 [8577]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I60 [8673]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 60 [8641]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I60 [8609]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 61 (Customisable) [1278]**

<b>Variable</b>	CANopenFuncI61 [8578]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I61 [8674]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 61 [8642]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I61 [8610]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 62 (Customisable) [1279]**

<b>Variable</b>	CANopenFuncI62 [8579]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I62 [8675]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 62 [8643]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I62 [8611]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 63 (Customisable) [1280]**

<b>Variable</b>	CANopenFuncI63 [8580]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I63 [8676]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 63 [8644]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I63 [8612]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 64 (Customisable) [1281]**

<b>Variable</b>	CANopenFuncI64 [8581]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I64 [8677]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 64 [8645]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I64 [8613]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

## Digital outputs

### CANopen DO 1 (Customisable) [4751]

<b>Variable</b>	CANopenFuncO1 [3350]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO1 [3382]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 2 (Customisable) [4752]

<b>Variable</b>	CANopenFuncO2 [3351]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO2 [3383]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 3 (Customisable) [4753]**

<b>Variable</b>	CANopenFuncO3 [3352]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO3 [3384]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 4 (Customisable) [4754]**

<b>Variable</b>	CANopenFuncO4 [3353]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO4 [3385]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 5 (Customisable) [4755]**

<b>Variable</b>	CANopenFuncO5 [3354]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO5 [3386]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 6 (Customisable) [4756]**

<b>Variable</b>	CANopenFuncO6 [3355]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO6 [3387]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 7 (Customisable) [4757]**

<b>Variable</b>	CANopenFuncO7 [3356]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO7 [3388]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 8 (Customisable) [4758]**

<b>Variable</b>	CANopenFuncO8 [3357]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO8 [3389]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



**CANopen DO 9 (Customisable) [4759]**

<b>Variable</b>	CANopenFuncO9 [3358]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO9 [3390]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 10 (Customisable) [4760]**

<b>Variable</b>	CANopenFuncO10 [3359]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO10 [3391]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 11 (Customisable) [4761]

<b>Variable</b>	CANopenFuncO11 [3360]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO11 [3392]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 12 (Customisable) [4762]

<b>Variable</b>	CANopenFuncO12 [3361]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO12 [3393]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 13 (Customisable) [4763]

<b>Variable</b>	CANopenFuncO13 [3362]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO13 [3394]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 14 (Customisable) [4764]

<b>Variable</b>	CANopenFuncO14 [3363]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO14 [3395]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 15 (Customisable) [4765]**

<b>Variable</b>	CANopenFuncO15 [3364]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO15 [3396]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 16 (Customisable) [4766]**

<b>Variable</b>	CANopenFuncO16 [3365]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO16 [3397]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 17 (Customisable) [4767]**

<b>Variable</b>	CANopenFuncO17 [3366]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO17 [3398]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 18 (Customisable) [4768]**

<b>Variable</b>	CANopenFuncO18 [3367]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO18 [3399]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 19 (Customisable) [4769]**

<b>Variable</b>	CANopenFuncO19 [3368]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO19 [3400]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 20 (Customisable) [4770]**

<b>Variable</b>	CANopenFuncO20 [3369]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO20 [3401]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 21 (Customisable) [4771]

<b>Variable</b>	CANopenFuncO21 [3370]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO21 [3402]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 22 (Customisable) [4772]

<b>Variable</b>	CANopenFuncO22 [3371]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO22 [3403]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 23 (Customisable) [4773]**

<b>Variable</b>	CANopenFuncO23 [3372]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO23 [3404]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 24 (Customisable) [4774]**

<b>Variable</b>	CANopenFuncO24 [3373]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO24 [3405]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



**CANopen DO 25 (Customisable) [4775]**

<b>Variable</b>	CANopenFuncO25 [3374]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO25 [3406]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 26 (Customisable) [4776]**

<b>Variable</b>	CANopenFuncO26 [3375]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO26 [3407]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 27 (Customisable) [4777]**

<b>Variable</b>	CANopenFuncO27 [3376]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO27 [3408]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 28 (Customisable) [4778]**

<b>Variable</b>	CANopenFuncO28 [3377]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO28 [3409]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 29 (Customisable) [4779]**

<b>Variable</b>	CANopenFuncO29 [3378]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO29 [3410]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 30 (Customisable) [4780]**

<b>Variable</b>	CANopenFuncO30 [3379]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO30 [3411]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 31 (Customisable) [4781]**

<b>Variable</b>	CANopenFuncO31 [3380]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO31 [3412]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 32 (Customisable) [4782]**

<b>Variable</b>	CANopenFuncO32 [3381]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO32 [3413]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 33 (Customisable) [5100]

<b>Variable</b>	CANopenFuncO33 [8700]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO33 [8732]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 34 (Customisable) [5101]

<b>Variable</b>	CANopenFuncO34 [8701]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO34 [8733]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 35 (Customisable) [5102]

<b>Variable</b>	CANopenFuncO35 [8702]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO35 [8734]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 36 (Customisable) [5103]

<b>Variable</b>	CANopenFuncO36 [8703]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO36 [8735]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 37 (Customisable) [5104]**

<b>Variable</b>	CANopenFuncO37 [8704]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO37 [8736]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 38 (Customisable) [5105]**

<b>Variable</b>	CANopenFuncO38 [8705]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO38 [8737]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 39 (Customisable) [5106]**

<b>Variable</b>	CANopenFuncO39 [8706]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO39 [8738]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 40 (Customisable) [5107]**

<b>Variable</b>	CANopenFuncO40 [8707]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO40 [8739]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



**CANopen DO 41 (Customisable) [5108]**

<b>Variable</b>	CANopenFuncO41 [8708]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO41 [8740]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 42 (Customisable) [5109]**

<b>Variable</b>	CANopenFuncO42 [8709]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO42 [8741]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 43 (Customisable) [5110]

<b>Variable</b>	CANopenFuncO43 [8710]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO43 [8742]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 44 (Customisable) [5111]

<b>Variable</b>	CANopenFuncO44 [8711]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO44 [8743]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 45 (Customisable) [5112]

<b>Variable</b>	CANopenFuncO45 [8712]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO45 [8744]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 46 (Customisable) [5113]

<b>Variable</b>	CANopenFuncO46 [8713]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO46 [8745]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 47 (Customisable) [5114]**

<b>Variable</b>	CANopenFuncO47 [8714]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO47 [8746]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 48 (Customisable) [5115]**

<b>Variable</b>	CANopenFuncO48 [8715]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO48 [8747]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 49 (Customisable) [5116]**

<b>Variable</b>	CANopenFuncO49 [8716]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO49 [8748]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 50 (Customisable) [5117]**

<b>Variable</b>	CANopenFuncO50 [8717]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO50 [8749]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 51 (Customisable) [5118]

<b>Variable</b>	CANopenFuncO51 [8718]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO51 [8750]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 52 (Customisable) [5119]

<b>Variable</b>	CANopenFuncO52 [8719]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO52 [8751]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 53 (Customisable) [5120]

<b>Variable</b>	CANopenFuncO53 [8720]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO53 [8752]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 54 (Customisable) [5121]

<b>Variable</b>	CANopenFuncO54 [8721]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO54 [8753]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 55 (Customisable) [5122]**

<b>Variable</b>	CANopenFuncO55 [8722]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO55 [8754]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 56 (Customisable) [5123]**

<b>Variable</b>	CANopenFuncO56 [8723]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO56 [8755]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



### CANopen DO 57 (Customisable) [5124]

<b>Variable</b>	CANopenFuncO57 [8724]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO57 [8756]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 58 (Customisable) [5125]

<b>Variable</b>	CANopenFuncO58 [8725]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO58 [8757]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 59 (Customisable) [5126]**

<b>Variable</b>	CANopenFuncO59 [8726]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO59 [8758]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 60 (Customisable) [5127]**

<b>Variable</b>	CANopenFuncO60 [8727]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO60 [8759]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 61 (Customisable) [5128]**

<b>Variable</b>	CANopenFuncO61 [8728]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO61 [8760]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 62 (Customisable) [5129]**

<b>Variable</b>	CANopenFuncO62 [8729]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO62 [8761]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 63 (Customisable) [5130]

<b>Variable</b>	CANopenFuncO63 [8730]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO63 [8762]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 64 (Customisable) [5131]

<b>Variable</b>	CANopenFuncO64 [8731]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO64 [8763]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

## Analog inputs

### Analog inputs 1

<b>Variable</b>	CANopen AI 1 (Customisable) [1050]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 1

<b>Variable</b>	CANopen Gain AI 01 [8351]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 1 value

<b>Variable</b>	CANopen Offset AI 01 [8350]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 1 value

### Analog inputs 2

<b>Variable</b>	CANopen AI 2 (Customisable) [1051]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 2

<b>Variable</b>	CANopen Gain AI 02 [8353]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 2 value

<b>Variable</b>	CANopen Offset AI 02 [8352]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 2 value

### Analog inputs 3

<b>Variable</b>	CANopen AI 3 (Customisable) [1052]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 3

<b>Variable</b>	CANopen Gain AI 03 [8355]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 3 value

<b>Variable</b>	CANopen Offset AI 03 [8354]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 3 value

### Analog inputs 4

<b>Variable</b>	CANopen AI 4 (Customisable) [1053]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 4

<b>Variable</b>	CANopen Gain AI 04 [8357]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 4 value

<b>Variable</b>	CANopen Offset AI 04 [8356]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 4 value

### Analog inputs 5

<b>Variable</b>	CANopen AI 5 (Customisable) [1054]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 5

<b>Variable</b>	CANopen Gain AI 05 [8359]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 5 value

<b>Variable</b>	CANopen Offset AI 05 [8358]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 5 value

## Analog inputs 6

<b>Variable</b>	CANopen AI 6 (Customisable) [1055]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 6

<b>Variable</b>	CANopen Gain AI 06 [8361]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 6 value

<b>Variable</b>	CANopen Offset AI 06 [8360]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 6 value



## Analog inputs 7

<b>Variable</b>	CANopen AI 7 (Customisable) [1056]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 7

<b>Variable</b>	CANopen Gain AI 07 [8363]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 7 value

<b>Variable</b>	CANopen Offset AI 07 [8362]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 7 value

## Analog inputs 8

<b>Variable</b>	CANopen AI 8 (Customisable) [1057]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 8

<b>Variable</b>	CANopen Gain AI 08 [8365]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 8 value

<b>Variable</b>	CANopen Offset AI 08 [8364]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 8 value

## Analog inputs 9

<b>Variable</b>	CANopen AI 9 (Customisable) [1058]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 9

<b>Variable</b>	CANopen Gain AI 09 [8367]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 9 value

<b>Variable</b>	CANopen Offset AI 09 [8366]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 9 value

## Analog inputs 10

<b>Variable</b>	CANopen AI 10 (Customisable) [1059]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 10

<b>Variable</b>	CANopen Gain AI 10 [8369]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 10 value

<b>Variable</b>	CANopen Offset AI 10 [8368]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 10 value

## Analog inputs 11

<b>Variable</b>	CANopen AI 11 (Customisable) [1060]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 11

<b>Variable</b>	CANopen Gain AI 11 [8371]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 11 value

<b>Variable</b>	CANopen Offset AI 11 [8370]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 11 value

## Analog inputs 12

<b>Variable</b>	CANopen AI 12 (Customisable) [1061]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 12

<b>Variable</b>	CANopen Gain AI 12 [8373]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 12 value

<b>Variable</b>	CANopen Offset AI 12 [8372]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 12 value

### Analog inputs 13

<b>Variable</b>	CANopen AI 13 (Customisable) [1062]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 13

<b>Variable</b>	CANopen Gain AI 13 [8375]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 13 value

<b>Variable</b>	CANopen Offset AI 13 [8374]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 13 value

### Analog inputs 14

<b>Variable</b>	CANopen AI 14 (Customisable) [1063]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 14

<b>Variable</b>	CANopen Gain AI 14 [8377]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 14 value

<b>Variable</b>	CANopen Offset AI 14 [8376]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 14 value

## Analog inputs 15

<b>Variable</b>	CANopen AI 15 (Customisable) [1064]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 15

<b>Variable</b>	CANopen Gain AI 15 [8379]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 15 value

<b>Variable</b>	CANopen Offset AI 15 [8378]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 15 value

## Analog inputs 16

<b>Variable</b>	CANopen AI 16 (Customisable) [1065]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 16

<b>Variable</b>	CANopen Gain AI 16 [8381]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 16 value

<b>Variable</b>	CANopen Offset AI 16 [8380]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 16 value

## PROTECTIONS

### BUS PROTECTIONS

#### Over/under frequency

##### Over frequency

<b>Variable</b>	Over frequency threshold [2400]
<b>Unit</b>	%
<b>Init value</b>	105.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over frequency timer [2401]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control [2402]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.



## Under frequency

<b>Variable</b>	Under frequency threshold [2403]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer [2404]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control [2405]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over frequency 2

<b>Variable</b>	Over frequency threshold 2 [2436]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over frequency timer 2 [2437]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control 2 [2438]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under frequency 2

<b>Variable</b>	Under frequency threshold 2 [2439]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer 2 [2440]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control 2 [2441]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over/under voltage

### Over voltage

<b>Variable</b>	Over voltage threshold [2406]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over voltage timer [2407]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control [2408]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under voltage

<b>Variable</b>	Under voltage threshold [2409]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer [2410]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control [2411]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over voltage 2

<b>Variable</b>	Over voltage threshold 2 [2442]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Over voltage timer 2 [2443]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control 2 [2444]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Under voltage 2

<b>Variable</b>	Under voltage threshold 2 [2445]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer 2 [2446]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control 2 [2447]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage unbalance

### Voltage unbalance

<b>Variable</b>	Voltage unbalance threshold [2486]
<b>Unit</b>	%
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Voltage unbalance timer [2487]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control [2488]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage unbalance 2

<b>Variable</b>	Voltage unbalance threshold 2 [2489]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Voltage unbalance timer 2 [2490]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control 2 [2491]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Rotophase

<b>Variable</b>	Rotophase protection control [8501]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## OPERATOR MANUAL

<b>Variable</b>	Rotophase activation direction (0 = Indirect, 1 = Direct) [8500]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Indirect 1: Direct
<b>Description</b>	This setpoint define wich direction of rotophase will activate rotophase protection. If the setpoint is on direct then the action of variables 8500 will activate if voltage phases are plugged on a direct direction. If the setpoint is on indirect then the action of variables 8500 will activate if voltage phases are plugged on an indirect direction.



## MAINS PROTECTIONS

### Over/under frequency

#### Over frequency

<b>Variable</b>	Over frequency threshold [2500]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over frequency timer [2501]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control [2502]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under frequency

<b>Variable</b>	Under frequency threshold [2503]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer [2504]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control [2505]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over frequency 2

<b>Variable</b>	Over frequency threshold 2 [2530]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over frequency timer 2 [2531]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control 2 [2532]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under frequency 2

<b>Variable</b>	Under frequency threshold 2 [2533]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer 2 [2534]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control 2 [2535]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over/under voltage

### Over voltage

<b>Variable</b>	Over voltage threshold [2506]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over voltage timer [2507]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control [2508]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under voltage

<b>Variable</b>	Under voltage threshold [2509]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer [2510]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control [2511]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over voltage 2

<b>Variable</b>	Over voltage threshold 2 [2536]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over voltage timer 2 [2537]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control 2 [2538]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under voltage 2

<b>Variable</b>	Under voltage threshold 2 [2539]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer 2 [2540]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control 2 [2541]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage/Current unbalance

### Voltage unbalance

<b>Variable</b>	Voltage unbalance threshold [2565]
<b>Unit</b>	%
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Voltage unbalance timer [2566]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control [2567]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage unbalance 2

<b>Variable</b>	Voltage unbalance threshold 2 [2568]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Voltage unbalance timer 2 [2569]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control 2 [2570]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Current unbalance

<b>Variable</b>	Current unbalance threshold [2572]
<b>Unit</b>	%
<b>Init value</b>	40.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.



<b>Variable</b>	Current unbalance timer [2573]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Current unbalance control [2574]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Current unbalance 2

<b>Variable</b>	Current unbalance threshold 2 [2575]
<b>Unit</b>	%
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Current unbalance timer 2 [2576]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Current unbalance control 2 [2577]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Rotophase

<b>Variable</b>	Rotophase protection control [2585]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Rotophase activation direction (0 = Indirect, 1 = Direct) [2584]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Indirect 1: Direct
<b>Description</b>	This setpoint define wich direction of rotophase will activate rotophase protection If the setpoint is on direct then the action of variables 2584 will activate if voltage phases are plugged on a direct direction. If the setpoint is on indirect then the action of variables 2584 will activate if voltage phases are plugged on an indirect direction.

## Reverse kW/kVAR

### Reverse kW

<b>Variable</b>	Reverse kW threshold [2518]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Reverse kW timer [2519]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Reverse kW control [2520]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Reverse kVAR

<b>Variable</b>	Reverse kVAR threshold [2527]
<b>Unit</b>	kVAR
<b>Init value</b>	200
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Reverse kVAR timer [2528]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Reverse kVAR control [2529]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Reverse kW 2

<b>Variable</b>	Reverse kW threshold 2 [2548]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Reverse kW timer 2 [2549]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Reverse kW control 2 [2550]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Reverse kVAR 2

<b>Variable</b>	Reverse kVAR threshold 2 [2557]
<b>Unit</b>	kVAR
<b>Init value</b>	200
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Reverse kVAR timer 2 [2558]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Reverse kVAR control 2 [2559]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum/Minimum kW

### Maximum kW

<b>Variable</b>	Maximum kW threshold [2515]
<b>Unit</b>	kW
<b>Init value</b>	110
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kW timer [2516]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kW control [2517]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Minimum kW

<b>Variable</b>	Minimum kW threshold [2512]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Minimum kW timer [2513]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kW control [2514]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Maximum kW 2

<b>Variable</b>	Maximum kW threshold 2 [2545]
<b>Unit</b>	kW
<b>Init value</b>	110
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kW timer 2 [2546]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kW control 2 [2547]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum kW 2

<b>Variable</b>	Minimum kW threshold 2 [2542]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kW timer 2 [2543]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kW control 2 [2544]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.



## Maxi kVAR/Mini kVAR

### Maximum kVAR

<b>Variable</b>	Maximum kVAR threshold [2524]
<b>Unit</b>	kVAR
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kVAR timer [2525]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kVAR control [2526]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Minimum kVar

<b>Variable</b>	Minimum kVAR threshold [2521]
<b>Unit</b>	kVAR
<b>Init value</b>	200
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Minimum kVAR timer [2522]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kVAR control [2523]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Maximum kVAR 2

<b>Variable</b>	Maximum kVAR threshold 2 [2554]
<b>Unit</b>	kVAR
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kVAR timer 2 [2555]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kVAR control 2 [2556]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum kVar 2

<b>Variable</b>	Minimum kVAR threshold 2 [2551]
<b>Unit</b>	kVAR
<b>Init value</b>	200
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kVAR timer 2 [2552]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kVAR control 2 [2553]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Vector jump/DF/DT

### Vector jump

<b>Variable</b>	Vector jump threshold [2560]
<b>Unit</b>	°
<b>Init value</b>	20
<b>Min value</b>	1
<b>Max value</b>	30
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Vector jump control [2561]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### DF/DT

<b>Variable</b>	df/dt threshold [2562]
<b>Unit</b>	Hz/s
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	df/dt control [2563]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

**Init delay after mains paralleling**

<b>Variable</b>	Vector jump and df/dt timer [2564]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Timer Initialisation after mains paralleling to activate Vector Jump and/or df/dt (Ro-cof) protections

## OTHER PROTECTIONS

### Analog inputs

#### Analog input 1

<b>Variable</b>	Analog input 1 threshold [2600]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 1 timer [2601]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 1 control [2602]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Analog input 1 threshold 2 [2603]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 1 timer 2 [2604]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 1 control 2 [2605]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Direction analog input 1 protection [2606]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Minimum 1: Maximum
<b>Description</b>	This setpoint define if the both threshold level for analog input 1 are minimum or maximum limit. If the setpoint is on "Minimum" then the action of variables 2602 and 2605 will activate from thresholds level set and below. If the setpoint is on "Maximum" then the action of variables 2602 and 2605 will activate from thresholds level set and above.

## Analog input 2

<b>Variable</b>	Analog input 2 threshold [2608]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Analog input 2 timer [2609]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 2 control [2610]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Analog input 2 threshold 2 [2611]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 2 timer 2 [2612]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.



<b>Variable</b>	Analog input 2 control 2 [2613]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Direction analog input 2 protection [2614]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Minimum 1: Maximum
<b>Description</b>	This setpoint define if the both threshold level for analog input 2 are minimum or maximum limit. If the setpoint is on "Minimum" then the action of variables 2610 and 2613 will activate from thresholds level set and below. If the setpoint is on "Maximum" then the action of variables 2610 and 2613 will activate from thresholds level set and above.

### Analog input 3

<b>Variable</b>	Analog input 3 threshold [2616]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 3 timer [2617]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Analog input 3 control [2618]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Analog input 3 threshold 2 [2619]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 3 timer 2 [2620]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 3 control 2 [2621]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Direction analog input 3 protection [2622]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Minimum 1: Maximum
<b>Description</b>	This setpoint define if the both threshold level for analog input 3 are minimum or maximum limit. If the setpoint is on "Minimum" then the action of vaiables 2618 and 2621 will activate from thresholds level set and below. If the setpoint is on "Maximum" then the action of vaiables 2618 and 2621 will activate from thresholds level set and above.

## Battery

### Maximum battery voltage

<b>Variable</b>	Max. voltage battery threshold [2359]
<b>Unit</b>	V
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Max. voltage battery timer [2360]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Max. voltage battery control [2361]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum battery voltage

<b>Variable</b>	Min. voltage battery threshold [2356]
<b>Unit</b>	V
<b>Init value</b>	18.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Min. voltage battery timer [2357]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Min. voltage battery control [2358]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum battery voltage 2

<b>Variable</b>	Max. voltage battery threshold 2 [2377]
<b>Unit</b>	V
<b>Init value</b>	32.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Max. voltage battery timer 2 [2378]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Max. voltage battery control 2 [2379]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum battery voltage 2

<b>Variable</b>	Min. voltage battery threshold 2 [2374]
<b>Unit</b>	V
<b>Init value</b>	15.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Min. voltage battery timer 2 [2375]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Min. voltage battery control 2 [2376]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## CAN 1

<b>Variable</b>	Control on controllers communication fault [3052]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 8: Droop Hz/V + Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on missing GENSYS COMPACT PRIME on CAN bus [3054]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on missing MASTER COMPACT/BTB COMPACT on CAN bus [3057]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## OPERATOR MANUAL

<b>Variable</b>	Control on missing HYBRID COMPACT on CAN bus [3060]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on missing BAT COMPACT on CAN bus [3061]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on not enough genset available [2399]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### CANopen

<b>Variable</b>	Control on CANopen error [3059]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	CANopen error timer [3152]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	CANopen error timer

## Mismatch rotophase

<b>Variable</b>	Mismatch rotophases protection control [2397]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.



## PROGRAMMING

### HYSTERESIS

#### Hysteresis 1

<b>Variable</b>	Enable Hysteresis 1 [2657]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable hysteresis on analog input 1 with thresholds E2660 (Low Level) & E2663 (High Level)

<b>Variable</b>	Low level threshold [2660]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Low level threshold for digital output activation on hysteresis 1

<b>Variable</b>	Timer on low level threshold [2666]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis low threshold 1

<b>Variable</b>	High level threshold [2663]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	High level threshold for digital output activation on hysteresis 1

<b>Variable</b>	Timer on high level threshold [2669]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis high threshold 1

<b>Variable</b>	Hysteresis Direction 1 [2672]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	Hysteresis 1 Direction (0 : Set on low thresh. - Reset on high thresh. / 1 : Set on high thresh. - Reset on low thresh)

## Hysteresis 2

<b>Variable</b>	Enable Hysteresis 2 [2658]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable hysteresis on analog input 2 with thresholds E2661 (Low Level) & E2664 (High Level)

<b>Variable</b>	Low level threshold [2661]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Low level threshold for digital output activation on hysteresis 2

## OPERATOR MANUAL

<b>Variable</b>	Timer on low level threshold [2667]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis low threshold 2

<b>Variable</b>	High level threshold [2664]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	High level threshold for digital output activation on hysteresis 2

<b>Variable</b>	Timer on high level threshold [2670]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis high threshold 2

<b>Variable</b>	Hysteresis Direction 2 [2673]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	Hysteresis 2 Direction (0 : Set on low thresh. - Reset on high thresh. / 1 : Set on high thresh. - Reset on low thresh)

### Hysteresis 3

<b>Variable</b>	Enable Hysteresis 3 [2659]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable hysteresis on analog input 3 with thresholds E2662 (Low Level) & E2665 (High Level)

<b>Variable</b>	Low level threshold [2662]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Low level threshold for digital output activation on hysteresis 3

<b>Variable</b>	Timer on low level threshold [2668]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis low threshold 3

<b>Variable</b>	High level threshold [2665]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	High level threshold for digital output activation on hysteresis 3

<b>Variable</b>	Timer on high level threshold [2671]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis high threshold 3

## OPERATOR MANUAL

<b>Variable</b>	Hysteresis Direction 3 [2674]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	Hysteresis 3 Direction (0 : Set on low thresh. - Reset on high thresh. / 1 : Set on high thresh. - Reset on low thresh)

# MODBUS

## Connection settings

<b>Variable</b>	Enable connection to Modbus server [3031]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable connection to a Modbus server for custom read/write requests

<b>Variable</b>	Control on Modbus server timeouts [3030]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Control on TCP connection loss or frame timeout with Modbus server

<b>Variable</b>	Modbus server frame timeout [3032]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Timeout in ms for no response to a frame emitted from the Modbus server

## Modbus rights

<b>Variable</b>	Write date/time [3015.0]
<b>Description</b>	-

<b>Variable</b>	Write engine meters [3015.1]
<b>Description</b>	-

<b>Variable</b>	Write input functions [3015.3]
<b>Description</b>	-

## OPERATOR MANUAL

<b>Variable</b>	Reading via Modbus TCP [3015.8]
<b>Description</b>	-

<b>Variable</b>	Writing via Modbus TCP [3015.9]
<b>Description</b>	-

## LOGGER

### Activation

<b>Variable</b>	Activation [3610]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Off 1: Always ON 2: Post starting 3: Stabilized
<b>Description</b>	Archiving mode OFF = NEVER / ALWAYS / POST STARTING / STABILIZED, event archiving can be activated depending on engine status. Warning: erase will delete all faults, alarms and archived data.

### Variables 1-5

#### Log 1

<b>Variable</b>	Variable 1 to log [3600]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 1 on [3622]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at specific intervals, defined by the user ([3612]) - Value change: The variable will be logged each time the value of the variable has been changed



<b>Variable</b>	Logging period variable 1 [3612]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 2

<b>Variable</b>	Variable 2 to log [3601]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 2 on [3623]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3613]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 2 [3613]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 3

<b>Variable</b>	Variable 3 to log [3602]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 3 on [3624]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3614]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 3 [3614]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 4

<b>Variable</b>	Variable 4 to log [3603]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 4 on [3625]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3615]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 4 [3615]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 5

<b>Variable</b>	Variable 5 to log [3604]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 5 on [3626]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3616]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 5 [3616]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Variables 6-10

### Log 6

<b>Variable</b>	Variable 6 to log [3605]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 6 on [3627]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3617]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 6 [3617]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 7

<b>Variable</b>	Variable 7 to log [3606]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 7 on [3628]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3618]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 7 [3618]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 8

<b>Variable</b>	Variable 8 to log [3607]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 8 on [3629]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3619]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 8 [3619]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 9

<b>Variable</b>	Variable 9 to log [3608]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 9 on [3630]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3620]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 9 [3620]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 10

<b>Variable</b>	Variable 10 to log [3609]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 10 on [3631]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3621]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 10 [3621]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## SYSTEM

### LCD DISPLAY

#### Screen saving

<b>Variable</b>	Screensaver timeout [3551]
<b>Unit</b>	min
<b>Init value</b>	5
<b>Min value</b>	0
<b>Max value</b>	120
<b>Description</b>	Timeout Screen saver (0=infini)

#### Backlight

<b>Variable</b>	Backlight timeout [3552]
<b>Unit</b>	min
<b>Init value</b>	5
<b>Min value</b>	0
<b>Max value</b>	120
<b>Description</b>	Timeout Backlight (0=infini)

<b>Variable</b>	LCD screen backlight [3555]
<b>Unit</b>	%
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	LCD backlight intensity

<b>Variable</b>	LCD screen contrast [3554]
<b>Unit</b>	%
<b>Init value</b>	50
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	LCD contrast intensity



## DATE/TIME

<b>Variable</b>	Day of the week [10]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	6
<b>Description</b>	Day of the week (RTC)

<b>Variable</b>	Day [11]
<b>Unit</b>	days
<b>Init value</b>	0
<b>Min value</b>	1
<b>Max value</b>	31
<b>Description</b>	Day (RTC)

<b>Variable</b>	Month [12]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	1
<b>Max value</b>	12
<b>Description</b>	Month (RTC)

<b>Variable</b>	Year [13]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	99
<b>Description</b>	Year (RTC)

<b>Variable</b>	Hours [14]
<b>Unit</b>	h
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	23
<b>Description</b>	Hours (RTC)

## OPERATOR MANUAL

<b>Variable</b>	Minutes [15]
<b>Unit</b>	min
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	59
<b>Description</b>	Minutes (RTC)

## BUTTONS INHIBITION

<b>Variable</b>	Auto button inhibition [8102.14]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Test button inhibition [8102.13]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Man button inhibition [8102.12]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Start button inhibition [8102.11]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Stop button inhibition [8102.10]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Mains breaker button inhibition [8102.8]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Fault/Alarm/info button inhibition [8102.7]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Esc button inhibition [8102.6]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Enter button inhibition [8102.5]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Up arrow button inhibition [8102.4]
<b>Description</b>	Allows to disable (1) or enable (0) the button

## OPERATOR MANUAL

<b>Variable</b>	Left arrow button inhibition [8102.3]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Down arrow button inhibition [8102.2]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Right arrow button inhibition [8102.1]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Shift button inhibition [8102.0]
<b>Description</b>	Allows to disable (1) or enable (0) the button

## LIST OF INPUTS

### BUS

<b>Variable</b>	Remote start on load [4502]
<b>Description</b>	Activation starts the generator(s) in automatic mode.

<b>Variable</b>	Power plant ready [4636]
<b>Description</b>	Used for external validation of 'generator power plant ready': Activation will declare all generators as ready to provide load if frequency and voltage are stabilized.

## MAINS

<b>Variable</b>	Mains breaker feedback [4500]
<b>Description</b>	Mains breaker position feedback. when active the mains breaker is considered closed.

<b>Variable</b>	Manual mains back [4544]
<b>Description</b>	When configured, the sequence to switch back on Mains after generator start on Mains failure will be on hold until this input is activated. Load will remain on generator even if Mains back timer is elapsed, input will be mandatory to come back on Mains power.

<b>Variable</b>	Mains failure [4638]
<b>Description</b>	Mains failure. will consider Mains as not valid and request generator to start on load. Mains back timer will run once input is off, timer is adjustable in Timer settings. Mains failure will be logged as an event.

<b>Variable</b>	Mains available [4642]
<b>Description</b>	External signal to simulate Mains as available. Mains LED will lit when input is activated.

## INPUTS/OUTPUTS

<b>Variable</b>	Digital output 1 forced [4630]
<b>Description</b>	Activating this input will force activation of digital output 1.

<b>Variable</b>	Digital output 2 forced [4631]
<b>Description</b>	Activating this input will force activation of digital output 2.

<b>Variable</b>	Digital output 3 forced [4632]
<b>Description</b>	Activating this input will force activation of digital output 3.

<b>Variable</b>	Digital output 4 forced [4633]
<b>Description</b>	Activating this input will force activation of digital output 4.

<b>Variable</b>	Digital output 5 forced [4634]
<b>Description</b>	Activating this input will force activation of digital output 5.

<b>Variable</b>	Digital output 6 forced [4635]
<b>Description</b>	Activating this input will force activation of digital output 6.

<b>Variable</b>	Relay 1 forced [4950]
<b>Description</b>	Activating this input will force activation of relay output 1.

<b>Variable</b>	Relay 2 forced [4951]
<b>Description</b>	Activating this input will force activation of relay output 2.

## POWER PLANT

<b>Variable</b>	External non essential trip request [4537]
<b>Description</b>	External activation of the load shedding protection outputs. Use only if load shedding is enable.



## ALARMS/FAULTS

<b>Variable</b>	Emergency stop [4505]
<b>Description</b>	Emergency stop activation: Will immediately stop the generator(s) and force circuit breaker open.

<b>Variable</b>	Mains fault request [4508]
<b>Description</b>	External electrical fault : Activation will trip the Mains circuit breaker, and after an adjustable timer (breaker menu/Delay before new attempt), a new attempts of running Mains circuit breaker closed on load will be effective. The number of attempts is adjustable in breaker settings (number of closing attempts), if the fault is still present after the last attempt, Mains breaker will remain on fault. Remote start to generator is not provided in this case, only 'Mains failure' function will provide generator start request.

<b>Variable</b>	Remote soft shut down [4526]
<b>Description</b>	Stop of generators after cooling down, activated by external command.

<b>Variable</b>	Remote alarm [4527]
<b>Description</b>	Alarm only - non critical event activated by external device - Orange led is displayed an event logged.

## ALTERNATIVE SELECTIONS

<b>Variable</b>	Alternative selection 1 [4594]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 2 [4595]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 3 [4596]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 4 [4597]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 5 [4598]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 6 [4599]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 7 [4600]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 8 [4601]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 9 [4602]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

## OPERATOR MANUAL

<b>Variable</b>	Alternative selection 10 [4603]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 11 [4604]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 12 [4605]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 13 [4606]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 14 [4607]
<b>Description</b>	14th available variable to switch a parameter between 2 values

<b>Variable</b>	Alternative selection 15 [4608]
<b>Description</b>	15th available variable to switch a parameter between 2 values

<b>Variable</b>	Alternative selection 16 [4609]
<b>Description</b>	16th available variable to switch a parameter between 2 values

## HYSTERESIS

<b>Variable</b>	Hysteresis low threshold DI1 [4614]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI2 [4615]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI3 [4616]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI4 [4617]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI5 [4618]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI6 [4619]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI7 [4620]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI8 [4621]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis high threshold DI1 [4622]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI2 [4623]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

## OPERATOR MANUAL

<b>Variable</b>	Hysteresis high threshold DI3 [4624]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI4 [4625]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI5 [4626]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI6 [4627]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI7 [4628]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI8 [4629]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

## REMOTE BUTTONS

<b>Variable</b>	Remote faults reset [4506]
<b>Description</b>	External reset. Acknowledgement of alarm/fault present in display pages (same action as shift+I reset).

<b>Variable</b>	Manual start request [4509]
<b>Description</b>	Manual start command (alternative to front panel push button). Active in manual mode only.

<b>Variable</b>	Manual stop request [4510]
<b>Description</b>	Manual stop command (alternative to front panel push button). Active in manual mode only.

<b>Variable</b>	Manual mode request [4511]
<b>Description</b>	Force controller in manual mode, same effect as MAN button.

<b>Variable</b>	Manual mode inhibition [4512]
<b>Description</b>	Prevent controller to go in manual mode (Remotely or front panel).

<b>Variable</b>	Auto mode request [4513]
<b>Description</b>	Force controller in auto mode, same effect as AUTO button.

<b>Variable</b>	Mains breaker opening in manual mode [4519]
<b>Description</b>	Remote manual opening of mains breaker in manual mode (alternative to front button). Active in manual mode only.

<b>Variable</b>	Mains breaker closing in manual mode [4521]
<b>Description</b>	Remote manual close of mains breaker in manual mode (alternative to front button). Active in manual mode only.

<b>Variable</b>	Stop horn [4530]
<b>Description</b>	External horn stop request. Used when Horn output is configured.

## OPERATOR MANUAL

<b>Variable</b>	Led test [4580]
<b>Description</b>	Activates all LEDs of the module in order to check that the LEDs work

<b>Variable</b>	Test mode request [4590]
<b>Description</b>	Force controller in test mode, same effect as TEST button.

## LIST OF OUTPUTS

### COMMANDS

<b>Variable</b>	Horn [4663]
<b>Description</b>	External horn or warning light. Activated whenever a fault/alarm triggers. The output is disable on acknowledgment or reset. Horn timer is adjustable in timer menu (0s = permanent activation).

<b>Variable</b>	Mains breaker close [4676]
<b>Description</b>	Command to close the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings.

<b>Variable</b>	Mains breaker open [4678]
<b>Description</b>	Command to open the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings.

<b>Variable</b>	1st non essential trip [4689]
<b>Description</b>	In case Load Shedding function is used: Load 1 to be shed in first

<b>Variable</b>	2nd non essential trip [4690]
<b>Description</b>	In case Load Shedding function is used: Load 2 to be shed after load 1

<b>Variable</b>	3rd non essential trip [4691]
<b>Description</b>	In case Load Shedding function is used: Load 3 to be shed after load 2

<b>Variable</b>	4th non essential trip [4692]
<b>Description</b>	In case Load Shedding function is used: Load 4 to be shed after load 3

<b>Variable</b>	5th non essential trip [4693]
<b>Description</b>	In case Load Shedding function is used: Load 5 to be shed after load 4

<b>Variable</b>	Unload breaker n°1 [4721]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°1 are met



## OPERATOR MANUAL

<b>Variable</b>	Unload breaker n°2 [4722]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°2 are met

<b>Variable</b>	Unload breaker n°3 [4723]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°3 are met

<b>Variable</b>	Unload breaker n°4 [4724]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°4 are met

<b>Variable</b>	Unload breaker n°5 [4725]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°5 are met

<b>Variable</b>	Unload breaker n°6 [4726]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°6 are met

<b>Variable</b>	Unload breaker n°7 [4727]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°7 are met

<b>Variable</b>	Unload breaker n°8 [4728]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°8 are met

<b>Variable</b>	Unload breaker n°9 [4729]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°9 are met

<b>Variable</b>	Unload breaker n°10 [4730]
<b>Description</b>	Use only with 'Unload breakers function'. Output function activated when the conditions to close the breaker of the load n°10 are met

## OPERATOR MANUAL

<b>Variable</b>	Faults reset [4737]
<b>Description</b>	Active when a Fault RESET is requested on controller.

**BUS**

<b>Variable</b>	Power plant ready [4670]
<b>Description</b>	Status report: Power plant ready. All generators are providing stable frequency and voltage on the bus.

## MAINS

<b>Variable</b>	Fail to close mains breaker [4157]
<b>Description</b>	Fault report: The automated system tried to close the circuit breaker without success

<b>Variable</b>	Fail to open mains breaker [4158]
<b>Description</b>	Fault report: The automated system tried to open the circuit breaker without success

<b>Variable</b>	Mains breaker open suddenly [4159]
<b>Description</b>	Fault report: The circuit breaker has opened without any request for opening from the automated system

<b>Variable</b>	Mains breaker close suddenly [4171]
<b>Description</b>	Fault report: The circuit breaker has closed without any request for closing from the automated system

<b>Variable</b>	Mains breaker state [4651]
<b>Description</b>	Status report: Gives the state desired by the automated system for the circuit breaker (0: opening / 1: closing). Not to be confused with the closing command, whose behaviour depends on the configuration (Contact, Impulse, etc).

<b>Variable</b>	Bus/Mains voltage presence [4703]
<b>Description</b>	Status report: Activated when mains is present, and valid (i.e after mains back delay [2009] occurred) and no mains electrical fault activated.

## INPUTS/OUTPUTS

<b>Variable</b>	Input 1 (Customisable) [250]
<b>Description</b>	<p>Digital input n°1 of the product.                      Select a normally open polarity if the input is connected to 0V when the input should be considered active.                      Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.                      The validity indicates when the digital input should be taken into account.                      The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.                      The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 2 (Customisable) [251]
<b>Description</b>	<p>Digital input n°2 of the product.                      Select a normally open polarity if the input is connected to 0V when the input should be considered active.                      Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.                      The validity indicates when the digital input should be taken into account.                      The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.                      The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 3 (Customisable) [252]
<b>Description</b>	<p>Digital input n°3 of the product.                      Select a normally open polarity if the input is connected to 0V when the input should be considered active.                      Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.                      The validity indicates when the digital input should be taken into account.                      The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.                      The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

## OPERATOR MANUAL

<b>Variable</b>	Input 4 (Customisable) [253]
<b>Description</b>	<p>Digital input n°4 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 5 (Customisable) [254]
<b>Description</b>	<p>Digital input n°5 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 6 (Customisable) [255]
<b>Description</b>	<p>Digital input n°6 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

## OPERATOR MANUAL

<b>Variable</b>	Input 7 (Customisable) [256]
<b>Description</b>	<p>Digital input n°7 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 8 (Customisable) [257]
<b>Description</b>	<p>Digital input n°8 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 9 (Customisable) [258]
<b>Description</b>	<p>Digital input n°9 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Analog 1 (Customisable) [259]
<b>Description</b>	Digital input 10 (Analog1 set as Digital input)

<b>Variable</b>	Analog 2 (Customisable) [260]
<b>Description</b>	Digital input 11 (Analog2 set as Digital input)

## OPERATOR MANUAL

<b>Variable</b>	Analog 3 (Customisable) [261]
<b>Description</b>	Digital input 12 (Analog3 set as Digital input)

<b>Variable</b>	Physical status of digital input 1 [953.0]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 2 [953.1]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 3 [953.2]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 4 [953.3]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 5 [953.4]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 6 [953.5]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 7 [953.6]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 8 [953.7]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)



## OPERATOR MANUAL

<b>Variable</b>	Physical status of digital input 9 [953.8]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Output 1 (Customisable) [4350]
<b>Description</b>	Real time displayed status of Digital Output 1

<b>Variable</b>	Output 2 (Customisable) [4351]
<b>Description</b>	Real time displayed status of Digital Output 2

<b>Variable</b>	Output 3 (Customisable) [4352]
<b>Description</b>	Real time displayed status of Digital Output 3

<b>Variable</b>	Output 4 (Customisable) [4353]
<b>Description</b>	Real time displayed status of Digital Output 4

<b>Variable</b>	Output 5 (Customisable) [4354]
<b>Description</b>	Real time displayed status of Digital Output 5

<b>Variable</b>	Output 6 (Customisable) [4355]
<b>Description</b>	Real time displayed status of Digital Output 6

<b>Variable</b>	Relay 1 (Customisable) [4356]
<b>Description</b>	Real time displayed status of Relay Output 1

<b>Variable</b>	Relay 2 (Customisable) [4357]
<b>Description</b>	Real time displayed status of Relay Output 2

## I/O CAN BUS EXPANSION

<b>Variable</b>	CANopen DI 1 (Customisable) [800]
<b>Description</b>	CANopen digital Input 1

<b>Variable</b>	CANopen DI 2 (Customisable) [801]
<b>Description</b>	CANopen digital Input 2

<b>Variable</b>	CANopen DI 3 (Customisable) [802]
<b>Description</b>	CANopen digital Input 3

<b>Variable</b>	CANopen DI 4 (Customisable) [803]
<b>Description</b>	CANopen digital Input 4

<b>Variable</b>	CANopen DI 5 (Customisable) [804]
<b>Description</b>	CANopen digital Input 5

<b>Variable</b>	CANopen DI 6 (Customisable) [805]
<b>Description</b>	CANopen digital Input 6

<b>Variable</b>	CANopen DI 7 (Customisable) [806]
<b>Description</b>	CANopen digital Input 7

<b>Variable</b>	CANopen DI 8 (Customisable) [807]
<b>Description</b>	CANopen digital Input 8

<b>Variable</b>	CANopen DI 9 (Customisable) [808]
<b>Description</b>	CANopen digital Input 9

<b>Variable</b>	CANopen DI 10 (Customisable) [809]
<b>Description</b>	CANopen digital Input 10

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 11 (Customisable) [810]
<b>Description</b>	CANopen digital Input 11

<b>Variable</b>	CANopen DI 12 (Customisable) [811]
<b>Description</b>	CANopen digital Input 12

<b>Variable</b>	CANopen DI 13 (Customisable) [812]
<b>Description</b>	CANopen digital Input 13

<b>Variable</b>	CANopen DI 14 (Customisable) [813]
<b>Description</b>	CANopen digital Input 14

<b>Variable</b>	CANopen DI 15 (Customisable) [814]
<b>Description</b>	CANopen digital Input 15

<b>Variable</b>	CANopen DI 16 (Customisable) [815]
<b>Description</b>	CANopen digital Input 16

<b>Variable</b>	CANopen DI 17 (Customisable) [816]
<b>Description</b>	CANopen digital Input 17

<b>Variable</b>	CANopen DI 18 (Customisable) [817]
<b>Description</b>	CANopen digital Input 18

<b>Variable</b>	CANopen DI 19 (Customisable) [818]
<b>Description</b>	CANopen digital Input 19

<b>Variable</b>	CANopen DI 20 (Customisable) [819]
<b>Description</b>	CANopen digital Input 20

<b>Variable</b>	CANopen DI 21 (Customisable) [820]
<b>Description</b>	CANopen digital Input 21

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 22 (Customisable) [821]
<b>Description</b>	CANopen digital Input 22

<b>Variable</b>	CANopen DI 23 (Customisable) [822]
<b>Description</b>	CANopen digital Input 23

<b>Variable</b>	CANopen DI 24 (Customisable) [823]
<b>Description</b>	CANopen digital Input 24

<b>Variable</b>	CANopen DI 25 (Customisable) [824]
<b>Description</b>	CANopen digital Input 25

<b>Variable</b>	CANopen DI 26 (Customisable) [825]
<b>Description</b>	CANopen digital Input 26

<b>Variable</b>	CANopen DI 27 (Customisable) [826]
<b>Description</b>	CANopen digital Input 27

<b>Variable</b>	CANopen DI 28 (Customisable) [827]
<b>Description</b>	CANopen digital Input 28

<b>Variable</b>	CANopen DI 29 (Customisable) [828]
<b>Description</b>	CANopen digital Input 29

<b>Variable</b>	CANopen DI 30 (Customisable) [829]
<b>Description</b>	CANopen digital Input 30

<b>Variable</b>	CANopen DI 31 (Customisable) [830]
<b>Description</b>	CANopen digital Input 31

<b>Variable</b>	CANopen DI 32 (Customisable) [831]
<b>Description</b>	CANopen digital Input 32

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 33 (Customisable) [1250]
<b>Description</b>	CANopen digital Input 33

<b>Variable</b>	CANopen DI 34 (Customisable) [1251]
<b>Description</b>	CANopen digital Input 34

<b>Variable</b>	CANopen DI 35 (Customisable) [1252]
<b>Description</b>	CANopen digital Input 35

<b>Variable</b>	CANopen DI 36 (Customisable) [1253]
<b>Description</b>	CANopen digital Input 36

<b>Variable</b>	CANopen DI 37 (Customisable) [1254]
<b>Description</b>	CANopen digital Input 37

<b>Variable</b>	CANopen DI 38 (Customisable) [1255]
<b>Description</b>	CANopen digital Input 38

<b>Variable</b>	CANopen DI 39 (Customisable) [1256]
<b>Description</b>	CANopen digital Input 39

<b>Variable</b>	CANopen DI 40 (Customisable) [1257]
<b>Description</b>	CANopen digital Input 40

<b>Variable</b>	CANopen DI 41 (Customisable) [1258]
<b>Description</b>	CANopen digital Input 41

<b>Variable</b>	CANopen DI 42 (Customisable) [1259]
<b>Description</b>	CANopen digital Input 42

<b>Variable</b>	CANopen DI 43 (Customisable) [1260]
<b>Description</b>	CANopen digital Input 43

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 44 (Customisable) [1261]
<b>Description</b>	CANopen digital Input 44

<b>Variable</b>	CANopen DI 45 (Customisable) [1262]
<b>Description</b>	CANopen digital Input 45

<b>Variable</b>	CANopen DI 46 (Customisable) [1263]
<b>Description</b>	CANopen digital Input 46

<b>Variable</b>	CANopen DI 47 (Customisable) [1264]
<b>Description</b>	CANopen digital Input 47

<b>Variable</b>	CANopen DI 48 (Customisable) [1265]
<b>Description</b>	CANopen digital Input 48

<b>Variable</b>	CANopen DI 49 (Customisable) [1266]
<b>Description</b>	CANopen digital Input 49

<b>Variable</b>	CANopen DI 50 (Customisable) [1267]
<b>Description</b>	CANopen digital Input 50

<b>Variable</b>	CANopen DI 51 (Customisable) [1268]
<b>Description</b>	CANopen digital Input 51

<b>Variable</b>	CANopen DI 52 (Customisable) [1269]
<b>Description</b>	CANopen digital Input 52

<b>Variable</b>	CANopen DI 53 (Customisable) [1270]
<b>Description</b>	CANopen digital Input 53

<b>Variable</b>	CANopen DI 54 (Customisable) [1271]
<b>Description</b>	CANopen digital Input 54

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 55 (Customisable) [1272]
<b>Description</b>	CANopen digital Input 55

<b>Variable</b>	CANopen DI 56 (Customisable) [1273]
<b>Description</b>	CANopen digital Input 56

<b>Variable</b>	CANopen DI 57 (Customisable) [1274]
<b>Description</b>	CANopen digital Input 57

<b>Variable</b>	CANopen DI 58 (Customisable) [1275]
<b>Description</b>	CANopen digital Input 58

<b>Variable</b>	CANopen DI 59 (Customisable) [1276]
<b>Description</b>	CANopen digital Input 59

<b>Variable</b>	CANopen DI 60 (Customisable) [1277]
<b>Description</b>	CANopen digital Input 60

<b>Variable</b>	CANopen DI 61 (Customisable) [1278]
<b>Description</b>	CANopen digital Input 61

<b>Variable</b>	CANopen DI 62 (Customisable) [1279]
<b>Description</b>	CANopen digital Input 62

<b>Variable</b>	CANopen DI 63 (Customisable) [1280]
<b>Description</b>	CANopen digital Input 63

<b>Variable</b>	CANopen DI 64 (Customisable) [1281]
<b>Description</b>	CANopen digital Input 64

<b>Variable</b>	CANopen DO 1 (Customisable) [4751]
<b>Description</b>	CANopen digital output 1

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 2 (Customisable) [4752]
<b>Description</b>	CANopen digital output 2

<b>Variable</b>	CANopen DO 3 (Customisable) [4753]
<b>Description</b>	CANopen digital output 3

<b>Variable</b>	CANopen DO 4 (Customisable) [4754]
<b>Description</b>	CANopen digital output 4

<b>Variable</b>	CANopen DO 5 (Customisable) [4755]
<b>Description</b>	CANopen digital output 5

<b>Variable</b>	CANopen DO 6 (Customisable) [4756]
<b>Description</b>	CANopen digital output 6

<b>Variable</b>	CANopen DO 7 (Customisable) [4757]
<b>Description</b>	CANopen digital output 7

<b>Variable</b>	CANopen DO 8 (Customisable) [4758]
<b>Description</b>	CANopen digital output 8

<b>Variable</b>	CANopen DO 9 (Customisable) [4759]
<b>Description</b>	CANopen digital output 9

<b>Variable</b>	CANopen DO 10 (Customisable) [4760]
<b>Description</b>	CANopen digital output 10

<b>Variable</b>	CANopen DO 11 (Customisable) [4761]
<b>Description</b>	CANopen digital output 11

<b>Variable</b>	CANopen DO 12 (Customisable) [4762]
<b>Description</b>	CANopen digital output 12



## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 13 (Customisable) [4763]
<b>Description</b>	CANopen digital output 13

<b>Variable</b>	CANopen DO 14 (Customisable) [4764]
<b>Description</b>	CANopen digital output 14

<b>Variable</b>	CANopen DO 15 (Customisable) [4765]
<b>Description</b>	CANopen digital output 15

<b>Variable</b>	CANopen DO 16 (Customisable) [4766]
<b>Description</b>	CANopen digital output 16

<b>Variable</b>	CANopen DO 17 (Customisable) [4767]
<b>Description</b>	CANopen digital output 17

<b>Variable</b>	CANopen DO 18 (Customisable) [4768]
<b>Description</b>	CANopen digital output 18

<b>Variable</b>	CANopen DO 19 (Customisable) [4769]
<b>Description</b>	CANopen digital output 19

<b>Variable</b>	CANopen DO 20 (Customisable) [4770]
<b>Description</b>	CANopen digital output 20

<b>Variable</b>	CANopen DO 21 (Customisable) [4771]
<b>Description</b>	CANopen digital output 21

<b>Variable</b>	CANopen DO 22 (Customisable) [4772]
<b>Description</b>	CANopen digital output 22

<b>Variable</b>	CANopen DO 23 (Customisable) [4773]
<b>Description</b>	CANopen digital output 23

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 24 (Customisable) [4774]
<b>Description</b>	CANopen digital output 24

<b>Variable</b>	CANopen DO 25 (Customisable) [4775]
<b>Description</b>	CANopen digital output 25

<b>Variable</b>	CANopen DO 26 (Customisable) [4776]
<b>Description</b>	CANopen digital output 26

<b>Variable</b>	CANopen DO 27 (Customisable) [4777]
<b>Description</b>	CANopen digital output 27

<b>Variable</b>	CANopen DO 28 (Customisable) [4778]
<b>Description</b>	CANopen digital output 28

<b>Variable</b>	CANopen DO 29 (Customisable) [4779]
<b>Description</b>	CANopen digital output 29

<b>Variable</b>	CANopen DO 30 (Customisable) [4780]
<b>Description</b>	CANopen digital output 30

<b>Variable</b>	CANopen DO 31 (Customisable) [4781]
<b>Description</b>	CANopen digital output 31

<b>Variable</b>	CANopen DO 32 (Customisable) [4782]
<b>Description</b>	CANopen digital output 32

<b>Variable</b>	CANopen DO 33 (Customisable) [5100]
<b>Description</b>	CANopen digital output 33

<b>Variable</b>	CANopen DO 34 (Customisable) [5101]
<b>Description</b>	CANopen digital output 34

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 35 (Customisable) [5102]
<b>Description</b>	CANopen digital output 35

<b>Variable</b>	CANopen DO 36 (Customisable) [5103]
<b>Description</b>	CANopen digital output 36

<b>Variable</b>	CANopen DO 37 (Customisable) [5104]
<b>Description</b>	CANopen digital output 37

<b>Variable</b>	CANopen DO 38 (Customisable) [5105]
<b>Description</b>	CANopen digital output 38

<b>Variable</b>	CANopen DO 39 (Customisable) [5106]
<b>Description</b>	CANopen digital output 39

<b>Variable</b>	CANopen DO 40 (Customisable) [5107]
<b>Description</b>	CANopen digital output 40

<b>Variable</b>	CANopen DO 41 (Customisable) [5108]
<b>Description</b>	CANopen digital output 41

<b>Variable</b>	CANopen DO 42 (Customisable) [5109]
<b>Description</b>	CANopen digital output 42

<b>Variable</b>	CANopen DO 43 (Customisable) [5110]
<b>Description</b>	CANopen digital output 43

<b>Variable</b>	CANopen DO 44 (Customisable) [5111]
<b>Description</b>	CANopen digital output 44

<b>Variable</b>	CANopen DO 45 (Customisable) [5112]
<b>Description</b>	CANopen digital output 45

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 46 (Customisable) [5113]
<b>Description</b>	CANopen digital output 46

<b>Variable</b>	CANopen DO 47 (Customisable) [5114]
<b>Description</b>	CANopen digital output 47

<b>Variable</b>	CANopen DO 48 (Customisable) [5115]
<b>Description</b>	CANopen digital output 48

<b>Variable</b>	CANopen DO 49 (Customisable) [5116]
<b>Description</b>	CANopen digital output 49

<b>Variable</b>	CANopen DO 50 (Customisable) [5117]
<b>Description</b>	CANopen digital output 50

<b>Variable</b>	CANopen DO 51 (Customisable) [5118]
<b>Description</b>	CANopen digital output 51

<b>Variable</b>	CANopen DO 52 (Customisable) [5119]
<b>Description</b>	CANopen digital output 52

<b>Variable</b>	CANopen DO 53 (Customisable) [5120]
<b>Description</b>	CANopen digital output 53

<b>Variable</b>	CANopen DO 54 (Customisable) [5121]
<b>Description</b>	CANopen digital output 54

<b>Variable</b>	CANopen DO 55 (Customisable) [5122]
<b>Description</b>	CANopen digital output 55

<b>Variable</b>	CANopen DO 56 (Customisable) [5123]
<b>Description</b>	CANopen digital output 56

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 57 (Customisable) [5124]
<b>Description</b>	CANopen digital output 57

<b>Variable</b>	CANopen DO 58 (Customisable) [5125]
<b>Description</b>	CANopen digital output 58

<b>Variable</b>	CANopen DO 59 (Customisable) [5126]
<b>Description</b>	CANopen digital output 59

<b>Variable</b>	CANopen DO 60 (Customisable) [5127]
<b>Description</b>	CANopen digital output 60

<b>Variable</b>	CANopen DO 61 (Customisable) [5128]
<b>Description</b>	CANopen digital output 61

<b>Variable</b>	CANopen DO 62 (Customisable) [5129]
<b>Description</b>	CANopen digital output 62

<b>Variable</b>	CANopen DO 63 (Customisable) [5130]
<b>Description</b>	CANopen digital output 63

<b>Variable</b>	CANopen DO 64 (Customisable) [5131]
<b>Description</b>	CANopen digital output 64

## POWER PLANT

<b>Variable</b>	Generator No.1 circuit breaker position [562.0]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.2 circuit breaker position [562.1]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.3 circuit breaker position [562.2]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.4 circuit breaker position [562.3]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.5 circuit breaker position [562.4]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.6 circuit breaker position [562.5]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.7 circuit breaker position [562.6]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.8 circuit breaker position [562.7]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.9 circuit breaker position [562.8]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.10 circuit breaker position [562.9]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

## OPERATOR MANUAL

<b>Variable</b>	Generator No.11 circuit breaker position [562.10]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.12 circuit breaker position [562.11]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.13 circuit breaker position [562.12]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.14 circuit breaker position [562.13]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.15 circuit breaker position [562.14]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.16 circuit breaker position [562.15]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.17 circuit breaker position [563.0]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.18 circuit breaker position [563.1]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.19 circuit breaker position [563.2]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.20 circuit breaker position [563.3]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.21 circuit breaker position [563.4]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

## OPERATOR MANUAL

<b>Variable</b>	Generator No.22 circuit breaker position [563.5]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.23 circuit breaker position [563.6]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.24 circuit breaker position [563.7]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.25 circuit breaker position [563.8]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.26 circuit breaker position [563.9]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.27 circuit breaker position [563.10]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.28 circuit breaker position [563.11]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.29 circuit breaker position [563.12]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.30 circuit breaker position [563.13]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.31 circuit breaker position [563.14]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed

<b>Variable</b>	Generator No.32 circuit breaker position [563.15]
<b>Description</b>	0 if circuit breaker opened, 1 if circuit breaker closed



## OPERATOR MANUAL

<b>Variable</b>	Mains/tie breaker No.1 circuit breaker position [976.0]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.2 circuit breaker position [976.1]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.3 circuit breaker position [976.2]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.4 circuit breaker position [976.3]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.5 circuit breaker position [976.4]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.6 circuit breaker position [976.5]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.7 circuit breaker position [976.6]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

## OPERATOR MANUAL

<b>Variable</b>	Mains/tie breaker No.8 circuit breaker position [976.7]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.9 circuit breaker position [976.8]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.10 circuit breaker position [976.9]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.11 circuit breaker position [976.10]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.12 circuit breaker position [976.11]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.13 circuit breaker position [976.12]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.14 circuit breaker position [976.13]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

## OPERATOR MANUAL

<b>Variable</b>	Mains/tie breaker No.15 circuit breaker position [976.14]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.16 circuit breaker position [976.15]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.17 circuit breaker position [977.0]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.18 circuit breaker position [977.1]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.19 circuit breaker position [977.2]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.20 circuit breaker position [977.3]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.21 circuit breaker position [977.4]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

## OPERATOR MANUAL

<b>Variable</b>	Mains/tie breaker No.22 circuit breaker position [977.5]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.23 circuit breaker position [977.6]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.24 circuit breaker position [977.7]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.25 circuit breaker position [977.8]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.26 circuit breaker position [977.9]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.27 circuit breaker position [977.10]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.28 circuit breaker position [977.11]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

## OPERATOR MANUAL

<b>Variable</b>	Mains/tie breaker No.29 circuit breaker position [977.12]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.30 circuit breaker position [977.13]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.31 circuit breaker position [977.14]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains/tie breaker No.32 circuit breaker position [977.15]
<b>Description</b>	On MASTER COMPACT 1B, 0 if circuit breaker opened, 1 if circuit breaker closed. On MASTER COMPACT, 0 if at least 1 of the 2 circuit breakers is opened, 1 if both circuit breakers are closed. On BTB COMPACT, 0 if circuit breaker opened, 1 if circuit breaker closed.

<b>Variable</b>	Mains presence on the common bus bar [4032]
<b>Description</b>	Status report: There is currently a mains closed on the bus bar

## BUS PROTECTIONS

<b>Variable</b>	Fail to synchronize [4051]
<b>Description</b>	The automated system does not manage to synchronize the voltages on both sides of the circuit breaker (Check that the speed regulation and the AVR are controlled in the right range and adjust the PID settings)

<b>Variable</b>	Mismatch rotophases level 1 [4053.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mismatch rotophases level 2 [4053.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus over frequency level 1 [4250.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus over frequency level 2 [4250.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus under frequency level 1 [4251.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus under frequency level 2 [4251.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus over voltage level 1 [4252.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus over voltage level 2 [4252.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus under voltage level 1 [4253.0]
<b>Description</b>	Active when the level 1 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Bus under voltage level 2 [4253.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus minimum KW level 1 [4254.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus minimum KW level 2 [4254.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus maximum KW level 1 [4255.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus maximum KW level 2 [4255.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus reverse KW level 1 [4256.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus reverse KW level 2 [4256.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus minimum KVAR level 1 [4257.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus minimum KVAR level 2 [4257.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus maximum KVAR level 1 [4258.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus maximum KVAR level 2 [4258.1]
<b>Description</b>	Active when the level 2 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Bus reverse KVAR level 1 [4259.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus reverse KVAR level 2 [4259.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus maximum current level 1 [4260.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus maximum current level 2 [4260.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus short-circuit level 1 [4262.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus short-circuit level 2 [4262.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus voltage unbalance level 1 [4268.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus voltage unbalance level 2 [4268.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Not enough genset available level 1 [4270.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Not enough genset available level 2 [4270.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	No genset available [4271]
<b>Description</b>	No genset available



## OPERATOR MANUAL

<b>Variable</b>	Bus rotophase level 1 [4272.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus rotophase level 2 [4272.1]
<b>Description</b>	Active when the level 2 protection triggered.

## MAINS PROTECTIONS

<b>Variable</b>	Mains over frequency level 1 [4300.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains over frequency level 2 [4300.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains under frequency level 1 [4301.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains under frequency level 2 [4301.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains over voltage level 1 [4302.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains over voltage level 2 [4302.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains under voltage level 1 [4303.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains under voltage level 2 [4303.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains minimum KW level 1 [4304.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains minimum KW level 2 [4304.1]
<b>Description</b>	Active when the level 2 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Mains maximum KW level 1 [4305.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains maximum KW level 2 [4305.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains reverse KW level 1 [4306.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains reverse KW level 2 [4306.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains minimum KVAR level 1 [4307.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains minimum KVAR level 2 [4307.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains maximum KVAR level 1 [4308.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains maximum KVAR level 2 [4308.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains reverse KVAR level 1 [4309.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains reverse KVAR level 2 [4309.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Vector jump level 1 [4310.0]
<b>Description</b>	Active when the level 1 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Vector jump level 2 [4310.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	df/dt level 1 [4311.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	df/dt level 2 [4311.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains voltage unbalance level 1 [4314.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains voltage unbalance level 2 [4314.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Bus current unbalance level 1 [4316.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Bus current unbalance level 2 [4316.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains rotophase level 1 [4318.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains rotophase level 2 [4318.1]
<b>Description</b>	Active when the level 2 protection triggered.

## OTHER PROTECTIONS

<b>Variable</b>	Battery minimum voltage level 1 [4202.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Battery minimum voltage level 2 [4202.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Battery maximum voltage level 1 [4203.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Battery maximum voltage level 2 [4203.1]
<b>Description</b>	Active when the level 2 protection triggered.

## COMMUNICATION

<b>Variable</b>	Controller communication fault [600]
<b>Description</b>	Communication cannot be established. Check the wiring between the controllers, the product number and the number of controllers declared for each part number.

<b>Variable</b>	Missing GENSYS COMPACT PRIME [605]
<b>Description</b>	Missing at least one GENSYS COMPACT PRIME module on the CAN bus

<b>Variable</b>	Missing MASTER COMPACT or BTB COMPACT [608]
<b>Description</b>	Absence of at least one MASTER COMPACT or BTB COMPACT module on the CAN bus

<b>Variable</b>	Missing HYBRID COMPACT [612]
<b>Description</b>	Missing at least one HYBRID module on the CAN bus

<b>Variable</b>	Missing BAT COMPACT [613]
<b>Description</b>	Missing at least one BAT COMPACT module on the CAN Bus

<b>Variable</b>	Modbus server (Customisable) [904]
<b>Description</b>	Modbus server connection timeout. The associated label can be changed for display when the error occurs.

<b>Variable</b>	CANopen fault [4750]
<b>Description</b>	Communication with I/O extension cannot be established. Check the wiring and power supply of the CANopen extension module

## STATUSES

<b>Variable</b>	Phase sequence match [306]
<b>Description</b>	Identical phase order on both sides of the circuit breaker (OK = 1 or NOK = 0)

<b>Variable</b>	Voltage match [307]
<b>Description</b>	Identical voltage amplitudes on both sides of the circuit breaker (OK = 1 or NOK = 0)

<b>Variable</b>	Frequency match [308]
<b>Description</b>	Identical frequencies on both sides of the circuit breaker (OK = 1 or NOK = 0)

<b>Variable</b>	Phase match [309]
<b>Description</b>	The phase difference between the voltages on either side of the circuit breaker is zero (OK = 1 or NOK = 0)

<b>Variable</b>	Synch check relay OK [310]
<b>Description</b>	Active if the sources are synchronized on both sides of circuit breaker (OK = 1 or Not OK = 0). Do not confuse with the closing order.

<b>Variable</b>	Production request [4007]
<b>Description</b>	Active if the automated system wants to produce power with the generator(s). Inactive if the automated system does not want to produce power with the generator(s).

<b>Variable</b>	Mains electrical fault summary [4657]
<b>Description</b>	Fault report: Active if at least one protection configured as a mains electrical fault is active.

<b>Variable</b>	Alarms summary [4658]
<b>Description</b>	Fault report: Active if at least one protection configured as an alarm is active.

<b>Variable</b>	Soft shut down summary [4659]
<b>Description</b>	Fault report: Active if at least one protection configured as Soft shut down is active.

## OPERATOR MANUAL

<b>Variable</b>	Default LED [4664]
<b>Description</b>	Status report: Active if the fault LED on the front of the product is lit (active on fault, reset on acknowledge and reset command).

<b>Variable</b>	Alarm LED [4665]
<b>Description</b>	Status report: Active if the alarm LED on the front of the product is lit (active on alarm, reset on acknowledge and reset command).

<b>Variable</b>	Auto mode LED [4666]
<b>Description</b>	Status report: Active if the Auto mode LED on the front of the product is lit

<b>Variable</b>	Test mode LED [4667]
<b>Description</b>	Status report: Active if the Test mode LED on the front of the product is lit

<b>Variable</b>	Manu mode LED [4668]
<b>Description</b>	Status report: Active if the Manu mode LED on the front of the product is lit

<b>Variable</b>	Bus LED [4669]
<b>Description</b>	Status report: Active if the Bus LED on the front of the product is lit

<b>Variable</b>	Protection validation [4681]
<b>Description</b>	Status report: Active when all protections are activated after starting sequence (Under frequency, under voltage, oil pressure, temperature, etc...)

<b>Variable</b>	Mains failure summary [4731]
<b>Description</b>	Active if at least one protection configured as Mains failure is activate.

<b>Variable</b>	Mains breaker LED [4735]
<b>Description</b>	Status report: Active if the Mains breaker LED on the front of the product is lit

<b>Variable</b>	Mains LED [4736]
<b>Description</b>	Status report: Active if the Mains LED on the front of the product is lit (voltage presence on Mains)



## HYSTERESIS

<b>Variable</b>	Hysteresis 1 output [4710]
<b>Description</b>	Activation of analog Hysteresis function n°1, configuration of function is in Configuration/programming/Hysteresis

<b>Variable</b>	Hysteresis 2 output [4711]
<b>Description</b>	Activation of analog Hysteresis function n°2, configuration of function is in Configuration/programming/Hysteresis

<b>Variable</b>	Hysteresis 3 output [4712]
<b>Description</b>	Activation of analog Hysteresis function n°3, configuration of function is in Configuration/programming/Hysteresis

<b>Variable</b>	Hysteresis output activation on DI1 [4713]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°1. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI2 [4714]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°2. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI3 [4715]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°3. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI4 [4716]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°4. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI5 [4717]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°5. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI6 [4718]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°6. Function is managed by configurable low/high digital inputs in Digital Input menu.

## OPERATOR MANUAL

<b>Variable</b>	Hysteresis output activation on DI7 [4719]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°7. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI8 [4720]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°8. Function is managed by configurable low/high digital inputs in Digital Input menu.

## REMOTE BUTTONS

<b>Variable</b>	Shift button [951.0]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Right arrow button [951.1]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Down arrow button [951.2]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Left arrow button [951.3]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Up arrow button [951.4]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Enter button [951.5]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Esc button [951.6]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Fault/Alarm/info button [951.7]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Mains breaker button [951.8]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Stop button [951.10]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

## OPERATOR MANUAL

<b>Variable</b>	Start button [951.11]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Man button [951.12]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Test button [951.13]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Auto button [951.14]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.