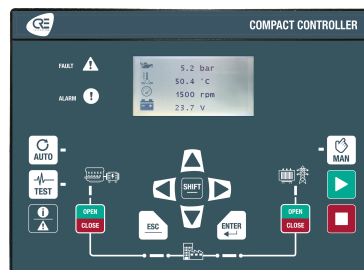




# OPERATOR MANUAL

## AMF COMPACT



CRE TECHNOLOGY  
Zone des Templiers - SOPHIA ANTIPOLIS  
130 allée Charles-Victor Naudin  
06410 BIOT - FRANCE  
Phone: +33 (0)4.92.38.86.82  
[www.cretechnology.com](http://www.cretechnology.com)  
[info@cretechnology.com](mailto:info@cretechnology.com)

COPYRIGHT © CRE TECHNOLOGY. ALL RIGHTS RESERVED

## TABLE OF CONTENTS

<b>LIST OF FIGURES.....</b>	<b>4</b>
<b>DESCRIPTION.....</b>	<b>6</b>
Front face.....	6
Rear face.....	9
Panel mounting.....	10
UL requirements.....	12
<b>USAGE.....</b>	<b>14</b>
Password.....	14
LCD.....	15
Wiring.....	17
Digital inputs.....	25
Digital/Relays outputs.....	27
Analog inputs.....	28
Hysteresis (digital input).....	33
Hysteresis.....	34
<b>SETTINGS.....</b>	<b>36</b>
Engine.....	36
Circuit breakers.....	40
Protections.....	45
Events.....	49
<b>ADVANCED SETTINGS.....</b>	<b>51</b>
Static paralleling.....	51
Load shedding.....	53
Maintenance schedule.....	55
<b>MAINS APPLICATION.....</b>	<b>56</b>
Change over mode.....	56
1 transfer switch.....	61
Auto start.....	63
<b>ADVANCED FUNCTIONS.....</b>	<b>65</b>
Easy Flex®.....	65
User variables.....	73
Alternative selection.....	74
Scheduler.....	76
Modbus TCP Mapping.....	79
Logger.....	80
<b>COMMUNICATIONS.....</b>	<b>81</b>
Network.....	81
Modbus TCP/IP.....	83
CANopen.....	86
SAE J1939.....	88
J1939 custom frames settings.....	95
J1939 sniffer.....	99
MTU MDEC.....	100
Modbus client.....	104
CAN bus good practices.....	107



<b>APPENDICES.....</b>	<b>109</b>
ECU J1939.....	109
Short circuit protection.....	115
Enter a code.....	123
Troubleshooting.....	124
Certifications.....	128
Software variables.....	129

## LIST OF FIGURES

Figure 1: Front face of a AMF COMPACT controller.....	6
Figure 2: Rear face of a AMF COMPACT controller.....	9
Figure 3: Simplified wiring diagram.....	9
Figure 4: Panel cutout.....	11
Figure 5: Index menu.....	15
Figure 6: Wiring recommendations.....	18
Figure 7: Wiring of the lower terminals.....	20
Figure 8: Diagram high leg delta.....	22
Figure 9: 12VDC power supply wiring.....	23
Figure 10: D+ wiring.....	24
Figure 11: Chronogram of the digital inputs delays.....	26
Figure 12: Chronogram of the digital/relays outputs pulse length and activation delay.....	27
Figure 13: Analog input configuration.....	28
Figure 14: Analog input curve library.....	29
Figure 15: A-1 : 2 wires analog sensor.....	29
Figure 16: A-2 : 1 wire analog sensor.....	30
Figure 17: Digital input configuration.....	30
Figure 18: B-1 : Digital sensor 2 wires.....	31
Figure 19: B-2 : Digital sensor 1 wire.....	31
Figure 20: Chronogram for Diesel Engine.....	36
Figure 21: Chronogram for Gas Engine.....	37
Figure 22: Coil control chronogram.....	42
Figure 23: Reattempt to close after an electrical fault.....	47
Figure 24: Static paralleling.....	52
Figure 25: Sequence of load shedding.....	54
Figure 26: Change over mode functions.....	56
Figure 27: Change over mode during a Mains failure.....	57
Figure 28: Change over mode with remote start.....	58
Figure 29: Change over : operating mode diagram.....	59
Figure 30: 1 transfer switch.....	61
Figure 31: Auto start (ASM).....	63
Figure 32: Easy Flex® list of variables.....	65
Figure 33: Using read only and read/write variables.....	65
Figure 34: Adding a variable block to the Easy Flex® variables area.....	66
Figure 35: Drag and drop of a variable in an instruction.....	66
Figure 36: Easy Flex® list of operators.....	66
Figure 37: Drag and drop of an operator in an instruction.....	67
Figure 38: Example of equation.....	67
Figure 39: Setting the NOT function of a variable block.....	68
Figure 40: Setting the Timer ON/Timer OFF function of a variable block.....	68


# OPERATOR MANUAL

Figure 41: Setting the assignment type of an instruction.....	68
Figure 42: Example of assignment.....	69
Figure 43: Adding an instruction to a condition.....	69
Figure 44: Adding an instruction to a function.....	70
Figure 45: Editing a function.....	70
Figure 46: Deleting an instruction through drag and drop.....	71
Figure 47: Easy Flex® debug mode.....	71
Figure 48: Page of the function Alternative selection.....	74
Figure 49: Adding variables button.....	74
Figure 50: Equation block definition.....	74
Figure 51: Scheduler icons definition.....	76
Figure 52: Scheduler with an event without periodicity.....	76
Figure 53: Form of the scheduler.....	77
Figure 54: Scheduler supervision.....	77
Figure 55: J1939 custom frames settings global view.....	95
Figure 56: J1939 custom receive frames settings.....	96
Figure 57: Example of the data layout in a transmit frame.....	98
Figure 58: J1939 sniffer configuration list.....	99
Figure 59: MDEC wiring.....	102
Figure 60: Modbus connection settings menu.....	104
Figure 61: Modbus server settings menu.....	105
Figure 62: Modbus reception menu.....	105
Figure 63: Modbus transmission menu.....	105
Figure 64: CAN bus accepted wiring topologies.....	107
Figure 65: Wrong placement of the termination resistor on the CAN bus.....	107
Figure 66: IEC curves graphs.....	116
Figure 67: IEC curves graphs.....	118
Figure 68: Inverse curves for various value of TMS.....	119
Figure 69: IEEE curves graph.....	120
Figure 70: How to find tA by parallelism.....	121
Figure 71: Declaration of conformity.....	128

# DESCRIPTION

## FRONT FACE

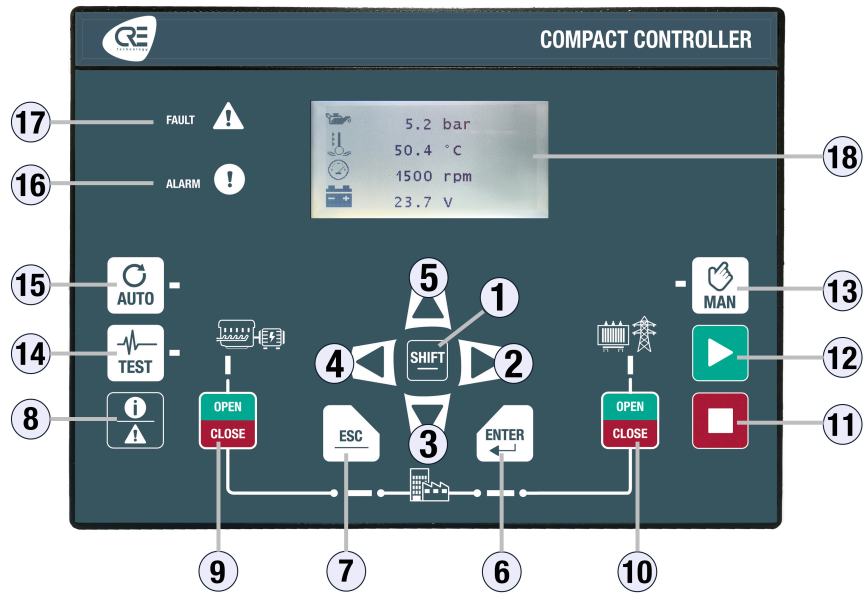Figure 1. Front face of a AMF COMPACT controller
















## OPERATOR MANUAL

PIN	Buttons	Functions
1	SHIFT button	Additional functions.
2	Right arrow button	Navigation button (Right).
3	Down arrow button	Navigation button (Down).
4	Left arrow button	Navigation button (Left).
5	Up arrow button	Navigation button (Up).
6	ENTER button	Validating entry / <b>MENU</b> .
7	ESC button	Cancel entry / escape <b>MENU</b> .
8	Information button	Allows access to the active faults, active alarms, events history or information pages.
9	Generator circuit breaker button	Can only be used in <b>MAN</b> mode. Generator circuit breaker control. Press to open. Press to close (synchronization & load transfer will be done automatically if Bus is powered & configuration is setup for paralleling operation).
10	Mains circuit breaker button	Can only be used in <b>MAN</b> mode. Mains circuit breaker control. Press to Open. Press to close (synchronization & load transfer will be done automatically if Bus is powered & configuration is setup for paralleling operation).
11	Stop button	Can only be used in <b>MAN</b> mode. Press to stop the Generator. Pressing once this button will set the Generator off load and initiate cooling down sequence
12	Start button	Can only be used in <b>MAN</b> mode. Press to start the Generator.
13	MAN button	<b>MAN</b> mode. The associated LED lights up when the mode is activated.
14	TEST button	<b>TEST</b> mode. The associated LED lights up when the mode is activated.
15	AUTO button	<b>AUTO</b> mode. The associated LED lights up when the mode is activated.
16	Alarm indicator	The LED flashes when an alarm appears. The LED is lit when an alarm is acknowledged, but not reseted.
17	Fault indicator	The LED flashes when a fault occurs. The LED is lit when a fault is acknowledged, but not reseted.
18	LCD screen	Screen size: 40mm x 70mm; Back-light : typical 50cd/m <sup>2</sup> , configurable. Type: STN; 256 x 128 pixels.



**Note:** Pressing the button **STOP** twice will set the Generator offload and stop the engine without cooling down sequence.

## Navigation keys

Buttons	Navigation mode	Edition mode
 	Scrolling menus/parameters	Modifying parameters values once selected: When up/down arrow buttons are used to modify values, holding the button will accelerate the entry scrolling.
 	<p>Right arrow:</p> <ul style="list-style-type: none"> <li>• Accessing a menu.</li> <li>• Navigating right in display/parameters pages</li> </ul> <p>Left arrow:</p> <ul style="list-style-type: none"> <li>• Return to previous menu.</li> <li>• Navigating left in display/parameters pages.</li> </ul>	NA
	<p> +   will increase/decrease the brightness of the LCD display.</p> <p> +   will increase/decrease the contrast of the LCD display.</p>	NA
	Returns to previous menu.	Cancels the settings and returns to <b>Navigation</b> mode.
	Accessing a menu / Switching to <b>Edition</b> mode.	Validation of the modified parameter and return to <b>Navigation</b> mode.

## Button inhibition

To inhibit front panel buttons, use the **Controller settings** ⇒ **System** ⇒ **Buttons inhibition (i4Gen)** page. This page shows the list of front panel buttons, tick the corresponding box to inhibit actions on the button.

It is also possible to inhibit the buttons by Modbus by modifying the variable [8102]. Each bit of the variable corresponds to a button. To know the bit associated to each button, please refer to the chapter [Software variables \(on page 129\)](#). Ex : Bit number 6 will inhibit the "Enter" button, bit number 1 will inhibit the "Shift" button.

## External requests for button activation

It is possible to remotely activate button actions by Modbus TCP, for a remote manual control for example. If a button action is controlled by Modbus TCP, the last request received (external or from the front panel) is treated in priority and cancel the previous request.

**MAN / AUTO:** If the 2 modes are requested, the **MAN** mode request cancels the **AUTO** mode one. The buttons on the front panel can be replaced by external commands via digital inputs.

REAR FACE

Figure 2. Rear face of a AMF COMPACT controller


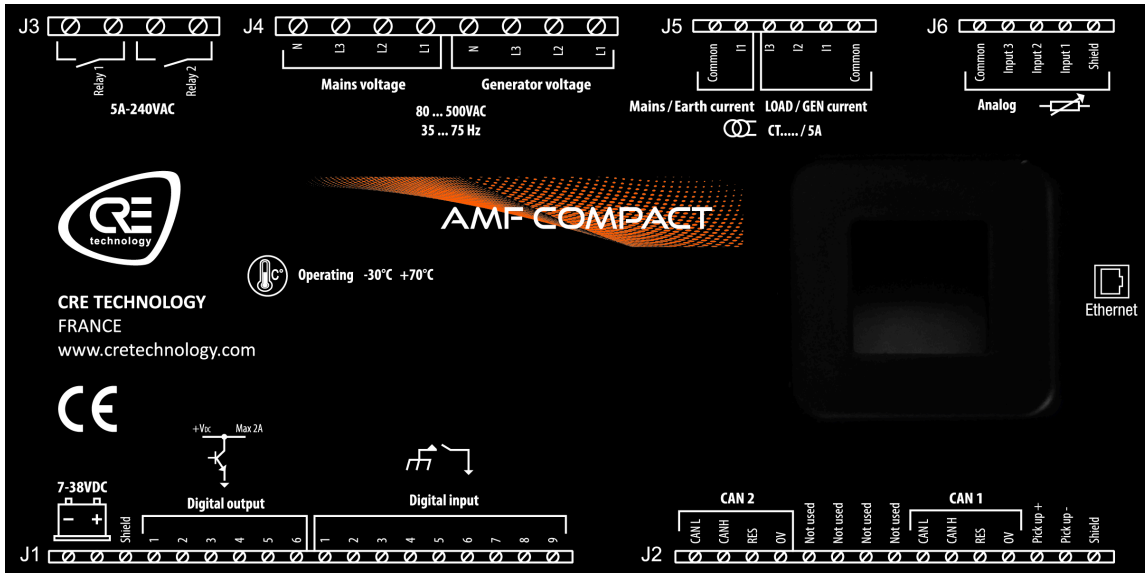


Figure 3. Simplified wiring diagram

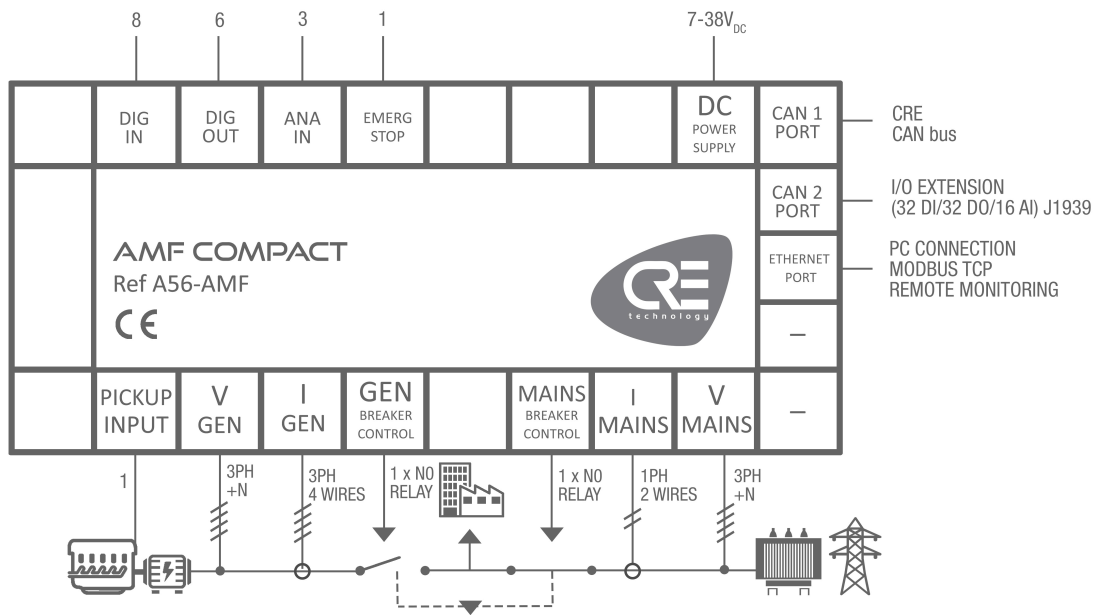

**Note:** If the input is not used to measure the Mains current, it can be used to measure the earth current and offer an earth current fault protection

## PANEL MOUNTING

This unit is designed to be panel mounted, which provides user with access only to the front panel.

### WARNING



#### **THIS UNIT IS NOT GROUNDED**

**Failure to follow these instructions may damage the unit.**

- Take all measures against Electronic Static Discharges.
- Do not try to open the unit.

## Environmental requirements

- Operating temperature: -20...70°C (-4...158°F); LCD display slows down a bit under -5°C (23°F). Avoid direct exposure to the sun.
- Storage temperature: -40...70°C (-40...158°F).
- Altitude: ≤ 4000m (13123ft) for a max AC voltage of 480VAC; ≤ 5000m (16404ft) for a max AC voltage of 400VAC.

## Unpacking

Make sure the packaging contains:

- The unit
- 6 connectors.
- 1 fixing kit composed of 2 parts.
- 4 screws.
- A delivery bill.

Unpack and keep the packaging in case of return.

Make sure the unit does not show scratches or visible defaults. Otherwise describe them on the RMA sheet (available on [CRE TECHNOLOGY website](#)) and return it with the product to your distributor.


## Installation

### Preparation

- Torque of mounting brackets: 0.4Nm.
- Cut the panel with a dimension of 220x160mm (8.7x6.3in) minimum.
- Make sure the cut-out is smooth and clean.



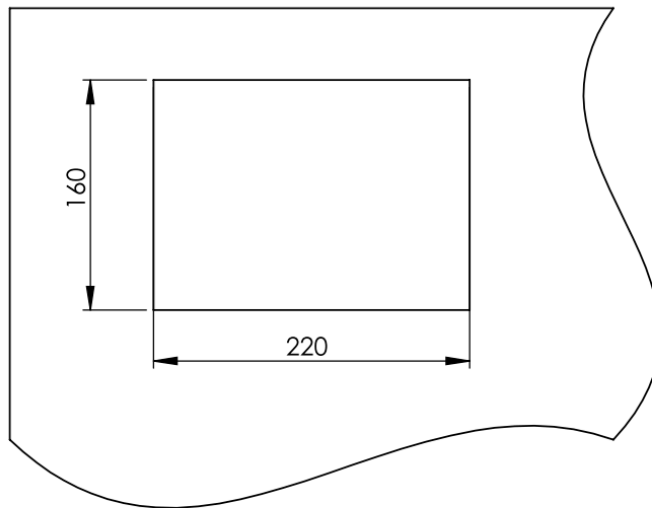Figure 4. Panel cutout



### Mounting

0	Tool : cross-head screwdriver size 1.	
1	Pass the unit through the mounting surface.	
2	In the rear, cover each of the four spacers using the 2 parts of the fixing kit.	
3	Screw a first corner against the mounting surface.	
4	Repeat on the diagonally opposite spacer.	
5	Repeat on the other diagonal and tighten equally (do not overtighten).	

## UL REQUIREMENTS



**Note:** Skip this chapter if your application does not require to follow the UL specification.

### Circuit separation

---

The wires connected to the terminal blocks for communication, for sensors and for the battery should be separated and secured to maintain at least 1/4" (6mm) separation between the wires connected to the Generator those connected to the Mains unless all conductors are rated 600V or greater.

### Other circuits specifications

---

For information on circuits ratings, see chapter [Wiring \(on page 17\)](#).

### Mains specifications

---

#### Over-voltage Category

III, 300VAC system voltage.

#### Generator / Mains Voltage Measurements (J4)

300VAC max P-N, 2 phases; 500VAC P-P 3 phases, 35...75Hz.

#### Current Inputs (J5)

Must be connected through listed or recognized isolating current transformers with secondary rating of 5A max 50/60Hz. (XODW2.8) Instrument transformers (according to IEEE C57.13 standard or the equivalent).

#### Communication Circuits

Must be connected to UL listed equipments.

#### Output Pilot Duty (J3)

250VAC, 5A max general purpose, 240VAC, 1/4HP for NO contact, 1/6HP for NC contact, Output pilot duty: C150, C300.

#### Digital outputs (J1)

FET: Fuel shutoff: 63VA, 1.8A max current.

### Overcurrent protection (DC supply and L1, L2, L3, N)

---

Installer shall protect DC supply and L1, L2, L3, N by fuse Type: R/C (JDYX2/7), or R/C (JDYX2) and CSA Certified Class 1422-30.

Rating of fuses:

- DC supply to be protected by 5A, 40VDC max.
- L1, L2, L3, N, fuse protection 100mA/600VAC max.

## Wiring of the terminals

---

Terminal (screw type):

- Tightening Torque: 3.5lb.in (0.4Nm)

Wires:

- 28-14 AWG, Cu, 75°C min.

Conductor protection must be provided in accordance with NFPA 70, Article 240.

Low voltage circuits (35VDC or less) must be supplied from the engine starting battery or an isolated secondary circuit.

## Environment

---

Device must be installed in an unventilated or filtered ventilation enclosure to maintain a pollution degree 2 environment.

Maximum surrounding air temperature rating: 45°C.

## Advanced wiring diagram

---

Wiring diagrams are available on the website [CRE TECHNOLOGY](#).

## Installation

---


For information on installing the product, see chapter [Panel mounting \(on page 10\)](#).

## USAGE

### PASSWORD

The menus will be automatically locked if no operation is performed during the time set in the *Controller settings* ⇒ *System* ⇒ *Password* page (Factory setting: 30 minutes).  
The standby screen will be displayed.






The module provides secured password access to protect configuration changes and limit data accessibility:

Level	Default password	Authorization	Accessible pages and items
0	No password. Press 	By default, this level is not password protected, but one can be set.	Pages of the <b>Controller supervision</b> menu only.
1	1	User level, settings and commissioning.	Pages of the <b>Controller supervision</b> and <b>Controller settings</b> menus.
2	1234	Used to change advanced settings.	Advanced settings.

Passwords can be changed using *i4Gen Suite* software.

To access the **Controller supervision** menu, press .

To access the **Controller settings** menu, the padlock must be unlocked:

1. Press  to select **Controller settings**.
2. Press  to switch to password input mode (as for other settings).
3. Change the character by pressing .
4. Move to the next character by pressing .
5. Repeat the operation for each character.
6. Confirm the password by pressing .

## LCD

### Navigation

---

Press **ESC**, then, select the required menu, then press **ENTER** and enter the level 1 password if necessary (Settings):



Figure 5. Index menu





A black pointer spots the currently selected item/setting.

Two main menus are available on the LCD screen and three in the **i4Gen Suite** software:

- The menu **Controller supervision** gives all product measurements in real time.
- The menu **Controller settings** is used to adjust the controller and system settings (date/time, screen features, ...).
- The menu **i4Gen** (only available in the configuration software) is used to adjust the software settings.



To cycle through the menus and menu items, press  or .

To cycle through the pages of the actual menu, press  or .

### Edition

---

To change a setting:



1. Navigate to the setting to be changed.
2. Press **ENTER** to switch to **Edition** mode; the current value blinks.
3. Press  or  to get the new value.
4. Press **ENTER** to validate the new value, **ESC** to reject it. Module returns to **Navigation** mode.

It is also possible to modify the parameters using the Modbus TCP protocol.


### Dedicated pages



---

Dedicated pages includes:

- Active fault: currently active or unacknowledged faults. To reset faults, press **SHIFT** + .
- Active alarm: currently active or unacknowledged alarms. To reset alarms, press **SHIFT** + .

- History: a list of all alarms/faults/events that happened with their state and timestamp.
- Information pages.

Press  to access the dedicated pages menu. It is then possible to navigate through these dedicated pages using the arrow buttons.

To return to the previous page, press  or .

## History

---

Up to 500 archived events can be displayed on the screen.

Each event is time-stamped as follows:

**jj/mm/yy hh:mn:ss protection name On (or Off).**

## Information

---

These pages show the current status of the controller state and of the motor with the time elapsed in each state.

**Controller state** [4000] displays the current status of the unit regarding the management of the system's automatism.

**Engine** [4001] displays the current status of the unit regarding the engine.

**Information variables:** to display any variable, enter the code of the variable to be displayed.

## WIRING

Tool: insulated screwdriver Ø1.5 mm (0.04 in), tightening torque: 0.8 Nm (7 lb-in) max.

Accessories: 4, 5, 6, 8, 15 & 18-terminal cable connectors, protective gloves, carpet if the floor is wet.

### ⚠ WARNING

#### THE UNIT IS NOT PROTECTED

Failure to follow these instructions may damage the unit.

Use external fuses:



- Generator and Mains phases: 100mA/600VAC
- Battery positive: 5A/40VDC

Install the fuses as near as possible to the unit, in a place easily accessible to the user.

### ⚠ DANGER

#### RISK OF ELECTRIC SHOCK, EXPLOSION OR ARCING

Failure to follow these recommendations may result in death or serious injury.



- The module may only be installed and maintained by qualified electricians.
- Use personal protective equipment (PPE).
- Follow good safety practices for electrical work.
- Turn off the power before installing or replacing a fuse, and before installing the module.
- Use equipment adapted to check the absence of voltage.
- Do not use a resettable fuse.

## General procedure

1. Make sure the cable connectors are not plugged in.
2. Take on protective gloves.
3. Connect the wires on each cable connector in accordance with the National Wiring Regulations.
4. Plug each cable connector onto the related connector.
5. Plug a direct Ethernet cord (RJ45, male-male, 100m max., 100Ω; a crossover cable such as 3-m long A53W1 is OK as long as your switch uses auto MDI/MDIX technology or if the link to PC is direct) and lock the rear door.

## Recommendations


Wires section: 1.5mm<sup>2</sup>(AWG15).

To avoid ElectroMagnetic Interferences, shield cables appropriately; for CAN bus, see [CAN bus good practices \(on page 107\)](#).

Isolation : keep the power cable separate from the CAN bus cables. The latter can be installed in the same duct as the low level I/O wires (under 10V DC).

If power and communication cables have to cross each other, do it at right angles to avoid crosstalk:

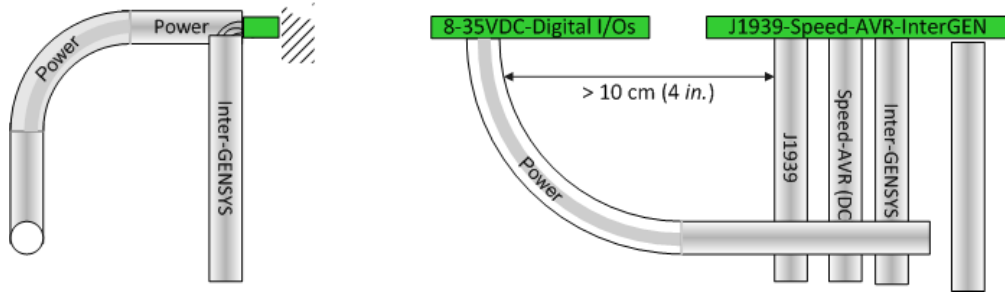Figure 6. Wiring recommendations



Wiring diagrams are available on the website [CRE TECHNOLOGY](http://www.cretechnology.com).

## Upper terminals

**⚠ DANGER**



### EXPOSED TERMINALS

Failure to follow this instruction may result in death, serious injury or equipment damage. Do not touch L1, L2, L3 terminals nor use non-insulated tools near them. These terminals are unprotected and will expose the user to dangerous voltages.

Terminal blocks	Label	Description	Note
<b>Relay outputs (J3)</b>			Normally open. Breaking capacity: 5A, 240VAC.
Relay 1		Relay 1 +	
		Relay 1 –	
Relay 2		Relay 2 +	
		Relay 2 –	
<b>AC voltage (J4)</b>			100...480VAC, 35...75Hz, 100mA max; accuracy: 1% fsd.
Mains voltage	N	Neutral of the Mains	Optional.
	L3	Voltage of the phase 3 of the Mains	These lines must be protected externally with 100mA/600VAC fuses.
	L2	Voltage of the phase 2 of the Mains	
	L1	Voltage of the phase 1 of the Mains	
Generator voltage	N	Neutral of the Generator	Optional.
	L3	Voltage of the phase 3 of the Generator	These lines must be protected externally with 100mA/600VAC fuses.
	L2	Voltage of the phase 2 of the Generator	
	L1	Voltage of the phase 1 of the Generator	
<b>Current inputs (J5)</b>			Short-circuit protection available.



Terminal blocks	Label	Description	Note
Mains/Earth current	Common	Common point of the electrical currents.	<p>Connect the common point of the electrical currents to this terminal.</p> <div style="border: 1px solid black; background-color: #fff9c4; padding: 5px;"> <p><b>!</b> <b>Important:</b> This terminal must also be connected to the ground. Failure to follow this instruction may damage the controller.</p> </div>
	I1	Current of the phase 1 of the Mains	<p>0...5A. Maximum rating: 15A during 10s.</p> <ul style="list-style-type: none"> <li>• Load: 1VA. Keep the lead length short to preserve accuracy (up to 0.5% full scale deviation).</li> <li>• Maximum value of the external CT ratio and other details can be found in <b><i>i4Gen Suite</i></b>.</li> <li>• If Mains power measurement is configured as "mA" or "Unused", this input can be used as an earth current measurement.</li> </ul>
LOAD/GEN current	I3	Current of the phase 3 of the Generator	<p>0...5A. Maximum rating: 15A during 10s.</p> <ul style="list-style-type: none"> <li>• Load: 1VA. Keep the lead length short to preserve accuracy (up to 0.5% full scale deviation).</li> <li>• Maximum value of the external CT ratio and other details can be found in <b><i>i4Gen Suite</i></b>.</li> </ul>
	I2	Current of the phase 2 of the Generator	
	I1	Current of the phase 1 of the Generator	
	Common	Common point of the electrical currents.	<p>Connect the common point of the electrical currents to this terminal.</p> <div style="border: 1px solid black; background-color: #fff9c4; padding: 5px;"> <p><b>!</b> <b>Important:</b> This terminal must also be connected to the ground. Failure to follow this instruction may damage the controller.</p> </div>
<b>Analog inputs (J6)</b>			0...500Ω.
Analog	Common	Common of the analog inputs	Connect it to the battery minus terminal.
	Input 3	Analog input 3	
	Input 2	Analog input 2	
	Input 1	Analog input 1	
	Shield	Ground	Connect to the ground.


## Lower terminals

**⚠ WARNING**

**RISK OF EQUIPMENT DAMAGE**  
**Failure to follow this instruction can damage the controller.**  
 Connect battery negative to the module terminal 8...35VDC– with 1.5mm<sup>2</sup> (AWG15) cable.

# OPERATOR MANUAL

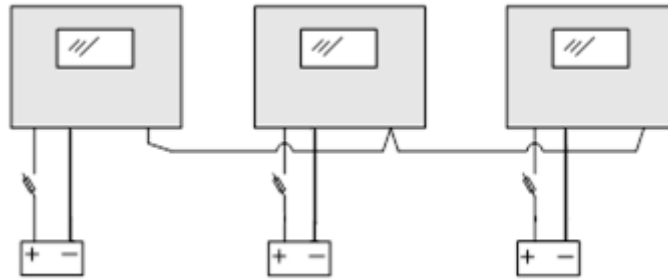Figure 7. Wiring of the lower terminals



Terminal block	Label	Description	Notes
<b>Power supply and digital inputs/outputs (J1)</b>			
Power supply (7-38VDC)	-	Power supply -	1.5mm <sup>2</sup> (AWG15).
	+	Power supply +	7...38VDC, consumed current: 130mA at 24V (standby and operation).
	Shield	Ground	Connect to the ground.
Digital outputs	1	Digital output 1	Free digital output (max: 1.8A). Protected against short circuits. A reactive load is supported. Not isolated from power supply.
	2	Digital output 2	
	3	Digital output 3	
	4	Digital output 4	
	5	Digital output 5	
	6	Digital output 6	
Digital inputs	1	Digital input 1	Free digital input with 10kΩ pull-up. Accepts NO or NC contact to 0V. Not isolated from power supply.
	2	Digital input 2	
	3	Digital input 3	
	4	Digital input 4	
	5	Digital input 5	
	6	Digital input 6	
	7	Digital input 7	
	8	Digital input 8	
	9	Digital input 9	
<b>CAN 2, CAN 1, speed output, AVR output, magnetic pick-up (J2)</b>			
<b>CAN 2</b> (for J1939 and CANopen)	CAN L	CAN low	Blue wire.
	CAN H	CAN high	White wire.
	RES	Resistor -	Connect to the "CAN H" terminal when the inner resistor must be inserted (bus ends).

# OPERATOR MANUAL

Terminal block	Label	Description	Notes
	0V	Shield	<p>Use twisted pair cables.</p> <p>There are two possible wiring for this terminal.</p> <p>First wiring (<b>recommended in most cases</b>): do not connect this terminal.</p> <p>Second wiring:</p> <ul style="list-style-type: none"> <li>• Connect the shield to the 0V terminal on all controllers. CAN1 and CAN2 has galvanic separation, so no ground loops are created.</li> <li>• Do not connect the 0V terminal to the ground.</li> </ul>
<b>CAN 1</b> (for <b>CRE-Link®</b> )	CAN L	CAN low	White wire with blue strip (when using a <b>CRE TECHNOLOGY</b> cable).
	CAN H	CAN high	Blue wire with white strip (when using a <b>CRE TECHNOLOGY</b> cable).
	RES	Resistor - terminal	Connect to the "CAN H" terminal when the inner resistor must be inserted (bus ends).
	0V	Shield	<p>Use twisted pair cables.</p> <p>There are two possible wiring for this terminal.</p> <p>First wiring (<b>recommended in most cases</b>): do not connect this terminal.</p> <p>Second wiring:</p> <ul style="list-style-type: none"> <li>• Connect the shield to the 0V terminal on all controllers. CAN1 and CAN2 has galvanic separation, so no ground loops are created.</li> <li>• Do not connect the 0V terminal to the ground.</li> </ul>
<b>Magnetic pickup</b>	Pickup +		100Hz...10kHz. Voltage limits between + /-2...40VAC.
	Pickup -		
	Shield	Ground	<p>Speed measurement for speed regulation, crank management and over-speed.</p> <p>Better option than alternator voltage.</p> <p>An over-speed shutdown device independent of the module is required.</p> <p>The alarm can be generated by ECU or by the module.</p>

**⚠ WARNING**



**RISK OF EQUIPMENT DAMAGE**

Failure to follow this instruction can damage the CAN transmitter/receiver.

Switch off the unit before plugging or unplugging the CAN bus connector or disconnecting wires.



**Note:** In case of a power outage, the unit remains functional for 70ms at 24V, and 20ms at 12V.

**Potential transformers ratio definition**

The potential transformer can be connected in various ways. According to the type of potential transformer connection, the potential transformer ratio to set in the controller may be different:

- If the primary winding is connected in star(wye) and the secondary winding is connected in delta, the ratio is:  $PTratio = \frac{U_{nom}}{100\sqrt{3}}$
- If the primary and secondary windings are both connected in star(wye), the ratio is:  $PTratio = \frac{U_{nom}}{100}$


**Other systems of voltage**

For a **bi-phase 180°** application, connect voltages and currents to L1-L3 terminals (and N). The same logic applies for I1-I3 (and common).

For a **mono-phase** application, connect voltages and currents to L1-N terminals. The same logic applies for I1 and common.

There are 3 triphase high leg delta systems:

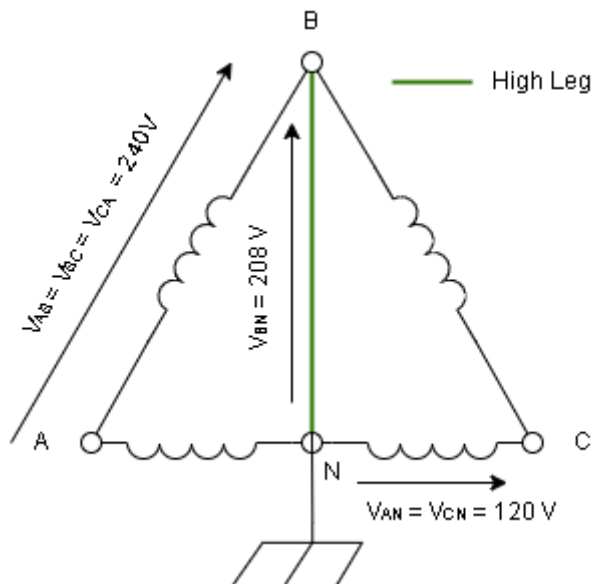Figure 8. Diagram high leg delta



A wiring to neutral is required to use these systems.

If **Triphase L1-N-L2** is selected, connect the "High leg" voltage (B-N) on L3, both other phases on L1 and L2.

If **Triphase L2-N-L3** is selected, connect the "High leg" voltage (B-N) on L1, both other phases on L2 and L3.

If **Triphase L3-N-L1** is selected, connect the "High leg" voltage (B-N) on L2, both other phases on L3 and L1.

**⚠ WARNING**



**OVER VOLTAGE RISK WITH HIGH LEG DELTA VOLTAGE SYSTEMS**

**Failure to follow these instructions may damage the unit.**


The maximal P-N voltage of the product is 270 VAC (which is equal to 310 VAC for P-P voltage). If higher voltages are required, potential transformers should be used. See [Potential transformers ratio definition \(on page 22\)](#).

**Powering the module with a 12VDC battery**

A voltage drop from 12V to 6V can occur when the power consumption of the starter is too high and the battery undersized. This drop can reset the module. To counter this problem, a capacitor and a diode need to be wired as indicated in the schematic below:

The diode needs to be able to handle high currents (ex: Littelfuse DST2045AX). Typically select a 24000µF capacitor that handles at least 25V or higher (ex : KEMET ALS71A243DB040).

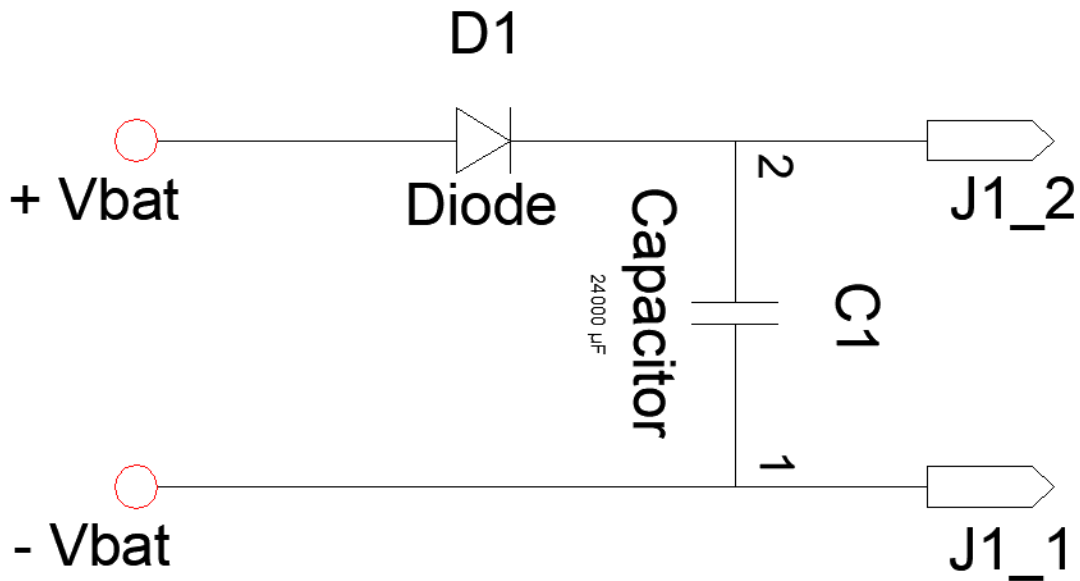
Figure 9. 12VDC power supply wiring



**D+ wiring**

The D+ line of the alternator needs to be wired as shown below to ensure the magnetization of the field coil:

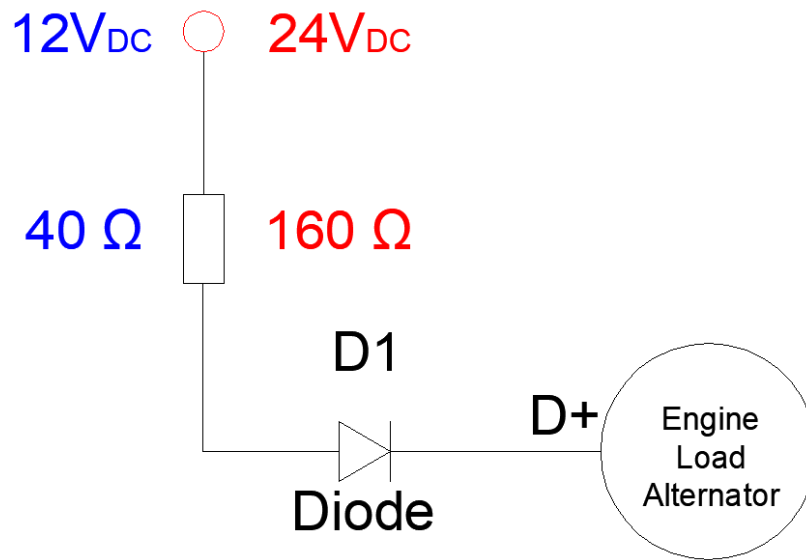Figure 10. D+ wiring



## DIGITAL INPUTS

Several parameters can be configured for each digital input:

- **Label** (only in *i4Gen Suite* software)
- **Function**
- **Direction**
- **Validity**
- **Timer ON**
- **Timer OFF**

### Label

This is the name you give to the input. If programmed accordingly, the label will be shown in the following pages: digital inputs, information, alarm, and fault.

### Validity

Validity indicates when the digital input is taken into account. This parameter can take four values:

Value	Validity	Description
0	Never	Never active: must be selected if you do not use the input.
1	Always	Always active: the input is monitored as long as the module is powered.
2	After valid protect	The input is monitored at the end of the <i>Delay before activation of the protections</i> [2004] delay. <sup>(1)</sup>
3	When gen ready	The input is monitored when the Generator is ready for use.

<sup>(1)</sup>Configure the protection inhibition time in **Controller settings** ⇒ **General** ⇒ **Timers**.

### Direction


For each input, two options are available:

Value	Label	Function
0	Normally opened	To be used for standard cases unless the input is used as protection.
1	Normally closed	Must be selected if the input is normally connected to 0V (open when active).

### Delays

For each input, two delays can be defined in 100ms steps between 0 and 6553s:

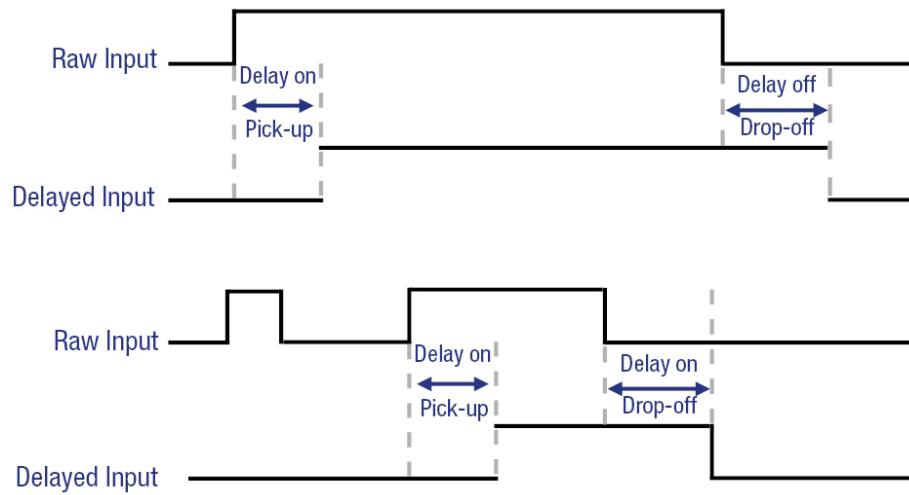Figure 11. Chronogram of the digital inputs delays



## Functions

---

Each input can be configured. To access all functions, use **i4Gen Suite**.  
 Function list is available in the chapter [Software variables \(on page 129\)](#).



## DIGITAL/RELAYS OUTPUTS

Several parameters can be configured for each digital/relay output:

- **Label** (only in *i4Gen Suite* software)
- **Function**
- **Polarity** (sometimes referred to as **Direction**)
- **Pulse length: 0 means no pulse**
- **Timer ON**

### Polarity

Each output can be:

- **Normally energized**: the output is de-energized when its function is activated.
- **Normally de-energized**: the output is energized when its function is activated.

### Pulse length and activation delay


Each digital/relays output can be configured to act as a pulse. The pulses lengths are defined with the parameters [2761] to [2766] for digital outputs and [2767] to [2768] for relays output. As soon as a pulse begins, it will last for the configured duration even if the associated function is not active anymore.

Set to 0 in order to have a continuous output (no pulse).

It is also possible to delay the output activation using parameters [2793] to [2798] for digital outputs and [8250] to [8251] for relays output.

Setting the activation delay to 0 means there will be no delay.

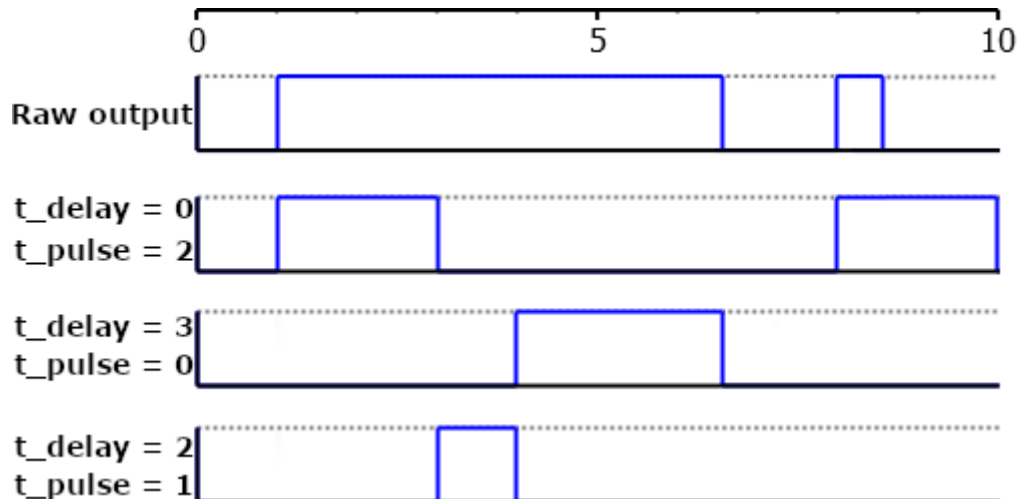Figure 12. Chronogram of the digital/relays outputs pulse length and activation delay



### Functions

Each output can be configured. To access all functions, use *i4Gen Suite*. Function list is available in the chapter [Software variables \(on page 129\)](#).

## ANALOG INPUTS

### General analog input configuration

1. **Label:** Analog input's label (limited to 14 characters).
2. **Type:** Defines the way you want to use your analog input : unused, analog input, digital input.


The analog input configuration page changes according to the selected type.

### Type set to unused

No configuration available.

### Type set to analog input

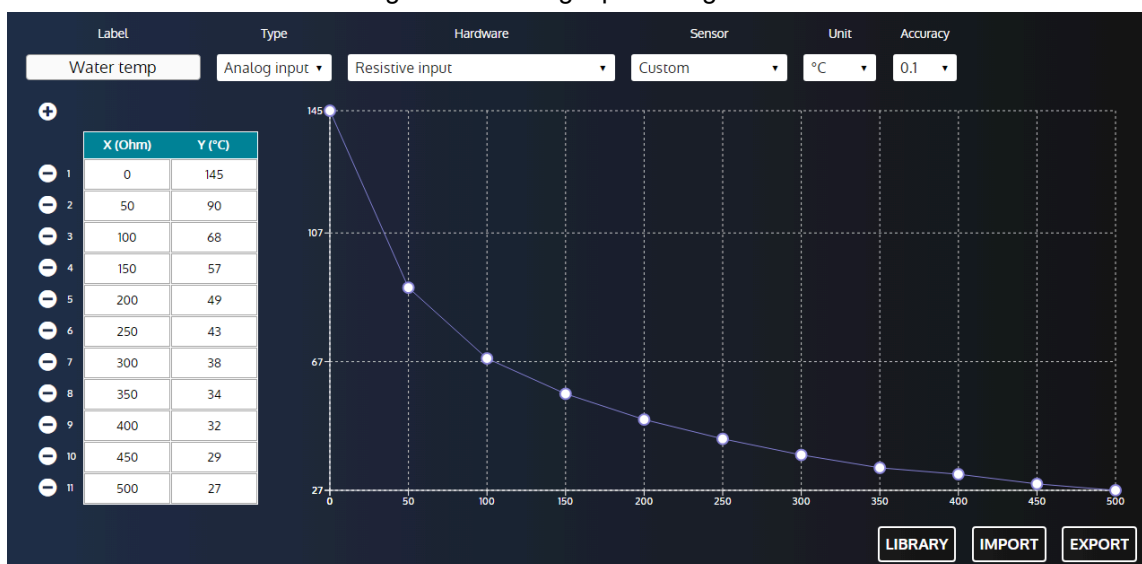Figure 13. Analog input configuration




1. **Hardware:** Defines the hardware type of the analog input (resistive / 20mA transducer).
2. **Sensor:** Defines the sensor type of the analog input (custom / oil pressure / water temperature). This setting is not present on all kinds of **COMPACT** controllers.
  - Oil pressure can only be assigned to Analog input 1.
  - Water temperature can only be assigned to Analog input 2.
3. **Unit:** Defines the unit of the analog input.
4. **Accuracy:** Defines the accuracy of the analog input (i.e. number of decimal digits to display the measured value).
5. **Calibration points table** (up to 31 points):

Calibration is used to estimate a reading from a resistance/current value by interpolation between 2 resistance/current values. Negative values are supported.

To set calibration points:

- Press the + button to add a new point.
  - Press the - button to remove an existing point.
  - To set the X-axis coordinate of a point, fill the corresponding X input.
  - To set the Y-axis coordinate of a point, fill the corresponding Y input.
6. **Curve display:** Display of the calibration points on a curve in X-axis ascending order.
  7. **Library:** Opens the curve library.

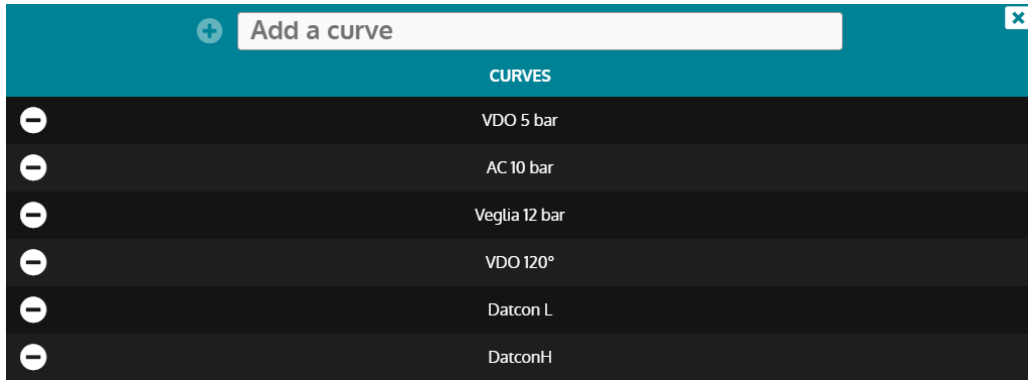Figure 14. Analog input curve library



Enter a name in the input and press the + button to save the current curve into the library. Press the - button to remove a saved curve (not available for factory curves). Click on a curve to load it into the analog input configuration.

- 8. **Import:** Opens the file browser to import a curve file into the analog input configuration.
- 9. **Export:** Opens the file browser to export a curve file.

## How to connect analog sensors

You can use 1 or 2-wire analog sensors, or 1-wire or 2-wire logical sensors.



**Note: Our recommendations:** In each case you must always connect the analog inputs' "common" terminal (J6) to the power supply minus terminal (J1) and also connect it to the engine block in the case of 1-wire sensor. You must use the following wiring (Incorrect wiring of the analog inputs can cause damage to the module, or cause a wrong measurement).

Figure 15. A-1 : 2 wires analog sensor


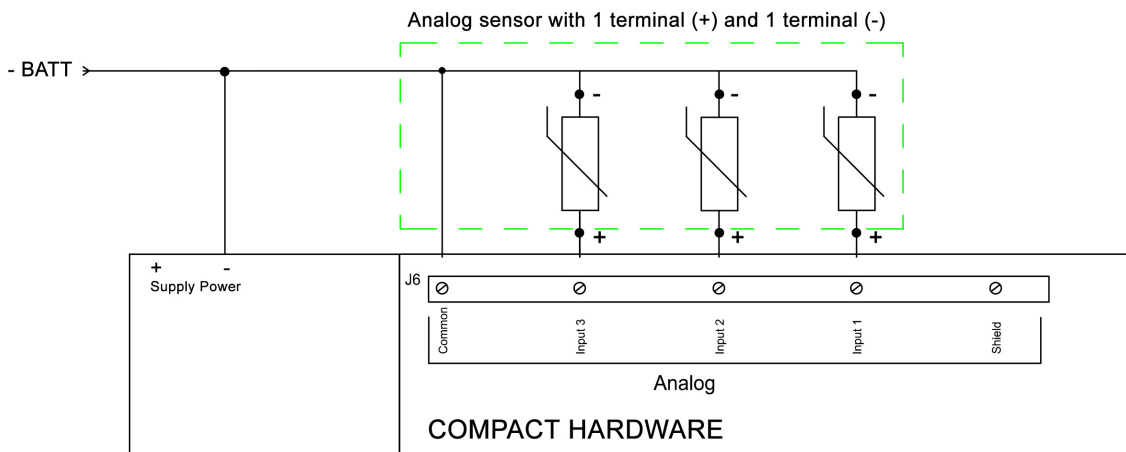


Figure 16. A-2 : 1 wire analog sensor

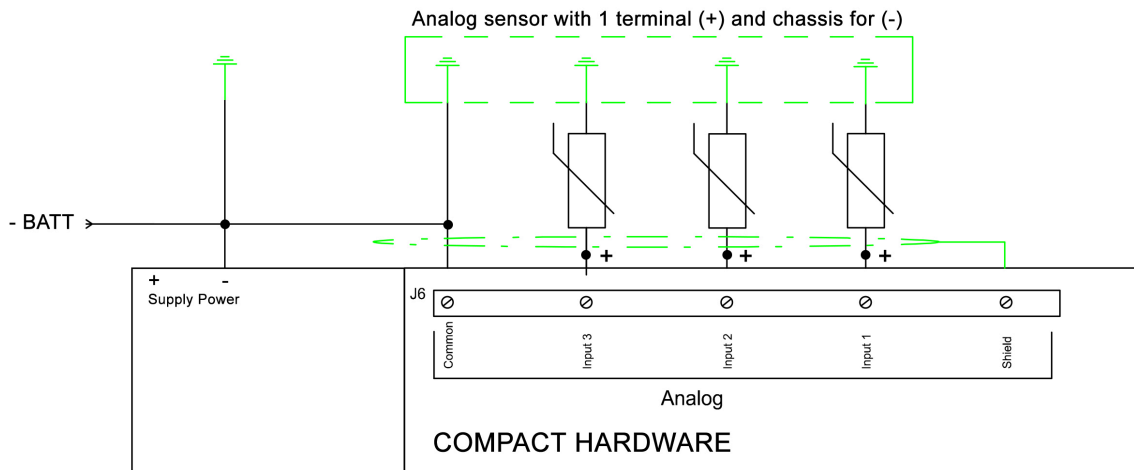

**⚠ WARNING**




**THE WARRANTY WILL BE VOIDED IF THE MANUFACTURER'S INSTRUCTIONS ARE NOT RESPECTED.**

To act as a 0...20mA input or 4...20mA, connect the input with a 39Ω resistor between the analog input and the analog common.

The calibration of the 20mA transducer can then be performed as on a resistive analog input depending on the characteristics of the sensor.

## Type set to digital input

Figure 17. Digital input configuration



1. **Function:** Defines the digital input function.
2. **Validity:** Condition to take the digital input into account.
  - Never: The input will never be taken into account.
  - Always: The input will always be taken into account.
  - When gen ready: The input will be taken into account when the Generator is ready.
  - After valid protect: The input will be taken into account when the variable *Protection validation* [4681] is equal to 1. (check the chapter [Digital inputs \(on page 25\)](#) for more information)
3. **Polarity:** Digital input's polarity.
4. **Delay:** Delay until the input becomes active.

## How to connect digital sensors

When an analog input is used as a logic input, applying a 0V to the input enables it, applying nothing disables it.

Figure 18. B-1 : Digital sensor 2 wires


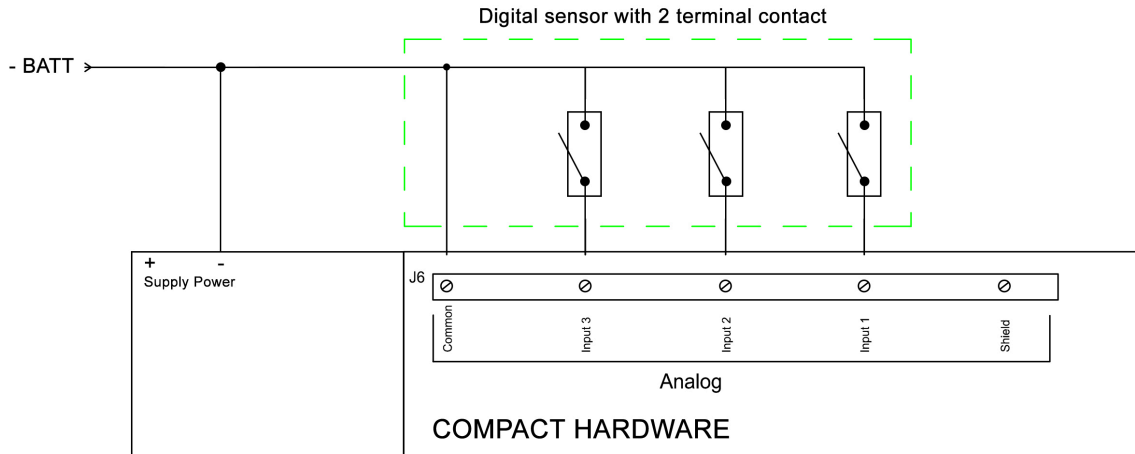


Figure 19. B-2 : Digital sensor 1 wire

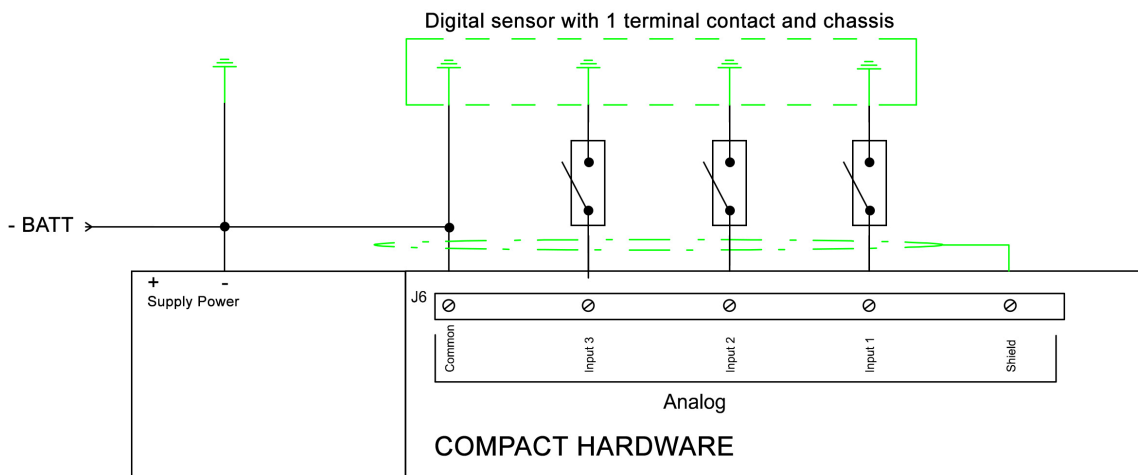

**⚠ WARNING**



**THE WARRANTY WILL BE VOIDED IF THE MANUFACTURER'S INSTRUCTIONS ARE NOT RESPECTED.**

## Protections

Available for analog inputs when sensor type is set to **Custom**. If sensor type is set to **Water temperature** or **Oil pressure**, refer to dedicated protections.

Several parameters can be configured from the **Controller settings** ⇒ **Protections** ⇒ **Other protections** ⇒ **Analog inputs** page:

- Level (LV): Limit value before triggering the protection. It can be a low or high threshold.
- Delay (TM): Time after which the protection is triggered.
- Control (CT): Control of the protection. It defines the action related to the protection
- Direction (SS): Polarity of the protection. It defines if the limit value is a low or high threshold

These parameters are available in the **Controller settings** ⇒ **Protections** ⇒ **Other protections** ⇒ **Analog inputs** page.

## OPERATOR MANUAL

	Protections				
	Threshold	Timer	Control	Direction	Function
Analog input 1 level 1	[2600]	[2601]	[2602]	[2606]	[2678]
Analog input 1 level 2	[2603]	[2604]	[2605]		
Analog input 2 level 1	[2608]	[2609]	[2610]	[2614]	[2679]
Analog input 2 level 2	[2611]	[2612]	[2613]		
Analog input 3 level 1	[2616]	[2617]	[2618]	[2622]	[2680]
Analog input 3 level 2	[2619]	[2620]	[2621]		

## HYSTERESIS (DIGITAL INPUT)

For a given hysteresis, three different digital signals are required:

- Two digital inputs are used respectively as low threshold and high threshold signals.
- One digital output is used to control an equipment with a hysteresis

The hysteresis settings can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital inputs** ⇒ **Hysteresis on digital input** page. Each hysteresis proposes the following parameters (the first hysteresis is taken as example):

- **Hysteresis 1 enable for digital input**
- **Pulse length DO 1**
- **Direction hysteresis 1**

### Hysteresis 1 enable for digital input

Enables/disables the hysteresis.

### Pulse length DO 1

The delay to wait when the condition is met (reaching the low/high threshold) before activating the hysteresis output.

### Direction hysteresis 1

For each hysteresis, two options are available:

Value	Label	Function
0	Set on low threshold, reset on high	<p>The associated digital output will be set when the digital input assigned to the low threshold is activated and it will reset once the digital input assigned to the high threshold is activated.</p> <p>Please note that once the digital output is activated, the state of the digital input assigned to the low threshold will not matter. The digital output state can only change when the digital input assigned to the high threshold is activated.</p>
1	Set on high threshold, reset on low	<p>The associated digital output will be set when the digital input assigned to the high threshold is activated and it will reset once the digital input assigned to the low threshold is activated.</p> <p>Please note that once the digital output is activated, the state of the digital input assigned to the high threshold will not matter. The digital output state can only change when the digital input assigned to the low threshold is activated.</p>

### Setting inputs for your hysteresis

To select the required digital input signals, please refer to [Digital inputs \(on page 25\)](#). The digital input functions to be used can be found in the **Hysteresis** section of the search engine.

### Setting an output for your hysteresis

To select the digital output controlled by the hysteresis, please refer to [Digital/Relays outputs \(on page 27\)](#). The digital output function to be used can be found in the **Hysteresis** section of the search engine.

# HYSTERESIS

For a given Hysteresis, two different signals are required:

- One variable for the measure
- One digital output for the hysteresis to activate

Open the **Controller settings** ⇒ **Programming** ⇒ **Hysteresis (i4Gen)** page. Each hysteresis proposes the following parameters (the first hysteresis is taken as example):

- **Enable Hysteresis 1**
- **Hysteresis 1**
- **Low level threshold**
- **Timer on low level threshold**
- **High level threshold**
- **Timer on high level threshold**
- **Hysteresis Direction 1**

## Enable Hysteresis 1

---

Enables/disables the hysteresis.

## Hysteresis 1

---

Chooses one among all of the variables of the product to bind the hysteresis with.

## Low level threshold

---

The hysteresis output will be activated when the variable reaches a value lower than or equal to the configured low level threshold value.

## Timer on low level threshold

---

The delay to wait once the variable value reaches the low level threshold before activating the hysteresis output.

## High level threshold

---

The hysteresis output will be activated when the variable reaches a value greater than or equal to the configured high level threshold value.

## Timer on high level threshold

---

The delay to wait once the variable value reaches the high level threshold before activating the hysteresis output.

## Hysteresis Direction 1

---

For each hysteresis, two options are available:



Value	Label	Function
0	Set on low threshold, reset on high	<p>The associated digital output will be set when the low threshold value is reached and it will reset on reaching the high threshold value.</p> <p>Please note that once the digital output is activated, the low threshold value will not matter. The digital output state can only change on reaching the high threshold value.</p>
1	Set on high threshold, reset on low	<p>The associated digital output will be set when the high threshold value is reached and it will reset on reaching the low threshold value.</p> <p>Please note that once the digital output is activated, the high threshold value will not matter. The digital output state can only change on reaching the low threshold value.</p>

## Setting an output for your hysteresis

To set a digital output, please refer to [Digital/Relays outputs \(on page 27\)](#). The functions to use can be found in the **Hysteresis** section of the search engine.

# SETTINGS

## ENGINE

### Internal start sequence

During the start sequence, the module controls the prelub, preglow, crank and fuel outputs when proper conditions are met, whereas the protections are inhibited. This concerns all engine protections.

Main start phases:

1. The engine is considered as started when its speed reaches the starter rpm stop threshold configured in the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **Engine** ⇒ **Starter** page.
2. The module checks if the speed of the engine is in an acceptable range (between 95% and 105% of the nominal speed) during an amount of time set by variable [3469] to consider the speed as stable and get to the next sequence. If the speed does not respect these stability conditions during the time defined in variable [2393], the product treats the issue as an alarm or a fault depending on the configuration of variable [2394]. If an alarm is configured, the module will constantly check for the stability of the engine speed until ordered to stop the engine or until the speed is considered as stable.
3. The module checks if the voltage of the alternator is in an acceptable range (between 95% and 105% of the nominal voltage) during an amount of time set by variable [2056] to consider the voltage as stable and get to the next sequence. If the voltage does not respect these stability conditions during the time defined in variable [2395], the product treats the issue as an alarm or a fault depending on the configuration of variable [2396]. If an alarm is configured, the module will constantly check for the stability of the alternator voltage until ordered to stop the engine or until the voltage is considered as stable.
4. The Generator is ready; the protections are activated unless the parameter *Delay before activation of the protections* [2004] is set to extend their inhibition time.

Figure 20. Chronogram for Diesel Engine


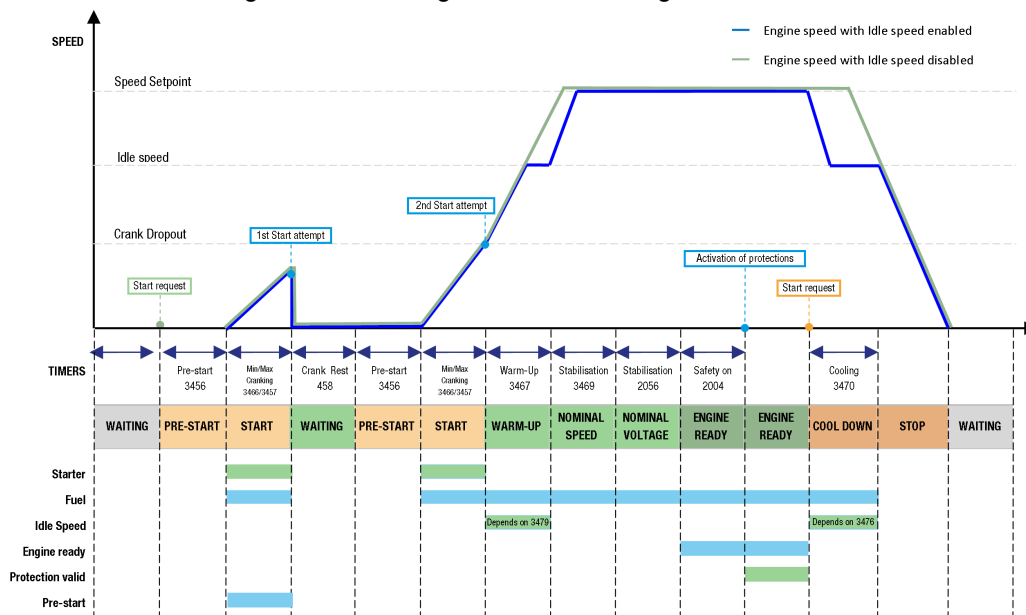


Figure 21. Chronogram for Gas Engine

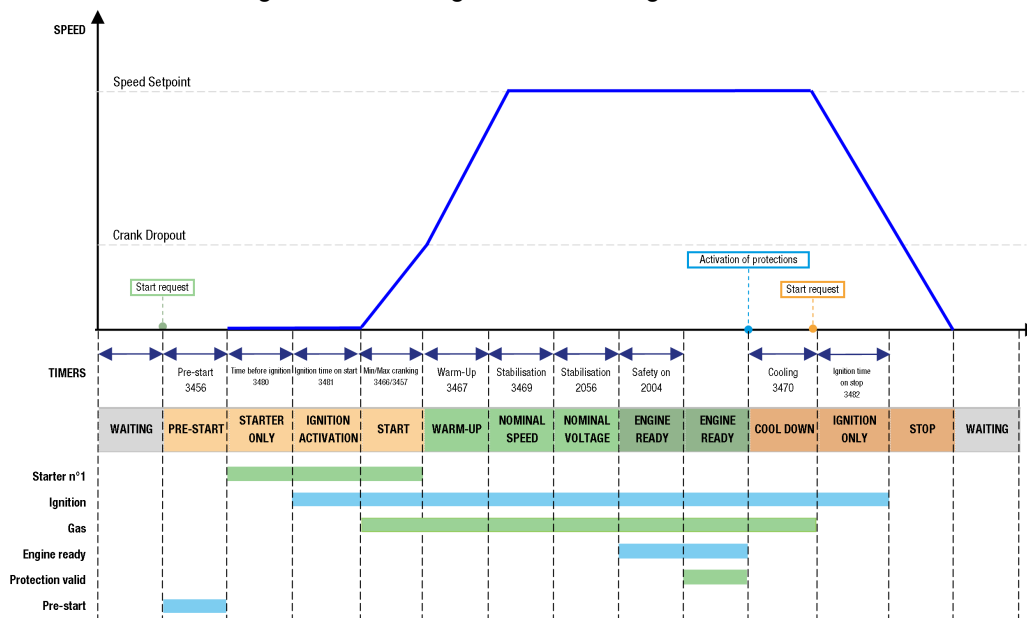

## Starter

With multiple starters, digital outputs must be preset to Crank2 and Crank3. The starters are attempted according to the starter numbers as long as the engine fails to start.

Setting	Label	Description	By default
[3459]	<i>Activation order of starters</i>	This parameter determines the order in which the starters will activate if there are multiple starters configured. 2 choices are possible: - Alternative : The automated system activates the starters one after the other and repeats with the first. - Consecutive : Each starter executes several trials consecutively before handing over to the next starter.	0
[3460]	<i>First starter</i>	This parameter determines the first starter that the module will activate if there are several starters configured.	1
[3461]	<i>Number of attempts per starter</i>	This parameter determines the number of start attempts made on each starter before stopping the sequence with a fault display.	3

### Example:

Examples with 3 starters, with the *First starter* parameter set to 2 and the *Number of attempts per starter* parameter set to 3:

- In alternative mode, the sequence will be 2-3-1-2-3-1-2-3-1.
- In consecutive mode, the sequence will be 2-2-2-3-3-3-1-1-1.



**Note:** For each starter's functions (starters 1 to 3), in the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **Engine** ⇒ **Starter** page, there are separate lower thresholds under which the starter drops out. The values depend on starter type (electric, pneumatic...).

## Idle speed

To prevent a cold engine to run at full speed, the module can run it at idle speed for a short time on startup.

For this purpose, the module feeds an idle speed command to the speed controller when:

- The engine is in state **Start, Warm up** with internal start sequence (according to [3479]).
- Until the Generator is ready with external start sequence.
- The engine is in cooling down (according to [3476]).

The idle speed is fixed by the speed controller. Parameter [3468] allows to indicate to module the idle speed.

## Smoke limiter

To prevent a cold engine from over-emitting, the module can feed a smoke limiter command to a speed controller (with smoke limit input) when the module is in states **Start, Warm up** and **Nominal speed**.

## Air conditioning

Output function *Cooling fan* [4688] can be used to control a cooling fan in order to prevent overheat. The output is activated when the engine water temperature is higher than a temperature threshold [3475]. The output is deactivated when the engine water temperature is below 90% of this temperature threshold.

## External automatic start module

Some engines are equipped with an ASM (Automatic Start Module). On start (**AUTO / TEST / MAN** mode), the module activates a digital output configured as **Engine start** which must be connected to the ASM on an "Enable to start" input. The ASM can then energize the crank, the fuel and synthesize the engine events.

The setup depends on the type of ASM:

Step	Presetting	Connections to ASM
1	To inhibit the module internal start sequence, activate <i>External start sequence</i> [3452] in the <b>Controller settings</b> ⇒ <b>Engine/ECU/ECM</b> ⇒ <b>Engine</b> ⇒ <b>Start/Stop</b> page	
2	In the <b>Controller settings</b> ⇒ <b>Inputs/Outputs</b> ⇒ <b>Digital/relays outputs</b> page, preset a digital output with the <i>Engine start</i> [4006] function	Connect it to a start request input (it replaces the module fuel output).
3	In the <b>Controller settings</b> ⇒ <b>Inputs/Outputs</b> ⇒ <b>Digital inputs</b> ⇒ <b>Digital inputs</b> page, preset a digital input with the <i>Remote alarm</i> [4527] function	Connect it to an engine alarm output of your start module.
4	In the <b>Controller settings</b> ⇒ <b>Inputs/Outputs</b> ⇒ <b>Digital inputs</b> ⇒ <b>Digital inputs</b> page, preset a digital input with the <i>Remote hard shut down</i> [4525] (immediate engine stop) or <i>Remote soft shut down</i> [4526] (stop after cool-down sequence) function.	Connect it to an engine fault output of your start module.



**Note:** Engine start time-out must be configured in the parameter *External module start failure timer* [3453].

## ASM with "Generator ready" output

Step	Presetting	Connections to ASM
1	In the <b>Controller settings</b> ⇒ <b>Inputs/Outputs</b> ⇒ <b>Digital inputs</b> page, preset a digital input with the <i>Generator ready</i> [4523] function	Connect it to an "Engine ready" output.



**Note:** When ASM validates the speed, it sends the ready signal, and module regains the control.



## ASM without "Generator ready" output

No extra presetting. In absence of **Engine fault**, at expiry of stabilization timeout [3469], the module declares that Generator is ready if the speed and voltage are both valid.



**Note:** An ASM without a digital output configured as *Generator ready* cannot be used with static paralleling or engine starting at idle speed.

## Verification

1. Start the Generator in MAN mode , and press .
2. Check that the delays (pre-lubrication, preheating, stabilization,...) correspond to your expectations.
3. If you wish to simulate the starter and oil pump sequences, disconnect the corresponding outputs. Navigate in the **Controller supervision** ⇒ **Inputs/Outputs (i4Gen)** menu where the status of the outputs is displayed in real time, then, check the activation of the starter and the fuel.
4. Check that the Generator led lights up.
5. Check that the engine speed and that the Generator voltages are stable (e.g.: **1500rpm, 50Hz, 400VAC**); the data are visible in the **Controller supervision** menu.

# CIRCUIT BREAKERS

## Circuit breakers operating modes

---

Two digital outputs (relay or transistor) are used to control the circuit breakers - 1 for opening and 1 for closing. These outputs allow different types of circuit-breakers to be controlled.

The Generator circuit breaker settings are accessible from **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Generator breaker**.

The Mains circuit breaker settings are accessible from **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Mains breaker**.



**Important:** Failure to comply with the following recommendations may cause malfunctions.



**Note:** Never switch from one operating mode to another while the power plant is running.

### Circuit breaker control mode

Value	Mode	Circuit breakers chronogram
0	1: Continuous contact to open. 2: Pulse to close.	
1	1: Continuous contact to open. 2: Continuous contact to close.	
2	1: Under-voltage (MN) coil opening. 2: Pulse to close.	
3	1: Under-voltage coil opening. 2: Continuous contact to close.	
4	1: Pulse to open. 2: Pulse to close.	
5	1: Pulse to open. 2: Continuous contact to close.	

### Pulse configuration

The settings can be accessed from **i4Gen Suite** software.

## Pulse

The settings of the Generator breaker pulse can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Generator breaker** page.

For the pulse control of the Generator breaker, set the parameter [2301].

The settings of the Mains breaker pulse can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Mains breaker** page.

For the pulse control of the Mains breaker, set the parameter [2314].

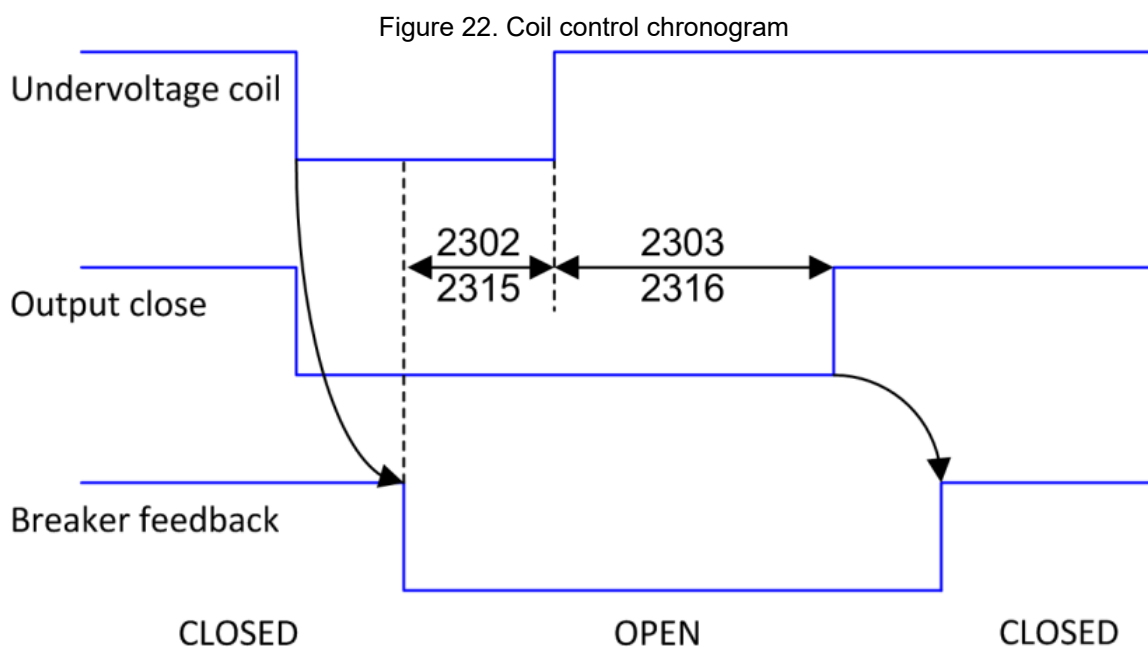
## Coil Control

The settings of the Generator breaker coil can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Generator breaker** page.

For the fail-safe control of the Generator breaker, set the parameters [2302] and [2303].

The settings of the Mains breaker coil can be found in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Breaker** ⇒ **Mains breaker** page.

For the fail-safe control of the Mains breaker, set the parameters [2315] and [2316].



To detect the position of the circuit breaker, a logic input must be configured as:

Function	Value
Generator circuit breaker position feedback	1 = circuit breaker closed (LED displayed on the front panel).
Mains circuit breaker position feedback	1 = circuit breaker closed (LED displayed on the front panel).



**Note:** If the circuit breaker position feedback is not assigned to a digital input then the breaker position will always be assumed to match the breaker control output of the module.

## Configuration of circuit breaker commands

Two digital outputs (relay or transistor) must be configured as described in the table below and connected to the circuit breaker.



Function	Description
<i>Generator breaker close</i>	Command to close the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings. (continuous, pulse, MNcoil).
<i>Generator breaker open</i>	Command to open the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings. (continuous, pulse, MNcoil).
<i>Mains breaker close</i>	Command to close the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings. (continuous, pulse, MNcoil).
<i>Mains breaker open</i>	Command to open the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings. (continuous, pulse, MNcoil).

## Verification

### DANGER






#### **RISK OF ELECTRIC SHOCK, EXPLOSION OR ARCING**

Failure to follow these recommendations may result in death or serious injury.







- The module may only be installed and maintained by qualified electricians.
- Use personal protective equipment (PPE).
- Follow good safety practices for electrical work.
- Turn off the power before installing or replacing a fuse, and before installing the module.
- Use equipment adapted to check the absence of voltage.
- Do not use a resettable fuse.

Follow these instructions in order to check the Generator breaker:

1. Connect the circuit breaker position feedbacks and check them on the product. The corresponding LED should light up when the circuit breaker is closed.
2. Start the Generator in **MAN** mode by pressing  and then .
3. Once the Generator is ready and if there is no voltage on the other side of the breaker, press the button Generator breaker .
4. Check that the Generator circuit breaker is closed and that the Generator circuit breaker LED is lit.
5. If possible apply a load bank (active and reactive) on the Bus and check the powers, currents, voltages and cos ( $\phi$ ).
6. To open the Generator breaker, press the button Generator breaker .
7. Check that the Generator circuit breaker is open and that the Generator circuit breaker LED is off.
8. Press  to stop the Generator.

Follow these instructions in order to check the Mains breaker:

## OPERATOR MANUAL

1. Connect the circuit breaker position feedbacks and check them on the product. The corresponding LED should light up when the circuit breaker is closed.
2. Press  to be in **MAN** mode.
3. Check that the Generator isn't running. If it isn't the case, stop the Generator by pressing .
4. Press the button Mains breaker  to close the breaker.
5. Check that the Mains circuit breaker is closed and that the Mains circuit breaker LED is lit.
6. If possible, apply a load bank (active and reactive) on the Mains and check the powers, currents, voltages and  $\cos(\phi)$ .
7. Press the button Mains breaker  to open the breaker.
8. Check that the Mains circuit breaker is open and that the Mains circuit breaker LED is off.

# PROTECTIONS

## Functionning

---

The protections are triggered by an internal or external event (internal protection, digital inputs, CAN bus loss, etc.). In order to protect the system, an action can be associated with the triggering of a protection. These actions are of different kinds :

- These actions can just trigger an alarm. An orange LED will flash on the product and the title of the triggered protection will appear in the alarms/faults page.
- These actions can protect the different equipments by carrying out actions that depend on the type of action configured. In this case, the LED will blink orange as long as no human intervention is required, the LED will blink red if a human intervention is required. If the LED flashes orange, the title of the protection that has been triggered can be consulted in the alarms page. If the LED flashes red, the name of the protection that has been tripped can be viewed in the faults page.
- These actions can launch automated sequences to perform the main functions of the product. In this case, no LEDs are flashing. The title of the protection can be consulted in the events page.

Value	Type	Action	Description
0	–	Unused (no action)	–
1	Alarm/ Fault	Generator electrical fault	<p>The protection opens the Generator circuit breaker and tries to re-synchronize again after the timer [2806].</p> <p>The number of resynch attempts is set by variable [2807], it means that if the fault that has tripped the Generator circuit breaker is happening again after each attempt, the Generator will be stopped.</p>
2	Event	Mains failure	<p>This event will automatically starts the generator and close it on the load in case of loss of Mains power. The Mains circuit breaker will be opened once the generator is ready so if Mains power comes back before that, the controller will just stops the generator. The Mains circuit breaker behavior on Mains failure can be set using the variable [2312].</p> <p>Once Mains power is back, the Mains failure event will be automatically reset after the timer [2009] has elapsed and the module will allow the power plant to stop after its configured sequence (synchronization and load transfer or change over).</p>
3	Alarm	Alarm	The protection is displayed in the alarm page. No action is performed.
4	Fault	Fault (soft shutdown)	The Generator circuit breaker opens, the engine cool down for the duration of the cool down timer, then the engine stops.
5	Fault	Security (hard shutdown)	Generator breaker opens and engine stops immediately without cooling down; " <b>serious fault</b> " shows as information.
9	Alarm/ Fault	Mains electrical fault	<p>The protection opens the Mains circuit breaker and tries to re-synchronize again after the timer [2806].</p> <p>The number of resynch attempts is set by variable [2807], it means that if the fault that has tripped the Mains circuit breaker is happening again after each attempt, the protection will keep triggering.</p> <p>Once the number of resynch attempts has been reached, the Mains circuit breaker will remain open.</p> <p>The reset function will automatically reset the number of attempts and will automatically close the Mains circuit breaker.</p>

These actions have to be configured in **i4Gen Suite** software. List of potential alarms/faults can be downloaded using the SAVE button beside "Protections configuration" in the **i4Gen** ⇒ **File transfer** page. A digital output can be configured to indicate that a protection is active.



**Note:** The protections are active whatever the operating mode is (**MAN**, **AUTO**, **TEST**)

All the protections available for the product are explained in the chapter [Software variables \(on page 129\)](#).

Specific protections are explained below.

## Emergency stop

The emergency stop function can be performed in two ways:

- Connect an **Emergency stop** button to an **Emergency stop** logic input. It is a software treated emergency stop.
- Action on an alarm or a fault : select **Security (hard shutdown)**.



**Note:** In addition of the controller emergency stop management, a physical management of the emergency stop must be installed. The system must provide a physical cut off of the starters, the circuit breakers commands and the fuel command.

## Communication

Alarm/Fault	Description	Setting
J1939	Communication error on the J1939 protocol.	[3058]
CANopen	Communication error on the CANopen protocol.	[3059]

## Breaker

Depending on the status of the module, an alarm or circuit breaker fault may occur. This can be a failure closing circuit breaker, failure opening circuit breaker, unexpected opening of the circuit breaker, unexpected closing of the circuit breaker. Alarm or fault depends of the severity of the event.

## Reattempt to close after an electrical fault


In the event of an electrical fault:

1. The module opens the circuit breaker.
2. The module will try X times according to the value configured in the parameter *Number of closing attempts* [2807].
3. The module will wait X seconds between each attempt according to the value configured in the parameter *Delay before new attempt* [2806].

### Example:

Example with [2807] = 2:

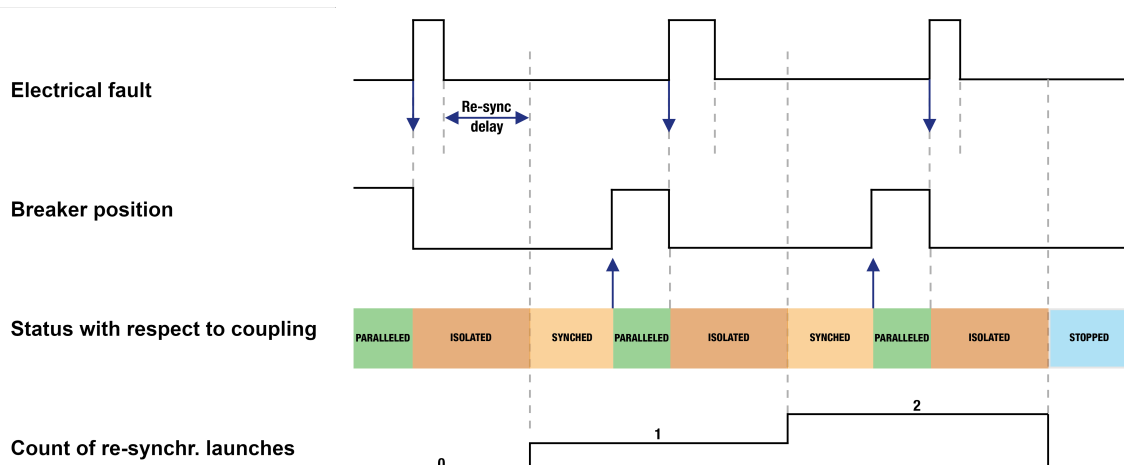Figure 23. Reattempt to close after an electrical fault



## Custom fault and alarm

---

User variables [8000] to [8099] can be set as alarm or fault using **i4Gen Suite**. The label of the alarms/faults can be customized by changing the label of the related user variable. A user variable set as alarm or fault can be triggered via Modbus or **Easy Flex®**.

## Audible or visual warning device

---

To trigger an external alarm when a protection trips, connect the alarm to a logic output configured as **Horn**. The signal duration is configurable with the parameter *Horn timer* [2478] (0 means that the alarm will be activated until a manual shutdown); alternatively, an input can be configured as **Stop horn** to manually stop the horn.

## Reset of alarms and faults

---

To perform an alarms/faults reset:

- Locally:  + 
- Remote: use the "**Reset faults**" input function.

## EVENTS

### Functioning

Events are actions performed on the installation that can be monitored by the controller. They are managed in the same way as an alarms and faults, thus they can be seen in the "history" menu where all alarms/faults/events history is listed. Events are also included in the log file together with alarms and faults. Each event can be enabled/disabled in the **Controller settings** ⇒ **General** ⇒ **Events** page.

Variable number	Label	Description
[5000]	<i>Power up</i>	This event is recorded each time the controller is powered on.
[5001]	<i>Engine start</i>	This event is recorded if the engine speed is equal to 0 and it changes (even if the controller didn't start the engine by itself).
[5002]	<i>Engine stop</i>	This event is recorded if the engine speed is different than 0 and it reaches 0 (even if the controller didn't stop the engine by himself).
[5003]	<i>Mains failure</i>	This event is recorded when the Mains failure protection trigger (see <a href="#">Protections (on page 45)</a> chapter for more information).
[5004]	<i>Mains back</i>	This event is recorded when the Mains failure protection triggered and is no longer active (see <a href="#">Protections (on page 45)</a> chapter for more information).
[5005]	<i>Generator breaker closed</i>	This event is recorded if the controller can read the "closed breaker feedback" from the Generator's breaker (even if the controller didn't close the Generator's breaker by itself).  If breaker position feedbacks are not used, the event is triggered on breaker close command instead.
[5006]	<i>Generator breaker opened</i>	This event is recorded if the controller can read the "opened breaker feedback" from the Generator's breaker (even if the controller didn't open the Generator's breaker by himself).  If breaker position feedbacks are not used, the event is triggered on breaker open command instead.
[5007]	<i>Mains breaker closed</i>	This event is recorded if the controller can read the "closed breaker feedback" from the mains' breaker (even if the controller didn't close the mains' breaker by itself).  If breaker position feedbacks are not used, the event is triggered on breaker close command instead.
[5008]	<i>Mains breaker opened</i>	This event is recorded if the controller can read the "opened breaker feedback" from the mains' breaker (even if the controller didn't open the mains' breaker by itself).  If breaker position feedbacks are not used, the event is triggered on breaker open command instead.

## OPERATOR MANUAL

Variable number	Label	Description
[5009]	<i>Manual mode</i>	This event is recorded when the controller is switched to <b>MAN</b> mode (Pressing <b>MAN</b> when the controller is already in <b>MAN</b> mode won't trigger the event).
[5010]	<i>Automatic mode</i>	This event is recorded when the controller is switched to <b>AUTO</b> mode (Pressing <b>AUTO</b> when the controller is already in <b>AUTO</b> mode won't trigger the event).
[5011]	<i>Test mode</i>	This event is recorded when the controller is switched to <b>TEST</b> mode (Pressing <b>TEST</b> when the controller is already in <b>TEST</b> mode won't trigger the event).
[5012]	<i>Load switched over to the generator</i>	This event is recorded if the controller is in "1 transfer switch" mode when the load is switched over to the generator.
[5013]	<i>Load switched over to the mains</i>	This event is recorded if the controller is in "1 transfer switch" mode when the load is switched over to the mains.



## ADVANCED SETTINGS

### STATIC PARALLELING

#### Example:

#### Case studies

- Starting a full plant with multiple generators in an emergency on dead bus: the generators are ready to take load in the shortest possible time, without warm-up.

Bottom line: full plant availability in less than 10s typically. This meets the NEC700 requirements.

- Installation with a high voltage transformer: as the Generator(s) start, the transformer core is magnetized progressively, without peaks (no transient short-circuit).



#### Note:

- As long as there is a voltage on the Mains, the dynamic paralleling prevails even if static paralleling is configured.
- Static paralleling sequence can be done only when the module is in **AUTO** mode.

### Conditions

#### On equipment:

- The alternators are identical (in particular, same winding pitch).
- The AVR's are set for static paralleling: they wait for excitation command on their first start.
- All breakers must be powered by continuous voltage like 24VDC or 48VDC (so as to close before AC is available).

#### On module:

- The remote start is activated.
- A digital output is preset to **Excitation** command.


Variable	Label	Default	Description
[2050]	<i>Static paralleling</i>	Dynamic	Set it to static
[2051]	<i>Waiting for de-excitation timer</i>	30.0s	Alternator de-excitation waiting time during a re-excitation sequence. The module will stop waiting for de-excitation when the timer has elapsed and will attempt to parallel the alternator to the Mains.

### Sequence

1. Mains failure detected by the product, either via an internal protection or via a digital input
2. The module opens the Mains breaker and closes the Generator breaker.
3. The module starts the engine and waits for the speed of the generator to be in the acceptable range (between 95% to 105% of the nominal speed). If variable *Out of speed range control* [2394] is set as fault and the speed isn't in the accepted range after the delay set by variable *Out of speed range timer* [2393], the generator breaker opens.
4. When the generator is in the accepted speed range, the excitation command output is activated. As a result, the transformer is magnetized progressively.
5. The module waits for the voltage of the generator to be in the acceptable range (between 95% to 105% of the nominal voltage). If variable *Out of voltage range control* [2396] is set as fault and the voltage isn't in the accepted range after a delay set by the variable *Out of voltage range timer* [2395], the generator breaker opens.

The module proceeds to a de-excitation of the alternator each time the generator breaker opens and no voltage is present on the bus if the engine is still running in order to restart the static paralleling sequence.

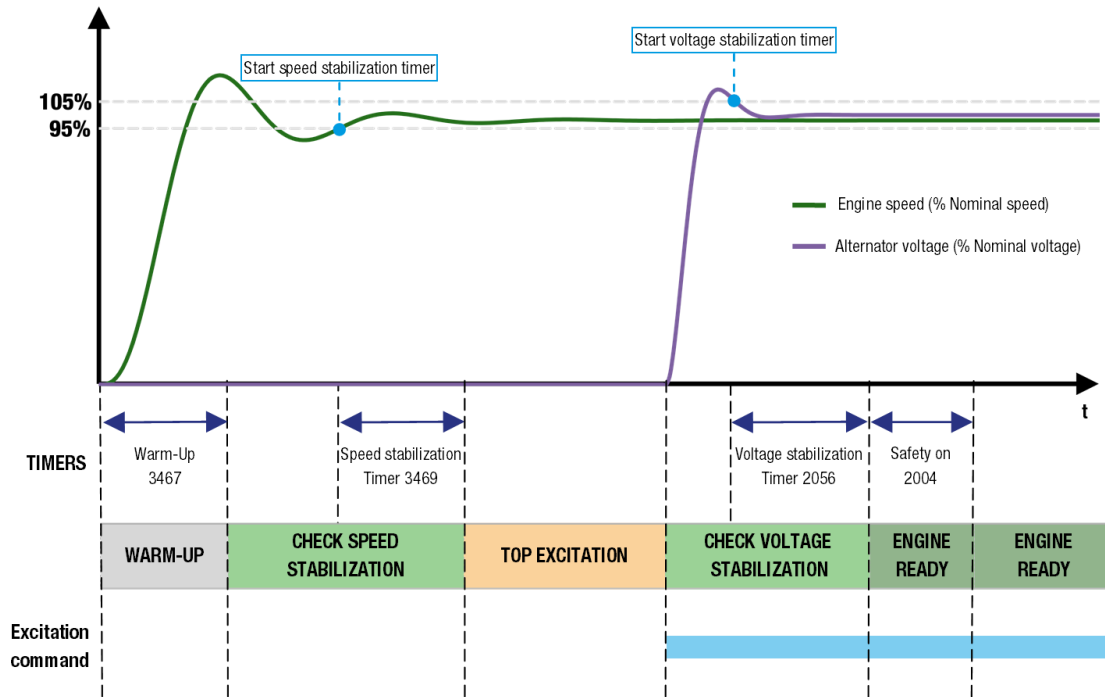Figure 24. Static paralleling



# LOAD SHEDDING

## Functioning

---

The load shedding function is the ability to disconnect less important consumers if the Power plant is overloaded even when the full capacity is engaged; this prevents a blackout.

Any module – generally one – in the Power plant can take care of the excessive demand. If the KW demand exceeds the Power plant capacity and/or the frequency has dropped below a threshold for a given time, the dedicated module activates outputs to shed non-essential loads.

You can setup your system to react more or less rapidly depending on the severity of the situation using two levels of thresholds and delays.

## Settings

---

**All the settings are explained in the chapter [Software variables \(on page 129\)](#).**

They are set in the **Controller settings** ⇒ **Electrical** ⇒ **Power management** page.

Using the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital/relays outputs** page, preset up to 5 outputs to **1st non essential trip...5th non essential trip**.

In the same manner as for protections, you can trigger an action when the shedding capacity runs out (a specific output "Trip alarm" is signaled if [2862] = 3).

## Sequence

---


When one of the two levels is reached and its associated delay has expired, a trip alarm is set and a five-tier shedding starts (level 1) or escalates (level 2): at the end of a cycle based on the parameter [2861] an extra non-essential consumer is phased out till the threshold is reversely passed.

When the active power of the generator exceeds the maximum kW threshold configured or when the frequency drops below the minimum frequency threshold configured:

1. Trip alarm is raised after the related delay, as long as one of the threshold is exceeded.
2. The trip outputs are activated successively after an additional delay; they are locked until a manual reset; they can activate a preset output on a non-essential direct trip.

The charts show the trip alarm and trip outputs depending on the Generator load or frequency:

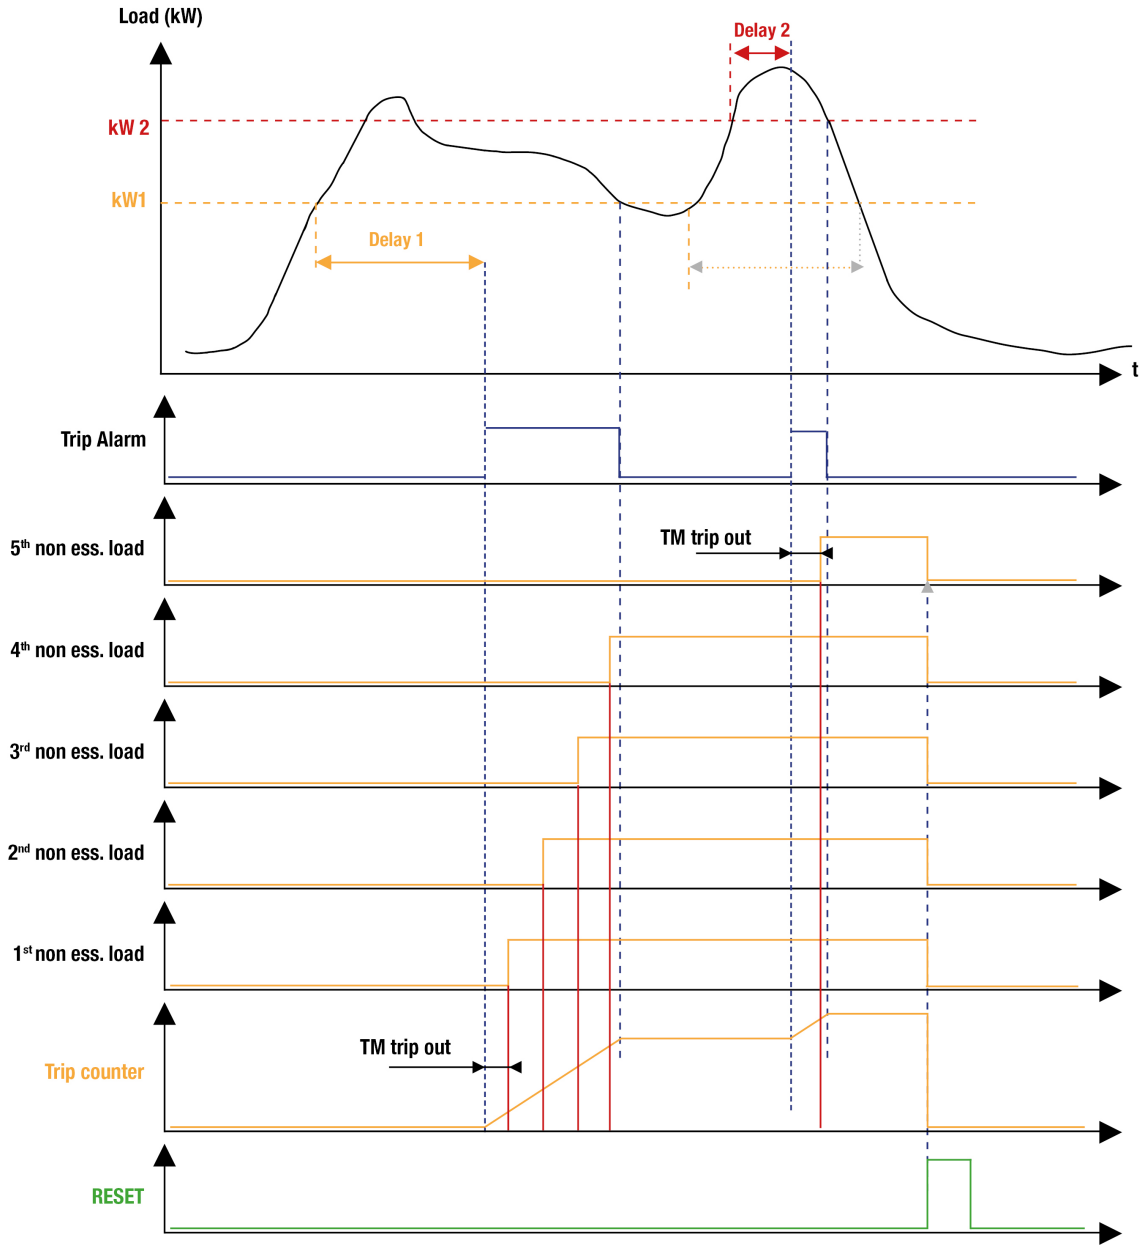Figure 25. Sequence of load shedding



# MAINTENANCE SCHEDULE

## Usage

---

The configuration of the maintenance schedule is carried out from the **i4Gen Suite** software.

The current maintenance schedule can be seen in the **Controller supervision** ⇒ **Maintenance (i4Gen)** page ("off" means that the servicing cycle is not defined).

When a cycle has elapsed, an alarm is displayed and the module's alarm LED flashes.

The expired cycle can be seen in the module alarm page.

Resetting the alarm restarts the servicing cycle.



**Note:** Maintenance cycles are saved on a non volatile memory.

## Maintenance cycle based on operating hours

---

The counter decreases according to the number of operating hour(s) of the engine:

1. Rename the cycle if necessary.
2. Set the number of hour(s).
3. Press the **Reset** button to reset the counter.

## Maintenance cycle based on days

---

The counter decreases according to the number of days passed no matter if the generator is running or not.

1. Rename the cycle if necessary.
2. Set the number of day(s).
3. Press the **Reset** button to reset the counter.

## MAINS APPLICATION

In Mains paralleling applications, if a "Mains failure" fault is managed (with protections or logic inputs), the Generator starts and takes the load when the Mains fail, even if the remote start is deactivated. In all cases, a Mains protection must be set to start the Generator if the Mains disappears.

## CHANGE OVER MODE

Figure 26. Change over mode functions

**Main Functions:**

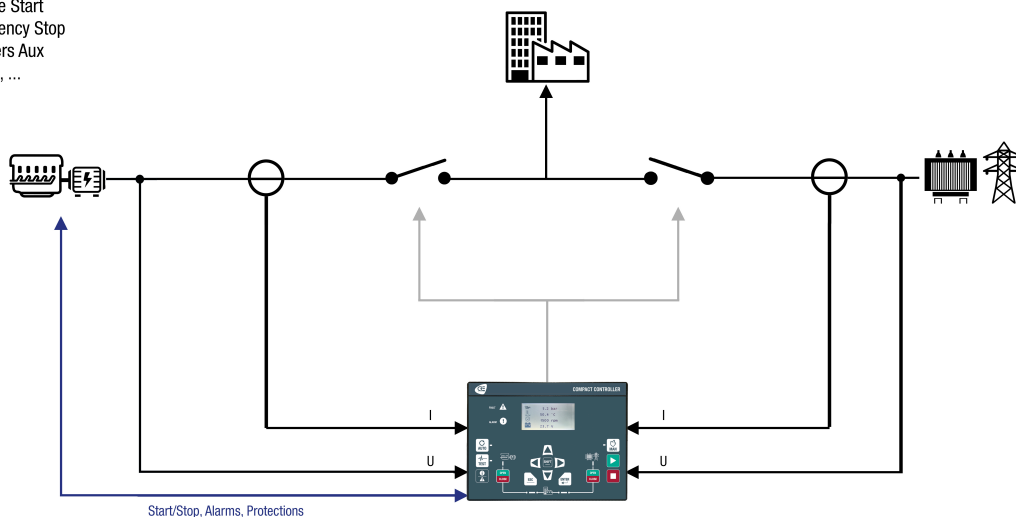
- Manual mode
- Automatic mode
- Test mode
- Running hours, ...

**Typical Outputs:**

- Crank, fuel
- Breakers controls

**Typical Inputs**

- Oil pressure, water temp.
- Remote Start
- Emergency Stop
- Breakers Aux
- Pickup, ...




**Note:** It is also possible to measure the load currents by fitting CTs on the load instead of on the generator and Mains currents. In this case, this must be indicated to the controller using parameters [2034] and [2035].



**Note:** If the input is not used to measure the Mains current, it can be used to measure the earth current and offer an earth current fault protection


In change over mode, the Generator starts and takes the load in case of a Mains failure. When the Mains returns, the module orders the generator to open its breaker after a preset time.

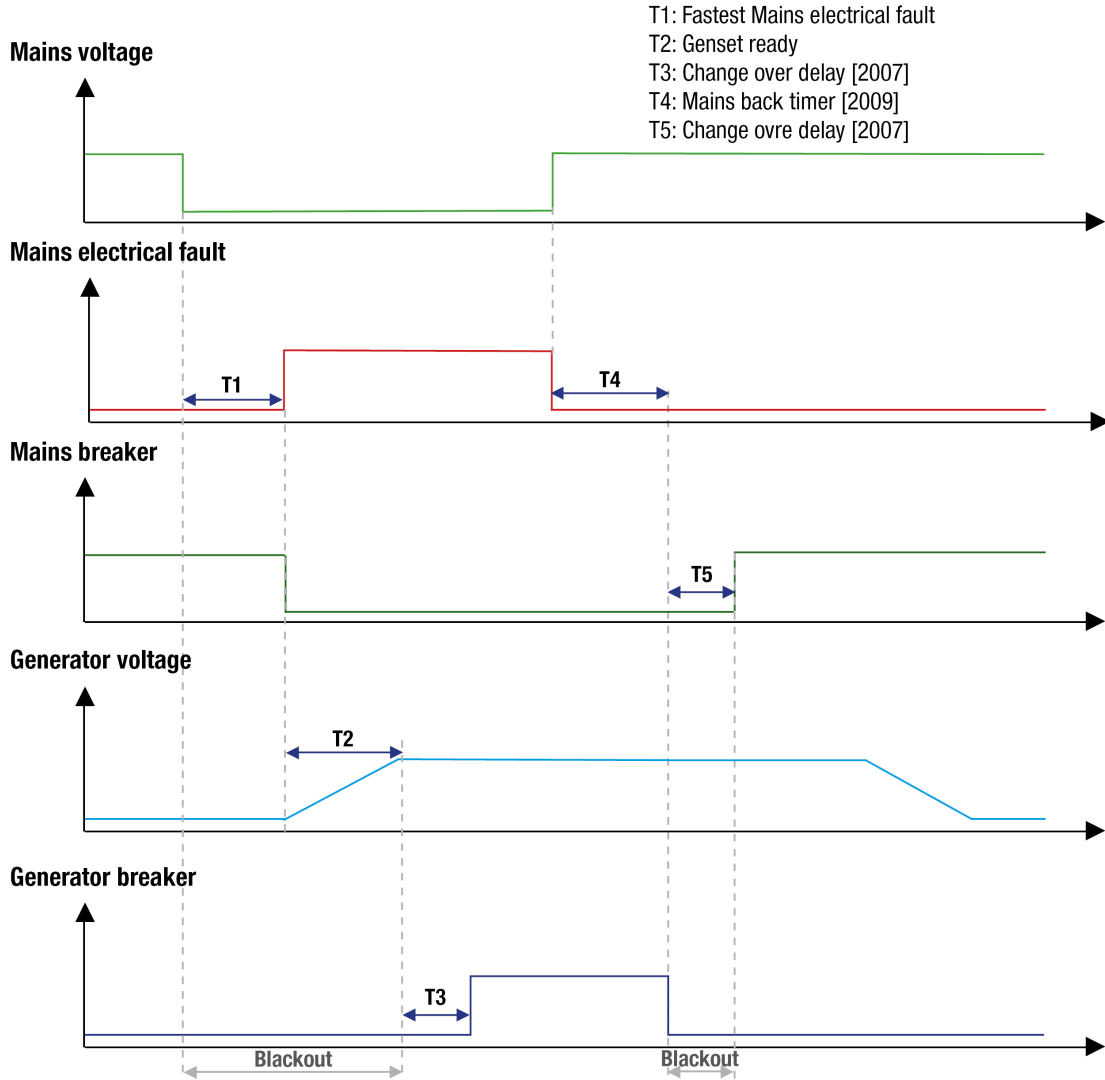Figure 27. Change over mode during a Mains failure



If a remote start is activated when the Mains is present, the Generator starts, then the module opens the Mains breaker, closes the Generator breaker after a preset time and take the load.

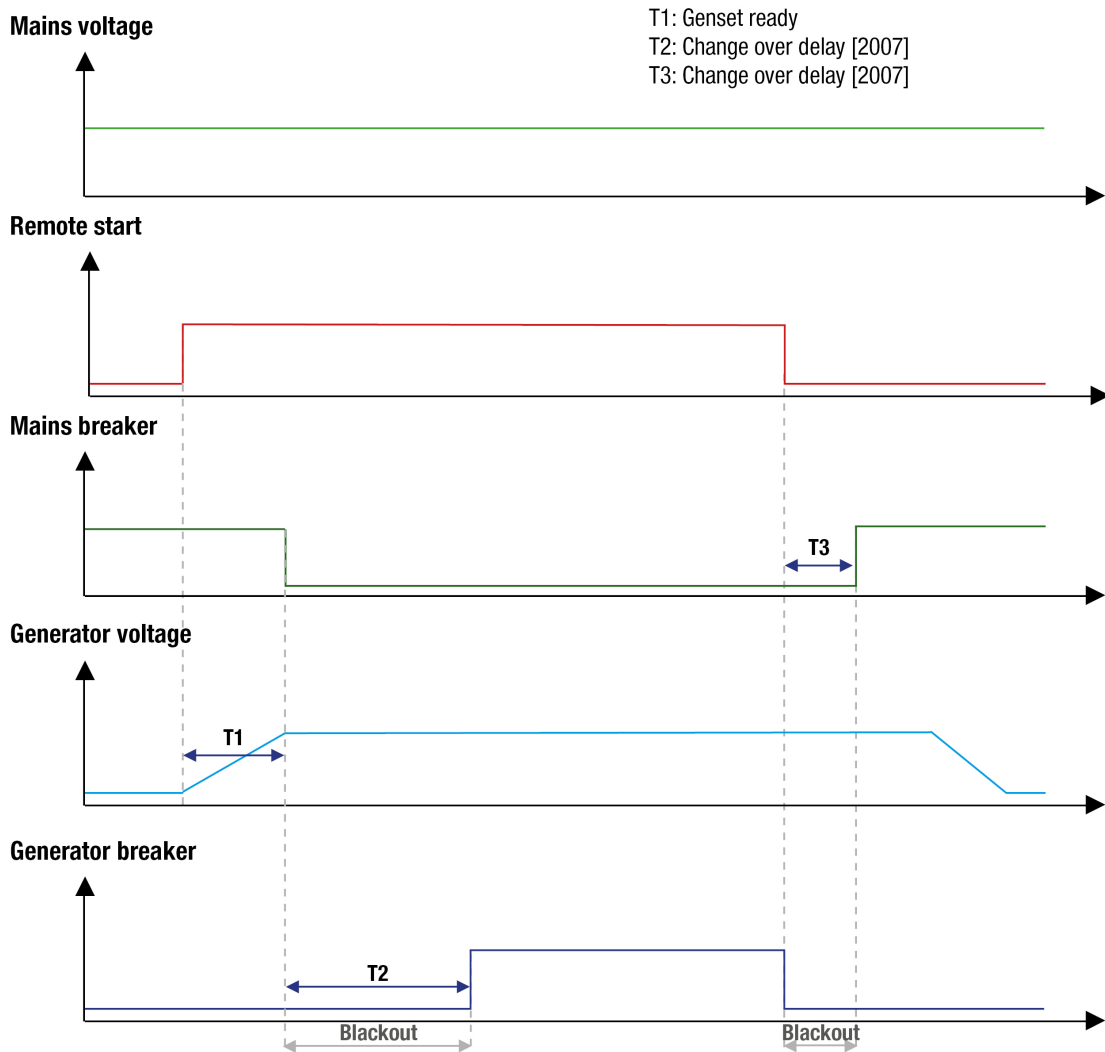Figure 28. Change over mode with remote start



## Settings

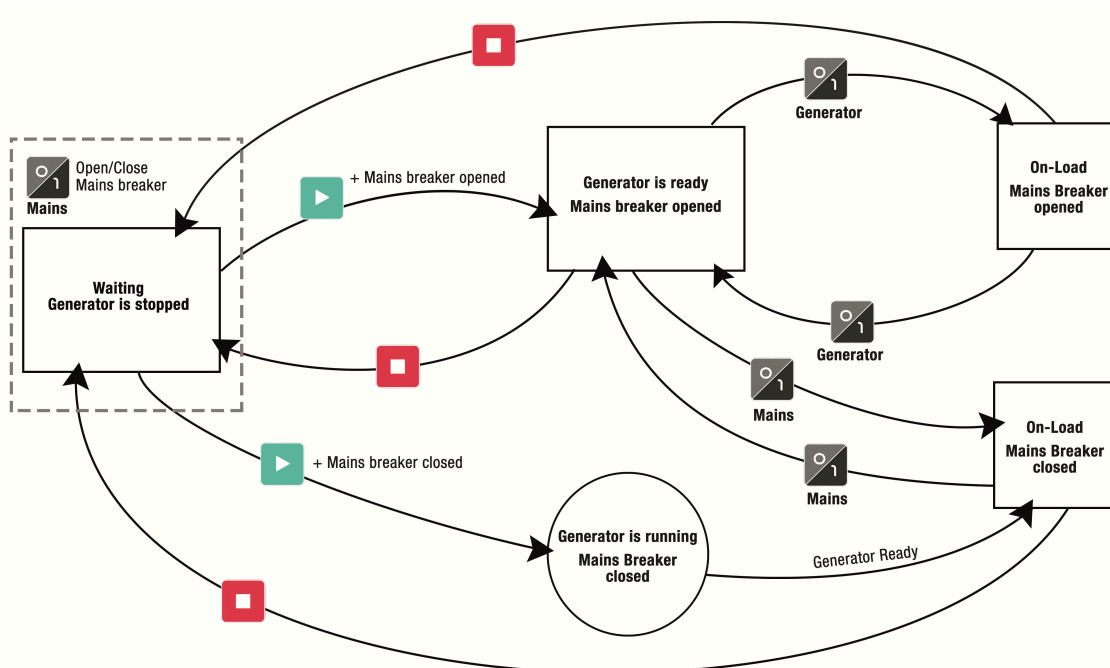
Variables	Label	Description
[2009]	<i>Mains back timer</i>	Waiting time between the moment when the mains returns (no longer any protection configured as mains failure is active) and the moment when the sequence to return to the mains is started.
[2007]	<i>Change over timer</i>	This timer corresponds to the waiting time between the opening of the generator/bus breaker and the closing of the mains breaker or vice versa.







## Operating mode

### MAN

Figure 29. Change over : operating mode diagram






### Supplying the load with the generator

1. Press  : the associated LED lights up.
2. Press  : the module starts the Generator.
3. Press  (Mains breaker) to open the Mains breaker (assuming the load is supplied from the Mains at the start of operation).
4. Press  (Generator breaker) to switch the Generator to load (only possible if the Mains circuit breaker is open).

### Switching back the load to the Mains

The Generator powers the load.

1. Press  (Generator breaker) so that the generator is no longer under load; the engine continues to run.
2. Press  (Mains breaker) to close the Mains breaker (only possible if the Generator breaker is open).
3. Press 
  - Once: to cooldown the engine and to stop the engine when the time delay has expired.
  - Twice: to stop the engine directly.

## **AUTO**


The **AUTO** mode requires the use of a digital input configured as *Remote start on load*.

# 1 TRANSFER SWITCH

## General information

This mode is equivalent to [Change over mode \(on page 56\)](#) with a single motorized C/O transfer switch in order to switch the power source between the Mains and the generator:

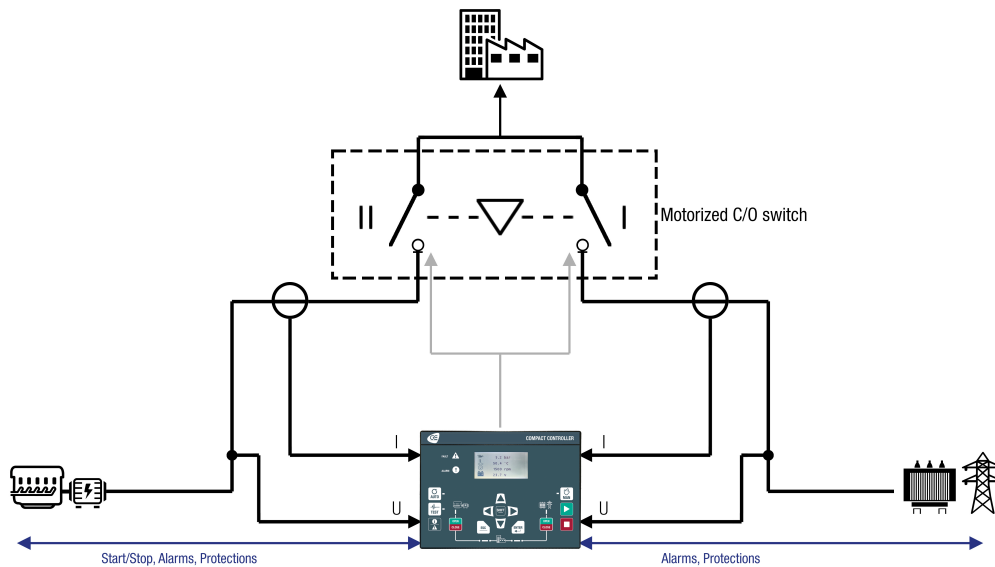Figure 30. 1 transfer switch



To enable it, set the parameter *Application type* [2022] to "1 transfer switch" in the **Controller settings** ⇒ **General** ⇒ **Application** page.

## Settings

In this configuration, the module will only use Generator breaker outputs. It is necessary to remove the open and close commands of Mains breaker from the output settings and set them for the Generator breaker in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital/relays outputs** page.

It is recommended to use the position feedback signals from the transfer switch. Hence, both Mains and Generator breaker feedbacks should be set in the controller input settings. You can change the input settings in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital inputs** ⇒ **Digital inputs** page.

It is possible not to use the transfer switch position feedbacks at all. To do so, simply remove the Mains and Generator breaker feedbacks from the input settings.

## Manual mode

In **MAN** mode, it is possible to manually control the transfer switch. Using the Generator circuit breaker button will switch the load to the generator. Pushing the button again will have no effect. To switch the load to the Mains, simply push the Mains circuit breaker button (once again, pushing this button a second time will have no effect).



**Note:** Some transfer switches can have a third position with no side selected (no load on both the generator and the Mains). These are currently not supported by default but a setup fit for these switches can be achieved easily thanks to **Easy Flex®**. Please contact **CRE TECHNOLOGY** for more information.

 **WARNING**



**USE OF THE "1 TRANSFER SWITCH" MODE**

**Failure to follow these instructions might cause important damages to the installation.**

"1 transfer switch" mode should never be used if your installation is using two breakers, one for the generator and one for the Mains.

## Auto mode

---


**AUTO** mode requires the use of a digital input configured as **Remote start**

# AUTO START

## General information

This mode should be used on applications with only one generator on a load, with or without circuit breaker management. In this configuration the module will only manage the startup sequence, the protections (except Mains protections) , and the Generator breaker (optional).

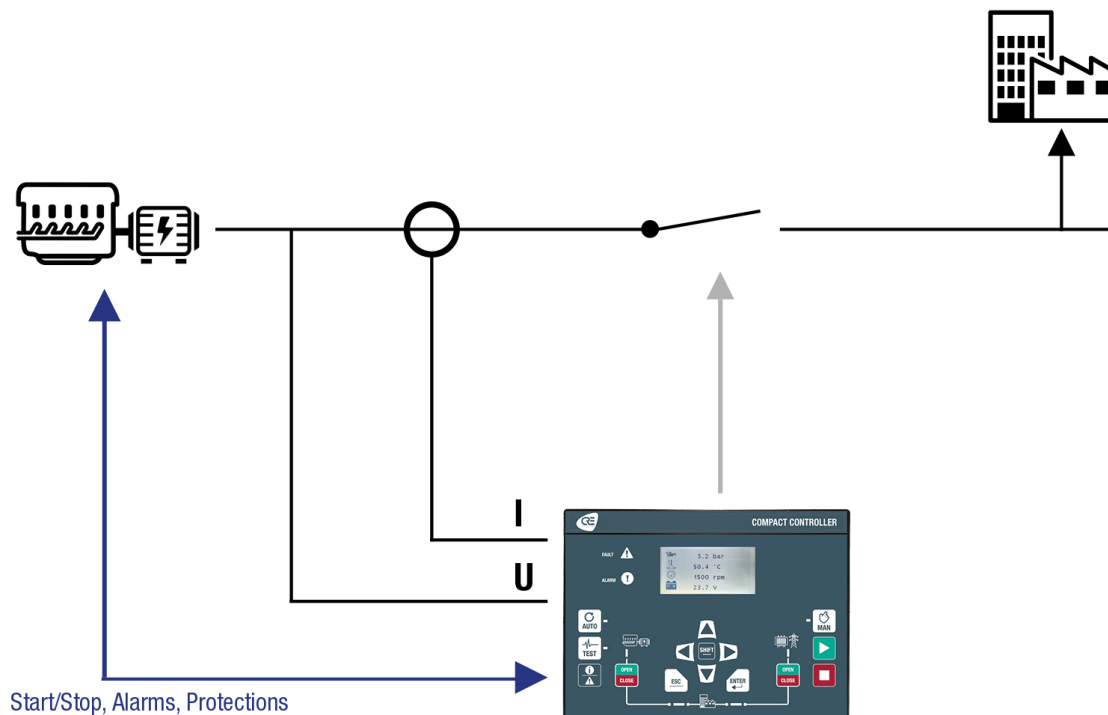Figure 31. Auto start (ASM)



To enable it, set the parameter *Application type* [2022] to "Auto start (ASM)" in the **Controller settings** ⇒ **General** ⇒ **Application** page.



**Note:** In this operating mode, do not wire voltage and current to the Mains terminals. In any case, this will have no effect.

## Settings

### Inputs/Outputs

For the recommendations below :

- go to the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital inputs** ⇒ **Digital inputs** page to change the configuration of the digital inputs
- go to the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital/relays outputs** page to modify the configuration of the digital outputs

Check that no digital output is configured to control the Mains breaker. Do the same for the digital inputs by checking that no Mains breaker position feedback is configured. In any case, in this operating mode, the Mains breaker control output will always remain inactive.

According to your application :

- With Generator breaker management : Configure one or several outputs of the product to control the Generator breaker and configure a position feedback
- Without Generator breaker management : Do not configure a digital output to control the generator breaker. Do not configure a digital input as position feedback for the generator breaker.

### Protections

In this mode, all protections remain fonctionnal including Mains protections (except Mains failure and Mains electrical fault). Thus it is necessary to ensure that no Mains protections are set in the controller.

### Manual mode

---

In this operating mode the button that normally controls the mains breaker has no effect. All other buttons remain operational.

### Auto mode

---

**AUTO** mode requires the use of a digital input configured as **Remote start**

## ADVANCED FUNCTIONS


### EASY FLEX®

**Easy Flex®** offers a simple and innovative programming mode, allowing you to adapt the controller to your needs. Its consists of several types of instructions that can be completed with variables and operators to add specific behaviours to the controller.

### Variables

The **Easy Flex®** page has an area that contains the list of variables that can be used in the variable fields of the different instructions. Click on the **Variables** tab to display the list of variables.

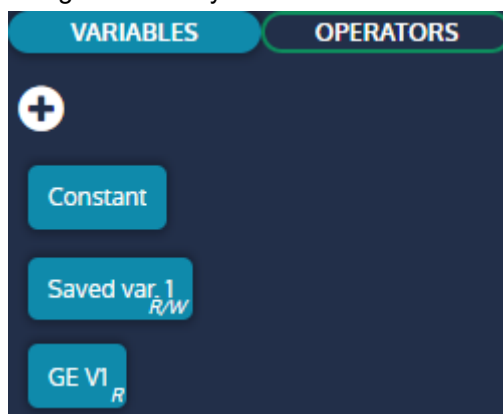Figure 32. Easy Flex® list of variables



### Constant block

A Constant block is defined by default and must be used when a constant value is required in an instruction.

### Variable block

The variables of the controller can be added to the area as variable blocks. This blocks can then be used in the different instructions. there are two types of variable:

- **Read/Write:** Can be used in the read only (R) or write (W) variable fields of an instruction
- **Read only:** Can only be used in the read only (R) variable fields of an instruction (marked with the R letter)

Figure 33. Using read only and read/write variables




### How to add a variable block

To add a variable block to the variables area:

1. Click on the plus button to open the variables search engine
2. Click on a variable with a plus icon
3. Close the search engine

The variable block should now be visible in the area.

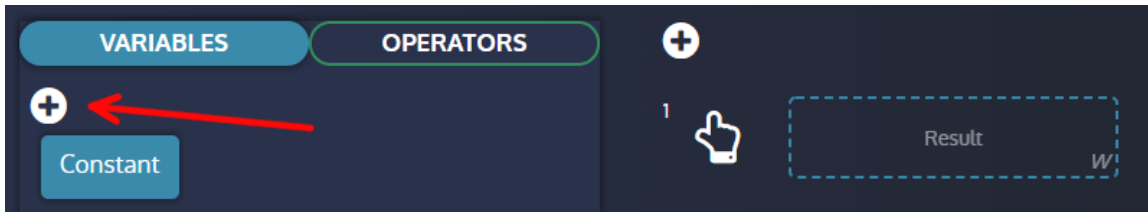Figure 34. Adding a variable block to the Easy Flex® variables area




## How to use a variable block in an instruction

To use a variable block in an instruction:

1. Hold the click on the variable block to be used
2. Move the variable block to a variable field of an instruction
3. Release the click to drop the variable block in the field

The variable now belong to the instruction and will be interpreted by it.

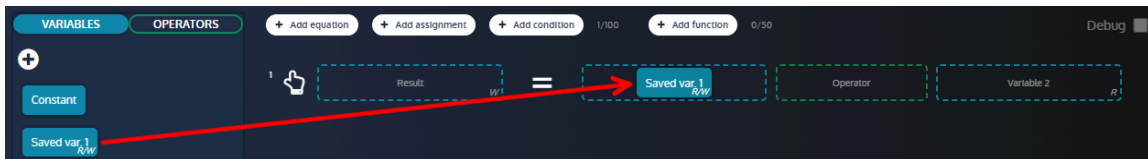
Figure 35. Drag and drop of a variable in an instruction



## Operators

The **Easy Flex®** page has an area that contains the list of operators that can be used in the operator field of the different instructions. Click on the **Operators** tab to display the list of operators.

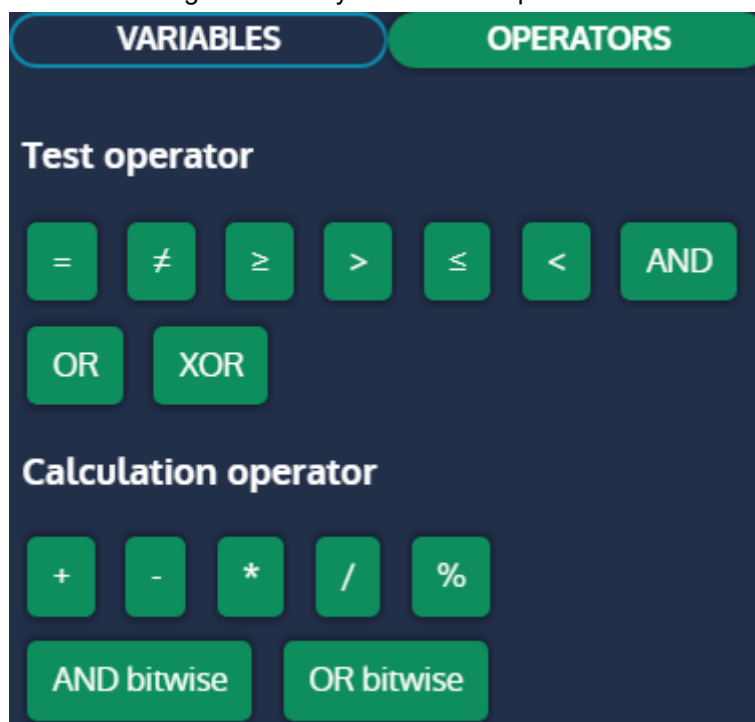Figure 36. Easy Flex® list of operators





## Test operator

A test operator return a **boolean** value in the result variable.

## Calculation operator

A calculation operator return an **analog** value in the result variable.


## How to use an operator block in an instruction

To use an operator block in an instruction:

1. Hold the click on the operator block to be used
2. Move the operator block to the operator field of an instruction
3. Release the click to drop the operator block in the field

The operator now belong to the instruction and will be interpreted by it.

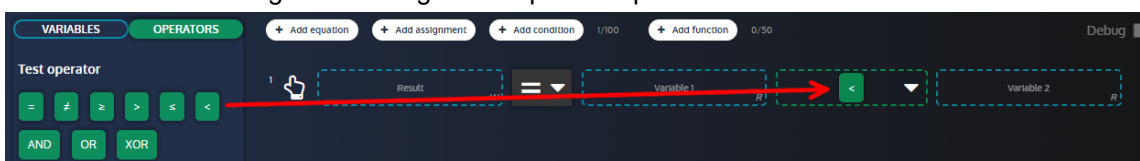Figure 37. Drag and drop of an operator in an instruction



## Instructions

There are many types of instructions available in **Easy Flex®**.

## Equations

The **equation** instruction is an operation between two variables whose result is stored in a result variable.

Click on the **Add equation** button to add a new equation. A counter is displayed beside the button to indicate the number of equations defined and the maximum number of equations allowed.



**Note:** The counter is common to the equations, assignments and conditions.

Figure 38. Example of equation



## NOT

When a variable field of an equation is filled with a variable block and the operator field is filled with a test operator, it is possible to add a NOT function to the variable to revert its boolean value.

## How to set a NOT

To set a NOT function:

1. Click on the arrow beside the variable block
2. Click on the NOT checkbox to enable/disable the function

Figure 39. Setting the NOT function of a variable block



### Timer ON/Timer OFF


When the operator field of an equation is filled with a test operator, it is possible to add a Timer ON function to delay the update of the result when the test operation is true. Following the same principle, it is also possible to add a Timer OFF to delay the update of the result when the test operation is false.

### How to set a Timer ON/Timer OFF

To set a Timer ON/Timer OFF function:

1. Click on the arrow beside the operator block
2. Set the Timer ON value in the input (in seconds) and toggle the checkbox to enable/disable the function
3. Set the Timer OFF value in the input (in seconds) and toggle the checkbox to enable/disable the function

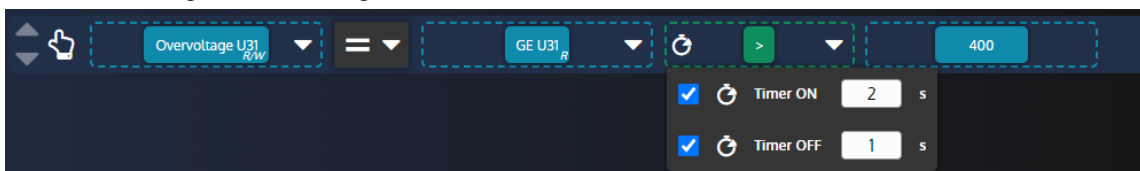Figure 40. Setting the Timer ON/Timer OFF function of a variable block



### Type of assignment

When the operator field of an equation is filled with a test operator, it is possible to change the type of assignment:


- **Equal:** The result of the test operation is stored in the result variable
- **Set:** The result variable is set only when the test operation becomes true
- **Reset:** The result variable is reset only when the test operation becomes true

### How to set the type of assignment

To set the type of assignment:

1. Click on the type of assignment list to display the list items
2. Click on the type of assignment you want

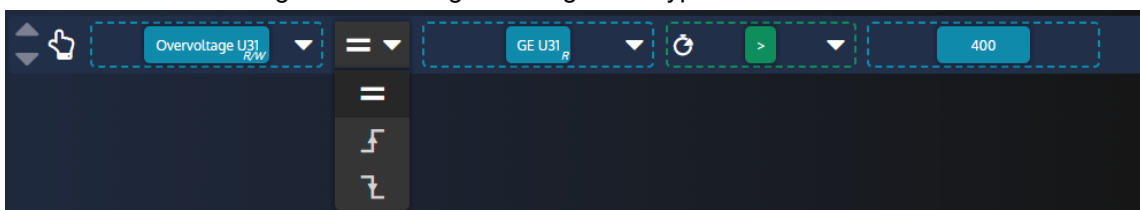Figure 41. Setting the assignment type of an instruction



### Assignments

The **assignment** instruction assigns the value of a variable to a result variable.

Click on the **Add assignment** button to add a new assignment. A counter is displayed beside the button to indicate the number of assignments defined and the maximum number of assignments allowed.


 **Note:** The counter is common to the equations, assignments and conditions.


Figure 42. Example of assignment



## Conditions

The **condition** instruction executes a group of instructions according to a test condition. As for equations, the NOT, Timer ON and Timer OFF functions can be used in the condition instruction.

Click on the **Add condition** button to add a new condition. A counter is displayed beside the button to indicate the number of conditions defined and the maximum number of conditions allowed.

 **Note:** The counter is common to the equations, assignments and conditions. The maximum number of instructions per condition is 10.

### How to add/remove instructions to a condition

- Drag and drop instructions into the condition to add them to the condition
- Drag and drop an instruction out of the condition to remove it from the condition

Figure 43. Adding an instruction to a condition



## Functions


The **function** instruction allows you to group instructions together and to assign a title and a description to this group.

Click on the **Add function** button to add a new function. A counter is displayed beside the button to indicate the number of functions defined and the maximum number of functions allowed.

### Add existing instructions to a function

Drag and drop an existing instruction into the function to add it in.

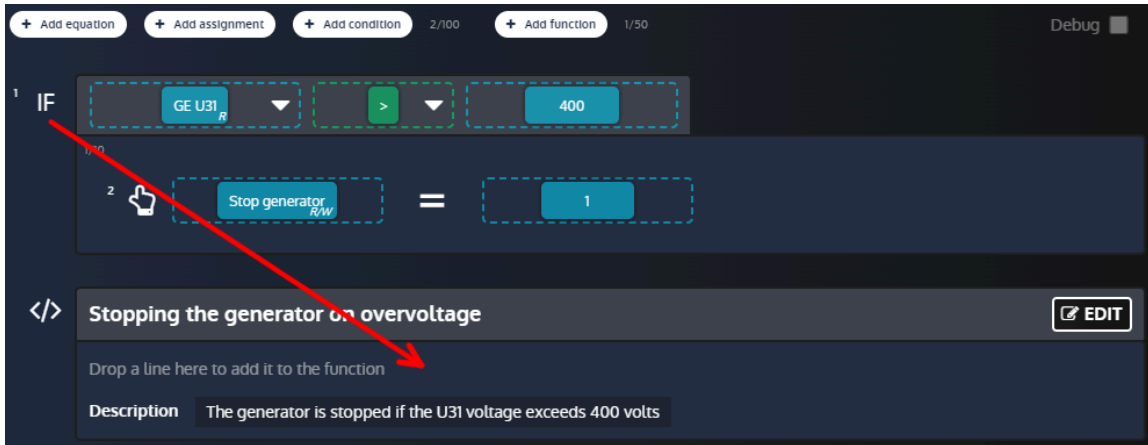Figure 44. Adding an instruction to a function




### Edit a function

Click on the Edit button of a function to open the editing window:

1. Type in the title field to edit the title of the function (up to 100 characters per title for each function).
2. Type in the description field to edit the description of the function (up to 12500 characters shared across all functions).
3. Use the **Add** buttons to add new instructions to the function.
4. Drag and drop an instruction into the dotted area to move it out of the function.
5. Click on the **Save/Back** button to save the parameters of the function and to close the editing window.

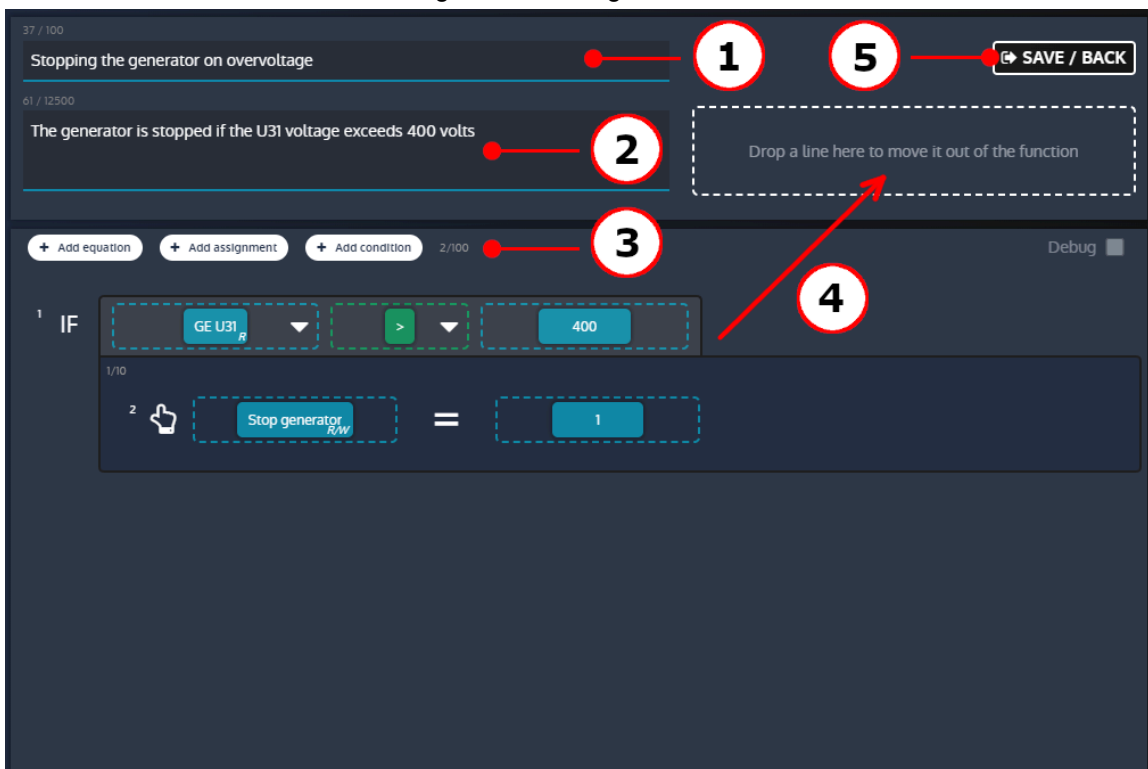Figure 45. Editing a function



### Moving a bloc or an instruction

The declared blocks and instructions can be moved using drag and drop:


- Operators and variables blocks can be move from a line to another
- Any instruction can be moved above or below other instructions to change the execution order

## Deleting a bloc or an instruction

Blocks and instructions can be deleted in different way. To delete a block or instruction:

- Drag and drop the element to delete into the **Trash** area
- Click on the element to delete and click on the **Trash** area
- Click on the element to delete and press the **Delete** key of the keyboard

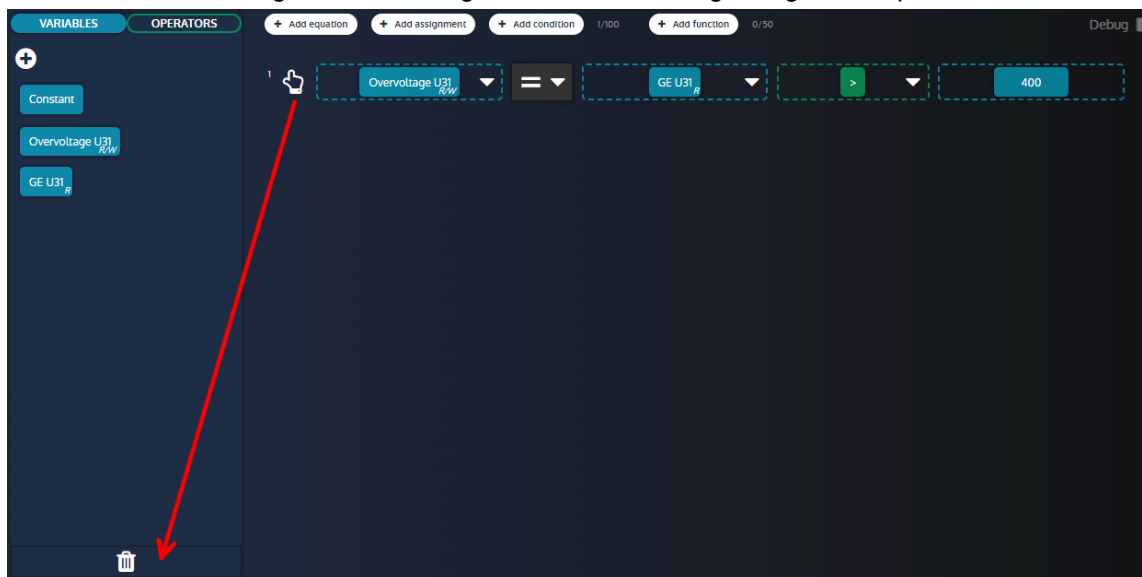Figure 46. Deleting an instruction through drag and drop



## Confirm/Cancel your changes

Once you are done setting the various instructions, you can confirm or cancel your changes.

- To confirm your changes, click on the confirm button




- To cancel your changes, click on the cancel button



## Debug mode

It is possible to activate a debug mode to watch in real time the values of the variables used in the **Easy Flex®** lines. Toggle the check box to enable/disable the debug mode. The debug mode can't be activated while modifications are in progress. Modifications can't be done while debug mode is activated.

Figure 47. Easy Flex® debug mode



## Warnings with Easy Flex®

Variable [4214] *Easyflex error code* provides more information in case of an **Easy Flex®** warning alarm. Its value is calculated with the following formula:

$$[4214] = (100 * \text{line concerned}) + \text{type of error}$$

List of different types of errors:

**Error 1**

Operand 1 or 2 is invalid.

**Error 2**

Unknown operator.

**Error 3**

The result variable is empty.

**Error 4**

The result variable is read-only.

**Error 5**

The result is outside the range of the target variable.

**Error 6**

Overflow on at least one equation.

**Error 7**

Division by 0.

## USER VARIABLES

A range of user variables is available to be used in equations.

Starting from the firmware version 2.22, this range has been split into two sub-ranges:

- Saved user variables [8000] to [8049]
- Unsaved user variables [8050] to [8099]

Unsaved user variables values are lost when the module's power supply is switched off while Saved user variables values are saved in a non volatile memory so their values are kept even in case of power loss.

Prefer using Unsaved user variables for better performance if you don't need to save the value of a data in case of power cycling. Otherwise, Saved user variables and Unsaved user variables share the same behaviour as is described below.

### User variables properties

---

Each property of a user variable can be set.

- Label
- Unit
- Accuracy
- Variable type. It defines the way you want to use the user variable:
  - For equations
  - To trigger alarms or faults (depending on the variable type value)



**Note:** Label, unit and accuracy will change the display of the user variable in the information page.

### User variable used for equations

---

The variable can be used:

- To store the result of an equation line (to be used in another equation line, to be displayed in the information page, to be read by modbus...).
- As an operand in an equation line.

### User variable used to trigger alarms and faults

---

In that case, the value of the user variable is used to trigger an alarm or a fault according to the user variable value:


- If the user variable = 0, the alarm/fault is not active.
- If the user variable > 0, the alarm/fault is active and is displayed in the alarms/faults log (with the label set before).

## ALTERNATIVE SELECTION

The **Alternative selection** page offers a supplement to **Easy Flex®** programming.

This function is presented as 16 selections between two values:

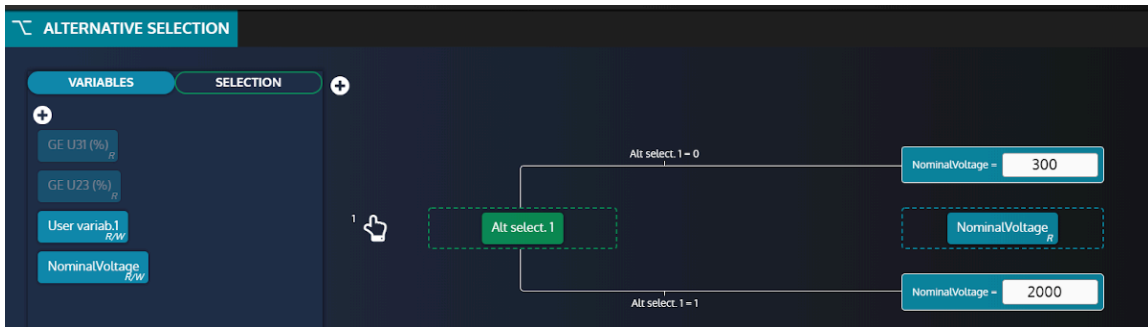Figure 48. Page of the function Alternative selection



### Adding variables

To add new variables from the list of variables, click on the "+" button in the "Variables" tab(see below) :

Figure 49. Adding variables button




Use the **search engine** to find and select the variables you want to use.

### Adding selections

Selection variables are **booleans** (0 or 1) used to assign different values to the associated parameter (see below):

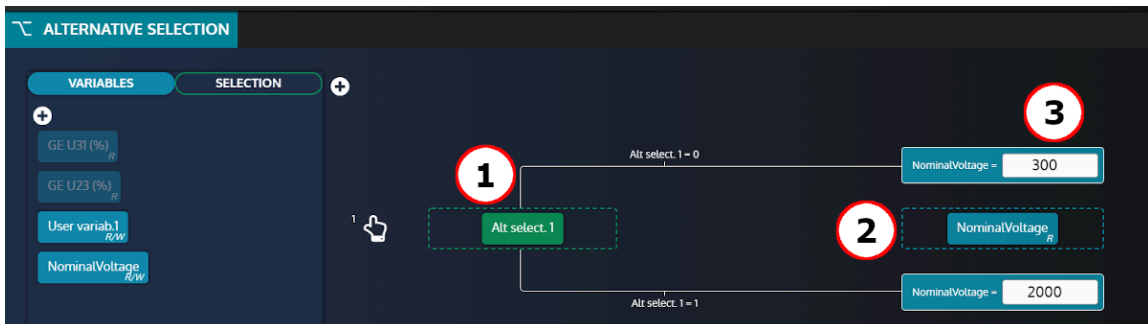Figure 50. Equation block definition



1. Selection variable (one among the 16 proposed in the SELECTION section).
2. Associated parameter.
3. Value to assign to the associated parameter depending on the value of the selection variable

Using the example above, **NominalVoltage** parameter will take 2 different values depending on **Alt select 1** :



- When **Alt select 1 = 0** then **NominalVoltage** will be set to **300**.
- When **Alt select 1 = 1** then **NominalVoltage** will be set to **2000**.



**Note:** If a variable is set in the "Alternative selection" mode, modifying its value from the front face, via Modbus or any other source will always result of the overwrite of the value by the "Alternative selection" mode.

## SCHEDULER


The scheduler can activate any function that can be controlled by a digital input. These functions can be activated one or many times.

Scheduled items are presented as a list. Each line (item) in this list corresponds to a scheduled event.

### Scheduler list

In the **Controller settings** ⇒ **Programming** ⇒ **Scheduler (i4Gen)** page, you will have access to all events that you created.

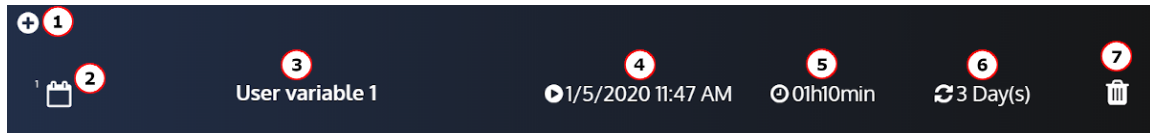
Figure 51. Scheduler icons definition



1. Add an event.
2. Number of the event.
3. Active function during the event.
4. First time the event will take effect.
5. Duration of the event.
6. Frequency.
7. Delete the event.

It is also possible to have an event without periodicity. The event will occur only once:

Figure 52. Scheduler with an event without periodicity



### Scheduler settings

By clicking on the event you want to modify, you will have access to these parameters which will allow you to configure the event:

Figure 53. Form of the scheduler

The screenshot shows a dark-themed configuration form for a scheduler. It contains the following elements:

- Function:** A text input field containing "Led test".
- Starting date/time:** A date and time input field showing "4/17/2019 - 11:47 AM".
- Duration:** Two input fields for "24" and "10", with "h" and "min" labels respectively.
- Periodicity:** A dropdown menu currently set to "Daily".
- Every:** An input field containing "1" followed by the text "Day(s)".
- Confirmation:** A green square button with a white checkmark and a red square button with a white 'X'.

1. Function active during the event.
2. First date and time the event will take effect.
3. Duration of the event.
4. Expected periodicity (Only once or period on a daily, weekly, monthly basis).
5. Setting the repetition of the periodicity (X period (s)).
6. Confirm or cancel the event settings.

## Scheduler supervision

Available in the **Controller supervision** ⇒ **Scheduler (i4Gen)** page.

Figure 54. Scheduler supervision



1. Number of the event.
2. Function active during the event.

## OPERATOR MANUAL

3. The next time the event will take effect (the value can be different from the configuration because this one is actualised).
4. Duration of the event.
5. Periodicity.
6. Indicator On / Off.

# MODBUS TCP MAPPING

## Configurable block

---

To create your own Modbus blocks, use variables [10000]...[10299] in the **Controller settings** ⇒ **Programming** ⇒ **Modbus** ⇒ **Modbus redirection (i4Gen)** page.

There are two ways to configure these blocks:

1. Configuration in the **Controller settings** ⇒ **Programming** ⇒ **Modbus** ⇒ **Modbus redirection (i4Gen)** page: enter the codes of the variables to read; Modbus readings on registers [10000]...[10299] will be the values of the pointed variables.
2. Configuration by an external device; this device must follow the following steps:
  - Write 1 in the variable [3016] to enter the modbus redirection configuration mode.
  - Write the codes of the variables to be read to the desired registers ([10000]...[10299]).
  - Write 0 in the variable [3016] to switch back to the modbus redirection display mode.

You can then read your own block, by reading the registers [10000]...[10299] through Modbus TCP.

### Example:

If the configuration is as follows [10000] = 14; [10001]=15; [10002]=16, reading these 3 registers through Modbus TCP will give you the hours/minutes/seconds of the module (respectively the values of variables [14], [15] and [16]).

## LOGGER

The **Logger** tool is used to track value or status changes up to 10 variables at the user's choice.

The variables *Generator state* and *Engine state* are always recorded as long as the Logger is not set to Off.

This function is available in the **Controller settings** ⇒ **Programming** ⇒ **Logger** ⇒ **Activation (i4Gen)** page.

### Logger recording modes

---

Several modes are available to capture events depending on the Generator status:

#### Off

No recording of selected variables

#### Always ON

FIFO recording of selected variables until the Logger is Off.

#### Post starting

FIFO recording of selected variables when the Generator is running.

#### Stabilized

FIFO recording of selected variables as long as the Generator is in a stabilized state.

### Additional Functions

---

For each variable you can set a log period down to the second (example: 1s).

To use this function, select **Interval** in the **Log variable 1 on** field.

The **Erase Logger** button will delete all recorded variables from the module.

A lot of variables can be recorded. The list of the available variables can be found in the [Software variables \(on page 129\)](#) appendix.

# COMMUNICATIONS

## NETWORK

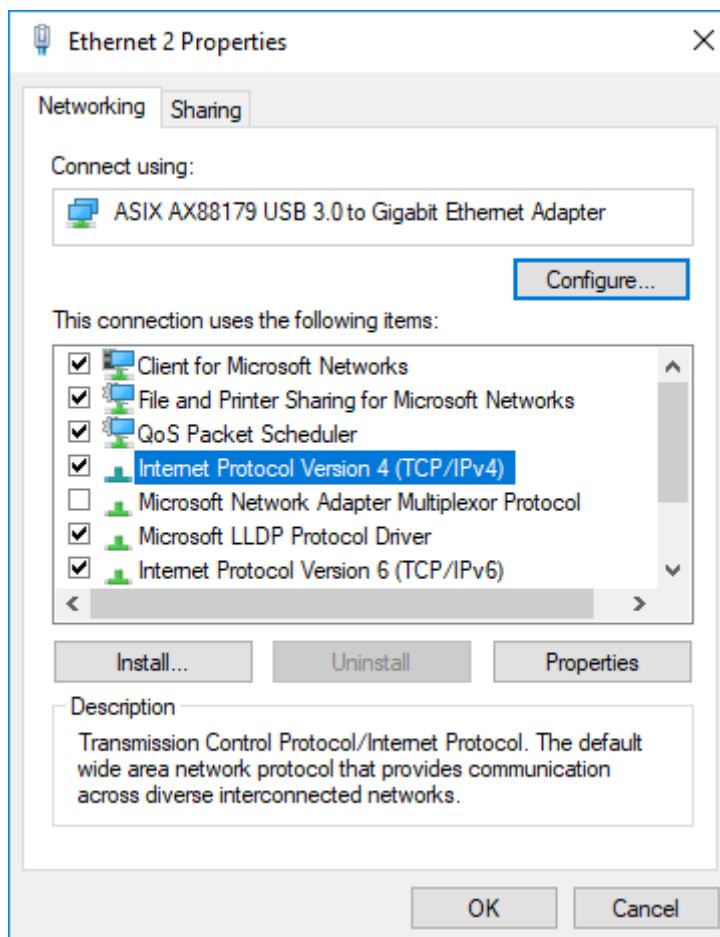
### Setting up PC connection

Materials required:

- A CAT 5 cross Ethernet cable (marked CROSSOVER CABLE along its sheath) for direct connection to the module from your computer.
- A CAT 5 straight Ethernet cable (marked PATCH CABLE or STRAIGHT-THROUGH CABLE along its sheath) can only be used with an Ethernet switch.

### Configuring the computer IP address

1. Connect the module with a 100Ω Ethernet cord  
Direct connection to PC: use a crossover cord. Connection through a switch: you can use either a direct or a crossover cable such as 3-m long A53W1, as long as your switch uses auto MDI/MDIX technology.
2. Power up the module using a stabilized power supply.
3. Open Windows control panel
4. Open the network interface properties window. For this do the following steps:
  - a. Open the page **Network and Sharing Center**
  - b. Click on **Change adapter settings**
  - c. Right click on your network interface and select **Properties** (Windows 7 and above)



## Change the IP address of the module

---

IP settings of the module can be modified in **Controller settings** ⇒ **System** ⇒ **Network**.

There are two different types of configuration:

- **DHCP (automatic)**: The module supports DHCP. If DHCP is enabled, the module must be connected to a network equipped with a DHCP server to obtain an IP address.  
On power-up, the module obtains an IP address from the DHCP Server.  
If the DHCP protocol fails, the fixed IP address of the module is used (Factory setting: 192.168.11.1).
- **Manual setup**: To manually configure the device network settings, disable the **DHCP** setting, then fill in the **IP address** and **Subnet Mask** fields.

Modbus/TCP port and HTTP port numbers can be set in both configurations.

On CORE modules, you can reset the IP address (to 192.168.11.1) by holding the button on the rear face when the module is powered on.



**Note:** For most networks, it is not necessary to set the gateway or to change port numbers. For complex networks, please contact your network administrator to configure your router and/or the units according to your needs.



## MODBUS TCP/IP

### Abilities

An Ethernet communication can be established between a Modbus master device and the controller which acts as a Modbus slave.

The complete list of variables accessed through *i4Gen* is described in the chapter [Software variables \(on page 129\)](#).

The complete list of every variable is described in the documentation **Modbus table** available in our website.

The Modbus master device can read/write many internal variables of the controller according to their access rights described below.

Type	Range	Default access right
Readings (measurements, states,..).	[0000] ... [1999]	Read only.
Parameters.	[2000] ... [3999]	Read/Write.
Modes, statuses, settings,... Readings associated with digital inputs.	[4000] ... [9999] [4500] ... [4649], [4950]...[4999]	Read. Write (subject to activation).

In addition, the following functions are supported:

- Reading bit fields, listed in a dedicated tab of the file and organized in 16-bit words. These variables are listed in the **Modbus table** documentation.
- Reading contiguous configurable data block.

Those functions allow a significant performance gain and help reducing the load on an Ethernet network.

### Configuration

To communicate through Modbus/TCP, define the following settings:

- The module IP address set in the **Controller settings** ⇒ **System** ⇒ **Network** page.
- The *Modbus TCP port* [3014], generally 502, set in the **Controller settings** ⇒ **System** ⇒ **Network** page.
- The Modbus/TCP rights: see further.

The module handles up to 6 simultaneous connections. This can be used for multiple HMIs for example. For more details on the Ethernet configuration, see the chapter [Network \(on page 81\)](#).



**Warning:**

Connecting the controller to an *i4Gen* device or the *i4Gen Suite* software will utilize one Modbus connection.

### Functions

The module supports the following Modbus functions:

Functions	Description
01, 02	Read logical data (Coil status, discrete input status).
03, 04	Read holding/input registers (16 bit).
05	Write logical value (single coil).
06	Write single register (16-bit variable).
15 (0x0F)	Write multiple logical values (multiple coils).
16 (0x10)	Write multiple registers.

All module variables are 16-bit registers. Yet it might be useful to consider them as logical values (if they are only set to 0 or 1) to simplify the Modbus/TCP protocol communication with some external PLC. If function 01 or 02 is used to read an internal register that is different from 0, then returned value will be 1.

The module registers start from address 0. Depending on your Modbus/TCP client equipment-software, you may need to use an offset of 1 when reading/writing registers as addresses may start from address 1. In this case, request address/register number 1 to access variable 0000 inside the module.

The 32-bit variables can only be written using 0x10 function.

If a digital input modifies a piece of data also to be written via Modbus, the latest request takes over the other.

Data [10000]...[10299] can be read by block (see further).

## Access rights

The access rights depend on the parameter type and on Modbus access permissions. To manage access rights, set to 1 the corresponding bits in the register [3015]:

Description	Bit #	Default value
Writing date/ time	0	0
Writing engine counters	1	0
Not used	2	0
Writing digital input function register	3	1
Not used	4	0
Not used	5	0
Not used	6	0
Not used	7	0
Reading via Modbus/TCP	8	1
Writing via Modbus/TCP	9	1

Using the **Controller settings** ⇒ **Programming** ⇒ **Modbus** ⇒ **Modbus rights (i4Gen)** page, you can tick check-boxes to set those:

Bit #	Label	Description
0	Writing to date/ time	Module time synchronization.
1	Writing to Engine counters	Manual counters adjustment (see following table).
3	Writing to digital input function register	Opens the possibility to activate a digital input function using Modbus/TCP protocol.
8	Reading using Modbus/TCP protocol	Opens the possibility to grant reading individual permissions.
9	Writing using Modbus/TCP protocol	Opens the possibility to grant writing individual permissions.

The counters, encoded on 32 bits, include:

Meters (MSB LSB)	Label
[80]   [79]	<i>Generator KWh</i>
[82]   [81]	<i>Generator KVARh</i>
[84]   [83]	<i>Number of hours generator running</i>

## Bit fields

Bit fields are meant for decreasing communication bus load. They pack up to 16 logic variables inside a single register. This way, a single Modbus/TCP request can be used to read a group of information. Each variable contains the current value of 16 logic variables such as breaker positions, faults, alarms...

They are listed out in the chapter [Software variables \(on page 129\)](#).

The bit fields [956]...[969] have latched values: a reset is required for them to return to 0.



**Note:** Available data are related only to faults that occurred after the latest power up sequence. Events that occurred before the module has been power cycled are listed in the fault pages but not among the variables.

### Example:

The table below shows a Modbus/TCP client sending a reading request (function 04) of 6 registers starting from variable [79].

Client request		Module server response	
Field	Value	Field	Value
Function code	04	Required function.	04
Starting Register (MSB)	00	Data bytes (= 2 * Number of requested registers).	6
Starting Register (LSB)	79	Value of register 0079 (MSB).	D0
Count of registers (MSB)	00	Value of register 0079 (LSB).	D1
Count of registers (LSB)	06	Value of register 0080 (MSB).	D2
		Value of register 0080 (LSB).	D3
		Value of register 0081 (MSB).	D4
		Value of register 0081 (LSB).	D5

## CANOPEN

CANopen extension modules (i.e. CANopen couplers) can be used to increase the number of digital inputs/outputs and analog inputs of the module. Overall max. count of added inputs/outputs: 64 digital inputs, 64 digital outputs and 16 analog inputs. The CANopen protocol inputs/outputs are read/written every 100ms.

### Configuration

Setting	Label	Value	Description
[3153]	<i>Coupler ID #1</i>	0 ... 255	Identifier of the first coupler.
[3154]	<i>Number of digital inputs #1</i>	0 ... 64	Number of digital inputs on the first coupler.
[3155]	<i>Number of digital outputs #1</i>	0 ... 64	Number of digital outputs on the first coupler.
[3165]	<i>Number of analog inputs #1</i>	0 ... 16	Number of analog inputs on the first coupler.
[3156]	<i>Coupler ID #2</i>	0 ... 255	Identifier of the second coupler.
[3157]	<i>Number of digital inputs #2</i>	0 ... 64	Number of digital inputs on second coupler.
[3158]	<i>Number of digital outputs #2</i>	0 ... 64	Number of digital outputs on the second coupler.
[3166]	<i>Number of analog inputs #2</i>	0 ... 16	Number of analog inputs on the second coupler.
[3159]	<i>Coupler ID #3</i>	0 ... 255	Identifier of the third coupler.
[3160]	<i>Number of digital inputs #3</i>	0 ... 64	Number of digital inputs on the third coupler.
[3161]	<i>Number of digital outputs #3</i>	0 ... 64	Number of digital outputs on the third coupler.
[3167]	<i>Number of analog inputs #3</i>	0 ... 16	Number of analog inputs on the third coupler.
[3162]	<i>Coupler ID #4</i>	0 ... 255	Identifier of the fourth coupler.
[3163]	<i>Number of digital inputs #4</i>	0 ... 64	Number of digital inputs on the fourth coupler.
[3164]	<i>Number of digital outputs #4</i>	0 ... 64	Number of digital outputs on the fourth coupler.
[3168]	<i>Number of analog inputs #4</i>	0 ... 16	Number of analog inputs on the fourth coupler.



**Note:** The CANopen couplers ID max range changes according to the number of configured inputs/outputs (for more details, refer to **CiA 301** standard).



**Important:** When the engine MTU MDEC protocol is selected on port CAN 2 of the controller, CANopen protocol is automatically switched to port CAN 1. This means that each CANopen coupler on the CAN bus must be assigned to a unique coupler ID.

The assignment of I/Os is done by order of the couplers declared in the settings (not by id). The lowest variable number is associated to the lowest message number configured.

The digital inputs/outputs of the CANopen protocol have the same attributes as regular inputs/outputs except for the delay at the drop of inputs.

Each CANopen analog input value can be adjusted using a gain and an offset.

Setting	Attribute
<b>Digital inputs 1 ... 64</b>	
[3200] ... [3231], [8550] ... [8581]	Function
[3232] ... [3263], [8582] ... [8613]	Delay
[3264] ... [3295], [8614] ... [8645]	Validity
[3296] ... [3327], [8646] ... [8677]	Polarity
<b>Digital outputs 1 ... 64</b>	
[3350] ... [3381], [8700] ... [8731]	Function
[3382] ... [3413], [8732] ... [8763]	Polarity: <ul style="list-style-type: none"> <li>• 0: Normally de-energized</li> <li>• 1: Normally energized</li> </ul>
<b>Analog inputs 1 ... 16</b>	
[8351], [8353], [8355] ... [8381]	Gain
[8350], [8352], [8354] ... [8380]	Offset

An overflow alarm (variable [609]) is available for analog inputs. When it is active, you can look at the variable [610] to know which analog inputs triggered the alarms. If you have several analog inputs causing a problem, you'll have to solve each problem one by one.

On power-up, the configuration of the CANopen extension modules is automatically initialized. The status (variable [3150]) turns to 1.

The CANopen protocol error time-out (variable [3152]) is 10.0s by default.

## Variable mapping and inputs/outputs

The CANopen protocol inputs and outputs are accessed by their code:

- Digital inputs: [800]...[831], [1250]...[1281]
- Digital outputs: [4751]...[4782], [5100]...[5131]
- Analog inputs: [1050]...[1065]

## SAE J1939

### Presentation

---

J1939 is a CAN protocol used by “electronic” motors which include an Engine Control Unit (ECU), also called Engine Control Module (ECM) or Engine Management System (EMS). This protocol allows to read engine data (measurements, positions, binary values) and send commands (start, stop, speed control...).

The ECU can detect faults and send them to the module: protections can be assigned to these faults (see further).



**Note:** When the J1939 protocol is in use, the associated CAN bus bit rate is automatically fixed at 250 kbit/s as defined by the J1939-11 standard. This bit rate applies to any other protocol used by the controller on the same CAN bus.

### J1939 configuration

---

#### J1939 communication

To use J1939 communication:

1. Enter the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **ECU/ECM** ⇒ **ECU/ECM** page
2. Enable J1939 protocol with parameter [3118]
3. Select your ECU manufacturer listed in parameter [3100]
4. Select ECU type using parameter [3101]
5. Assign the alarms/faults to a protection (see below)
6. Connect the CAN bus of the ECU to the J1939 terminal block (CAN 2) of the module

#### Automatic address configuration

Changing the *ECU Manufacturer* [3100] and/or the *ECU type* [3101] will automatically set the *ECU ID* [3102] and *COMPACT ID* [3103] variables to the default values for this particular ECU configuration. However you can still manually change these two identifiers afterwards if necessary.

#### ECU ID auto-detection functionality

This function automatically detects the address of the ECU connected to the J1939 terminal block (CAN 2) of the module. To use this function:

1. Make sure that only one engine ECU and no other J1939 equipment is connected to the **COMPACT** unit
2. Using the front panel of the product or by connecting to the controller from **i4Gen Suite** software, access the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **ECU/ECM** ⇒ **ECU/ECM** page.
3. Press the AUTO DETECT button and wait a few seconds to get the detection results

#### Speed control frame configuration

Speed frame TSC1 can contain two security mechanisms so the ECU can verify its validity and accept or reject the received speed control frame. According to standard SAE J1939-71, TSC1 frames that do not include these mechanisms should none the less be accepted by the ECU.

- A counter can be included using parameter *TSC1 Message counter* [3123] to make sure the controller constantly updates the frame content.
- A checksum can be included using parameter *TSC1 Message checksum* [3124] so the ECU can check the integrity of the frame content.

## ECU manufacturer and type settings

The ECU manufacturer and type determine the following settings:

- Module address on J1939 CAN bus.
- ECU address on J1939 CAN bus.
- Speed control: through J1939 or using analog output or pulses.
- Start/Stop control: through J1939 or using the "crank" and "fuel" digital outputs.
- Oil pressure and coolant temperature are automatically measured through J1939, except if you specify a dedicated sensor in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Analog inputs** page.
- J1939 commands from the controller to the ECU can be inhibited by selecting the "Generic" option for the parameter [3100] and the "Without commands" option for the parameter [3101] in the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **ECU/ECM** ⇒ **ECU/ECM** page.



**Note:** Note that engine speed measurement method must be selected manually using parameter [2200] in **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **Engine** ⇒ **General**. The measurement source can be the magnetic pickup, the alternator or J1939.

## Faults

The module can monitor diagnostic messages (DM1) from the ECU. Only relevant diagnostic messages are taken into account and used in the module fault/alarm system. The module interprets the messages for display and protections.

When an alarms/faults reset is performed on the controller ([SHIFT+INFO] button or remote reset), the module sends a reset message (DM3) to the ECU. If the diagnostic message is not sent by the ECU for more than 3s, the corresponding fault/alarm is automatically reset to Off.

The following J1939 "lamp" indicators can be configured to trigger one of the module protections:

J1939 message	Control in <i>i4Gen Suite</i> software		Message description (ECU internal threshold)
Malfunction "lamp"	[3110]	<i>Control on Malfunction Indicator Lamp</i>	Message in presence of an emission-related trouble
Protection "lamp"	[3111]	<i>Control on Protection Lamp</i>	Trouble is most probably not electronic subsystem related. E.g. coolant temperature may exceed acceptable range.
Amber "lamp"	[3112]	<i>Control on Amber Warning Lamp</i>	Trouble where the engine need not immediate stop.
Red "lamp"	[3113]	<i>Control on Red Stop Lamp</i>	Severe enough trouble for the engine to stop.

The module also displays the last five unmanaged SPN (Suspect Parameter Numbers, i.e. the source of the problem)/FMI (Failure Mode Identifier, i.e. the type of error) combinations that it has received via the diagnostic message (DM1). These SPN/FMIs are backed up in the following registers:

Registers		Description
[664] [665] [666]	SPN n°1 J1939 SPN HI 1 FMI n°1	Latest SPN/FMI received by the module.
[667] [668] [669]	SPN n°2 J1939 SPN HI 2 FMI n°2	Second latest SPN/FMI received by the module.
[670] [671] [672]	SPN n°3 J1939 SPN HI 3 FMI n°3	Third latest SPN/FMI received by the module.
[673] [674] [675]	SPN n°4 J1939 SPN HI 4 FMI n°4	Fourth latest SPN/FMI received by the module.
[676] [677] [678]	SPN n°5 J1939 SPN HI 5 FMI n°5	Fifth latest SPN/FMI received by the module.

SPN LO corresponds to LSB (Least significant byte), SPN HI to MSB (Most significant byte)



**Note:** In any case, a fault/alarm is activated on reception of an unknown SPN/FMI if the parameters *Control on Red Stop Lamp* [3113]/*Control on Red Stop Lamp* [3112] has been set. It is deactivated by Reset.

## J1939 Measurements

Next table lists the measuring points whose values are conveyed over J1939 and taken into account by the module. The J1939 standard assigns each of them an SPN (Suspect Parameter Number) and they are grouped in J1939 CAN frames; each frame is identified by a PGN (Parameter Group Number).



**Note:** For more information on the J1939 protocol and the exact definition of each SPN and PGN, refer to the SAE J1939 standards.

SPN	PGN	Description	Variable
22	FEEF	<i>Engine Extended Crankcase Blow-by Pressure</i>	[720]
29	F003	<i>Accelerator Pedal 2 Position</i>	[756]
51	FEF2	<i>Engine Throttle Valve 1 Position 1</i>	[1178]
52	FEEE	<i>Engine Intercooler Temperature</i>	[718]
81	FEF6	<i>Aftertreatment 1 Diesel Particulate Filter Intake Pressure (use SPN 3609)</i>	[730]
91	F003	<i>Accelerator Pedal Position 1</i>	[682]
92	F003	<i>Engine Percent Load At Current Speed</i>	[683]
94	FEEF	<i>Engine Fuel Delivery Pressure</i>	[719]
95	FEFC	<i>Engine Fuel Filter Differential Pressure</i>	[1181]
97	FEFF	<i>Water In Fuel Indicator 1</i>	[740]
98	FEEF	<i>Engine Oil Level</i>	[721]
99	FEFC	<i>Engine Oil Filter Differential Pressure</i>	[739]
100	FEEF	<i>Oil pressure</i>	[680]



## OPERATOR MANUAL

SPN	PGN	Description	Variable
101	FEEF	<i>Engine Crankcase Pressure 1</i>	[722]
102	FEF6	<i>Engine Intake Manifold #1 Pressure</i>	[731]
105	FEF6	<i>Engine Intake Manifold 1 Temperature</i>	[732]
106	FEF6	<i>Engine Intake Air Pressure</i>	[733]
107	FEF6	<i>Engine Air Filter 1 Differential Pressure</i>	[734]
108	FEF5	<i>Barometric Pressure</i>	[727]
109	FEEF	<i>Engine Coolant Pressure 1</i>	[723]
110	FEEE	<i>Coolant temperature</i>	[681]
111	FEEF	<i>Engine Coolant Level 1</i>	[724]
112	FEF6	<i>Engine Coolant Filter Differential Pressure</i>	[736]
127	FEF8	<i>Transmission 1 Oil Pressure</i>	[1180]
156	FEDB	<i>Engine Fuel 1 Injector Timing Rail 1 Pressure</i>	[1173]
157	FEDB	<i>Engine Fuel 1 Injector Metering Rail 1 Pressure</i>	[706]
158	FEF7	<i>Key Switch Battery Potential</i>	[738]
166	FEBE	<i>Engine Rated Power</i>	[703]
167	FEF7	<i>Charging System Potential (Voltage)</i>	[1179]
168	FEF7	<i>Battery Potential / Power Input 1</i>	[737]
171	FEF5	<i>Ambient Air Temperature</i>	[728]
172	FEF5	<i>Engine Intake 1 Air Temperature</i>	[729]
173	FEF6	<i>Engine Exhaust Temperature</i>	[735]
174	FEEE	<i>Engine Fuel 1 Temperature 1</i>	[715]
175	FEEE	<i>Engine Oil Temperature 1</i>	[716]
176	FEEE	<i>Engine Turbocharger 1 Oil Temperature</i>	[717]
182	FEE9	<i>Engine Trip Fuel</i>	[711]
183	FEF2	<i>Engine Fuel Rate</i>	[725]
184	FEF2	<i>Engine Instantaneous Fuel Economy</i>	[726]
188	FEE3	<i>Engine Speed At Idle, Point 1</i>	[741]
189	FEBE	<i>Engine Rated Speed</i>	[704]
190	F004	<i>Engine speed</i>	[679]
247	FEE5	<i>Engine Total Hours of Operation</i>	[709]
250	FEE9	<i>Engine Total Fuel Used</i>	[713]
441	FE8C	<i>Auxiliary Temperature 1</i>	[791]
512	F004	<i>Driver's Demand Engine - Percent Torque</i>	[684]
513	F004	<i>Actual Engine - Percent Torque</i>	[685]
514	FEDF	<i>Nominal Friction - Percent Torque</i>	[707]
515	FEDF	<i>Engine's Desired Operating Speed</i>	[708]
899	F004	<i>Engine Torque Mode</i>	[757]
970	F001	<i>Engine Auxiliary Shutdown Switch</i>	[755]

## OPERATOR MANUAL

SPN	PGN	Description	Variable
971	F001	<i>Engine Derate Switch</i>	[754]
1013	FEB7	<i>Maximum speed</i>	[742]
1039	FEAF	<i>Trip Fuel (Gaseous)</i>	[699]
1040	FEAF	<i>Total Fuel Used (Gaseous)</i>	[701]
1081	FEE4	<i>Engine Wait to Start Lamp</i>	[1174]
1109	FEE4	<i>Engine Protection System Approaching Shutdown</i>	[1176]
1110	FEE4	<i>Engine Protection System has Shutdown Engine</i>	[1175]
1122	FEA7	<i>Engine Alternator Bearing 1 Temperature</i>	[1171]
1123	FEA7	<i>Engine Alternator Bearing 2 Temperature</i>	[1172]
1124	FEA7	<i>Engine Alternator Winding 1 Temperature</i>	[696]
1125	FEA7	<i>Engine Alternator Winding 2 Temperature</i>	[697]
1126	FEA7	<i>Engine Alternator Winding 3 Temperature</i>	[698]
1134	FEEE	<i>Engine Charge Air Cooler Thermostat Opening</i>	[1177]
1136	FEA4	<i>Engine ECU Temperature</i>	[695]
1137	FEA3	<i>Engine Exhaust Gas Port 1 Temperature</i>	[1167]
1138	FEA3	<i>Engine Exhaust Gas Port 2 Temperature</i>	[1168]
1139	FEA3	<i>Engine Exhaust Gas Port 3 Temperature</i>	[1169]
1140	FEA3	<i>Engine Exhaust Gas Port 4 Temperature</i>	[1170]
1141	FEA2	<i>Engine Exhaust Gas Port 5 Temperature</i>	[1163]
1142	FEA2	<i>Engine Exhaust Gas Port 6 Temperature</i>	[1164]
1143	FEA2	<i>Engine Exhaust Gas Port 7 Temperature</i>	[1165]
1144	FEA2	<i>Engine Exhaust Gas Port 8 Temperature</i>	[1166]
1145	FEA1	<i>Engine Exhaust Gas Port 9 Temperature</i>	[1159]
1146	FEA1	<i>Engine Exhaust Gas Port 10 Temperature</i>	[1160]
1147	FEA1	<i>Engine Exhaust Gas Port 11 Temperature</i>	[1161]
1148	FEA1	<i>Engine Exhaust Gas Port 12 Temperature</i>	[1162]
1149	FEA0	<i>Engine Exhaust Gas Port 13 Temperature</i>	[1155]
1150	FEA0	<i>Engine Exhaust Gas Port 14 Temperature</i>	[1156]
1151	FEA0	<i>Engine Exhaust Gas Port 15 Temperature</i>	[1157]
1152	FEA0	<i>Engine Exhaust Gas Port 16 Temperature</i>	[1158]
1153	FE9F	<i>Engine Exhaust Gas Port 17 Temperature</i>	[1151]
1154	FE9F	<i>Engine Exhaust Gas Port 18 Temperature</i>	[1152]
1155	FE9F	<i>Engine Exhaust Gas Port 19 Temperature</i>	[1153]
1156	FE9F	<i>Engine Exhaust Gas Port 20 Temperature</i>	[1154]
1176	FE99	<i>Engine Turbocharger 1 Compressor Intake Pressure</i>	[796]
1177	FE99	<i>Engine Turbocharger 2 Compressor Intake Pressure</i>	[1150]
1180	FE98	<i>Engine Turbocharger 1 Turbine Intake Temperature</i>	[794]
1181	FE98	<i>Engine Turbocharger 2 Turbine Intake Temperature</i>	[795]

## OPERATOR MANUAL

SPN	PGN	Description	Variable
1203	FE94	<i>Engine Auxiliary Coolant Pressure</i>	[792]
1208	FE92	<i>Engine Oil Filter Intake Pressure</i>	[693]
1212	FE94	<i>Engine Auxiliary Coolant Temperature</i>	[793]
1218	FECE	<i>Active Diagnostic Trouble Code Count</i>	[705]
1242	FE92	<i>Instantaneous Estimated Brake Power</i>	[694]
1387	FE8C	<i>Auxiliary Pressure #1</i>	[691]
1388	FE8C	<i>Auxiliary Pressure #2</i>	[692]
1390	FE8B	<i>Engine Fuel Valve 1 Intake Absolute Pressure</i>	[690]
1761	FE56	<i>Aftertreatment 1 Diesel Exhaust Fluid Tank Volume</i>	[785]
1800	FE50	<i>SLI Battery 1 Temperature</i>	[784]
2432	F004	<i>Engine Demand - Percent Torque</i>	[686]
2433	FE07	<i>Engine Exhaust Manifold Bank 2 Temperature 1</i>	[688]
2434	FE07	<i>Engine Exhaust Manifold Bank 1 Temperature 1</i>	[689]
3031	FE56	<i>Aftertreatment 1 Diesel Exhaust Fluid Tank Temperature 1</i>	[786]
3242	FDB4	<i>Aftertreatment 1 Diesel Particulate Filter Intake Temperature</i>	[783]
3246	FDB3	<i>Aftertreatment 1 Diesel Particulate Filter Outlet Temperature</i>	[782]
3363	FE56	<i>Aftertreatment 1 Diesel Exhaust Fluid Tank Heater</i>	[790]
3517	FE56	<i>Aftertreatment 1 Diesel Exhaust Fluid Tank Level</i>	[787]
3563	FDD0	<i>Engine Intake Manifold #1 Absolute Pressure</i>	[687]
3609	FD8C	<i>Aftertreatment 1 Diesel Particulate Filter Intake Pressure</i>	[780]
3644	FD92	<i>Engine Derate Request</i>	[781]
3697	FD7C	<i>Diesel Particulate Filter Lamp Command</i>	[772]
3698	FD7C	<i>Exhaust System High Temperature Lamp Command</i>	[778]
3699	FD7C	<i>Aftertreatment Diesel Particulate Filter Passive Regeneration Status</i>	[773]
3700	FD7C	<i>Aftertreatment Diesel Particulate Filter Active Regeneration Status</i>	[774]
3701	FD7C	<i>Aftertreatment Diesel Particulate Filter Status</i>	[775]
3702	FD7C	<i>Diesel Particulate Filter Active Regeneration Inhibited Status</i>	[776]
3703	FD7C	<i>Diesel Particulate Filter Active Regeneration Inhibited Due to Inhibit Switch</i>	[777]
3719	FD7B	<i>Aftertreatment 1 Diesel Particulate Filter Soot Load Percent</i>	[767]
3720	FD7B	<i>Aftertreatment 1 Diesel Particulate Filter Ash Load Percent</i>	[768]
3721	FD7B	<i>Aftertreatment 1 Diesel Particulate Filter Time Since Last Active Regeneration</i>	[769]
3750	FD7C	<i>Aftertreatment 1 Diesel Particulate Filter Conditions Not Met for Active Regeneration</i>	[779]
3938	F01E	<i>Generator Governing Bias</i>	[758]
4360	FD3E	<i>Aftertreatment 1 SCR Intake Temperature</i>	[764]
4363	FD3E	<i>Aftertreatment 1 SCR Outlet Temperature</i>	[765]
5137	FD40	<i>Aftertreatment 1 Diesel Exhaust Fluid Tank Heater Command</i>	[766]

SPN	PGN	Description	Variable
5245	FE56	<i>Aftertreatment Diesel Exhaust Fluid Tank Low Level Indicator</i>	[788]
5246	FE56	<i>Aftertreatment SCR Operator Inducement Severity</i>	[789]
5466	FD7B	<i>Aftertreatment 1 Diesel Particulate Filter Soot Load Regeneration Threshold</i>	[771]
6915	FC4A	<i>SCR System Cleaning Lamp Command</i>	[759]
6916	FC4A	<i>SCR System Cleaning Status</i>	[760]
6917	FC4A	<i>SCR System Cleaning Inhibited Status</i>	[761]
6918	FC4A	<i>SCR System Cleaning Inhibited Due to Inhibit Switch</i>	[762]
6934	FC4A	<i>SCR System Cleaning Forced Status</i>	[763]

These measurements are displayed in the **Controller supervision** ⇒ **ECU/ECM (i4Gen)** page. A measurement not sent by the ECU is shown as "...":



**Note:** To get the measurements through the Modbus/TCP protocol, refer to [Modbus TCP/IP \(on page 83\)](#)

## Controls

SPN	Description	Details	PGN
898	Requested speed	Engine speed at which the engine is expected to operate if the speed control mode is active.	0
970	Start-Stop	Engine shutdown switch.	F001
2881	Frequency selection	Ability to switch the rated speed. Switched on a state transition while engine speed is 0. 50/60Hz (CM570 and PGI) (e.g. see ECU8 section in the <a href="#">MTU (on page 111)</a> chapter).	FDCB

## J1939 CUSTOM FRAMES SETTINGS

It is possible to set up custom J1939 frames in reception/transmission on the controller.

To configure the J1939 custom frames, please open the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **ECU/ECM** ⇒ **ECU/ECM** page.

The Receive frame and Transmit frame tabs will be available only if J1939 protocol is enabled.

A maximum of 10 received frames and 10 transmitted frames can be set.



### Note:

It is not possible to use custom frames to receive frames from a different id other than the ECU id set in parameter [3102].

It is not possible to use custom frames to transmit frames with a different id other than the controller's id set in parameter [3103].

## Global view

Figure 55. J1939 custom frames settings global view

Index	PGN	Source	Start byte	Start bit	Length (Bits)	Action
<sup>1</sup>	PGN 0	Speed output	1	1	8	Trash
<sup>2</sup>	PGN 100	Engine speed	1	1	16	Trash

Opening the receive frames page or the transmit frames page will show a preview of the current frame settings or an empty page if no custom frames are defined yet.

Each line matches a single data from a PGN and displays main parameters of the frame settings.

Different actions can be done from the global view:

1. Create a new custom frame by clicking the plus (+) button.
2. Edit an existing custom frame by clicking anywhere on the desired line.
3. Delete an existing custom frame by clicking the bin icon at the right end of the custom frame line.

## Receive frames settings (RX)

### Creation/Edition

The configuration is done through a form with the following parameters:

Figure 56. J1939 custom receive frames settings

## CAN ID

### PGN

The PGN of the J1939 data you want to read. It is possible to use both decimal or hexadecimal format. Filling one field will automatically update the other.

## Mapping

### Destination

The controller's variable in which you want to store the received data.

### Offset

The offset you want to apply to the received data value.

### Resolution

The resolution (i.e. gain) you want to apply to the received data value.



**Note:** The value stored in the controller's variable will be equal to  $(Raw\ value * Resolution) + Offset$ .

## Data

### Start byte

The starting byte of the data in the frame.

### Start bit

The starting bit of the data (in the **Start byte**) in the frame.

### Length (Bits)

The length in bits of the data.

## Example:

Start byte = 2, Start bit = 1, Length = 8.

The data stored in the controller's variable will come from the 8 bits starting from the 1st bit of the 2nd byte of the CAN frame.

## Transmit frames settings (TX)

### Creation/Edition

The configuration is done through a form with the following parameters:

J1939 custom transmit frames settings

### CAN ID

#### PGN

The PGN of the J1939 data you want to read. It is possible to use both decimal or hexadecimal format. Filling one field will automatically update the other.

#### Transmit rate

The frame transmission rate.

#### Priority

The priority of the frame containing the data according to the J1939 specification.



**Note:** The configurations sharing the same PGN will share the same transmit rate and priority.

### Mapping

#### Source

The controller's variable whose value will be sent

#### Offset

The offset to apply to the controller's variable value before sending.

#### Resolution

The resolution to apply to the controller's variable value before sending.



**Note:** The transmitted value will be equal to **(Controller's variable value \* Resolution) + Offset**

### Data

#### Start byte

The starting byte of the data in the frame.

**Start bit**

The starting bit of the data (in the **Start byte**) in the frame.


**Length (Bits)**

The length in bits of the data.

You can check the frame data layout below the data settings thanks to a diagram that will show all available/used data bytes for a given PGN. This is useful in case you have several configurations sharing the same PGN as it helps to prevent data overlap.

**Example:**

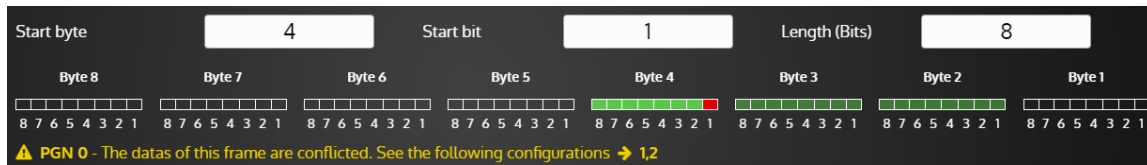Figure 57. Example of the data layout in a transmit frame



In the example above, there is at least one other configuration using the same PGN set in the current frame settings. The dark green boxes show the bits used in the other frame settings. The light green ones show the bits used according to the **Start byte**, **Start bit** and **Length (Bits)** parameters from the current frame. The red box indicates that if we try to apply this configuration, it will overlap on one bit of the other frame and prevent us from validating these settings.



## J1939 SNIFFER

J1939 sniffer is a J1939 CAN frame recorder provided to check frames present on the J1939 network. The dedicated space allows for the storage of approximately 1000 to 1200 frames that can be retrieved in a text file.


This text file will contain the list of the frames in the form of their 29 bits CAN identifiers 0 to 8 data bytes following a timestamp for each frame.

Setup is done in the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **ECU/ECM** ⇒ **J1939 sniffer** page.

It is possible to select which frames should be recorded:

- All frames received by the unit.
- Only frames which were sent from the ECU address as set in variable [3101].
- Frames sent by the unit.
- All frames sent/received by the unit.

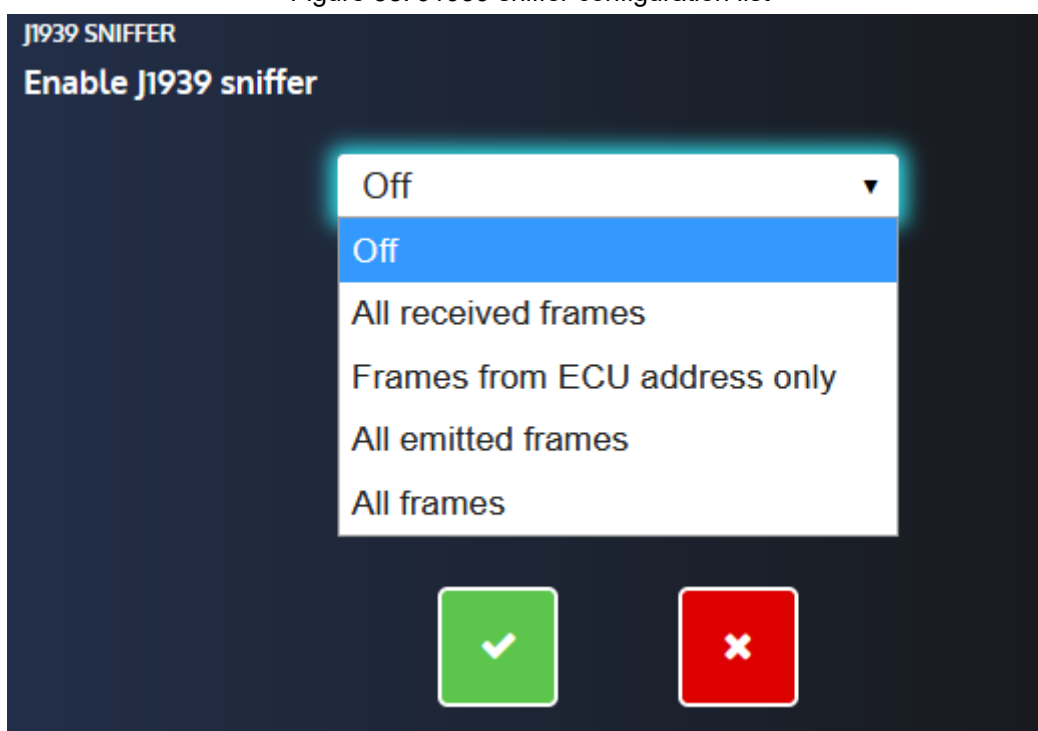Figure 58. J1939 sniffer configuration list



If the CAN network is used for J1939 and CANopen communication at the same time, only J1939 frames will be stored by the J1939 sniffer.

Also note that the CAN protocol speed is forced to 250 kbit/s as soon as a J1939 feature (communication of sniffer) is enabled.

An **Erase** button allows you to wipe all J1939 frames that may already be stored in the unit so you can start a fresh new session. This button is disabled if you are not connected to a unit.

To download the recorded frames, go to **i4Gen** ⇒ **File transfer** page

# MTU MDEC

## Presentation

---

MTU MDEC is a complete engine monitoring and control system with a specific MTU MDEC ECU (Engine Control Unit) which can broadcast data values and error codes on a CAN bus.

The ECU can detect faults and send them to the module: protections can be assigned to these faults (see below).



**Important:** MTU MDEC is proposed as a software option. The option must be available and activated on your controller in order to enable MTU MDEC communication and access dedicated settings and measurements.

When the MTU MDEC protocol is used on the CAN 2 communication port, the associated CAN bus bit rate is automatically fixed at 125 kbit/s

In case any CANopen configuration is enabled, then the CANopen protocol will be switched to the CAN 1 terminal of the controller.

Additional attention must be taken on the CANopen protocol configuration when this protocol is switched on the port CAN 1: see dedicated chapter for more information.

## MTU MDEC configuration

---

### MTU MDEC communication

To use MTU MDEC proprietary CAN protocol:

1. Enter the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **ECU/ECM** ⇒ **ECU/ECM** page
2. Enable MDEC with parameter [3118]: choose the CAN protocol version that fits your MDEC configuration (see MDEC parameter 201.05 below).
3. Assign the alarms/faults to a protection (see below)
4. Connect the CAN bus of the ECU to the CAN bus of the module

### Automatic address configuration

Enabling MTU MDEC protocol will automatically set *ECU ID* [3102] and **COMPACT ID** [3103] variables to the default values for this particular ECU configuration. However you can still manually change these two identifiers afterwards if necessary.

### ECU ID auto-detection functionality

This function is only available for J1939 protocol. Thus it is disabled for MTU MDEC proprietary protocol.

## ECU manufacturer and type settings

---

The ECU manufacturer and type determine the following settings:

- Module address on engine CAN bus.
- ECU address on engine CAN bus.
- Oil pressure and coolant temperature are automatically measured through the MDEC protocol, except if you specify a dedicated sensor in the **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Analog inputs** page.



**Note:** Note that the engine speed measurement method must be selected manually using parameter [2200] in the **Controller settings** ⇒ **Engine/ECU/ECM** ⇒ **Engine** ⇒ **General** page. The measurement source can be the magnetic pickup, the alternator or MTU MDEC.

## Faults

The module can monitor different diagnostic data from the ECU as listed below. The module interprets these datas for display, processing, and protection purposes.


MDEC diagnostic data	Control in <i>i4Gen Suite</i> software		Message description
Combined Alarm Yellow (PV 110010)	[3121]	<i>Control on Combined Alarm Yellow</i>	Behaviour depends on MDEC ECU configuration
Combined Alarm Red (PV 110014)	[3122]	<i>Control on Combined Alarm Red</i>	Behaviour depends on MDEC ECU configuration
Actual Failure Codes (PV 110075)	Display only		Value switches approximately once per second to cycle through the currently active error codes.

## MTU MDEC Measurements

Next table lists the measuring points whose values are conveyed over MDEC CAN bus and taken into account by the module. Each measurement is assigned to a MTU MDEC Process Value number (i.e. PV number) to precisely identify the corresponding data. Refer to your MTU MDEC documentation for more information on PV numbers.

MTU MDEC PV	Description	Variable
110002	<i>Engine speed</i>	[1202]
110026	<i>P-Lube Oil</i>	[1203]
110046	<i>P-Fuel</i> <b>Note:</b> this PV is not available on the MTU MDEC CAN Module 302	[1204]
110049	<i>P-Charge Air</i>	[1205]
110053	<i>P-Fuel (Common Rail)</i>	[1206]
110126	<i>T-Coolant</i>	[1207]
110131	<i>T-Charge Air</i>	[1208]
110137	<i>T-Coolant Intercooler</i>	[1209]
110140	<i>T-Lube Oil</i>	[1210]
110152	<i>T-Fuel</i>	[1211]
110075	<i>Actual Failure Codes</i>	[1212]
110010	<i>Combined Alarm Yellow</i>	[1213]
110014	<i>Combined Alarm Red</i>	[1214]

These measurements are displayed in the **Controller supervision** ⇒ **ECU/ECM (i4Gen)** page.

 **Note:** To get the measurements through the Modbus/TCP protocol, refer to [Modbus TCP/IP \(on page 83\)](#)


## Controls

Standard MTU MDEC does not allow to control the ECU through CAN bus. So all controls are done through dedicated wired signals.

## Wiring

The table below details the wiring between the controller and your MTU MDEC unit.

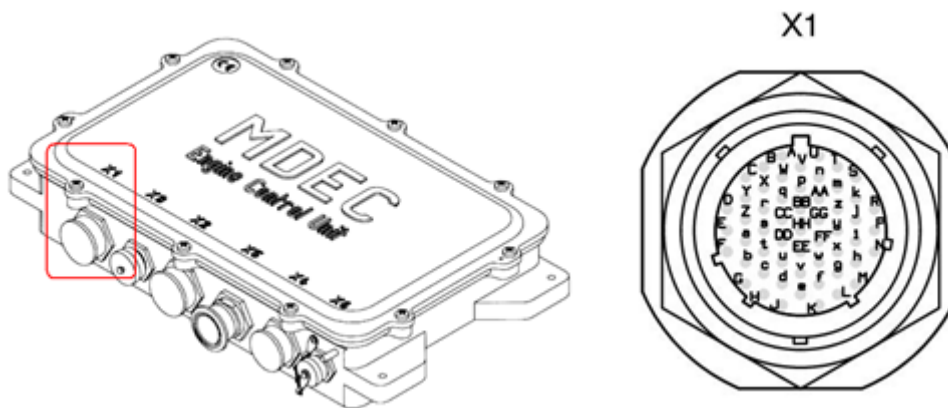Figure 59. MDEC wiring



Signal name	Controller terminal	MDEC X1 connector	MDEC X1 harness wire number
Power supply 0V	J1 - 1	W	36
CAN Low	J2 - 1 (CAN2 CANL)	F	50
CAN High	J2 - 2 (CAN2 CANH)	G	49
CAN ground	J2 - 4 (CAN2 0V)	E	51
Analog speed output	J2 - 5	AA	8
Analog speed common	J2 - 6	W	36
FUEL	Logic output (Depends on your configuration)	h (signal) and g (ground)	25 (signal) and 26 (ground)
CRANK	Logic output (Depends on your configuration)	N (signal) and M (ground)	43 (signal) and 44 (ground)
50/60Hz	Logic output (Depends on your configuration)	x (signal) and w (ground)	11 (signal) and 12 (ground)
Alarm RESET	Logic output (Depends on your configuration)	R (signal) and P (ground)	41 (signal) and 42 (ground)

Please refer to chapter [CAN bus good practices \(on page 107\)](#) for CAN bus wiring requirements.

## Recommended configuration

MTU MDEC speed demand supports many possible configurations. For example, a 0.5V to 9.5V input signal may lead to a speed range of 1400...1600rpm or 800...2000rpm. Please double check the MTU MDEC ECU settings.

1. Use MDEC analog input (typically 0.5V...9.5V for an operating range of +100/-100 around 1500rpm for applications operating at 50Hz)
2. Set controller speed output offset to 5V so that the speed output without correction will match the 1500rpm speed demand input of the MDEC (for 50Hz applications).
3. Fine tune the offset to exactly match 1500rpm without controller correction (for 50Hz applications).

## MTU MDEC configuration

CAN bus configuration of the MTU MDEC ECU must be properly setup in order to communicate with the controller. If necessary, contact your local MTU dealer to check or setup the following MDEC parameters.

MDEC parameter number	MDEC parameter label	MDEC parameter value	Note
200.00	CAN InterfaceConfigParam	898 for CAN PU-Module 302, 303, 304 450 for CAN PU-Module 201	
200.02	CAN ECU Node-ID	2	Must match the controller's parameter <i>ECU ID</i> [3102]
201.01	CAN MonitorNodes 1-16	32	This parameter is a bitfield. Bit number 5 (value 32) indicates a third party controller is on the CAN bus.
201.05	CAN PU-Module Type/No	201, 302, 303 or 304	Must match MDEC Module selected in controller parameter [3118]

# MODBUS CLIENT

## Overview

A Modbus/TCP client is implemented in the product in order to communicate with an external device that provides Modbus communication.

You may send and retrieve data to and from a unit that is connected through Modbus/TCP or through Modbus RTU if you use a Modbus/TCP to RTU gateway between the devices.

## Supported Modbus functions

Different Modbus functions may be used to read/write different kind of data in your remote device as listed below:

### Function code 01

Read coils

### Function code 02

Read discrete inputs

### Function code 03

Read holding registers

### Function code 04

Read input registers

### Function code 05

Write single coil

### Function code 06


Write single register

## Setup

Setup is done in page **Controller settings** ⇒ **Programming** ⇒ **Modbus (i4Gen)**. Note that you must be connected to the **COMPACT** unit in order to fully setup the communication parameters, more specifically for the remote Modbus/TCP server IP and communication port.


1. Enable communication to a Modbus/TCP server, input a name for the remote unit and optionally setup an alarm/fault in case of communication timeout. The server name will be used as alarm/fault label in case of a communication incident.

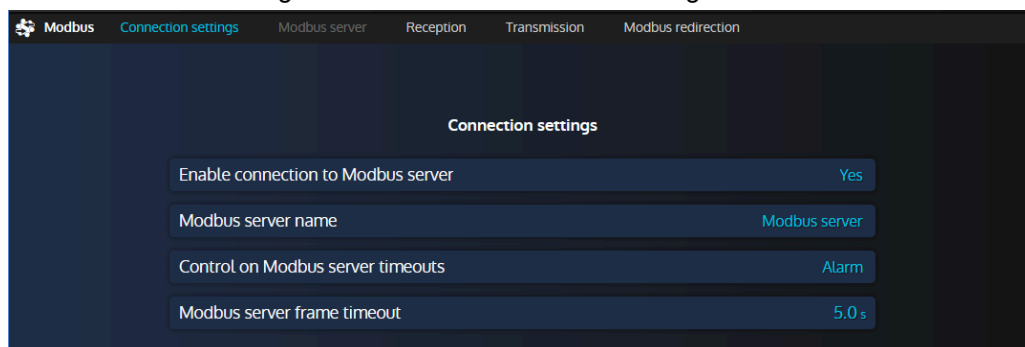Figure 60. Modbus connection settings menu



2. Input the server communication parameters (Ethernet IP address and Modbus port). The standard Modbus/TCP protocol port is 502 but this may vary according to your remote device and desired configuration.

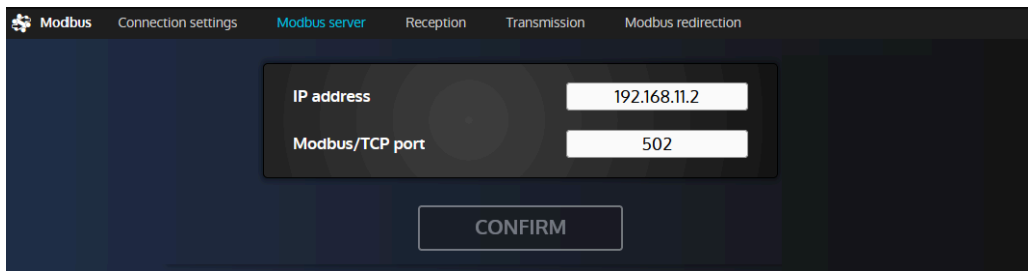
Figure 61. Modbus server settings menu



3. You may now switch to the Reception/Transmission pages in order to setup the registers you want to respectively read and write.
  - Reception: a remote register is read and its computed value is written into an internal variable of the **COMPACT** unit.
  - Transmission: an internal variable is computed and sent into a remote register.

You may setup up to 10 reception and 10 transmission lines.

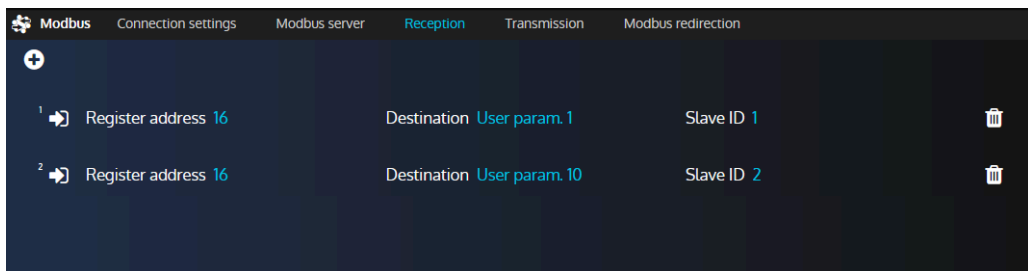
Figure 62. Modbus reception menu



4. Click on the '+' button at the top left corner of the page to add a new reception/transmission line, or click on an existing line in order to modify its setup.

## Modbus reception/transmission settings

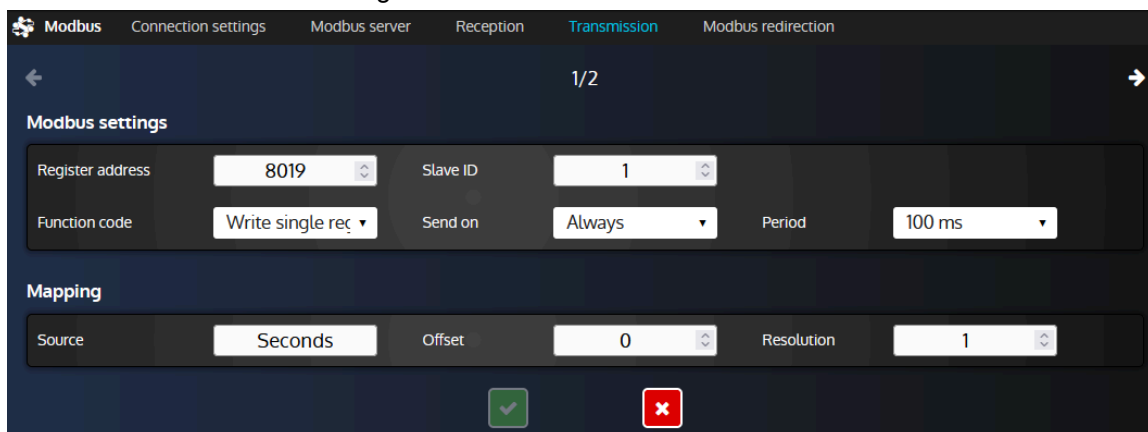Figure 63. Modbus transmission menu



### Modbus settings

#### Function code

Modbus function code used to read/write bits, inputs or registers.

#### Register address

Address of the Modbus register inside the remote Modbus server. Note that register 1 is located at address 0.

**Slave ID**

This parameter is typically useful if you need to access a Modbus RTU (RS485) device through a Modbus/TCP to RTU gateway. This way, you can access different Modbus RTU slave devices using a single gateway (server).

**Sending condition (transmission lines only)**

**Always** will send a value at the selected period. If **Value change** is selected, register will be written only if the source value has changed. Setting this parameter to **Never** disables the transmission without deleting the whole line: it may be useful for example for testing purposes.

**Period (transmission lines only)**

Choose the transmission period when the sending parameter is set to **Always**. Different values are proposed in order to let you choose between a light communication traffic or responsiveness.

**Mapping settings****Destination (reception lines only)**

Internal variable of the **COMPACT** controller where the result of a computed read register will be written.

**Source (transmission lines only)**

Internal variable of the **COMPACT** controller that will be used for computation. The result will be sent into the selected remote register in the Modbus server.

**Offset and Resolution**

These two parameters allow you to set a calculation rule between Modbus registers and **COMPACT** variables as detailed below. For a reception line, destination variable inside the **COMPACT** controller will get the following value: **Result = (Modbus register value) \* Resolution + Offset**. For a transmission line, the value sent to the Modbus server will be: **Register value = (Source value) \* Resolution + Offset**

**Note: Determining the proper gain when reading values**

It is possible to always use the same formula to determine the gain (as long as the values are linear) for a value you're reading: **gain = value expected / value read via Modbus**.

When reading values, do not forget to set the accuracy (and optionally the unit if there is any, for display purpose only) of the user variable in use via the menu **Controller settings** ⇒ **Programming** ⇒ **User variables (i4Gen)**

Example:

The controller is set to read the register 123 from another Modbus/TCP device and to store it in the variable "Saved var. 1" [8000]. The value is expected to have a precision of 2 digits so we did set the "Saved var. 1" variable with an accuracy of 0.01. The controller reads 5000.00 but the expected value should be 25.00. Assuming that it is a linear value, we simply use the formula as stated before to determine the gain to apply:  $25/5000 = 0.005$ . Note that if you want to scrap everything after the comma to have the value as an integer number, you can simply change the accuracy of the "Saved var. 1" to 1 (but the gain should remain unchanged).



## CAN BUS GOOD PRACTICES


This chapter describes rules to be used to ensure reliable CAN communication. These rules must be applied to all CAN protocol communications, including the **CRE-Link®** protocol and the ECU/remote I/O CAN bus. **CRE TECHNOLOGY** recommends to always use a shielded cable to connect CAN bus.

### Cables

<b>⚠ WARNING</b>	
	<p><b>RISK OF EQUIPMENT DAMAGE</b>  <b>Failure to follow this instruction can damage the CAN transmitter/receiver.</b>                  Switch off the unit before plugging or unplugging the CAN bus connector or disconnecting the wires.</p>

Cables used must be selected to respond to CAN bus specificities. Always use shielded twisted wire pairs. Deploy the CAN bus (no mesh, ring or star topology) as shown below:

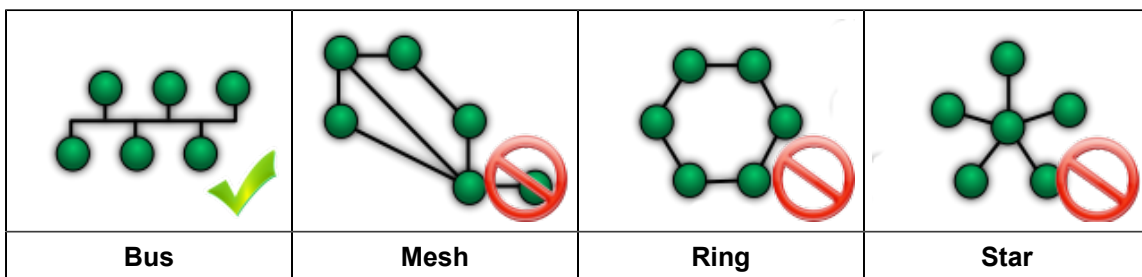
Figure 64. CAN bus accepted wiring topologies



Both ends of the CAN bus must be terminated with a 120Ω resistor. The module has a 120Ω resistor for this purpose. Wiring the terminal RES to CAN H will link CAN L and CAN H with a resistor.

The next figure gives the example of three units connected through a CAN bus. Do NOT install any resistor nor link the terminal RES and CAN H together in the middle unit.

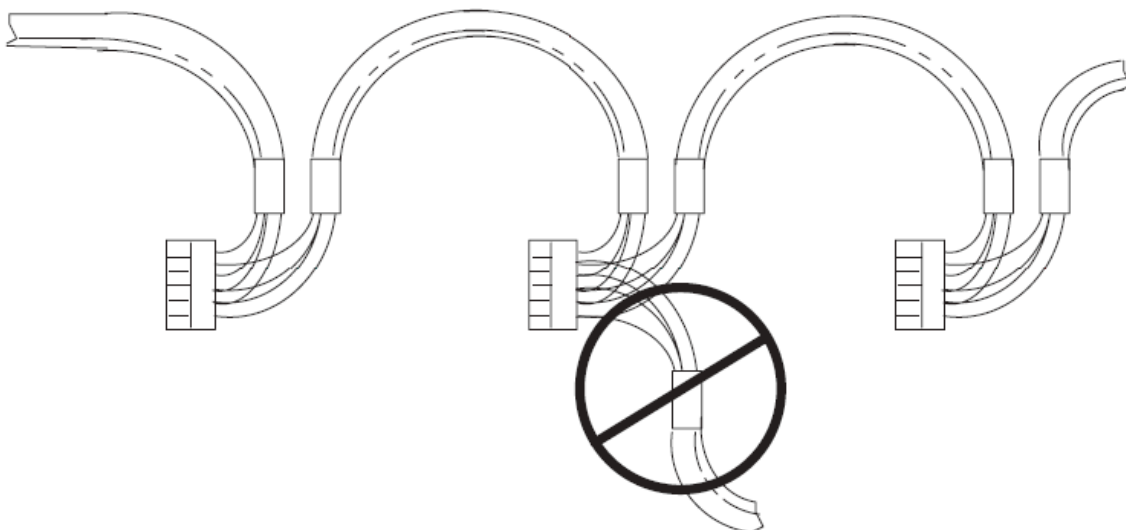Figure 65. Wrong placement of the termination resistor on the CAN bus



**⚠ WARNING**



**RISK OF EQUIPMENT DAMAGE**

Failure to follow this instruction may damage the CAN transmitter/receiver and the controller itself.

Do not, in any cases, connect the "0V" pin to the "-" pin of the power supply.



**Note:** CRE TECHNOLOGY provides a complete range of products aimed at installing your CAN bus (cords, wires, connectors...). Please contact your local CRE TECHNOLOGY distributor to help you to choose equipment that fits your needs.

## Maximum length and bit rate

The maximal length of a CAN bus depends mostly on the communication speed, but also on the quality of wires and connectors used.

The following table shows the maximal length of a CAN bus depending on the bit rate:

Bit rate (kbit/s)	Maximal length (m)
10	5000
20	2500
50	1000
125	500
250	250
500	100
800	50

The next table lists the standard bit rate of each CAN protocol that can be used by a CRE TECHNOLOGY unit:

Bus	Protocol	Bit rate (kbit/s)	Note
CAN1	CANopen (if MTU MDEC protocol selected on CAN2)	125	125 kbit/s recommended. Can be changed using parameter [3050].
CAN2	J1939 / MTU MDEC	250 for J1939 125 for MTU MDEC	Switches automatically to the right speed when selecting an ECU protocol with the parameter [3118].
	CANopen (if MTU MDEC protocol not selected)	125 (default)	Fixed to 250 kbit/s if J1939 is selected. Otherwise can be selected between 125/250/500/1000 kbit/s (using <b>i4Gen Suite</b> software or modification by variable number).

## APPENDICES

### ECU J1939

#### Caterpillar

---



ECU [3101]	Speed	Start/Stop	Speed selection
GENERIC [0]	x	-	-
ADEM A4E2 (C4.4 & C6.6) [1]	x	-	-

#### Cummins

---



ECU [3101]	Speed	Start/Stop	Speed selection
GENERIC [0]	x	x	x
QSX15-G8 (CMS570) [1]	x	x	x
CM850 [2]	x	-	x
QSB5 (PGI 1.1) [3]	x	-	x
QSB7 (PGI 1.1) [4]	x	-	x
QSL9 (PGI 1.1) [5]	x	-	x
QSM11 (PGI 1.1) [6]	x	-	x
QSX15 (CMS570) [7]	x	x	x
QSK19 (PGI 1.1) [8]	x	-	x
QSK38 (PGI 1.1) [9]	x	-	x
QSK50 (PGI 1.1) [10]	x	-	x
QSK60 (PGI 1.1) [11]	x	-	x

## Detroit Diesel



ECU [3101]	Speed	Start/Stop	Change speed
GENERIC [0]	-	-	-
DDEC III [1]	-	-	-
DDEC IV [2]	-	-	-
DDEC X [3]	-	-	-

## Deutz Fahr



ECU [3101]	Speed	Start/Stop	Speed change
GENERIC [0]	x	-	-
EMR [1]	x	-	-
EMR2 [2]	x	-	-
EMR3 [3]	x	-	-

## Iveco



ECU [3101]	Speed	Start/Stop	Speed change
GENERIC [0]	x	-	-
NEF (EDC) [1]	x	-	-
CURSOR [2]	x	-	-
CURSOR9 (EDC) [3]	x	-	-
CURSOR11 [4]	x	-	-

## John Deere



# JOHN DEERE

ECU [3101]	Speed	Start/Stop	Speed change
GENERIC [0]	X	-	-
JDEC [1]	X	-	-

## MTU



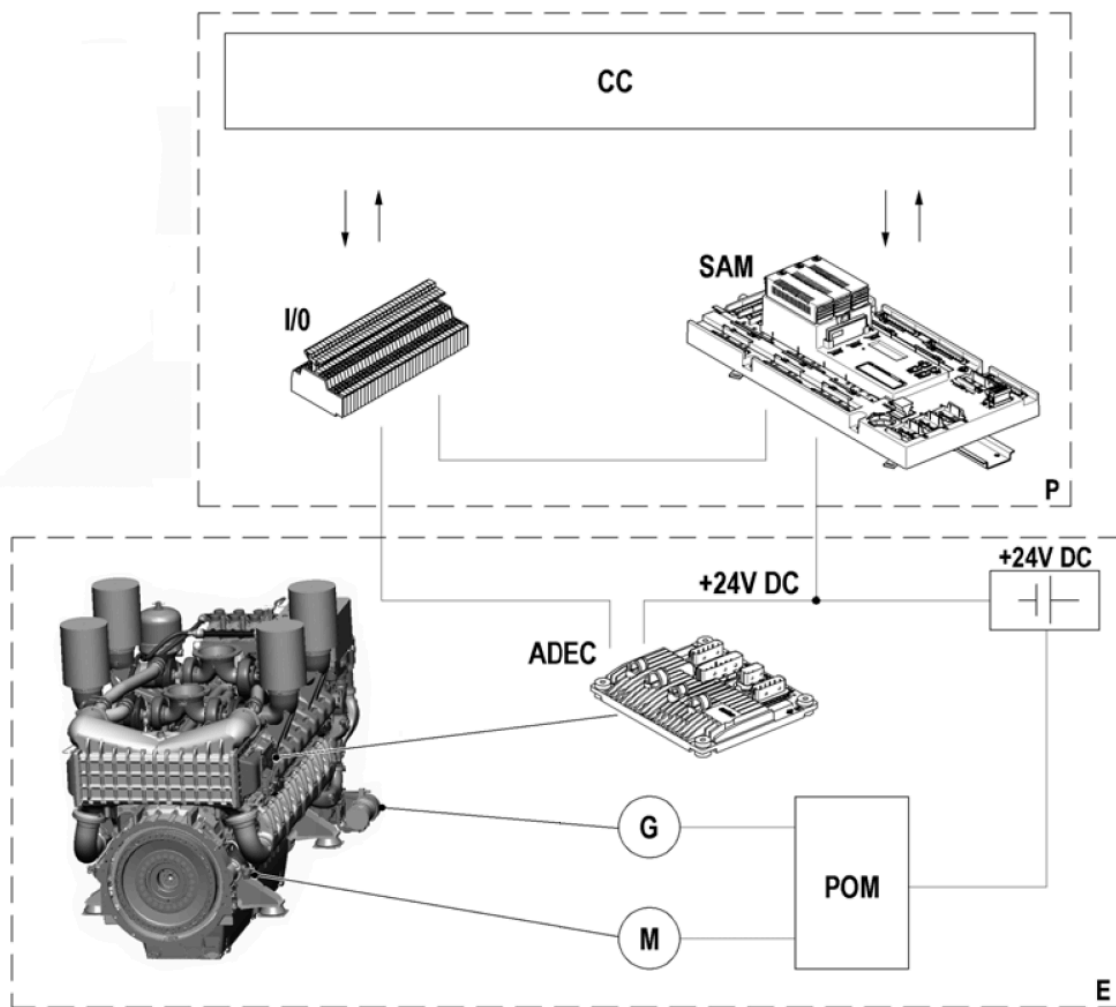
ECU [3101]	Speed	Start/Stop	Speed adjustment
GENERIC [0]	-	X	X
ADEC-2000 [1]	-	X	X
ADEC-4000 [2]	-	X	X
ECU8 + Smart Connect [3]	X	X	X
ECU8 + SAM [4]	-	X	X

## ADEC

The SAM (Service and Automation module) is associated with the ADEC 2000 or ADEC 4000. The set is referred to as the ECU7.

Disconnect X13 to turn off the power. Insert the CCB2 card into SAM slot #3.

The ADEC ECU, SAM and the module communicate via 2 CAN buses: a CAN bus between the SAM and the ADEC with a proprietary protocol, a CAN bus between the module and the SAM with the J1939 protocol. The SAM includes a termination resistor.



The ADEC controls, among other things, the engine speed.

Typical ADEC and SAM connection:


Signal	ADEC X1	Cabinet	SAM X23 connector
CAN High	33	X7-2	2
CAN Low	18	X7-1	1
CAN ground	34	X7-3	3
Speed out +		X2-	
Speed out -		X2-	

## ECU8

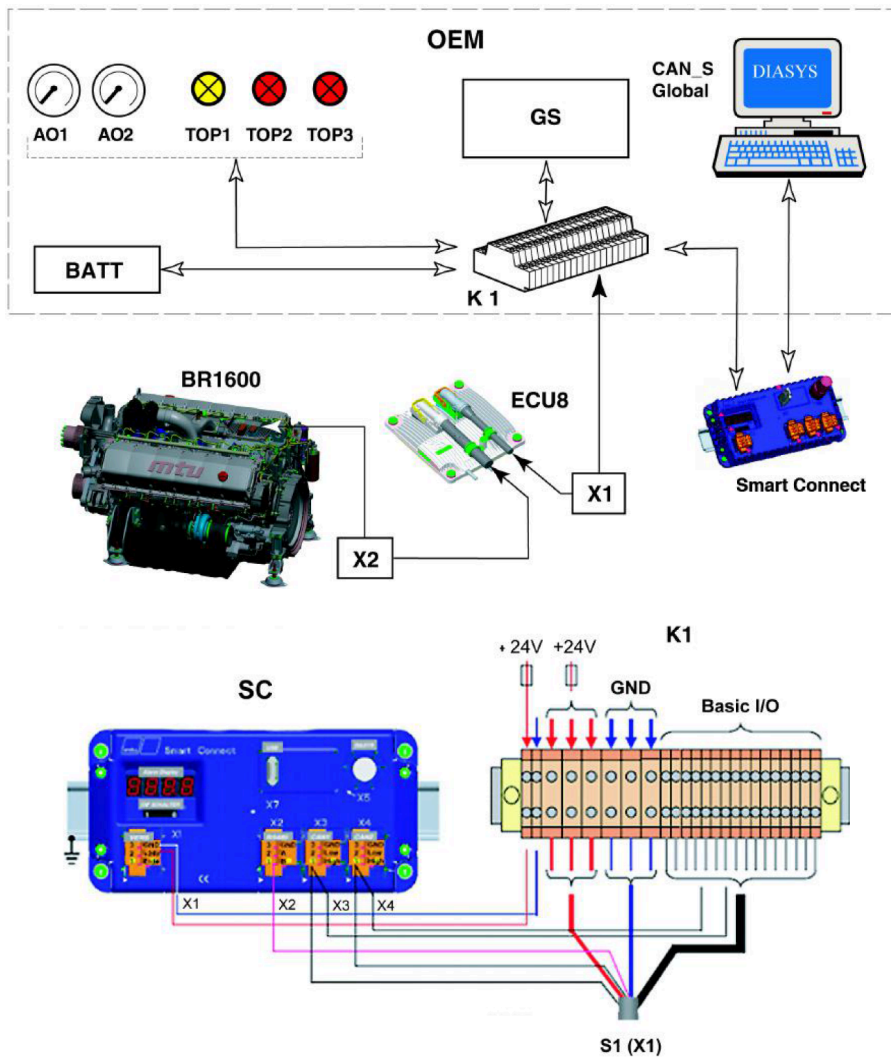
Smart Connect is used to:

- Select the origin of the speed control via an 8 position selector
- Set droop frequency and slope

# OPERATOR MANUAL



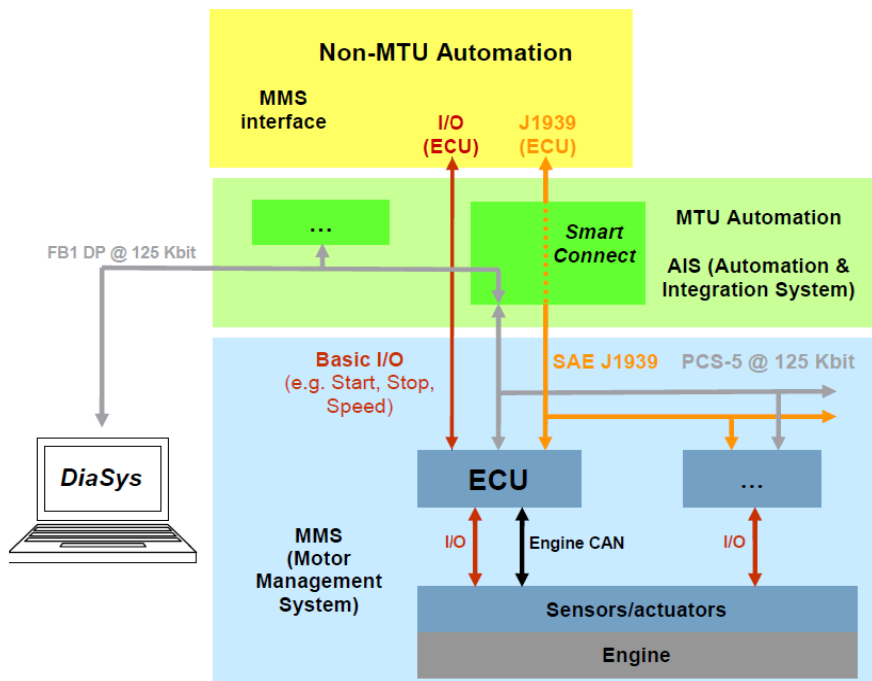Via the K1 connection box, the ECU8, the Smart Connect and the module are connected: a CAN bus between the Smart Connect and the ECU8 with a proprietary protocol, a CAN bus between the Smart Connect and the module with the J1939 protocol. X4 is the connector supporting the J1939 to connect to the module.



## Perkins



ECU [3101]	Speed	Start/Stop	Speed change
GENERIC [0]	x	-	-
1100 (A4E)	x	-	-

## Scania



ECU [3101]	Speed	Start/Stop	Speed selection
GENERIC [0]	x	x	-
S6 (DC16-45A) [1]	x	x	-

## Volvo Penta



ECU [3101]	Speed	Start/Stop	Speed change
GENERIC [0]	x	-	-
EMS2 [1]	x	x	x (Multi-speed engine)
EDC4 [2]	x	-	-
94xGE [3]	x	x	x
124xGE [4]	x	x	-
1640-2GE [5]	x	x	x
1643GE [6]	x	x	x
D6 [7]	x	x	-
D7 [8]	x	x	-
D13GE-Tier3 [9]	x	x	x



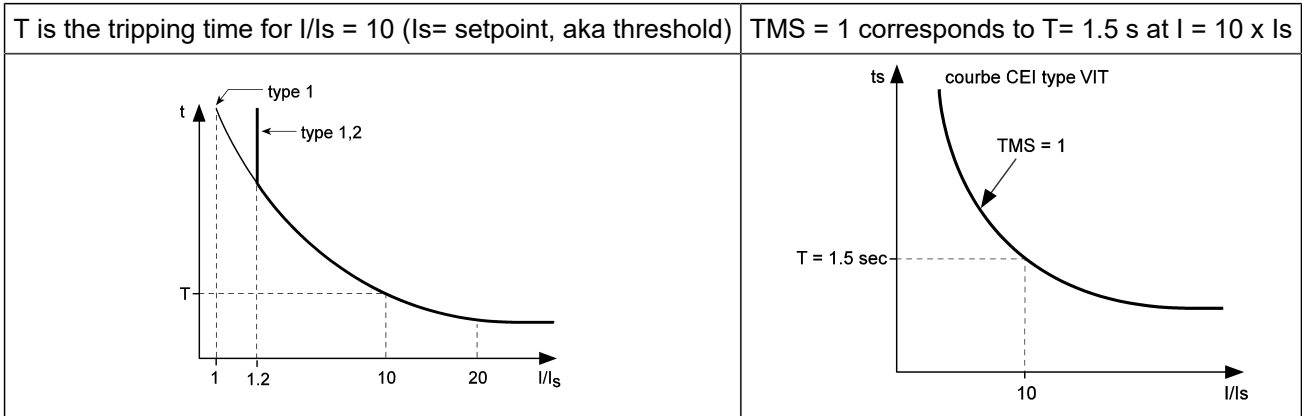
## SHORT CIRCUIT PROTECTION

The tripping time depends on the duration an alternator winding can endure an over current.

A IDMT (Inverse Definite Minimum Time) curve is defined by:

- a type (IEEE, IEC, IAC),
- $I_s$ : current value for infinite time in type 1 (asymptote value); type 1.2 is not used,
- T: tripping time for  $I = 10 \times I_s$ .

Definition of TMS (Time Multiplier Setting); by default,  $[2475] = 1$ :



**Note:** In brief, the higher the over-current, the faster the trip.

## IEC Curves


$$t(I) = TMS \times \frac{k}{\left(\frac{I}{I_s}\right)^a - 1}$$

Characteristics	k	a (defined the type A, B, C)	Selection in <i>i4Gen Suite Software</i>	b
(Standard) inverse / A	0.14	0.02	Preset	2.97
Very inverse / B	13.5	1	Preset	1.5
Long time inverse / B	120	1	Custom	13.33
Extremely inverse / C	80	2	Preset	0.808
Ultra inverse	315.2	2.5	Custom	

The time for T curves must be divided by  $\beta$  to get the time for TMS curves.

T curves with  $t=1$  for  $I/I_s=10$ :

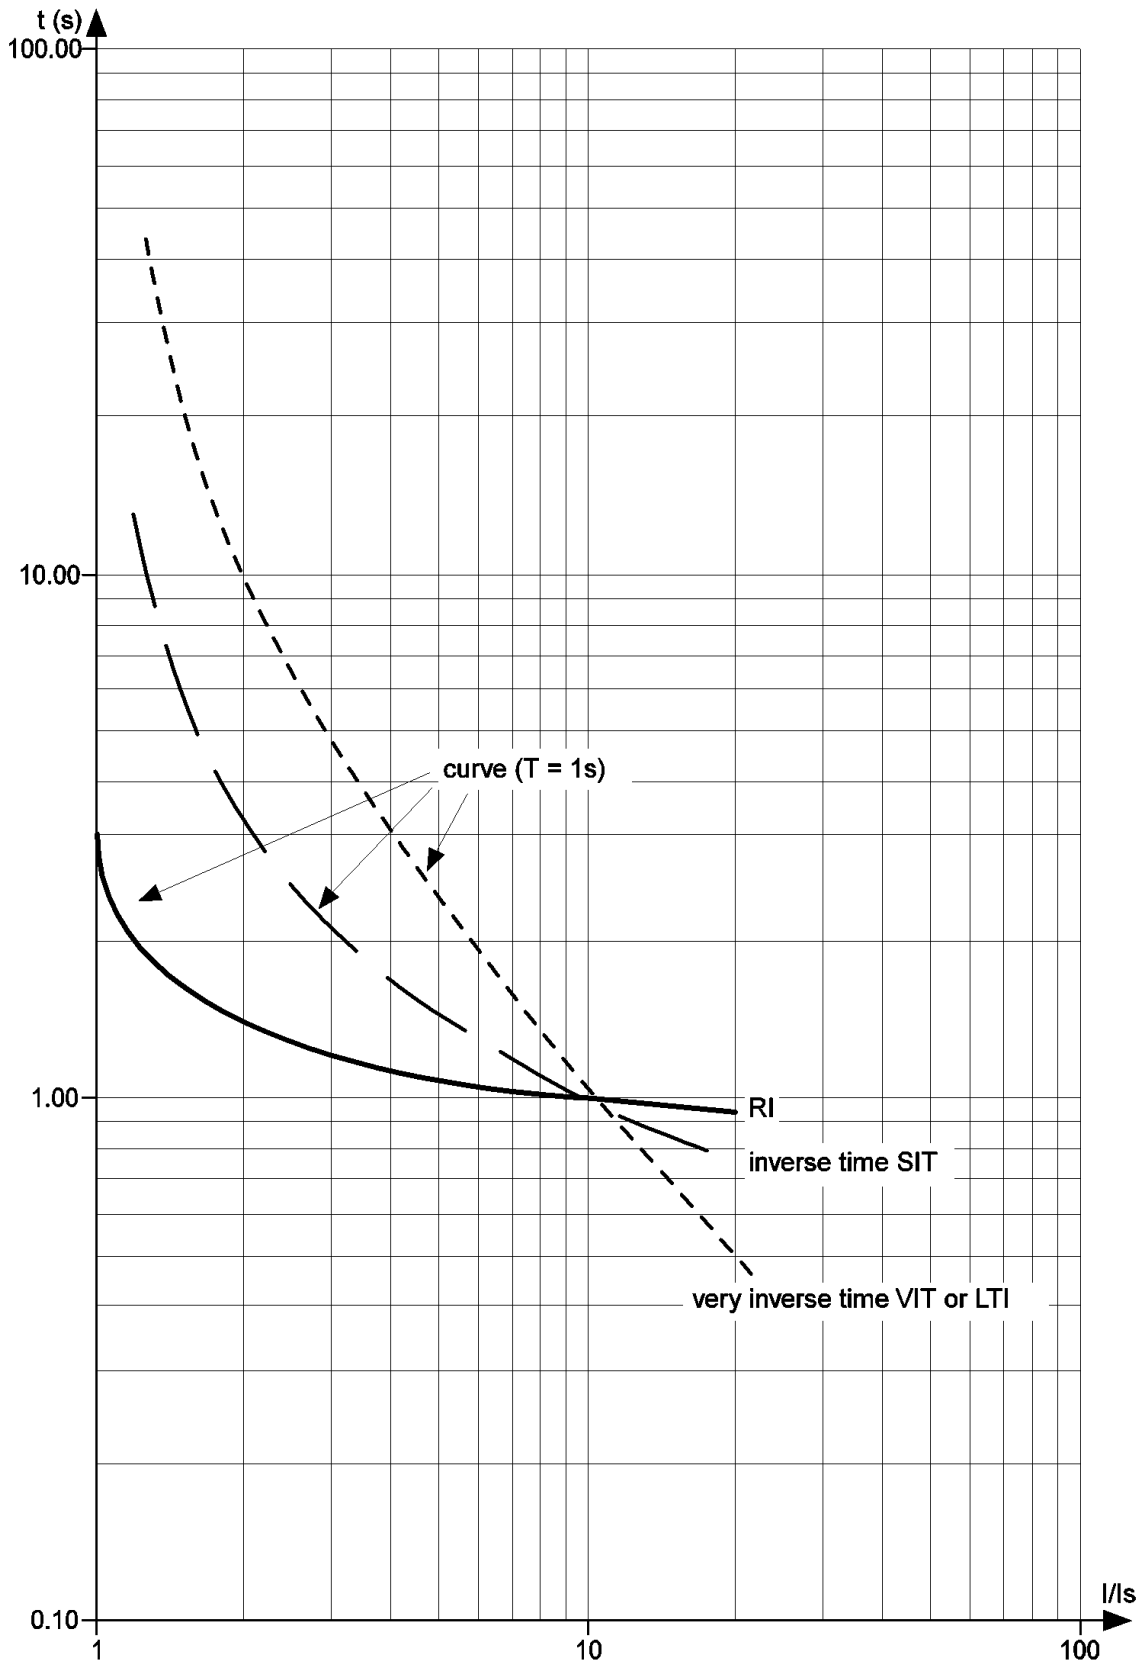Figure 66. IEC curves graphs



# OPERATOR MANUAL

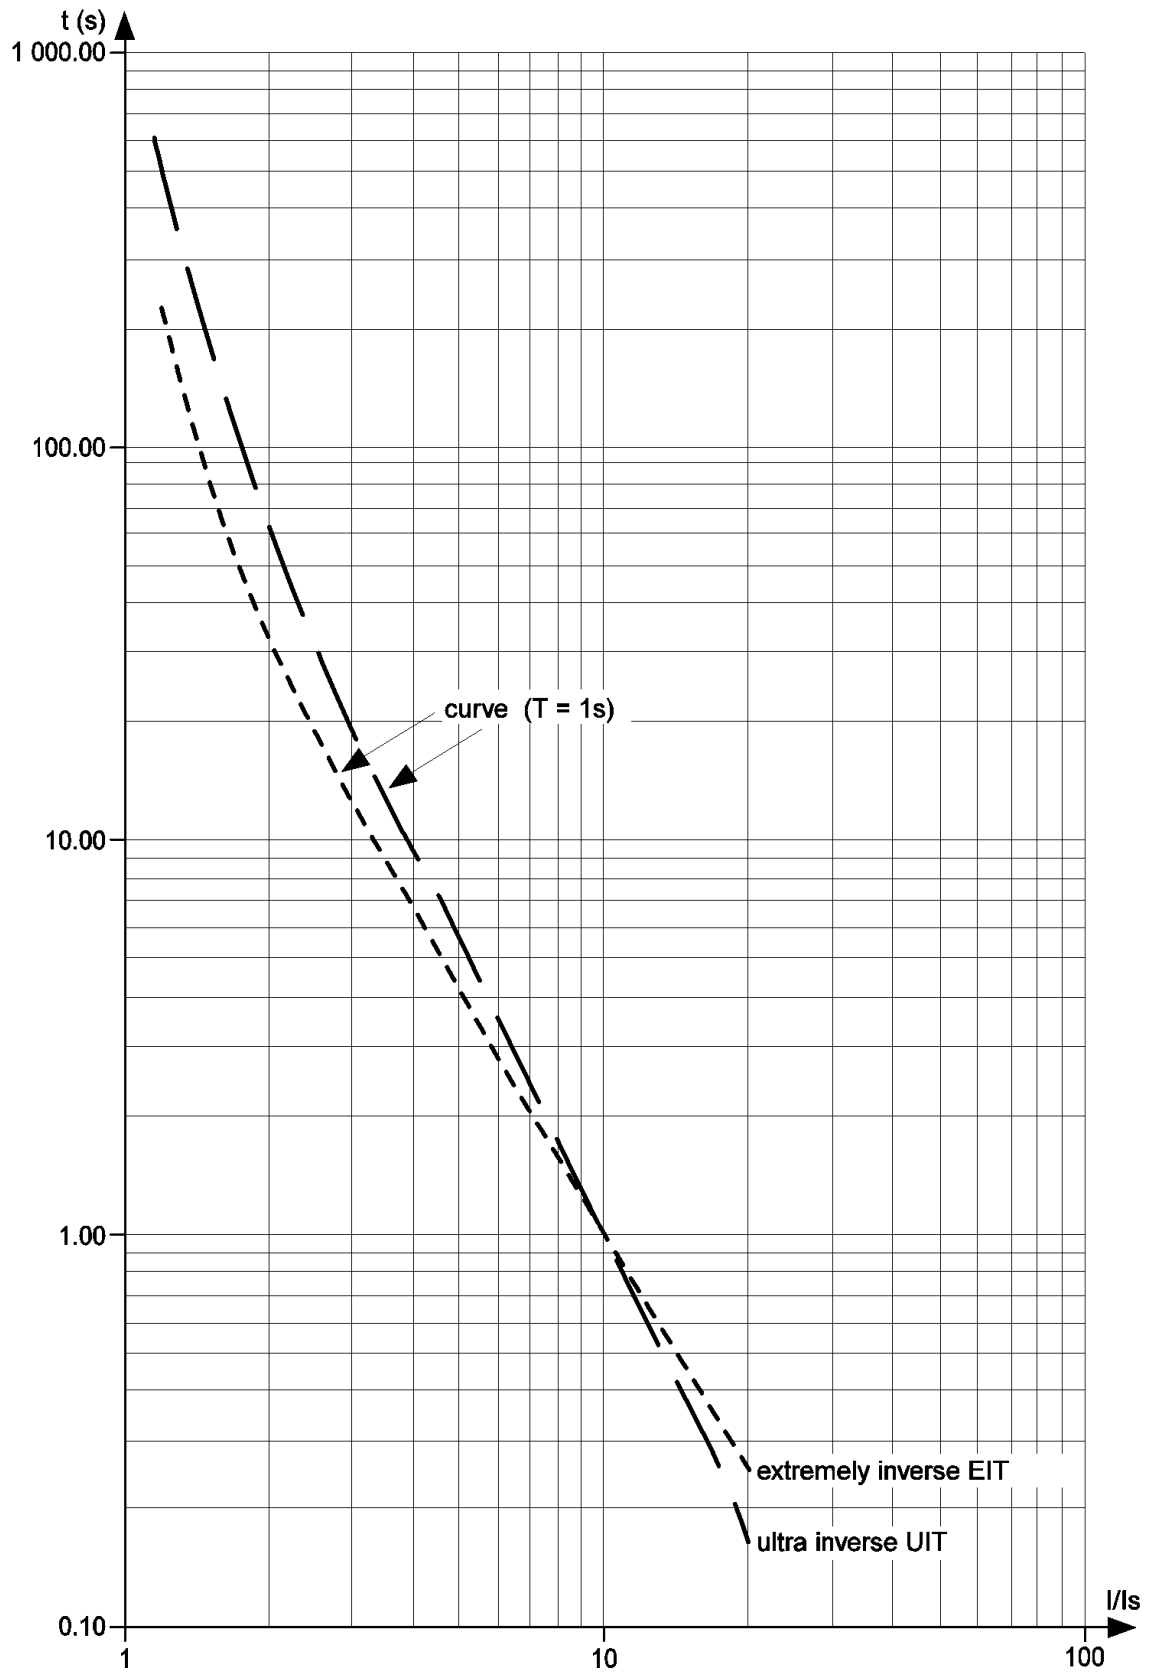


Figure 67. IEC curves graphs


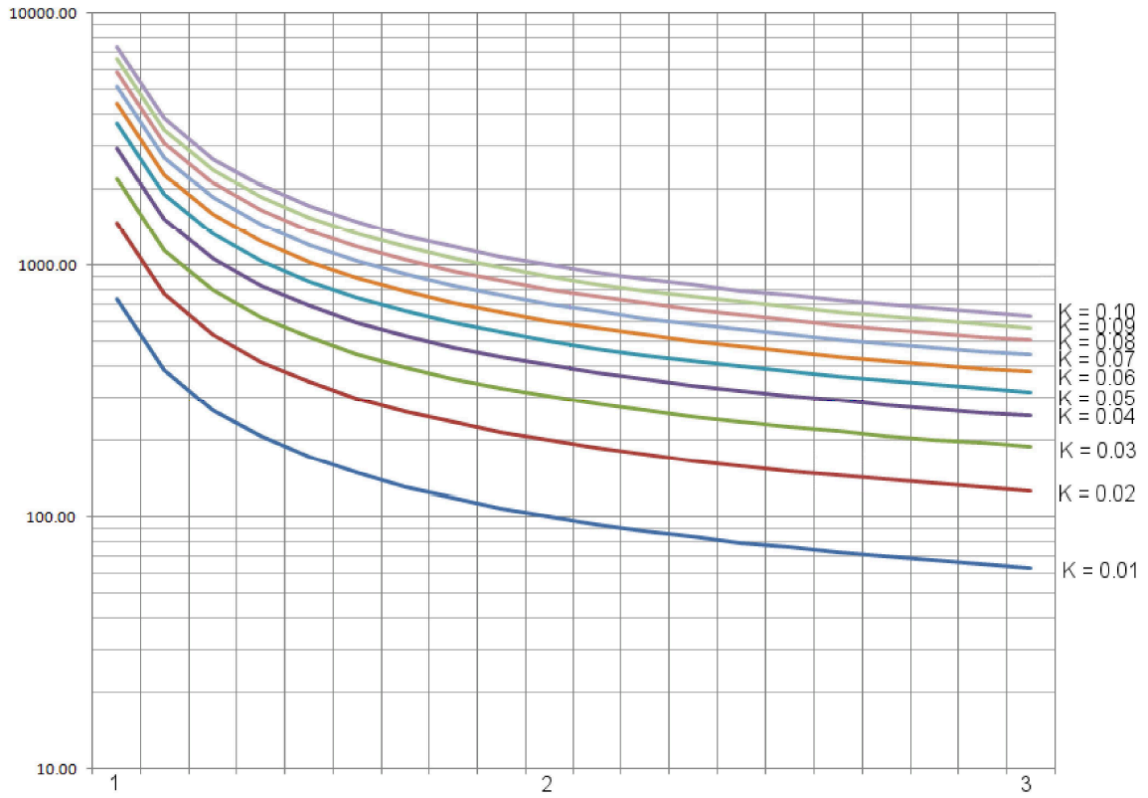


Figure 68. Inverse curves for various value of TMS

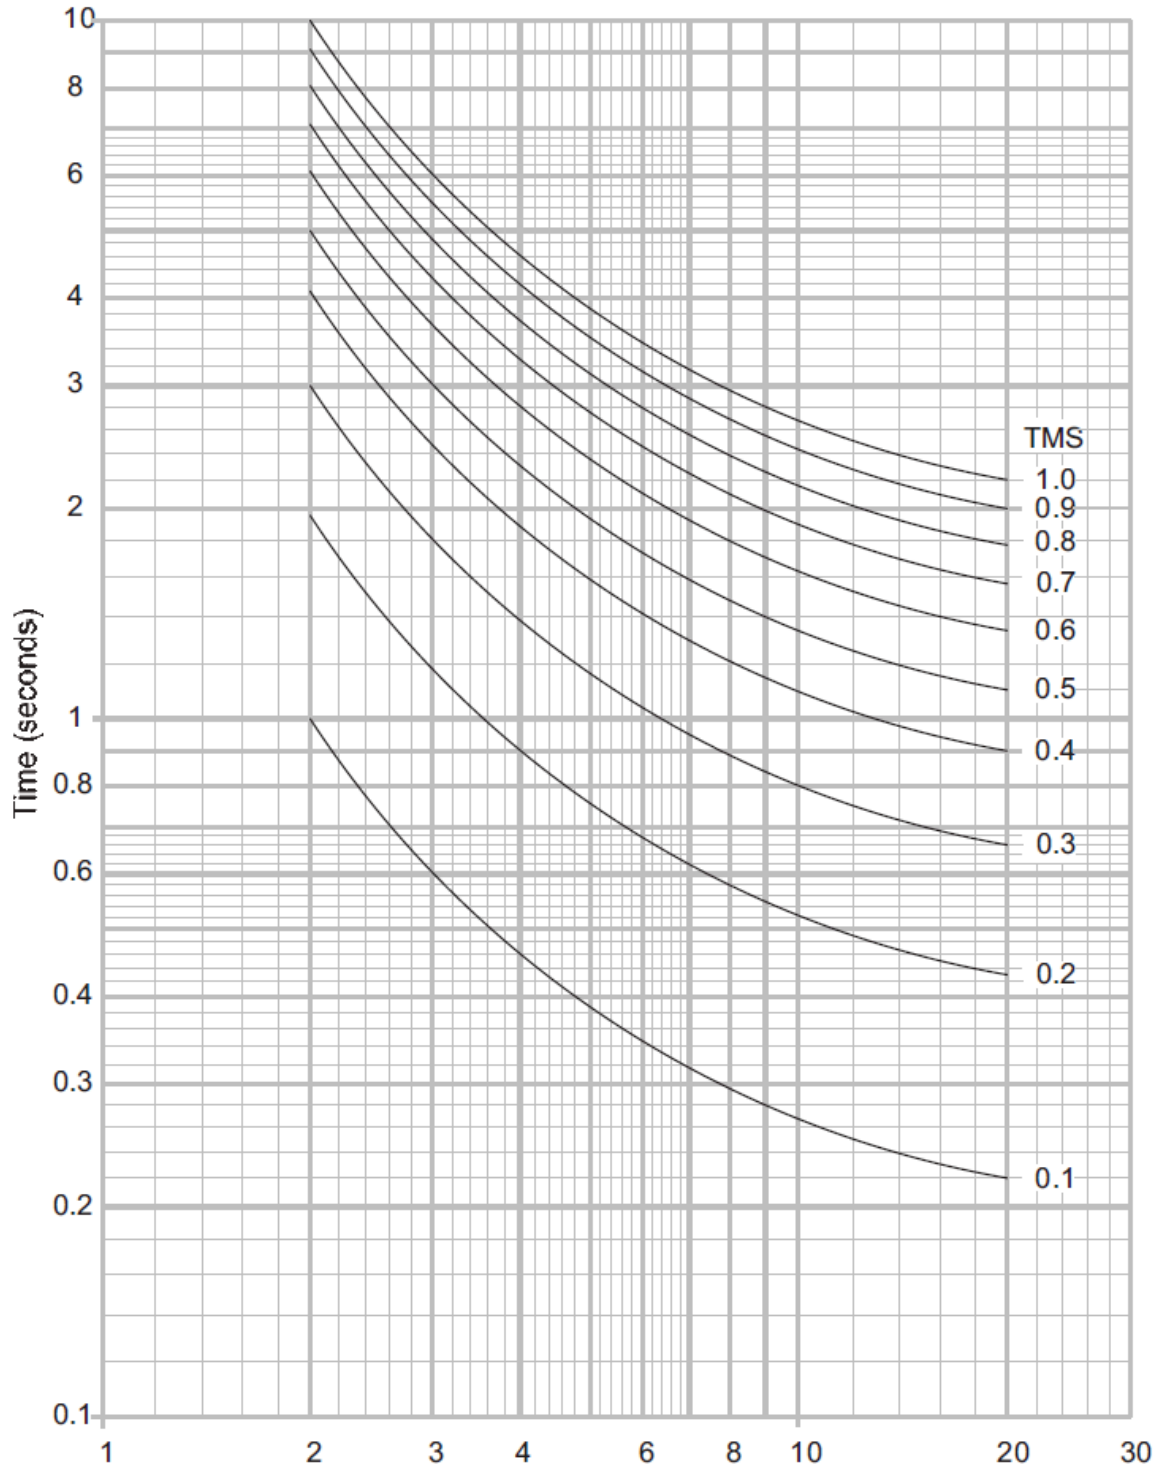


### IEEE Curves

$$t(I) = TMS \times \left( \frac{k}{\left(\frac{I}{I_s}\right)^a - 1} + c \right)$$

Characteristic curve	k	c	a
Moderately inverse	0.515	0.1140	0.02
Very inverse	19.61	0.491	2
Extremely inverse	28.2	0.1217	2

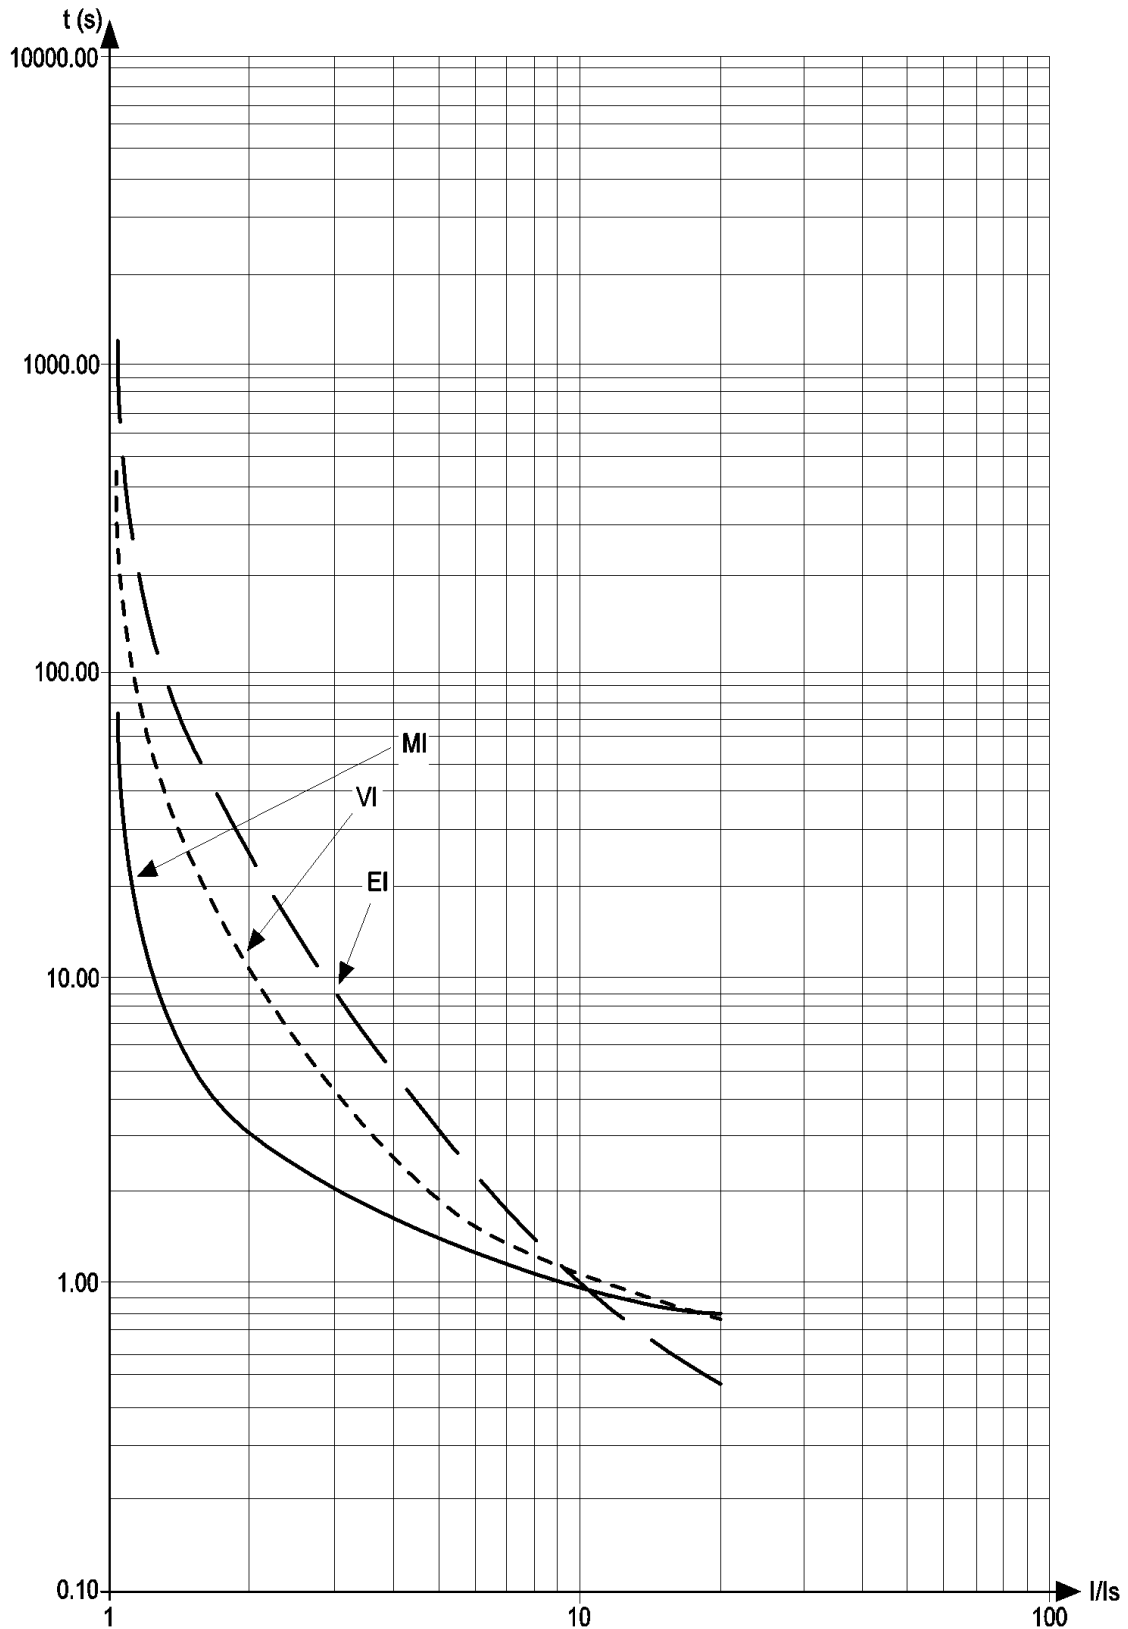Figure 69. IEEE curves graph




### How to derive a curve by parallelism

Say a curve is known. We know  $t_{sA}$  (s stands for the start curve) for  $I_A/I_s$  (s stands for setpoint).

Two curves with same  $k$ ,  $a$  and  $c$  are parallel:  $K = t_{sA}/T_{s10} = tA/T$ . This can be used to find  $tA$ .

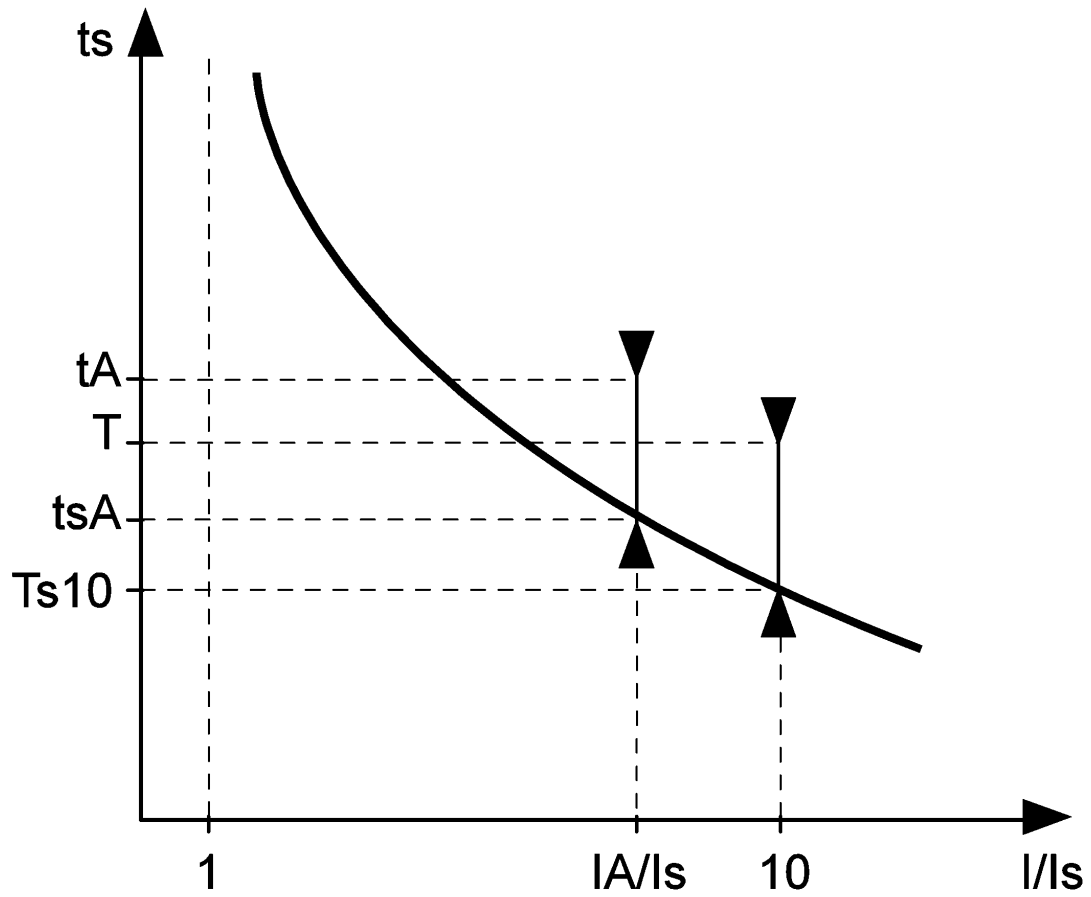Figure 70. How to find  $t_A$  by parallelism



In the preceding curves in logarithmic plot,  $T_{s10}=1$ . For a given  $I/Is$  (first column of next table), find  $K$  in the row. Then  $t_a = K \times T$ .

## OPERATOR MANUAL

I/Is	SIT IEC/A	VIT, LTI IEC/B	EIT IEC/C	UIT	Rl not av.	IEEE MI IEC/D	IEEE VI IEC/E	IEEE EI IEC/F
1.0	—	—	—	—	3.062	—	—	—
1.1	24.700 <sup>(1)</sup>	90.000 <sup>(1)</sup>	471.429 <sup>(1)</sup>	—	2.534	22.461	136.228	330.606
1.2	12.901	45.000	225.000	545.905	2.216	11.777	65.390	157.946
1.5	5.788	18.000	79.200	179.548	1.736	5.336	23.479	55.791
2.0	3.376	9.000	33.000	67.691	1.427	3.152	10.199	23.421
2.5	2.548	6.000	18.857	35.490	1.290	2.402	6.133	13.512
3.0	2.121	4.500	12.375	21.608	1.212	2.016	4.270	8.970
3.5	1.858	3.600	8.800	14.382	1.161	1.777	3.242	6.465
4.0	1.676	3.000	6.600	10.169	1.126	1.613	2.610	4.924
4.5	1.543	2.571	5.143	7.513	1.101	1.492	2.191	3.903
5.0	1.441	2.250	4.125	5.742	1.081	1.399	1.898	3.190
5.5	1.359	2.000	3.385	4.507	1.065	1.325	1.686	2.671
6.0	1.292	1.800	2.829	3.616	1.053	1.264	1.526	2.281
6.5	1.236	1.636	2.400	2.954	1.042	1.213	1.402	1.981
7.0	1.188	1.500	2.063	2.450	1.033	1.170	1.305	1.744
7.5	1.146	1.385	1.792	2.060	1.026	1.132	1.228	1.555
8.0	1.110	1.286	1.571	1.751	1.019	1.099	1.164	1.400
8.5	1.078	1.200	1.390	1.504	1.013	1.070	1.112	1.273
9.0	1.049	1.125	1.238	1.303	1.008	1.044	1.068	1.166
9.5	1.023	1.059	1.109	1.137	1.004	1.021	1.031	1.077
10.0	1.000	1.000	1.000	1.000	1.000	1.000	1.000	1.000
10.5	0.979	0.947	0.906	0.885	0.996	0.981	0.973	0.934
11.0	0.959	0.900	0.825	0.787	0.993	0.963	0.950	0.877
11.5	0.941	0.857	0.754	0.704	0.990	0.947	0.929	0.828
12.0	0.925	0.818	0.692	0.633	0.988	0.932	0.912	0.784
12.5	0.910	0.783	0.638	0.572	0.985	0.918	0.896	0.746
13.0	0.895	0.750	0.589	0.518	0.983	0.905	0.882	0.712
13.5	0.882	0.720	0.546	0.471	0.981	0.893	0.870	0.682
14.0	0.870	0.692	0.508	0.430	0.979	0.882	0.858	0.655
14.5	0.858	0.667	0.473	0.394	0.977	0.871	0.849	0.631
15.0	0.847	0.643	0.442	0.362	0.976	0.861	0.840	0.609
15.5	0.836	0.621	0.414	0.334	0.974	0.852	0.831	0.589
16.0	0.827	0.600	0.388	0.308	0.973	0.843	0.824	0.571
16.5	0.817	0.581	0.365	0.285	0.971	0.834	0.817	0.555
17.0	0.808	0.563	0.344	0.265	0.970	0.826	0.811	0.540
17.5	0.800	0.545	0.324	0.246	0.969	0.819	0.806	0.527
18.0	0.792	0.529	0.307	0.229	0.968	0.812	0.801	0.514
18.5	0.784	0.514	0.290	0.214	0.967	0.805	0.796	0.503
19.0	0.777	0.500	0.275	0.200	0.966	0.798	0.792	0.492
19.5	0.770	0.486	0.261	0.188	0.965	0.792	0.788	0.482
20.0	0.763	0.474	0.248	0.176	0.964	0.786	0.784	0.473

<sup>(1)</sup> Means only valid for IEC curves



## ENTER A CODE

A code can be used to change a controller type into another (for example, a **GENSYS COMPACT PRIME** can be transformed into a **HYBRID COMPACT**) or to add an option to your controller (i.e. MTU MDEC compatibility). Please contact **CRE TECHNOLOGY** for further information on how to obtain a code.



**Note:** When entering a code, it is preferable that no other devices than **i4Gen Suite** is connected to the controller.

1. To enter a code, go to the **Controller settings** ⇒ **System** ⇒ **Code (i4Gen)** page.
2. Click the "Confirm" button to send the code to the controller. A success message will show and the controller will restart.

You can now reconnect to the controller:

- If the code entered was to add an option, see the list of active options in the About page.
- If the code entered was to change the controller type, start a firmware update with the appropriated firmware version from the **Controller settings** ⇒ **System** ⇒ **Update (i4Gen)** page.

## TROUBLESHOOTING

To get a history of alarms-faults, stop the Generator, connect to **i4Gen** ⇒ **File transfer** and click on the **Save** button beside **History - Alarms/Faults/Events/Logger**.

To restore factory settings from **i4Gen Suite** software, navigate to the **Controller settings** ⇒ **System** ⇒ **Reset factory settings (i4Gen)** page, and click on the **Reset** button.

### Alarm/Fault messages

---

#### Fault "Oil pressure" on start

Check the related connections.

Check the related settings: mainly, delays and directions of digital/analog inputs.

#### The engine starts but runs above/below nominal speed.

Check the wiring.

Check the fuel level.

Check the speed output.

#### No J1939 communication

Check that the ECU is powered.

Check that the configuration correspond to the engine/ECU.

Check that the wiring is correct.

Check the supply order between the module and the ECU.

Check that the ECU and its settings are consistent with the J1939 standard.



**Note:** Some ECU do not provide information if the engine is stopped. Try starting the engine.

#### "Oil Pressure fault" on digital input is not displayed

Check configuration of digital input

Check controller status displayed (state "Gen ready" must be active, and timer *Delay before activation of the protections* [2004] (adjustable in **Controller settings** ⇒ **General** ⇒ **Timers** menu) must be elapsed before to activate oil pressure fault monitoring

#### Message "Breaker" fault

Check the type of breaker against the selection in **Controller settings** ⇒ **Inputs/Outputs** ⇒ **Digital/relays outputs**.

Stop the other generators.

Make sure the digital input set with the function "*Generator breaker feedback*" is connected.

Start the generators in **MAN** mode (or just press ). Make sure the breaker LED turns on (green); otherwise, increase the "breaker feedback" time-out [2304] (default value 5.0s).

#### Cannot connect with PC

Consider deactivating the firewall and adding an Anti-virus exception.

Check the network wiring, see [Network \(on page 81\)](#)

## Error Messages When Transferring a File to the Module

---



**Note:** "... " indicate a variable number, a label number or a text number according the error message. It will help you to locate your error in your configuration file.

### **ERROR 001: Only when Generator is stop**

File transfer between computer and the unit should be done only when all conditions below are met i.e. when engine is stopped.

### **ERROR 002: Unknown file type**

The file type sent is unknown. Check the selected file.

### **ERROR 004: Write data or checksum error**

### **ERROR 008: Update failed. Please restart update.**

Writing memory error during update process. Restart module update.

### **ERROR 011: No write right on variable ....**

Access to this variable is not allowed. Only parameters can be modified.

### **ERROR 012: No write right on label ....**

Access to this label is not allowed. Check your configuration file.

### **ERROR 013: Text .... doesn't exist.**

Access to this text is not possible because it does not exist. Check compatibility of the version/type of the module and the configuration file.

### **ERROR 014: No write right on .... Unit**

Access to this unit is not allowed. Check your configuration file.

### **ERROR 015: Need password level 2 to write on .... Variable**

Actual password is not sufficient to access such configuration/control level.

### **ERROR 017: Configuration not allowing .... variable value**

The actual setting of the module does not allow modifying this parameter with this value. Check your configuration file and the value of the parameter before sending again your configuration file.

### **ERROR 018: Variable .... out of range**

The value of the parameter is out of range. Check your configuration file before sending again.

### **ERROR 019: Wrong value for .... variable**

An unexpected value has been detected on this parameter. Check the value of the parameter before sending again.

Ex: a text character has been detected instead of a number.

### **ERROR 020: Unknown language file**

The language file sent does not correspond to a language file for the module. Check the selected language file.

## **ERROR 021: Too many languages already downloaded**

The maximum number of language supported by the module has been reached.

## **ERROR 022: Wrong language file version**

The language file version is above the module version. Update your module to the latest version or get the language file compatible with your module version.

## **ERROR 023: Label .... does not exist.**

Modifying this label is not allowed. Check the label number before sending the configuration file again.

## **ERROR 024: Unit .... does not exist.**

Modifying this unit is not allowed. Check the unit number before sending the configuration file again.

## **ERROR 025: Wrong accuracy value on .... (0,1,2 or 3)**

The value of the accuracy is out of range. The value must be between 0 and 3.

## **ERROR 026: Wrong unit value on .... (from 0 to xxx)**

The value of the unit is out of range. The value must be between 0 and xxx.

## **ERROR 027: No header in language file**

No header or wrong header of the language file. Check the selected language file before send it again.

## **ERROR 028: No filename found or too long**

No filename or filename is too long. The maximum size of a filename is 40 characters. Rename file and send it again.

## **ERROR 029: Wrong accuracy on parameter ....**

The value of the modified parameter has not the right accuracy. Check the value of your parameter before sending again your configuration file.

Ex: Below, it is missing the digit at the tenth 5.00

V02205 5.0\_ ESG amplitude +000.00 +010.00V

## **ERROR 030: Data out of range in Easy Flex®**

The result of the operation is outside the range value of the output variable.

## **ERROR 031: Invalid TXT file version**

The TXT file is not valid because it comes from a non-compatible firmware.

For example: TXT file from 1.xx version are only compatible with product using 1.xx version. TXT file from 2.xx version are only compatible with product using 2.xx version. Etc...

## **Warning**

---

Warnings do not prevent the module to work but inform the user of a potential problem in its configuration file.

### **WARNING 001: Wrong size of label ....**

### **WARNING 002: Wrong character entered in label ....**

### **WARNING 003: Wrong size of text ....**

## **WARNING 004: Wrong character entered in text ....**

These warnings indicate that the entered labels/texts are too long or that a character is not supported by the module.

Invalid characters will be replaced by “?”. The valid characters are the followings:

- 0123456789.-
- ABCDEFGHIJKLMNOPQRSTUVWXYZ
- !#\$()\*+/,;= []^\_?
- abcdefghijklmnopqrstuvwxyz

The maximum size of a label is 14 characters and 28 characters for a text.

Modify labels/texts according to the rules above.

## **WARNING 005: Too many errors...**

All errors/warnings messages could not be displayed. There are probably other problems in your configuration file. Solve displayed problems and send your configuration file again in order to display the additional error/warning messages.

## **WARNING 006: No unit specify on unit ....**

## **WARNING 007: No value specify on parameter ....**

## **WARNING 008: No text specify on text ....**

## **WARNING 009: No label specify on label ....**


These warnings indicate that no value has been filled inside the configuration file for a unit/parameter/text or label. The values will stay unchanged.

## **WARNING 011: Variable .... does not exist.**


The parameter does not exist. Check compatibility of the version/type of the module and the configuration file.

# CERTIFICATIONS

Figure 71. Declaration of conformity



**DECLARATION UE DE CONFORMITE**  
**EU DECLARATION OF CONFORMITY**



Cette Déclaration de Conformité est conforme à la norme européenne EN17050-1 :2004 "Critères généraux pour les déclarations de conformité des fournisseurs".
 
 This Declaration of Conformity is suitable to the European Standard EN 17050-1:2004 "General criteria for supplier's declaration of conformity".

**Nous,**  
**We,** **CRE Technology**

**Adresse du fabricant :** 130, Allée Charles Victor NAUDIN  
**Manufacturer's Address:** Zone des Templiers - Sophia Antipolis  
 06410 BIOT  
 FRANCE

déclarons sous notre seule responsabilité, que les produits délivrés:  
*declare under our sole responsibility that the products as originally delivered:*

**Nom du produit :** **AMF Compact HMI**  
**Product Name:** **AMF Compact CORE**

**Référence produit :** **A56-AMF-00-x (HMI)**  
**Regulatory Model:** **A56-AMF-10-x (CORE)**

**Version(s) produit :** **All**  
**Product Version:**

satisfont aux exigences essentielles des Directives Européennes ci-dessous et portent en conséquence le marquage CE :  
*Comply with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:*


Low Voltage Directive 2014/35/EU  
 EMC Directive 2014/30/EU

CEM/EMC	Standard	Date	Description
	EN61326-1 CISPR11 EN55011 EN55022	2013 2010 + A1 (2011) 2012	EMC general requirements – Industrial environment - class A
	EN61000-4-2	2009	Electrostatic Discharges
	EN61000-4-3	2006 + A2 (2010)	Radiated, RF, electromagnetic field immunity test
	EN61000-4-4	2013	Electrical Fast Transients
	EN61000-4-5	2014	Surge immunity test
	EN61000-4-6	2014	Conducted disturbances immunity
	EN61000-6-2	2006	Generic standards. Immunity for industrial environments
	EN61000-6-4	2010	Generic standards. Emissions for industrial environments
<b>Sécurité/Safety</b>	<b>Standard</b>	<b>Date</b>	<b>Description</b>
	EN60950	2013	Information technology equipment. Safety. General requirements

Cette Déclaration de Conformité s'applique aux produits listés ci-dessus et placés sur le marché après le:
 June 28, 2018

*This DoC applies to above-listed products placed on the market after:*

**SIGNATURE**



**BIOT – France for CRE technology**  
**Responsable Qualité**  
**Quality Manager**

**CRE Technology** - Allée Charles Victor NAUDIN - Zone des Templiers, Sophia Antipolis - 06410 BIOT - FRANCE  
 Tél: +33 (0) 4 92 38 86.82 / Fax: +33 (0) 4 92 38 86.83  
 SARL au Capital de 1000 Euros - RCS Antibes 488 625 583 - TVA : FR 54 488 625 583

Certifications are available for download as PDF files at [www.cretechnology.com](http://www.cretechnology.com) in the download area.

## SOFTWARE VARIABLES



# SOFTWARE VARIABLES

CRE TECHNOLOGY  
130, allée Charles-Victor Naudin  
Zone des Templiers - SOPHIA ANTIPOLIS  
06410 BIOT - FRANCE  
Phone: + 33 (0)4 .92.38.86.82  
[www.cretechnology.com](http://www.cretechnology.com)  
[info@cretechnology.com](mailto:info@cretechnology.com)

COPYRIGHT © CRE TECHNOLOGY. ALL RIGHTS RESERVED.

## TABLE OF CONTENTS

<b>GENERAL</b> .....	<b>171</b>
<b>Application</b> .....	<b>171</b>
<b>General</b> .....	<b>171</b>
Application type [2022] .....	171
Load CT location [2034] .....	171
Load CT ratio [2035] .....	172
Connection type [2003] .....	172
<b>Mode</b> .....	<b>173</b>
Power on mode [2012] .....	173
Test mode operation [2014] .....	173
Limited time test mode [2015] .....	173
Test mode duration [2016] .....	173
<b>Timers</b> .....	<b>174</b>
<b>Start sequence</b> .....	<b>174</b>
Pre-start timer (Glow plugs & Auxiliaries) [3456] .....	174
Engine preheat timer (Idle or Nominal speed) [3467] .....	174
Speed stabilization timer [3469] .....	174
Voltage stabilization timer [2056] .....	175
Delay before activation of the protections [2004] .....	175
Off load timer (Only for start with timer) [3478] .....	175
<b>Stop sequence</b> .....	<b>175</b>
Cooling timer (Idle or Nominal speed) [3470] .....	175
Energize to stop hold timer [3472] .....	176
<b>Gas</b> .....	<b>176</b>
Time before ignition [3480] .....	176
Ignition time on start [3481] .....	176
Ignition time on stop [3482] .....	176
<b>Static paralleling</b> .....	<b>177</b>
Waiting for deexcitation timer [2051] .....	177
<b>Others</b> .....	<b>177</b>
Horn timer [2478] .....	177
<b>Mains timers</b> .....	<b>177</b>
Mains back timer [2009] .....	177
Change over timer [2007] .....	178
<b>CAN</b> .....	<b>179</b>
<b>CAN 1</b> .....	<b>179</b>
CAN 1 baud rate [3050] .....	179
<b>CAN 2</b> .....	<b>179</b>
CAN 2 baud rate [3051] .....	179
<b>Events</b> .....	<b>180</b>
Record power up [8300] .....	180



# OPERATOR MANUAL

Record engine status (Start/Stop) [8301] .....	180
Record mains status [8302] .....	180
Record circuit breaker status (Open/Closed) [8303] .....	180
Record operating mode [8304] .....	180
<b>Meters .....</b>	<b>181</b>
<b>Generator meters .....</b>	<b>181</b>
Generator kWh [79] .....	181
Generator kVARh [81] .....	181
Number of hours generator running [83] .....	181
Number of generator starts [78] .....	181
Number of hours in override mode [96] .....	182
<b>Mains meters .....</b>	<b>182</b>
Mains kWh [120] .....	182
Mains kVARh energy [122] .....	182
<b>ELECTRICAL .....</b>	<b>183</b>
<b>Generator .....</b>	<b>183</b>
<b>General .....</b>	<b>183</b>
Nominal active power [2105] .....	183
Nominal reactive power [2106] .....	183
Nominal voltage [2102] .....	183
Nominal frequency [2153] .....	184
PT ratio [2100] .....	184
CT ratio [2101] .....	184
<b>Static paralleling .....</b>	<b>185</b>
Static paralleling [2050] .....	185
<b>Mains .....</b>	<b>186</b>
Mains kW measure type [2155] .....	186
Nominal voltage [2152] .....	186
Nominal frequency [2153] .....	186
PT ratio [2150] .....	187
CT ratio [2151] .....	187
<b>Power management .....</b>	<b>188</b>
Opening load on under frequency [3702] .....	188
Under frequency threshold 1 [3700] .....	188
Under frequency threshold 2 [3701] .....	188
Opening of the load on maximum kW [3705] .....	188
Maximum kW threshold 1 [3703] .....	188
Maximum kW threshold 2 [3704] .....	189
Timer for threshold 1 [3706] .....	189
Timer for threshold 2 [3707] .....	189
Minimum delay between 2 openings [2861] .....	189
Action after last opening [2862] .....	189

<b>ENGINE/ECU/ECM</b> .....	<b>190</b>
<b>Engine</b> .....	<b>190</b>
<b>General</b> .....	<b>190</b>
Engine type [3477] .....	190
Type of engine speed measurement [2200] .....	190
Number of teeth for pick-up [2201] .....	190
Number of pole pairs [2202] .....	191
Nominal speed [2207] .....	191
Idle speed [3468] .....	191
Hide engine measurement [2032] .....	191
Cooling fan activation threshold [3475] .....	192
<b>Start/Stop</b> .....	<b>192</b>
<b>Start sequence</b> .....	<b>192</b>
Engine speed during preheating [3479] .....	192
External start sequence [3452] .....	192
External module start failure timer [3453] .....	193
<b>Stop sequence</b> .....	<b>193</b>
Engine speed during cooling [3476] .....	193
<b>Starter</b> .....	<b>193</b>
Number of attempts per starter [3461] .....	193
Delay between each start [3458] .....	193
Minimum holding time of the starter [3466] .....	194
Maximum holding time of the starter [3457] .....	194
Activation order of starters [3459] .....	194
First starter [3460] .....	194
Stop threshold of the first starter [3462] .....	195
Stop threshold of the second starter [3463] .....	195
Stop threshold of the third starter [3464] .....	195
<b>ECU/ECM</b> .....	<b>196</b>
<b>ECU/ECM</b> .....	<b>196</b>
<b>ECU/ECM settings</b> .....	<b>196</b>
Enable communication protocol [3118] .....	196
ECU Manufacturer [3100] .....	196
Units of measurement [3117] .....	197
ECU ID [3102] .....	197
COMPACT ID [3103] .....	197
<b>Speed frame (TSC1)</b> .....	<b>197</b>
TSC1 Message counter [3123] .....	197
TSC1 Message checksum [3124] .....	198
<b>J1939 sniffer</b> .....	<b>198</b>
Enable J1939 sniffer [3119] .....	198
<b>INPUTS/OUTPUTS</b> .....	<b>199</b>

<b>Digital inputs .....</b>	<b>199</b>
<b>Digital inputs .....</b>	<b>199</b>
<b>Input 1 (Customisable) [250] .....</b>	<b>199</b>
Function configured on DI 1 [2700] .....	199
Polarity NO/NC on DI 1 [2736] .....	199
Validity on digital input 1 [2727] .....	199
Timer ON Digital Input 1 [2709] .....	199
Timer OFF Digital Input 1 [2718] .....	200
<b>Input 2 (Customisable) [251] .....</b>	<b>200</b>
Function configured on DI 2 [2701] .....	200
Polarity NO/NC on DI 2 [2737] .....	200
Validity on digital input 2 [2728] .....	200
Timer ON Digital Input 2 [2710] .....	201
Timer OFF Digital Input 2 [2719] .....	201
<b>Input 3 (Customisable) [252] .....</b>	<b>201</b>
Function configured on DI 3 [2702] .....	201
Polarity NO/NC on DI 3 [2738] .....	201
Validity on digital input 3 [2729] .....	202
Timer ON Digital Input 3 [2711] .....	202
Timer OFF Digital Input 3 [2720] .....	202
<b>Input 4 (Customisable) [253] .....</b>	<b>202</b>
Function configured on DI 4 [2703] .....	202
Polarity NO/NC on DI 4 [2739] .....	203
Validity on digital input 4 [2730] .....	203
Timer ON Digital Input 4 [2712] .....	203
Timer OFF Digital Input 4 [2721] .....	203
<b>Input 5 (Customisable) [254] .....</b>	<b>204</b>
Function configured on DI 5 [2704] .....	204
Polarity NO/NC on DI 5 [2740] .....	204
Validity on digital input 5 [2731] .....	204
Timer ON Digital Input 5 [2713] .....	204
Timer OFF Digital Input 5 [2722] .....	205
<b>Input 6 (Customisable) [255] .....</b>	<b>205</b>
Function configured on DI 6 [2705] .....	205
Polarity NO/NC on DI 6 [2741] .....	205
Validity on digital input 6 [2732] .....	205
Timer ON Digital Input 6 [2714] .....	206
Timer OFF Digital Input 6 [2723] .....	206
<b>Input 7 (Customisable) [256] .....</b>	<b>206</b>
Function configured on DI 7 [2706] .....	206
Polarity NO/NC on DI 7 [2742] .....	206
Validity on digital input 7 [2733] .....	207
Timer ON Digital Input 7 [2715] .....	207

Timer OFF Digital Input 7 [2724] .....	207
<b>Input 8 (Customisable) [257] .....</b>	<b>207</b>
Function configured on DI 8 [2707] .....	207
Polarity NO/NC on DI 8 [2743] .....	208
Validity on digital input 8 [2734] .....	208
Timer ON Digital Input 8 [2716] .....	208
Timer OFF Digital Input 8 [2725] .....	208
<b>Input 9 (Customisable) [258] .....</b>	<b>209</b>
Function configured on DI 9 [2708] .....	209
Polarity NO/NC on DI 9 [2744] .....	209
Validity on digital input 9 [2735] .....	209
Timer ON Digital Input 9 [2717] .....	209
Timer OFF Digital Input 9 [2726] .....	210
<b>Hysteresis on digital input .....</b>	<b>210</b>
<b>Hysteresis on digital input 1 .....</b>	<b>210</b>
Hysteresis 1 enable for digital input [2769] .....	210
Timer ON hysteresis 1 [2777] .....	210
Direction hysteresis 1 [2785] .....	211
<b>Hysteresis on digital input 2 .....</b>	<b>211</b>
Hysteresis 2 enable for digital input [2770] .....	211
Timer ON hysteresis 2 [2778] .....	211
Direction hysteresis 2 [2786] .....	212
<b>Hysteresis on digital input 3 .....</b>	<b>212</b>
Hysteresis 3 enable for digital input [2771] .....	212
Timer ON hysteresis 3 [2779] .....	212
Direction hysteresis 3 [2787] .....	213
<b>Hysteresis on digital input 4 .....</b>	<b>213</b>
Hysteresis 4 enable for digital input [2772] .....	213
Timer ON hysteresis 4 [2780] .....	213
Direction hysteresis 4 [2788] .....	214
<b>Hysteresis on digital input 5 .....</b>	<b>214</b>
Hysteresis 5 enable for digital input [2773] .....	214
Timer ON hysteresis 5 [2781] .....	214
Direction hysteresis 5 [2789] .....	215
<b>Hysteresis on digital input 6 .....</b>	<b>215</b>
Hysteresis 6 enable for digital input [2774] .....	215
Timer ON hysteresis 6 [2782] .....	215
Direction hysteresis 6 [2790] .....	216
<b>Hysteresis on digital input 7 .....</b>	<b>216</b>
Hysteresis 7 enable for digital input [2775] .....	216
Timer ON hysteresis 7 [2783] .....	216
Direction hysteresis 7 [2791] .....	217
<b>Hysteresis on digital input 8 .....</b>	<b>217</b>

Hysteresis 8 enable for digital input [2776] .....	217
Timer ON hysteresis 8 [2784] .....	217
Direction hysteresis 8 [2792] .....	218
<b>Digital/relays outputs .....</b>	<b>219</b>
<b>Digital outputs .....</b>	<b>219</b>
<b>Output 1 (Customisable) [4350] .....</b>	<b>219</b>
Function configured DO 1 [2745] .....	219
Polarity NE/ND DO 1 [2751] .....	219
Pulse length DO 1 [2761] .....	219
Activation delay DO 01 [2793] .....	219
<b>Output 2 (Customisable) [4351] .....</b>	<b>220</b>
Function configured DO 2 [2746] .....	220
Polarity NE/ND DO 2 [2752] .....	220
Pulse length DO 2 [2762] .....	220
Activation delay DO 02 [2794] .....	220
<b>Output 3 (Customisable) [4352] .....</b>	<b>221</b>
Function configured DO 3 [2747] .....	221
Polarity NE/ND DO 3 [2753] .....	221
Pulse length DO 3 [2763] .....	221
Activation delay DO 03 [2795] .....	221
<b>Output 4 (Customisable) [4353] .....</b>	<b>222</b>
Function configured DO 4 [2748] .....	222
Polarity NE/ND DO 4 [2754] .....	222
Pulse length DO 4 [2764] .....	222
Activation delay DO 04 [2796] .....	222
<b>Output 5 (Customisable) [4354] .....</b>	<b>223</b>
Function configured DO 5 [2749] .....	223
Polarity NE/ND DO 5 [2755] .....	223
Pulse length DO 5 [2765] .....	223
Activation delay DO 05 [2797] .....	223
<b>Output 6 (Customisable) [4355] .....</b>	<b>224</b>
Function configured DO 6 [2750] .....	224
Polarity NE/ND DO 6 [2756] .....	224
Pulse length DO 6 [2766] .....	224
Activation delay DO 06 [2798] .....	224
<b>Relay outputs .....</b>	<b>225</b>
<b>Relay 1 (Customisable) [4356] .....</b>	<b>225</b>
Output function Relay 1 [2757] .....	225
Direction NO/NC Relay 1 [2759] .....	225
Pulse length R 1 [2767] .....	225
Activation delay relay 1 [8250] .....	225
<b>Relay 2 (Customisable) [4357] .....</b>	<b>226</b>
Output function Relay 2 [2758] .....	226

Direction NO/NC Relay 2 [2760] .....	226
Pulse length R 2 [2768] .....	226
Activation delay relay 2 [8251] .....	226
<b>Breaker .....</b>	<b>227</b>
<b>General .....</b>	<b>227</b>
Delay before new attempt [2806] .....	227
Fail to open/close breaker timer [2304] .....	227
Unexpected close/open breaker timer [2317] .....	227
<b>Generator breaker .....</b>	<b>228</b>
<b>Attempts number .....</b>	<b>228</b>
Number of closing attempts [2807] .....	228
<b>Control .....</b>	<b>228</b>
Generator circuit breaker control type [2300] .....	228
<b>Pulse .....</b>	<b>228</b>
Generator breaker control pulse length [2301] .....	228
Undervoltage coil deenergized time [2302] .....	229
Undervoltage coil security timer [2303] .....	229
<b>Mains breaker .....</b>	<b>229</b>
<b>Attempts number .....</b>	<b>229</b>
Number of closing attempts [2814] .....	229
<b>Control .....</b>	<b>230</b>
Mains circuit breaker control type [2307] .....	230
<b>Pulse .....</b>	<b>230</b>
Mains breaker control pulse length [2314] .....	230
Undervoltage coil deenergized time [2315] .....	230
Undervoltage coil security timer [2316] .....	230
<b>Mains failure .....</b>	<b>231</b>
Mains breaker tripping mode on mains failure [2312] .....	231
Timer to open mains breaker on mains failure [2313] .....	231
<b>CANopen .....</b>	<b>232</b>
<b>Digital inputs .....</b>	<b>232</b>
<b>CANopen DI 1 (Customisable) [800] .....</b>	<b>232</b>
CANopenFuncI1 [3200] .....	232
CANopenDir I1 [3296] .....	232
Validity on CANopen digital input 1 [3264] .....	232
CANopenTM I1 [3232] .....	232
<b>CANopen DI 2 (Customisable) [801] .....</b>	<b>233</b>
CANopenFuncI2 [3201] .....	233
CANopenDir I2 [3297] .....	233
Validity on CANopen digital input 2 [3265] .....	233
CANopenTM I2 [3233] .....	233
<b>CANopen DI 3 (Customisable) [802] .....</b>	<b>234</b>
CANopenFuncI3 [3202] .....	234

CANopenDir I3 [3298] .....	234
Validity on CANopen digital input 3 [3266] .....	234
CANopenTM I3 [3234] .....	234
<b>CANopen DI 4 (Customisable) [803] .....</b>	<b>235</b>
CANopenFuncI4 [3203] .....	235
CANopenDir I4 [3299] .....	235
Validity on CANopen digital input 4 [3267] .....	235
CANopenTM I4 [3235] .....	235
<b>CANopen DI 5 (Customisable) [804] .....</b>	<b>236</b>
CANopenFuncI5 [3204] .....	236
CANopenDir I5 [3300] .....	236
Validity on CANopen digital input 5 [3268] .....	236
CANopenTM I5 [3236] .....	236
<b>CANopen DI 6 (Customisable) [805] .....</b>	<b>237</b>
CANopenFuncI6 [3205] .....	237
CANopenDir I6 [3301] .....	237
Validity on CANopen digital input 6 [3269] .....	237
CANopenTM I6 [3237] .....	237
<b>CANopen DI 7 (Customisable) [806] .....</b>	<b>238</b>
CANopenFuncI7 [3206] .....	238
CANopenDir I7 [3302] .....	238
Validity on CANopen digital input 7 [3270] .....	238
CANopenTM I7 [3238] .....	238
<b>CANopen DI 8 (Customisable) [807] .....</b>	<b>239</b>
CANopenFuncI8 [3207] .....	239
CANopenDir I8 [3303] .....	239
Validity on CANopen digital input 8 [3271] .....	239
CANopenTM I8 [3239] .....	239
<b>CANopen DI 9 (Customisable) [808] .....</b>	<b>240</b>
CANopenFuncI9 [3208] .....	240
CANopenDir I9 [3304] .....	240
Validity on CANopen digital input 9 [3272] .....	240
CANopenTM I9 [3240] .....	240
<b>CANopen DI 10 (Customisable) [809] .....</b>	<b>241</b>
CANopenFuncI10 [3209] .....	241
CANopenDir I10 [3305] .....	241
Validity on CANopen digital input 10 [3273] .....	241
CANopenTM I10 [3241] .....	241
<b>CANopen DI 11 (Customisable) [810] .....</b>	<b>242</b>
CANopenFuncI11 [3210] .....	242
CANopenDir I11 [3306] .....	242
Validity on CANopen digital input 11 [3274] .....	242
CANopenTM I11 [3242] .....	242

<b>CANopen DI 12 (Customisable) [811]</b> .....	<b>243</b>
CANopenFuncI12 [3211] .....	243
CANopenDir I12 [3307] .....	243
Validity on CANopen digital input 12 [3275] .....	243
CANopenTM I12 [3243] .....	243
<b>CANopen DI 13 (Customisable) [812]</b> .....	<b>244</b>
CANopenFuncI13 [3212] .....	244
CANopenDir I13 [3308] .....	244
Validity on CANopen digital input 13 [3276] .....	244
CANopenTM I13 [3244] .....	244
<b>CANopen DI 14 (Customisable) [813]</b> .....	<b>245</b>
CANopenFuncI14 [3213] .....	245
CANopenDir I14 [3309] .....	245
Validity on CANopen digital input 14 [3277] .....	245
CANopenTM I14 [3245] .....	245
<b>CANopen DI 15 (Customisable) [814]</b> .....	<b>246</b>
CANopenFuncI15 [3214] .....	246
CANopenDir I15 [3310] .....	246
Validity on CANopen digital input 15 [3278] .....	246
CANopenTM I15 [3246] .....	246
<b>CANopen DI 16 (Customisable) [815]</b> .....	<b>247</b>
CANopenFuncI16 [3215] .....	247
CANopenDir I16 [3311] .....	247
Validity on CANopen digital input 16 [3279] .....	247
CANopenTM I16 [3247] .....	247
<b>CANopen DI 17 (Customisable) [816]</b> .....	<b>248</b>
CANopenFuncI17 [3216] .....	248
CANopenDir I17 [3312] .....	248
Validity on CANopen digital input 17 [3280] .....	248
CANopenTM I17 [3248] .....	248
<b>CANopen DI 18 (Customisable) [817]</b> .....	<b>249</b>
CANopenFuncI18 [3217] .....	249
CANopenDir I18 [3313] .....	249
Validity on CANopen digital input 18 [3281] .....	249
CANopenTM I18 [3249] .....	249
<b>CANopen DI 19 (Customisable) [818]</b> .....	<b>250</b>
CANopenFuncI19 [3218] .....	250
CANopenDir I19 [3314] .....	250
Validity on CANopen digital input 19 [3282] .....	250
CANopenTM I19 [3250] .....	250
<b>CANopen DI 20 (Customisable) [819]</b> .....	<b>251</b>
CANopenFuncI20 [3219] .....	251
CANopenDir I20 [3315] .....	251



Validity on CANopen digital input 20 [3283] .....	251
CANopenTM I20 [3251] .....	251
<b>CANopen DI 21 (Customisable) [820] .....</b>	<b>252</b>
CANopenFuncI21 [3220] .....	252
CANopenDir I21 [3316] .....	252
Validity on CANopen digital input 21 [3284] .....	252
CANopenTM I21 [3252] .....	252
<b>CANopen DI 22 (Customisable) [821] .....</b>	<b>253</b>
CANopenFuncI22 [3221] .....	253
CANopenDir I22 [3317] .....	253
Validity on CANopen digital input 22 [3285] .....	253
CANopenTM I22 [3253] .....	253
<b>CANopen DI 23 (Customisable) [822] .....</b>	<b>254</b>
CANopenFuncI23 [3222] .....	254
CANopenDir I23 [3318] .....	254
Validity on CANopen digital input 23 [3286] .....	254
CANopenTM I23 [3254] .....	254
<b>CANopen DI 24 (Customisable) [823] .....</b>	<b>255</b>
CANopenFuncI24 [3223] .....	255
CANopenDir I24 [3319] .....	255
Validity on CANopen digital input 24 [3287] .....	255
CANopenTM I24 [3255] .....	255
<b>CANopen DI 25 (Customisable) [824] .....</b>	<b>256</b>
CANopenFuncI25 [3224] .....	256
CANopenDir I25 [3320] .....	256
Validity on CANopen digital input 25 [3288] .....	256
CANopenTM I25 [3256] .....	256
<b>CANopen DI 26 (Customisable) [825] .....</b>	<b>257</b>
CANopenFuncI26 [3225] .....	257
CANopenDir I26 [3321] .....	257
Validity on CANopen digital input 26 [3289] .....	257
CANopenTM I26 [3257] .....	257
<b>CANopen DI 27 (Customisable) [826] .....</b>	<b>258</b>
CANopenFuncI27 [3226] .....	258
CANopenDir I27 [3322] .....	258
Validity on CANopen digital input 27 [3290] .....	258
CANopenTM I27 [3258] .....	258
<b>CANopen DI 28 (Customisable) [827] .....</b>	<b>259</b>
CANopenFuncI28 [3227] .....	259
CANopenDir I28 [3323] .....	259
Validity on CANopen digital input 28 [3291] .....	259
CANopenTM I28 [3259] .....	259
<b>CANopen DI 29 (Customisable) [828] .....</b>	<b>260</b>

CANopenFuncI29 [3228] .....	260
CANopenDir I29 [3324] .....	260
Validity on CANopen digital input 29 [3292] .....	260
CANopenTM I29 [3260] .....	260
<b>CANopen DI 30 (Customisable) [829] .....</b>	<b>261</b>
CANopenFuncI30 [3229] .....	261
CANopenDir I30 [3325] .....	261
Validity on CANopen digital input 30 [3293] .....	261
CANopenTM I30 [3261] .....	261
<b>CANopen DI 31 (Customisable) [830] .....</b>	<b>262</b>
CANopenFuncI31 [3230] .....	262
CANopenDir I31 [3326] .....	262
Validity on CANopen digital input 31 [3294] .....	262
CANopenTM I31 [3262] .....	262
<b>CANopen DI 32 (Customisable) [831] .....</b>	<b>263</b>
CANopenFuncI32 [3231] .....	263
CANopenDir I32 [3327] .....	263
Validity on CANopen digital input 32 [3295] .....	263
CANopenTM I32 [3263] .....	263
<b>CANopen DI 33 (Customisable) [1250] .....</b>	<b>264</b>
CANopenFuncI33 [8550] .....	264
CANopenDir I33 [8646] .....	264
Validity on CANopen digital input 33 [8614] .....	264
CANopenTM I33 [8582] .....	264
<b>CANopen DI 34 (Customisable) [1251] .....</b>	<b>265</b>
CANopenFuncI34 [8551] .....	265
CANopenDir I34 [8647] .....	265
Validity on CANopen digital input 34 [8615] .....	265
CANopenTM I34 [8583] .....	265
<b>CANopen DI 35 (Customisable) [1252] .....</b>	<b>266</b>
CANopenFuncI35 [8552] .....	266
CANopenDir I35 [8648] .....	266
Validity on CANopen digital input 35 [8616] .....	266
CANopenTM I35 [8584] .....	266
<b>CANopen DI 36 (Customisable) [1253] .....</b>	<b>267</b>
CANopenFuncI36 [8553] .....	267
CANopenDir I36 [8649] .....	267
Validity on CANopen digital input 36 [8617] .....	267
CANopenTM I36 [8585] .....	267
<b>CANopen DI 37 (Customisable) [1254] .....</b>	<b>268</b>
CANopenFuncI37 [8554] .....	268
CANopenDir I37 [8650] .....	268
Validity on CANopen digital input 37 [8618] .....	268

CANopenTM I37 [8586] .....	268
<b>CANopen DI 38 (Customisable) [1255] .....</b>	<b>269</b>
CANopenFuncI38 [8555] .....	269
CANopenDir I38 [8651] .....	269
Validity on CANopen digital input 38 [8619] .....	269
CANopenTM I38 [8587] .....	269
<b>CANopen DI 39 (Customisable) [1256] .....</b>	<b>270</b>
CANopenFuncI39 [8556] .....	270
CANopenDir I39 [8652] .....	270
Validity on CANopen digital input 39 [8620] .....	270
CANopenTM I39 [8588] .....	270
<b>CANopen DI 40 (Customisable) [1257] .....</b>	<b>271</b>
CANopenFuncI40 [8557] .....	271
CANopenDir I40 [8653] .....	271
Validity on CANopen digital input 40 [8621] .....	271
CANopenTM I40 [8589] .....	271
<b>CANopen DI 41 (Customisable) [1258] .....</b>	<b>272</b>
CANopenFuncI41 [8558] .....	272
CANopenDir I41 [8654] .....	272
Validity on CANopen digital input 41 [8622] .....	272
CANopenTM I41 [8590] .....	272
<b>CANopen DI 42 (Customisable) [1259] .....</b>	<b>273</b>
CANopenFuncI42 [8559] .....	273
CANopenDir I42 [8655] .....	273
Validity on CANopen digital input 42 [8623] .....	273
CANopenTM I42 [8591] .....	273
<b>CANopen DI 43 (Customisable) [1260] .....</b>	<b>274</b>
CANopenFuncI43 [8560] .....	274
CANopenDir I43 [8656] .....	274
Validity on CANopen digital input 43 [8624] .....	274
CANopenTM I43 [8592] .....	274
<b>CANopen DI 44 (Customisable) [1261] .....</b>	<b>275</b>
CANopenFuncI44 [8561] .....	275
CANopenDir I44 [8657] .....	275
Validity on CANopen digital input 44 [8625] .....	275
CANopenTM I44 [8593] .....	275
<b>CANopen DI 45 (Customisable) [1262] .....</b>	<b>276</b>
CANopenFuncI45 [8562] .....	276
CANopenDir I45 [8658] .....	276
Validity on CANopen digital input 45 [8626] .....	276
CANopenTM I45 [8594] .....	276
<b>CANopen DI 46 (Customisable) [1263] .....</b>	<b>277</b>
CANopenFuncI46 [8563] .....	277

CANopenDir I46 [8659] .....	277
Validity on CANopen digital input 46 [8627] .....	277
CANopenTM I46 [8595] .....	277
<b>CANopen DI 47 (Customisable) [1264] .....</b>	<b>278</b>
CANopenFuncI47 [8564] .....	278
CANopenDir I47 [8660] .....	278
Validity on CANopen digital input 47 [8628] .....	278
CANopenTM I47 [8596] .....	278
<b>CANopen DI 48 (Customisable) [1265] .....</b>	<b>279</b>
CANopenFuncI48 [8565] .....	279
CANopenDir I48 [8661] .....	279
Validity on CANopen digital input 48 [8629] .....	279
CANopenTM I48 [8597] .....	279
<b>CANopen DI 49 (Customisable) [1266] .....</b>	<b>280</b>
CANopenFuncI49 [8566] .....	280
CANopenDir I49 [8662] .....	280
Validity on CANopen digital input 49 [8630] .....	280
CANopenTM I49 [8598] .....	280
<b>CANopen DI 50 (Customisable) [1267] .....</b>	<b>281</b>
CANopenFuncI50 [8567] .....	281
CANopenDir I50 [8663] .....	281
Validity on CANopen digital input 50 [8631] .....	281
CANopenTM I50 [8599] .....	281
<b>CANopen DI 51 (Customisable) [1268] .....</b>	<b>282</b>
CANopenFuncI51 [8568] .....	282
CANopenDir I51 [8664] .....	282
Validity on CANopen digital input 51 [8632] .....	282
CANopenTM I51 [8600] .....	282
<b>CANopen DI 52 (Customisable) [1269] .....</b>	<b>283</b>
CANopenFuncI52 [8569] .....	283
CANopenDir I52 [8665] .....	283
Validity on CANopen digital input 52 [8633] .....	283
CANopenTM I52 [8601] .....	283
<b>CANopen DI 53 (Customisable) [1270] .....</b>	<b>284</b>
CANopenFuncI53 [8570] .....	284
CANopenDir I53 [8666] .....	284
Validity on CANopen digital input 53 [8634] .....	284
CANopenTM I53 [8602] .....	284
<b>CANopen DI 54 (Customisable) [1271] .....</b>	<b>285</b>
CANopenFuncI54 [8571] .....	285
CANopenDir I54 [8667] .....	285
Validity on CANopen digital input 54 [8635] .....	285
CANopenTM I54 [8603] .....	285

<b>CANopen DI 55 (Customisable) [1272]</b> .....	<b>286</b>
CANopenFuncI55 [8572] .....	286
CANopenDir I55 [8668] .....	286
Validity on CANopen digital input 55 [8636] .....	286
CANopenTM I55 [8604] .....	286
<b>CANopen DI 56 (Customisable) [1273]</b> .....	<b>287</b>
CANopenFuncI56 [8573] .....	287
CANopenDir I56 [8669] .....	287
Validity on CANopen digital input 56 [8637] .....	287
CANopenTM I56 [8605] .....	287
<b>CANopen DI 57 (Customisable) [1274]</b> .....	<b>288</b>
CANopenFuncI57 [8574] .....	288
CANopenDir I57 [8670] .....	288
Validity on CANopen digital input 57 [8638] .....	288
CANopenTM I57 [8606] .....	288
<b>CANopen DI 58 (Customisable) [1275]</b> .....	<b>289</b>
CANopenFuncI58 [8575] .....	289
CANopenDir I58 [8671] .....	289
Validity on CANopen digital input 58 [8639] .....	289
CANopenTM I58 [8607] .....	289
<b>CANopen DI 59 (Customisable) [1276]</b> .....	<b>290</b>
CANopenFuncI59 [8576] .....	290
CANopenDir I59 [8672] .....	290
Validity on CANopen digital input 59 [8640] .....	290
CANopenTM I59 [8608] .....	290
<b>CANopen DI 60 (Customisable) [1277]</b> .....	<b>291</b>
CANopenFuncI60 [8577] .....	291
CANopenDir I60 [8673] .....	291
Validity on CANopen digital input 60 [8641] .....	291
CANopenTM I60 [8609] .....	291
<b>CANopen DI 61 (Customisable) [1278]</b> .....	<b>292</b>
CANopenFuncI61 [8578] .....	292
CANopenDir I61 [8674] .....	292
Validity on CANopen digital input 61 [8642] .....	292
CANopenTM I61 [8610] .....	292
<b>CANopen DI 62 (Customisable) [1279]</b> .....	<b>293</b>
CANopenFuncI62 [8579] .....	293
CANopenDir I62 [8675] .....	293
Validity on CANopen digital input 62 [8643] .....	293
CANopenTM I62 [8611] .....	293
<b>CANopen DI 63 (Customisable) [1280]</b> .....	<b>294</b>
CANopenFuncI63 [8580] .....	294
CANopenDir I63 [8676] .....	294

Validity on CANopen digital input 63 [8644] .....	294
CANopenTM I63 [8612] .....	294
<b>CANopen DI 64 (Customisable) [1281] .....</b>	<b>295</b>
CANopenFuncI64 [8581] .....	295
CANopenDir I64 [8677] .....	295
Validity on CANopen digital input 64 [8645] .....	295
CANopenTM I64 [8613] .....	295
<b>Digital outputs .....</b>	<b>296</b>
<b>CANopen DO 1 (Customisable) [4751] .....</b>	<b>296</b>
CANopenFuncO1 [3350] .....	296
CANopenModeO1 [3382] .....	296
<b>CANopen DO 2 (Customisable) [4752] .....</b>	<b>296</b>
CANopenFuncO2 [3351] .....	296
CANopenModeO2 [3383] .....	296
<b>CANopen DO 3 (Customisable) [4753] .....</b>	<b>297</b>
CANopenFuncO3 [3352] .....	297
CANopenModeO3 [3384] .....	297
<b>CANopen DO 4 (Customisable) [4754] .....</b>	<b>297</b>
CANopenFuncO4 [3353] .....	297
CANopenModeO4 [3385] .....	297
<b>CANopen DO 5 (Customisable) [4755] .....</b>	<b>298</b>
CANopenFuncO5 [3354] .....	298
CANopenModeO5 [3386] .....	298
<b>CANopen DO 6 (Customisable) [4756] .....</b>	<b>298</b>
CANopenFuncO6 [3355] .....	298
CANopenModeO6 [3387] .....	298
<b>CANopen DO 7 (Customisable) [4757] .....</b>	<b>299</b>
CANopenFuncO7 [3356] .....	299
CANopenModeO7 [3388] .....	299
<b>CANopen DO 8 (Customisable) [4758] .....</b>	<b>299</b>
CANopenFuncO8 [3357] .....	299
CANopenModeO8 [3389] .....	299
<b>CANopen DO 9 (Customisable) [4759] .....</b>	<b>300</b>
CANopenFuncO9 [3358] .....	300
CANopenModeO9 [3390] .....	300
<b>CANopen DO 10 (Customisable) [4760] .....</b>	<b>300</b>
CANopenFuncO10 [3359] .....	300
CANopenModeO10 [3391] .....	300
<b>CANopen DO 11 (Customisable) [4761] .....</b>	<b>301</b>
CANopenFuncO11 [3360] .....	301
CANopenModeO11 [3392] .....	301
<b>CANopen DO 12 (Customisable) [4762] .....</b>	<b>301</b>
CANopenFuncO12 [3361] .....	301

CANopenModeO12 [3393] .....	301
<b>CANopen DO 13 (Customisable) [4763] .....</b>	<b>302</b>
CANopenFuncO13 [3362] .....	302
CANopenModeO13 [3394] .....	302
<b>CANopen DO 14 (Customisable) [4764] .....</b>	<b>302</b>
CANopenFuncO14 [3363] .....	302
CANopenModeO14 [3395] .....	302
<b>CANopen DO 15 (Customisable) [4765] .....</b>	<b>303</b>
CANopenFuncO15 [3364] .....	303
CANopenModeO15 [3396] .....	303
<b>CANopen DO 16 (Customisable) [4766] .....</b>	<b>303</b>
CANopenFuncO16 [3365] .....	303
CANopenModeO16 [3397] .....	303
<b>CANopen DO 17 (Customisable) [4767] .....</b>	<b>304</b>
CANopenFuncO17 [3366] .....	304
CANopenModeO17 [3398] .....	304
<b>CANopen DO 18 (Customisable) [4768] .....</b>	<b>304</b>
CANopenFuncO18 [3367] .....	304
CANopenModeO18 [3399] .....	304
<b>CANopen DO 19 (Customisable) [4769] .....</b>	<b>305</b>
CANopenFuncO19 [3368] .....	305
CANopenModeO19 [3400] .....	305
<b>CANopen DO 20 (Customisable) [4770] .....</b>	<b>305</b>
CANopenFuncO20 [3369] .....	305
CANopenModeO20 [3401] .....	305
<b>CANopen DO 21 (Customisable) [4771] .....</b>	<b>306</b>
CANopenFuncO21 [3370] .....	306
CANopenModeO21 [3402] .....	306
<b>CANopen DO 22 (Customisable) [4772] .....</b>	<b>306</b>
CANopenFuncO22 [3371] .....	306
CANopenModeO22 [3403] .....	306
<b>CANopen DO 23 (Customisable) [4773] .....</b>	<b>307</b>
CANopenFuncO23 [3372] .....	307
CANopenModeO23 [3404] .....	307
<b>CANopen DO 24 (Customisable) [4774] .....</b>	<b>307</b>
CANopenFuncO24 [3373] .....	307
CANopenModeO24 [3405] .....	307
<b>CANopen DO 25 (Customisable) [4775] .....</b>	<b>308</b>
CANopenFuncO25 [3374] .....	308
CANopenModeO25 [3406] .....	308
<b>CANopen DO 26 (Customisable) [4776] .....</b>	<b>308</b>
CANopenFuncO26 [3375] .....	308
CANopenModeO26 [3407] .....	308

<b>CANopen DO 27 (Customisable) [4777]</b> .....	<b>309</b>
CANopenFuncO27 [3376] .....	309
CANopenModeO27 [3408] .....	309
<b>CANopen DO 28 (Customisable) [4778]</b> .....	<b>309</b>
CANopenFuncO28 [3377] .....	309
CANopenModeO28 [3409] .....	309
<b>CANopen DO 29 (Customisable) [4779]</b> .....	<b>310</b>
CANopenFuncO29 [3378] .....	310
CANopenModeO29 [3410] .....	310
<b>CANopen DO 30 (Customisable) [4780]</b> .....	<b>310</b>
CANopenFuncO30 [3379] .....	310
CANopenModeO30 [3411] .....	310
<b>CANopen DO 31 (Customisable) [4781]</b> .....	<b>311</b>
CANopenFuncO31 [3380] .....	311
CANopenModeO31 [3412] .....	311
<b>CANopen DO 32 (Customisable) [4782]</b> .....	<b>311</b>
CANopenFuncO32 [3381] .....	311
CANopenModeO32 [3413] .....	311
<b>CANopen DO 33 (Customisable) [5100]</b> .....	<b>312</b>
CANopenFuncO33 [8700] .....	312
CANopenModeO33 [8732] .....	312
<b>CANopen DO 34 (Customisable) [5101]</b> .....	<b>312</b>
CANopenFuncO34 [8701] .....	312
CANopenModeO34 [8733] .....	312
<b>CANopen DO 35 (Customisable) [5102]</b> .....	<b>313</b>
CANopenFuncO35 [8702] .....	313
CANopenModeO35 [8734] .....	313
<b>CANopen DO 36 (Customisable) [5103]</b> .....	<b>313</b>
CANopenFuncO36 [8703] .....	313
CANopenModeO36 [8735] .....	313
<b>CANopen DO 37 (Customisable) [5104]</b> .....	<b>314</b>
CANopenFuncO37 [8704] .....	314
CANopenModeO37 [8736] .....	314
<b>CANopen DO 38 (Customisable) [5105]</b> .....	<b>314</b>
CANopenFuncO38 [8705] .....	314
CANopenModeO38 [8737] .....	314
<b>CANopen DO 39 (Customisable) [5106]</b> .....	<b>315</b>
CANopenFuncO39 [8706] .....	315
CANopenModeO39 [8738] .....	315
<b>CANopen DO 40 (Customisable) [5107]</b> .....	<b>315</b>
CANopenFuncO40 [8707] .....	315
CANopenModeO40 [8739] .....	315
<b>CANopen DO 41 (Customisable) [5108]</b> .....	<b>316</b>



CANopenFuncO41 [8708] .....	316
CANopenModeO41 [8740] .....	316
<b>CANopen DO 42 (Customisable) [5109] .....</b>	<b>316</b>
CANopenFuncO42 [8709] .....	316
CANopenModeO42 [8741] .....	316
<b>CANopen DO 43 (Customisable) [5110] .....</b>	<b>317</b>
CANopenFuncO43 [8710] .....	317
CANopenModeO43 [8742] .....	317
<b>CANopen DO 44 (Customisable) [5111] .....</b>	<b>317</b>
CANopenFuncO44 [8711] .....	317
CANopenModeO44 [8743] .....	317
<b>CANopen DO 45 (Customisable) [5112] .....</b>	<b>318</b>
CANopenFuncO45 [8712] .....	318
CANopenModeO45 [8744] .....	318
<b>CANopen DO 46 (Customisable) [5113] .....</b>	<b>318</b>
CANopenFuncO46 [8713] .....	318
CANopenModeO46 [8745] .....	318
<b>CANopen DO 47 (Customisable) [5114] .....</b>	<b>319</b>
CANopenFuncO47 [8714] .....	319
CANopenModeO47 [8746] .....	319
<b>CANopen DO 48 (Customisable) [5115] .....</b>	<b>319</b>
CANopenFuncO48 [8715] .....	319
CANopenModeO48 [8747] .....	319
<b>CANopen DO 49 (Customisable) [5116] .....</b>	<b>320</b>
CANopenFuncO49 [8716] .....	320
CANopenModeO49 [8748] .....	320
<b>CANopen DO 50 (Customisable) [5117] .....</b>	<b>320</b>
CANopenFuncO50 [8717] .....	320
CANopenModeO50 [8749] .....	320
<b>CANopen DO 51 (Customisable) [5118] .....</b>	<b>321</b>
CANopenFuncO51 [8718] .....	321
CANopenModeO51 [8750] .....	321
<b>CANopen DO 52 (Customisable) [5119] .....</b>	<b>321</b>
CANopenFuncO52 [8719] .....	321
CANopenModeO52 [8751] .....	321
<b>CANopen DO 53 (Customisable) [5120] .....</b>	<b>322</b>
CANopenFuncO53 [8720] .....	322
CANopenModeO53 [8752] .....	322
<b>CANopen DO 54 (Customisable) [5121] .....</b>	<b>322</b>
CANopenFuncO54 [8721] .....	322
CANopenModeO54 [8753] .....	322
<b>CANopen DO 55 (Customisable) [5122] .....</b>	<b>323</b>
CANopenFuncO55 [8722] .....	323

CANopenModeO55 [8754] .....	323
<b>CANopen DO 56 (Customisable) [5123] .....</b>	<b>323</b>
CANopenFuncO56 [8723] .....	323
CANopenModeO56 [8755] .....	323
<b>CANopen DO 57 (Customisable) [5124] .....</b>	<b>324</b>
CANopenFuncO57 [8724] .....	324
CANopenModeO57 [8756] .....	324
<b>CANopen DO 58 (Customisable) [5125] .....</b>	<b>324</b>
CANopenFuncO58 [8725] .....	324
CANopenModeO58 [8757] .....	324
<b>CANopen DO 59 (Customisable) [5126] .....</b>	<b>325</b>
CANopenFuncO59 [8726] .....	325
CANopenModeO59 [8758] .....	325
<b>CANopen DO 60 (Customisable) [5127] .....</b>	<b>325</b>
CANopenFuncO60 [8727] .....	325
CANopenModeO60 [8759] .....	325
<b>CANopen DO 61 (Customisable) [5128] .....</b>	<b>326</b>
CANopenFuncO61 [8728] .....	326
CANopenModeO61 [8760] .....	326
<b>CANopen DO 62 (Customisable) [5129] .....</b>	<b>326</b>
CANopenFuncO62 [8729] .....	326
CANopenModeO62 [8761] .....	326
<b>CANopen DO 63 (Customisable) [5130] .....</b>	<b>327</b>
CANopenFuncO63 [8730] .....	327
CANopenModeO63 [8762] .....	327
<b>CANopen DO 64 (Customisable) [5131] .....</b>	<b>327</b>
CANopenFuncO64 [8731] .....	327
CANopenModeO64 [8763] .....	327
<b>Analog inputs .....</b>	<b>328</b>
<b>Analog inputs 1 .....</b>	<b>328</b>
CANopen AI 1 (Customisable) [1050] .....	328
CANopen Gain AI 01 [8351] .....	328
CANopen Offset AI 01 [8350] .....	328
<b>Analog inputs 2 .....</b>	<b>328</b>
CANopen AI 2 (Customisable) [1051] .....	328
CANopen Gain AI 02 [8353] .....	329
CANopen Offset AI 02 [8352] .....	329
<b>Analog inputs 3 .....</b>	<b>329</b>
CANopen AI 3 (Customisable) [1052] .....	329
CANopen Gain AI 03 [8355] .....	329
CANopen Offset AI 03 [8354] .....	329
<b>Analog inputs 4 .....</b>	<b>330</b>
CANopen AI 4 (Customisable) [1053] .....	330

CANopen Gain AI 04 [8357] .....	330
CANopen Offset AI 04 [8356] .....	330
<b>Analog inputs 5 .....</b>	<b>330</b>
CANopen AI 5 (Customisable) [1054] .....	330
CANopen Gain AI 05 [8359] .....	331
CANopen Offset AI 05 [8358] .....	331
<b>Analog inputs 6 .....</b>	<b>331</b>
CANopen AI 6 (Customisable) [1055] .....	331
CANopen Gain AI 06 [8361] .....	331
CANopen Offset AI 06 [8360] .....	331
<b>Analog inputs 7 .....</b>	<b>332</b>
CANopen AI 7 (Customisable) [1056] .....	332
CANopen Gain AI 07 [8363] .....	332
CANopen Offset AI 07 [8362] .....	332
<b>Analog inputs 8 .....</b>	<b>332</b>
CANopen AI 8 (Customisable) [1057] .....	332
CANopen Gain AI 08 [8365] .....	333
CANopen Offset AI 08 [8364] .....	333
<b>Analog inputs 9 .....</b>	<b>333</b>
CANopen AI 9 (Customisable) [1058] .....	333
CANopen Gain AI 09 [8367] .....	333
CANopen Offset AI 09 [8366] .....	333
<b>Analog inputs 10 .....</b>	<b>334</b>
CANopen AI 10 (Customisable) [1059] .....	334
CANopen Gain AI 10 [8369] .....	334
CANopen Offset AI 10 [8368] .....	334
<b>Analog inputs 11 .....</b>	<b>334</b>
CANopen AI 11 (Customisable) [1060] .....	334
CANopen Gain AI 11 [8371] .....	335
CANopen Offset AI 11 [8370] .....	335
<b>Analog inputs 12 .....</b>	<b>335</b>
CANopen AI 12 (Customisable) [1061] .....	335
CANopen Gain AI 12 [8373] .....	335
CANopen Offset AI 12 [8372] .....	335
<b>Analog inputs 13 .....</b>	<b>336</b>
CANopen AI 13 (Customisable) [1062] .....	336
CANopen Gain AI 13 [8375] .....	336
CANopen Offset AI 13 [8374] .....	336
<b>Analog inputs 14 .....</b>	<b>336</b>
CANopen AI 14 (Customisable) [1063] .....	336
CANopen Gain AI 14 [8377] .....	337
CANopen Offset AI 14 [8376] .....	337
<b>Analog inputs 15 .....</b>	<b>337</b>

# OPERATOR MANUAL

CANopen AI 15 (Customisable) [1064] .....	337
CANopen Gain AI 15 [8379] .....	337
CANopen Offset AI 15 [8378] .....	337
<b>Analog inputs 16 .....</b>	<b>338</b>
CANopen AI 16 (Customisable) [1065] .....	338
CANopen Gain AI 16 [8381] .....	338
CANopen Offset AI 16 [8380] .....	338
<b>PROTECTIONS .....</b>	<b>339</b>
<b>Generator protections .....</b>	<b>339</b>
<b>Over/under frequency .....</b>	<b>339</b>
<b>Over frequency .....</b>	<b>339</b>
Over frequency threshold [2400] .....	339
Over frequency timer [2401] .....	339
Over frequency control [2402] .....	339
<b>Under frequency .....</b>	<b>340</b>
Under frequency threshold [2403] .....	340
Under frequency timer [2404] .....	340
Under frequency control [2405] .....	340
<b>Over frequency 2 .....</b>	<b>340</b>
Over frequency threshold 2 [2436] .....	340
Over frequency timer 2 [2437] .....	341
Over frequency control 2 [2438] .....	341
<b>Under frequency 2 .....</b>	<b>341</b>
Under frequency threshold 2 [2439] .....	341
Under frequency timer 2 [2440] .....	341
Under frequency control 2 [2441] .....	342
<b>Over/under voltage .....</b>	<b>342</b>
<b>Over voltage .....</b>	<b>342</b>
Over voltage threshold [2406] .....	342
Over voltage timer [2407] .....	342
Over voltage control [2408] .....	342
<b>Under voltage .....</b>	<b>343</b>
Under voltage threshold [2409] .....	343
Under voltage timer [2410] .....	343
Under voltage control [2411] .....	343
<b>Over voltage 2 .....</b>	<b>343</b>
Over voltage threshold 2 [2442] .....	343
Over voltage timer 2 [2443] .....	344
Over voltage control 2 [2444] .....	344
<b>Under voltage 2 .....</b>	<b>344</b>
Under voltage threshold 2 [2445] .....	344
Under voltage timer 2 [2446] .....	344

Under voltage control 2 [2447] .....	345
<b>Over current/neutral .....</b>	<b>345</b>
<b>Over current .....</b>	<b>345</b>
Over current threshold [2430] .....	345
Over current timer [2431] .....	345
Over current control [2432] .....	345
<b>Neutral current .....</b>	<b>346</b>
Neutral current threshold [2433] .....	346
Neutral current timer [2434] .....	346
Neutral current control [2435] .....	346
<b>Over current 2 .....</b>	<b>346</b>
Over current threshold 2 [2466] .....	346
Over current timer 2 [2467] .....	347
Over current control 2 [2468] .....	347
<b>Neutral current 2 .....</b>	<b>347</b>
Neutral current threshold 2 [2469] .....	347
Neutral current timer 2 [2470] .....	347
Neutral current control 2 [2471] .....	348
<b>Maximum/Minimum kW .....</b>	<b>348</b>
<b>Maximum kW .....</b>	<b>348</b>
Maximum kW threshold [2415] .....	348
Maximum kW timer [2416] .....	348
Maximum kW control [2417] .....	348
<b>Minimum kW .....</b>	<b>349</b>
Minimum kW threshold [2412] .....	349
Minimum kW timer [2413] .....	349
Minimum kW control [2414] .....	349
<b>Maximum kW 2 .....</b>	<b>349</b>
Maximum kW threshold 2 [2451] .....	349
Maximum kW timer 2 [2452] .....	350
Maximum kW control 2 [2453] .....	350
<b>Minimum kW 2 .....</b>	<b>350</b>
Minimum kW threshold 2 [2448] .....	350
Minimum kW timer 2 [2449] .....	350
Minimum kW control 2 [2450] .....	351
<b>Maxi kVAR/Mini kVAR .....</b>	<b>351</b>
<b>Maximum kVAR .....</b>	<b>351</b>
Maximum kVAR threshold [2424] .....	351
Maximum kVAR timer [2425] .....	351
Maximum kVAR control [2426] .....	351
<b>Minimum kVar .....</b>	<b>352</b>
Minimum kVAR threshold [2421] .....	352
Minimum kVAR timer [2422] .....	352

Minimum kVAR control [2423] .....	352
<b>Maximum kVAR 2 .....</b>	<b>352</b>
Maximum kVAR threshold 2 [2460] .....	352
Maximum kVAR timer 2 [2461] .....	353
Maximum kVAR control 2 [2462] .....	353
<b>Minimum kVar 2 .....</b>	<b>353</b>
Minimum kVAR threshold 2 [2457] .....	353
Minimum kVAR timer 2 [2458] .....	353
Minimum kVAR control 2 [2459] .....	354
<b>Voltage/Current unbalance .....</b>	<b>354</b>
<b>Voltage unbalance .....</b>	<b>354</b>
Voltage unbalance threshold [2486] .....	354
Voltage unbalance timer [2487] .....	354
Voltage unbalance control [2488] .....	354
<b>Current unbalance .....</b>	<b>355</b>
Current unbalance threshold [2492] .....	355
Current unbalance timer [2493] .....	355
Current unbalance control [2494] .....	355
<b>Voltage unbalance 2 .....</b>	<b>355</b>
Voltage unbalance threshold 2 [2489] .....	355
Voltage unbalance timer 2 [2490] .....	356
Voltage unbalance control 2 [2491] .....	356
<b>Current unbalance 2 .....</b>	<b>356</b>
Current unbalance threshold 2 [2495] .....	356
Current unbalance timer 2 [2496] .....	356
Current unbalance control 2 [2497] .....	357
<b>Short circuit .....</b>	<b>357</b>
Generator Short Circuit Control [2477] .....	357
Single phase nominal current [2103] .....	357
Curve type [2498] .....	358
Short Circuit K constant characteristic [2472] .....	358
Short Circuit C constant characteristic [2473] .....	358
Short Circuit Alpha constant characteristic [2474] .....	358
Short Circuit Is constant [2476] .....	359
Short Circuit TMS (Time Multiplier Setting) [2475] .....	359
<b>Earth fault .....</b>	<b>359</b>
<b>Earth fault ratio .....</b>	<b>359</b>
Earth Current CT ratio [2485] .....	359
<b>Earth fault .....</b>	<b>359</b>
Earth fault threshold [2479] .....	359
Earth fault timer [2480] .....	360
Earth fault control [2481] .....	360
<b>Earth fault 2 .....</b>	<b>360</b>

# OPERATOR MANUAL

Earth fault threshold 2 [2482] .....	360
Earth fault timer 2 [2483] .....	360
Earth fault control 2 [2484] .....	361
<b>Rotophase .....</b>	<b>361</b>
Rotophase protection control [8501] .....	361
Rotophase activation direction (0 = Indirect, 1 = Direct) [8500] .....	361
<b>Mains protections .....</b>	<b>362</b>
<b>Over/under frequency .....</b>	<b>362</b>
<b>Over frequency .....</b>	<b>362</b>
Over frequency threshold [2500] .....	362
Over frequency timer [2501] .....	362
Over frequency control [2502] .....	362
<b>Under frequency .....</b>	<b>363</b>
Under frequency threshold [2503] .....	363
Under frequency timer [2504] .....	363
Under frequency control [2505] .....	363
<b>Over frequency 2 .....</b>	<b>363</b>
Over frequency threshold 2 [2530] .....	363
Over frequency timer 2 [2531] .....	364
Over frequency control 2 [2532] .....	364
<b>Under frequency 2 .....</b>	<b>364</b>
Under frequency threshold 2 [2533] .....	364
Under frequency timer 2 [2534] .....	364
Under frequency control 2 [2535] .....	365
<b>Over/under voltage .....</b>	<b>365</b>
<b>Over voltage .....</b>	<b>365</b>
Over voltage threshold [2506] .....	365
Over voltage timer [2507] .....	365
Over voltage control [2508] .....	366
<b>Under voltage .....</b>	<b>366</b>
Under voltage threshold [2509] .....	366
Under voltage timer [2510] .....	366
Under voltage control [2511] .....	366
<b>Over voltage 2 .....</b>	<b>367</b>
Over voltage threshold 2 [2536] .....	367
Over voltage timer 2 [2537] .....	367
Over voltage control 2 [2538] .....	367
<b>Under voltage 2 .....</b>	<b>367</b>
Under voltage threshold 2 [2539] .....	367
Under voltage timer 2 [2540] .....	368
Under voltage control 2 [2541] .....	368
<b>Voltage unbalance .....</b>	<b>368</b>
<b>Voltage unbalance .....</b>	<b>368</b>

# OPERATOR MANUAL

Voltage unbalance threshold [2565] .....	368
Voltage unbalance timer [2566] .....	368
Voltage unbalance control [2567] .....	369
<b>Voltage unbalance 2 .....</b>	<b>369</b>
Voltage unbalance threshold 2 [2568] .....	369
Voltage unbalance timer 2 [2569] .....	369
Voltage unbalance control 2 [2570] .....	369
<b>Rotophase .....</b>	<b>370</b>
Rotophase protection control [2585] .....	370
Rotophase activation direction (0 = Indirect, 1 = Direct) [2584] .....	370
<b>Maximum/Minimum kW .....</b>	<b>370</b>
<b>Maximum kW .....</b>	<b>370</b>
Maximum kW threshold [2515] .....	370
Maximum kW timer [2516] .....	371
Maximum kW control [2517] .....	371
<b>Minimum kW .....</b>	<b>371</b>
Minimum kW threshold [2512] .....	371
Minimum kW timer [2513] .....	371
Minimum kW control [2514] .....	372
<b>Maximum kW 2 .....</b>	<b>372</b>
Maximum kW threshold 2 [2545] .....	372
Maximum kW timer 2 [2546] .....	372
Maximum kW control 2 [2547] .....	372
<b>Minimum kW 2 .....</b>	<b>373</b>
Minimum kW threshold 2 [2542] .....	373
Minimum kW timer 2 [2543] .....	373
Minimum kW control 2 [2544] .....	373
<b>Maxi kVAR/Mini kVAR .....</b>	<b>373</b>
<b>Maximum kVAR .....</b>	<b>373</b>
Maximum kVAR threshold [2524] .....	373
Maximum kVAR timer [2525] .....	374
Maximum kVAR control [2526] .....	374
<b>Minimum kVar .....</b>	<b>374</b>
Minimum kVAR threshold [2521] .....	374
Minimum kVAR timer [2522] .....	374
Minimum kVAR control [2523] .....	375
<b>Maximum kVAR 2 .....</b>	<b>375</b>
Maximum kVAR threshold 2 [2554] .....	375
Maximum kVAR timer 2 [2555] .....	375
Maximum kVAR control 2 [2556] .....	375
<b>Minimum kVar 2 .....</b>	<b>376</b>
Minimum kVAR threshold 2 [2551] .....	376
Minimum kVAR timer 2 [2552] .....	376



Minimum kVAR control 2 [2553] .....	376
<b>Engine protections .....</b>	<b>377</b>
<b>Speed .....</b>	<b>377</b>
<b>Over speed .....</b>	<b>377</b>
Over speed threshold [2350] .....	377
Over speed timer [2351] .....	377
Over speed control [2352] .....	377
<b>Under speed .....</b>	<b>377</b>
Under speed threshold [2353] .....	377
Under speed timer [2354] .....	378
Under speed control [2355] .....	378
<b>Over speed 2 .....</b>	<b>378</b>
Over speed threshold 2 [2368] .....	378
Over speed timer 2 [2369] .....	378
Over speed control 2 [2370] .....	379
<b>Under speed 2 .....</b>	<b>379</b>
Under speed threshold 2 [2371] .....	379
Under speed timer 2 [2372] .....	379
Under speed control 2 [2373] .....	379
<b>Oil pressure .....</b>	<b>380</b>
<b>Minimum oil pressure .....</b>	<b>380</b>
Oil pressure threshold [2362] .....	380
Oil pressure timer [2363] .....	380
Oil pressure control [2364] .....	380
<b>Minimum oil pressure 2 .....</b>	<b>380</b>
Oil pressure threshold 2 [2380] .....	380
Oil pressure timer 2 [2381] .....	381
Oil pressure control 2 [2382] .....	381
<b>Water temperature .....</b>	<b>381</b>
<b>Maximum water temperature .....</b>	<b>381</b>
Water temperature threshold [2365] .....	381
Water temperature timer [2366] .....	381
Water temperature control [2367] .....	382
<b>Maximum water temperature 2 .....</b>	<b>382</b>
Water temperature threshold 2 [2383] .....	382
Water temperature timer 2 [2384] .....	382
Water temperature control 2 [2385] .....	382
<b>Start sequence .....</b>	<b>383</b>
<b>Out of speed range .....</b>	<b>383</b>
Out of speed range timer [2393] .....	383
Out of speed range control [2394] .....	383
<b>Out of voltage range .....</b>	<b>383</b>
Out of voltage range timer [2395] .....	383

Out of voltage range control [2396] .....	384
<b>Stop sequence .....</b>	<b>384</b>
Fail to stop engine [3471] .....	384
Unexpected stop timer [2203] .....	384
<b>ECU/ECM .....</b>	<b>384</b>
<b>Lamp error .....</b>	<b>384</b>
Control on Malfunction Indicator Lamp [3110] .....	384
Control on Protection Lamp [3111] .....	385
Control on Amber Warning Lamp [3112] .....	385
Control on Red Stop Lamp [3113] .....	385
Control on Combined Alarm Yellow [3121] .....	385
Control on Combined Alarm Red [3122] .....	386
<b>Communication error .....</b>	<b>386</b>
Control on ECU error [3058] .....	386
Timer before ECU error [3116] .....	386
<b>Other protections .....</b>	<b>387</b>
<b>Analog inputs .....</b>	<b>387</b>
<b>Analog input 1 .....</b>	<b>387</b>
Analog input 1 threshold [2600] .....	387
Analog input 1 timer [2601] .....	387
Analog input 1 control [2602] .....	387
Analog input 1 threshold 2 [2603] .....	387
Analog input 1 timer 2 [2604] .....	388
Analog input 1 control 2 [2605] .....	388
Direction analog input 1 protection [2606] .....	388
<b>Analog input 2 .....</b>	<b>388</b>
Analog input 2 threshold [2608] .....	388
Analog input 2 timer [2609] .....	389
Analog input 2 control [2610] .....	389
Analog input 2 threshold 2 [2611] .....	389
Analog input 2 timer 2 [2612] .....	389
Analog input 2 control 2 [2613] .....	390
Direction analog input 2 protection [2614] .....	390
<b>Analog input 3 .....</b>	<b>390</b>
Analog input 3 threshold [2616] .....	390
Analog input 3 timer [2617] .....	390
Analog input 3 control [2618] .....	391
Analog input 3 threshold 2 [2619] .....	391
Analog input 3 timer 2 [2620] .....	391
Analog input 3 control 2 [2621] .....	391
Direction analog input 3 protection [2622] .....	392
<b>Battery .....</b>	<b>392</b>
<b>Maximum battery voltage .....</b>	<b>392</b>

# OPERATOR MANUAL

Max. voltage battery threshold [2359] .....	392
Max. voltage battery timer [2360] .....	392
Max. voltage battery control [2361] .....	392
<b>Minimum battery voltage .....</b>	<b>393</b>
Min. voltage battery threshold [2356] .....	393
Min. voltage battery timer [2357] .....	393
Min. voltage battery control [2358] .....	393
<b>Maximum battery voltage 2 .....</b>	<b>393</b>
Max. voltage battery threshold 2 [2377] .....	393
Max. voltage battery timer 2 [2378] .....	394
Max. voltage battery control 2 [2379] .....	394
<b>Minimum battery voltage 2 .....</b>	<b>394</b>
Min. voltage battery threshold 2 [2374] .....	394
Min. voltage battery timer 2 [2375] .....	394
Min. voltage battery control 2 [2376] .....	395
<b>Boost battery .....</b>	<b>395</b>
Control boost battery [2388] .....	395
Low threshold boost battery [2386] .....	395
High threshold boost battery [2387] .....	395
<b>CANopen .....</b>	<b>396</b>
Control on CANopen error [3059] .....	396
CANopen error timer [3152] .....	396
<b>Mismatch rotophase .....</b>	<b>396</b>
Mismatch rotophases protection control [2397] .....	396
<b>PROGRAMMING .....</b>	<b>397</b>
<b>Hysteresis .....</b>	<b>397</b>
<b>Hysteresis 1 .....</b>	<b>397</b>
Enable Hysteresis 1 [2657] .....	397
Low level threshold [2660] .....	397
Timer on low level threshold [2666] .....	397
High level threshold [2663] .....	397
Timer on high level threshold [2669] .....	398
Hysteresis Direction 1 [2672] .....	398
<b>Hysteresis 2 .....</b>	<b>398</b>
Enable Hysteresis 2 [2658] .....	398
Low level threshold [2661] .....	398
Timer on low level threshold [2667] .....	399
High level threshold [2664] .....	399
Timer on high level threshold [2670] .....	399
Hysteresis Direction 2 [2673] .....	399
<b>Hysteresis 3 .....</b>	<b>400</b>
Enable Hysteresis 3 [2659] .....	400

Low level threshold [2662] .....	400
Timer on low level threshold [2668] .....	400
High level threshold [2665] .....	400
Timer on high level threshold [2671] .....	400
Hysteresis Direction 3 [2674] .....	401
<b>Modbus .....</b>	<b>402</b>
<b>Connection settings .....</b>	<b>402</b>
Enable connection to Modbus server [3031] .....	402
Control on Modbus server timeouts [3030] .....	402
Modbus server frame timeout [3032] .....	402
<b>Modbus rights .....</b>	<b>402</b>
Write date/time [3015.0] .....	402
Write engine meters [3015.1] .....	402
Write input functions [3015.3] .....	402
Reading via Modbus TCP [3015.8] .....	403
Writing via Modbus TCP [3015.9] .....	403
<b>Logger .....</b>	<b>404</b>
<b>Activation .....</b>	<b>404</b>
Activation [3610] .....	404
<b>Variables 1-5 .....</b>	<b>404</b>
<b>Log 1 .....</b>	<b>404</b>
Variable 1 to log [3600] .....	404
Log variable 1 on [3622] .....	404
Logging period variable 1 [3612] .....	405
<b>Log 2 .....</b>	<b>405</b>
Variable 2 to log [3601] .....	405
Log variable 2 on [3623] .....	405
Logging period variable 2 [3613] .....	405
<b>Log 3 .....</b>	<b>406</b>
Variable 3 to log [3602] .....	406
Log variable 3 on [3624] .....	406
Logging period variable 3 [3614] .....	406
<b>Log 4 .....</b>	<b>406</b>
Variable 4 to log [3603] .....	406
Log variable 4 on [3625] .....	407
Logging period variable 4 [3615] .....	407
<b>Log 5 .....</b>	<b>407</b>
Variable 5 to log [3604] .....	407
Log variable 5 on [3626] .....	407
Logging period variable 5 [3616] .....	408
<b>Variables 6-10 .....</b>	<b>408</b>
<b>Log 6 .....</b>	<b>408</b>
Variable 6 to log [3605] .....	408

# OPERATOR MANUAL

Log variable 6 on [3627] .....	408
Logging period variable 6 [3617] .....	408
<b>Log 7 .....</b>	<b>409</b>
Variable 7 to log [3606] .....	409
Log variable 7 on [3628] .....	409
Logging period variable 7 [3618] .....	409
<b>Log 8 .....</b>	<b>409</b>
Variable 8 to log [3607] .....	409
Log variable 8 on [3629] .....	410
Logging period variable 8 [3619] .....	410
<b>Log 9 .....</b>	<b>410</b>
Variable 9 to log [3608] .....	410
Log variable 9 on [3630] .....	410
Logging period variable 9 [3620] .....	411
<b>Log 10 .....</b>	<b>411</b>
Variable 10 to log [3609] .....	411
Log variable 10 on [3631] .....	411
Logging period variable 10 [3621] .....	411
<b>SYSTEM .....</b>	<b>412</b>
<b>LCD display .....</b>	<b>412</b>
<b>Screen saving .....</b>	<b>412</b>
Screensaver timeout [3551] .....	412
<b>Backlight .....</b>	<b>412</b>
Backlight timeout [3552] .....	412
LCD screen backlight [3555] .....	412
LCD screen contrast [3554] .....	412
<b>Date/Time .....</b>	<b>413</b>
Day of the week [10] .....	413
Day [11] .....	413
Month [12] .....	413
Year [13] .....	413
Hours [14] .....	413
Minutes [15] .....	414
<b>Buttons inhibition .....</b>	<b>415</b>
Auto button inhibition [8102.14] .....	415
Test button inhibition [8102.13] .....	415
Man button inhibition [8102.12] .....	415
Start button inhibition [8102.11] .....	415
Stop button inhibition [8102.10] .....	415
Gen breaker button inhibition [8102.9] .....	415
Mains breaker button inhibition [8102.8] .....	415
Fault/Alarm/info button inhibition [8102.7] .....	415

# OPERATOR MANUAL

Esc button inhibition [8102.6] .....	415
Enter button inhibition [8102.5] .....	415
Up arrow button inhibition [8102.4] .....	416
Left arrow button inhibition [8102.3] .....	416
Down arrow button inhibition [8102.2] .....	416
Right arrow button inhibition [8102.1] .....	416
Shift button inhibition [8102.0] .....	416
<b>LIST OF INPUTS .....</b>	<b>417</b>
<b>Generator .....</b>	<b>417</b>
Generator breaker feedback [4501] .....	417
Remote start on load [4502] .....	417
Generator ready [4523] .....	417
Start inhibition [4524] .....	417
Override (NFE37312) [4610] .....	417
Remote start off load [4611] .....	417
Remote start with timer [4612] .....	418
<b>Mains .....</b>	<b>419</b>
Mains breaker feedback [4500] .....	419
Manual mains back [4544] .....	419
Mains failure [4638] .....	419
Mains available [4642] .....	419
<b>Engine .....</b>	<b>420</b>
Preglow request [4534] .....	420
<b>Inputs/outputs .....</b>	<b>421</b>
Digital output 1 forced [4630] .....	421
Digital output 2 forced [4631] .....	421
Digital output 3 forced [4632] .....	421
Digital output 4 forced [4633] .....	421
Digital output 5 forced [4634] .....	421
Digital output 6 forced [4635] .....	421
Relay 1 forced [4950] .....	421
Relay 2 forced [4951] .....	421
<b>Power Plant .....</b>	<b>422</b>
External non essential trip request [4537] .....	422
<b>Engine protections .....</b>	<b>423</b>
Oil pressure fault [4503] .....	423
Coolant temperature fault [4504] .....	423
<b>Alarms/faults .....</b>	<b>424</b>
Emergency stop [4505] .....	424
Generator fault request (Trip) [4507] .....	424
Mains fault request [4508] .....	424
Remote hard shut down [4525] .....	424

Remote soft shut down [4526] .....	424
Remote alarm [4527] .....	424
<b>Alternative selections .....</b>	<b>425</b>
Alternative selection 1 [4594] .....	425
Alternative selection 2 [4595] .....	425
Alternative selection 3 [4596] .....	425
Alternative selection 4 [4597] .....	425
Alternative selection 5 [4598] .....	425
Alternative selection 6 [4599] .....	425
Alternative selection 7 [4600] .....	425
Alternative selection 8 [4601] .....	425
Alternative selection 9 [4602] .....	425
Alternative selection 10 [4603] .....	426
Alternative selection 11 [4604] .....	426
Alternative selection 12 [4605] .....	426
Alternative selection 13 [4606] .....	426
Alternative selection 14 [4607] .....	426
Alternative selection 15 [4608] .....	426
Alternative selection 16 [4609] .....	426
<b>Hysteresis .....</b>	<b>427</b>
Hysteresis low threshold DI1 [4614] .....	427
Hysteresis low threshold DI2 [4615] .....	427
Hysteresis low threshold DI3 [4616] .....	427
Hysteresis low threshold DI4 [4617] .....	427
Hysteresis low threshold DI5 [4618] .....	427
Hysteresis low threshold DI6 [4619] .....	427
Hysteresis low threshold DI7 [4620] .....	427
Hysteresis low threshold DI8 [4621] .....	427
Hysteresis high threshold DI1 [4622] .....	427
Hysteresis high threshold DI2 [4623] .....	427
Hysteresis high threshold DI3 [4624] .....	428
Hysteresis high threshold DI4 [4625] .....	428
Hysteresis high threshold DI5 [4626] .....	428
Hysteresis high threshold DI6 [4627] .....	428
Hysteresis high threshold DI7 [4628] .....	428
Hysteresis high threshold DI8 [4629] .....	428
<b>Remote buttons .....</b>	<b>429</b>
Remote faults reset [4506] .....	429
Manual start request [4509] .....	429
Manual stop request [4510] .....	429
Manual mode request [4511] .....	429
Manual mode inhibition [4512] .....	429
Auto mode request [4513] .....	429

## OPERATOR MANUAL

Generator breaker opening in manual mode [4518] .....	429
Mains breaker opening in manual mode [4519] .....	429
Generator breaker closing in manual mode [4520] .....	429
Mains breaker closing in manual mode [4521] .....	430
Stop horn [4530] .....	430
Led test [4580] .....	430
Test mode request [4590] .....	430

### **LIST OF OUTPUTS ..... 431**

#### **Commands ..... 431**

Starter n°1 [4652] .....	431
Starter n°2 [4653] .....	431
Starter n°3 [4654] .....	431
Fuel / Gas [4655] .....	431
Horn [4663] .....	431
Energize to stop [4674] .....	431
Generator breaker close [4675] .....	431
Mains breaker close [4676] .....	431
Generator breaker open [4677] .....	432
Mains breaker open [4678] .....	432
Excitation command [4680] .....	432
Pre-start (Glow plugs & Auxiliaries) [4685] .....	432
Smoke limit / Position limiting [4686] .....	432
Damper [4687] .....	432
Cooling fan [4688] .....	432
1st non essential trip [4689] .....	432
2nd non essential trip [4690] .....	432
3rd non essential trip [4691] .....	433
4th non essential trip [4692] .....	433
5th non essential trip [4693] .....	433
Idle speed [4704] .....	433
Ignition [4707] .....	433
Battery boost DO [4709] .....	433
Faults reset [4737] .....	433

#### **Generator ..... 434**

Fail to close generator breaker [4154] .....	434
Fail to open generator breaker [4155] .....	434
Generator breaker open suddenly [4156] .....	434
Generator breaker close suddenly [4170] .....	434
Fail to stabilize speed [4477] .....	434
Fail to stabilize voltage [4478] .....	434
Generator breaker state [4650] .....	434
Generator ready [4670] .....	434



# OPERATOR MANUAL

Generator ready and breaker closed [4672] .....	435
Generator stop [4673] .....	435
<b>Mains .....</b>	<b>436</b>
Fail to close mains breaker [4157] .....	436
Fail to open mains breaker [4158] .....	436
Mains breaker open suddenly [4159] .....	436
Mains breaker close suddenly [4171] .....	436
Mains breaker state [4651] .....	436
Bus/Mains voltage presence [4703] .....	436
<b>Engine .....</b>	<b>437</b>
Unexpected stop [4451] .....	437
Fail to stop engine [4472] .....	437
Fail to start engine [4475] .....	437
<b>CAN bus ECU/ECM .....</b>	<b>438</b>
Protection Lamp [658] .....	438
Amber Warning Lamp [659] .....	438
Red Stop Lamp [660] .....	438
Malfunction Indicator Lamp [661] .....	438
MDEC module is alive [1200] .....	438
MDEC module communication error [1201] .....	438
Combined Alarm Yellow [1213] .....	438
Combined Alarm Red [1214] .....	438
<b>Inputs/outputs .....</b>	<b>439</b>
Input 1 (Customisable) [250] .....	439
Input 2 (Customisable) [251] .....	439
Input 3 (Customisable) [252] .....	439
Input 4 (Customisable) [253] .....	440
Input 5 (Customisable) [254] .....	440
Input 6 (Customisable) [255] .....	440
Input 7 (Customisable) [256] .....	441
Input 8 (Customisable) [257] .....	441
Input 9 (Customisable) [258] .....	441
Analog 1 (Customisable) [259] .....	441
Analog 2 (Customisable) [260] .....	441
Analog 3 (Customisable) [261] .....	442
Physical status of digital input 1 [953.0] .....	442
Physical status of digital input 2 [953.1] .....	442
Physical status of digital input 3 [953.2] .....	442
Physical status of digital input 4 [953.3] .....	442
Physical status of digital input 5 [953.4] .....	442
Physical status of digital input 6 [953.5] .....	442
Physical status of digital input 7 [953.6] .....	442
Physical status of digital input 8 [953.7] .....	442

Physical status of digital input 9 [953.8] .....	443
Output 1 (Customisable) [4350] .....	443
Output 2 (Customisable) [4351] .....	443
Output 3 (Customisable) [4352] .....	443
Output 4 (Customisable) [4353] .....	443
Output 5 (Customisable) [4354] .....	443
Output 6 (Customisable) [4355] .....	443
Relay 1 (Customisable) [4356] .....	443
Relay 2 (Customisable) [4357] .....	443
<b>I/O CAN bus expansion .....</b>	<b>444</b>
CANopen DI 1 (Customisable) [800] .....	444
CANopen DI 2 (Customisable) [801] .....	444
CANopen DI 3 (Customisable) [802] .....	444
CANopen DI 4 (Customisable) [803] .....	444
CANopen DI 5 (Customisable) [804] .....	444
CANopen DI 6 (Customisable) [805] .....	444
CANopen DI 7 (Customisable) [806] .....	444
CANopen DI 8 (Customisable) [807] .....	444
CANopen DI 9 (Customisable) [808] .....	444
CANopen DI 10 (Customisable) [809] .....	444
CANopen DI 11 (Customisable) [810] .....	445
CANopen DI 12 (Customisable) [811] .....	445
CANopen DI 13 (Customisable) [812] .....	445
CANopen DI 14 (Customisable) [813] .....	445
CANopen DI 15 (Customisable) [814] .....	445
CANopen DI 16 (Customisable) [815] .....	445
CANopen DI 17 (Customisable) [816] .....	445
CANopen DI 18 (Customisable) [817] .....	445
CANopen DI 19 (Customisable) [818] .....	445
CANopen DI 20 (Customisable) [819] .....	445
CANopen DI 21 (Customisable) [820] .....	445
CANopen DI 22 (Customisable) [821] .....	446
CANopen DI 23 (Customisable) [822] .....	446
CANopen DI 24 (Customisable) [823] .....	446
CANopen DI 25 (Customisable) [824] .....	446
CANopen DI 26 (Customisable) [825] .....	446
CANopen DI 27 (Customisable) [826] .....	446
CANopen DI 28 (Customisable) [827] .....	446
CANopen DI 29 (Customisable) [828] .....	446
CANopen DI 30 (Customisable) [829] .....	446
CANopen DI 31 (Customisable) [830] .....	446
CANopen DI 32 (Customisable) [831] .....	446
CANopen DI 33 (Customisable) [1250] .....	447

## OPERATOR MANUAL

CANopen DI 34 (Customisable) [1251] .....	447
CANopen DI 35 (Customisable) [1252] .....	447
CANopen DI 36 (Customisable) [1253] .....	447
CANopen DI 37 (Customisable) [1254] .....	447
CANopen DI 38 (Customisable) [1255] .....	447
CANopen DI 39 (Customisable) [1256] .....	447
CANopen DI 40 (Customisable) [1257] .....	447
CANopen DI 41 (Customisable) [1258] .....	447
CANopen DI 42 (Customisable) [1259] .....	447
CANopen DI 43 (Customisable) [1260] .....	447
CANopen DI 44 (Customisable) [1261] .....	448
CANopen DI 45 (Customisable) [1262] .....	448
CANopen DI 46 (Customisable) [1263] .....	448
CANopen DI 47 (Customisable) [1264] .....	448
CANopen DI 48 (Customisable) [1265] .....	448
CANopen DI 49 (Customisable) [1266] .....	448
CANopen DI 50 (Customisable) [1267] .....	448
CANopen DI 51 (Customisable) [1268] .....	448
CANopen DI 52 (Customisable) [1269] .....	448
CANopen DI 53 (Customisable) [1270] .....	448
CANopen DI 54 (Customisable) [1271] .....	448
CANopen DI 55 (Customisable) [1272] .....	449
CANopen DI 56 (Customisable) [1273] .....	449
CANopen DI 57 (Customisable) [1274] .....	449
CANopen DI 58 (Customisable) [1275] .....	449
CANopen DI 59 (Customisable) [1276] .....	449
CANopen DI 60 (Customisable) [1277] .....	449
CANopen DI 61 (Customisable) [1278] .....	449
CANopen DI 62 (Customisable) [1279] .....	449
CANopen DI 63 (Customisable) [1280] .....	449
CANopen DI 64 (Customisable) [1281] .....	449
CANopen DO 1 (Customisable) [4751] .....	449
CANopen DO 2 (Customisable) [4752] .....	450
CANopen DO 3 (Customisable) [4753] .....	450
CANopen DO 4 (Customisable) [4754] .....	450
CANopen DO 5 (Customisable) [4755] .....	450
CANopen DO 6 (Customisable) [4756] .....	450
CANopen DO 7 (Customisable) [4757] .....	450
CANopen DO 8 (Customisable) [4758] .....	450
CANopen DO 9 (Customisable) [4759] .....	450
CANopen DO 10 (Customisable) [4760] .....	450
CANopen DO 11 (Customisable) [4761] .....	450
CANopen DO 12 (Customisable) [4762] .....	450

## OPERATOR MANUAL

CANopen DO 13 (Customisable) [4763]	451
CANopen DO 14 (Customisable) [4764]	451
CANopen DO 15 (Customisable) [4765]	451
CANopen DO 16 (Customisable) [4766]	451
CANopen DO 17 (Customisable) [4767]	451
CANopen DO 18 (Customisable) [4768]	451
CANopen DO 19 (Customisable) [4769]	451
CANopen DO 20 (Customisable) [4770]	451
CANopen DO 21 (Customisable) [4771]	451
CANopen DO 22 (Customisable) [4772]	451
CANopen DO 23 (Customisable) [4773]	451
CANopen DO 24 (Customisable) [4774]	452
CANopen DO 25 (Customisable) [4775]	452
CANopen DO 26 (Customisable) [4776]	452
CANopen DO 27 (Customisable) [4777]	452
CANopen DO 28 (Customisable) [4778]	452
CANopen DO 29 (Customisable) [4779]	452
CANopen DO 30 (Customisable) [4780]	452
CANopen DO 31 (Customisable) [4781]	452
CANopen DO 32 (Customisable) [4782]	452
CANopen DO 33 (Customisable) [5100]	452
CANopen DO 34 (Customisable) [5101]	452
CANopen DO 35 (Customisable) [5102]	453
CANopen DO 36 (Customisable) [5103]	453
CANopen DO 37 (Customisable) [5104]	453
CANopen DO 38 (Customisable) [5105]	453
CANopen DO 39 (Customisable) [5106]	453
CANopen DO 40 (Customisable) [5107]	453
CANopen DO 41 (Customisable) [5108]	453
CANopen DO 42 (Customisable) [5109]	453
CANopen DO 43 (Customisable) [5110]	453
CANopen DO 44 (Customisable) [5111]	453
CANopen DO 45 (Customisable) [5112]	453
CANopen DO 46 (Customisable) [5113]	454
CANopen DO 47 (Customisable) [5114]	454
CANopen DO 48 (Customisable) [5115]	454
CANopen DO 49 (Customisable) [5116]	454
CANopen DO 50 (Customisable) [5117]	454
CANopen DO 51 (Customisable) [5118]	454
CANopen DO 52 (Customisable) [5119]	454
CANopen DO 53 (Customisable) [5120]	454
CANopen DO 54 (Customisable) [5121]	454
CANopen DO 55 (Customisable) [5122]	454

## OPERATOR MANUAL

CANopen DO 56 (Customisable) [5123]	454
CANopen DO 57 (Customisable) [5124]	455
CANopen DO 58 (Customisable) [5125]	455
CANopen DO 59 (Customisable) [5126]	455
CANopen DO 60 (Customisable) [5127]	455
CANopen DO 61 (Customisable) [5128]	455
CANopen DO 62 (Customisable) [5129]	455
CANopen DO 63 (Customisable) [5130]	455
CANopen DO 64 (Customisable) [5131]	455
<b>Generator protections</b>	<b>456</b>
Mismatch rotophases level 1 [4053.0]	456
Mismatch rotophases level 2 [4053.1]	456
Minimum AVR output level 2 [4211.1]	456
Maximum AVR output level 1 [4212.0]	456
Maximum AVR output level 2 [4212.1]	456
Generator over frequency level 1 [4250.0]	456
Generator over frequency level 2 [4250.1]	456
Generator under frequency level 1 [4251.0]	456
Generator under frequency level 2 [4251.1]	456
Generator over voltage level 1 [4252.0]	456
Generator over voltage level 2 [4252.1]	457
Generator under voltage level 1 [4253.0]	457
Generator under voltage level 2 [4253.1]	457
Generator minimum KW level 1 [4254.0]	457
Generator minimum KW level 2 [4254.1]	457
Generator maximum KW level 1 [4255.0]	457
Generator maximum KW level 2 [4255.1]	457
Generator reverse KW level 1 [4256.0]	457
Generator reverse KW level 2 [4256.1]	457
Generator minimum KVAR level 1 [4257.0]	457
Generator minimum KVAR level 2 [4257.1]	457
Generator maximum KVAR level 1 [4258.0]	458
Generator maximum KVAR level 2 [4258.1]	458
Generator reverse KVAR level 1 [4259.0]	458
Generator reverse KVAR level 2 [4259.1]	458
Generator maximum current level 1 [4260.0]	458
Generator maximum current level 2 [4260.1]	458
Generator maximum neutral current level 1 [4261.0]	458
Generator maximum neutral current level 2 [4261.1]	458
Generator short-circuit level 1 [4262.0]	458
Generator short-circuit level 2 [4262.1]	458
Generator earth fault current level 1 [4267.0]	458
Generator earth fault current level 2 [4267.1]	459

# OPERATOR MANUAL

Generator voltage unbalance level 1 [4268.0] .....	459
Generator voltage unbalance level 2 [4268.1] .....	459
Generator current unbalance level 1 [4269.0] .....	459
Generator current unbalance level 2 [4269.1] .....	459
Generator rotophase level 1 [4272.0] .....	459
Generator rotophase level 2 [4272.1] .....	459
<b>Mains protections .....</b>	<b>460</b>
Mains over frequency level 1 [4300.0] .....	460
Mains over frequency level 2 [4300.1] .....	460
Mains under frequency level 1 [4301.0] .....	460
Mains under frequency level 2 [4301.1] .....	460
Mains over voltage level 1 [4302.0] .....	460
Mains over voltage level 2 [4302.1] .....	460
Mains under voltage level 1 [4303.0] .....	460
Mains under voltage level 2 [4303.1] .....	460
Mains minimum KW level 1 [4304.0] .....	460
Mains minimum KW level 2 [4304.1] .....	460
Mains maximum KW level 1 [4305.0] .....	461
Mains maximum KW level 2 [4305.1] .....	461
Mains reverse KW level 1 [4306.0] .....	461
Mains reverse KW level 2 [4306.1] .....	461
Mains minimum KVAR level 1 [4307.0] .....	461
Mains minimum KVAR level 2 [4307.1] .....	461
Mains maximum KVAR level 1 [4308.0] .....	461
Mains maximum KVAR level 2 [4308.1] .....	461
Mains reverse KVAR level 1 [4309.0] .....	461
Mains reverse KVAR level 2 [4309.1] .....	461
Mains voltage unbalance level 1 [4314.0] .....	461
Mains voltage unbalance level 2 [4314.1] .....	462
Mains rotophase level 1 [4318.0] .....	462
Mains rotophase level 2 [4318.1] .....	462
<b>Engine protections .....</b>	<b>463</b>
Engine over speed level 1 [4200.0] .....	463
Engine over speed level 2 [4200.1] .....	463
Engine under speed level 1 [4201.0] .....	463
Engine under speed level 2 [4201.1] .....	463
Battery minimum voltage level 1 [4202.0] .....	463
Battery minimum voltage level 2 [4202.1] .....	463
Battery maximum voltage level 1 [4203.0] .....	463
Battery maximum voltage level 2 [4203.1] .....	463
Engine minimum oil pressure level 1 [4204.0] .....	463
Engine minimum oil pressure level 2 [4204.1] .....	463
Engine maximum water temperature level 1 [4205.0] .....	464

# OPERATOR MANUAL

Engine maximum water temperature level 2 [4205.1] .....	464
Minimum speed output level 2 [4209.1] .....	464
Maximum speed output level 1 [4210.0] .....	464
Maximum speed output level 2 [4210.1] .....	464
<b>Communication .....</b>	<b>465</b>
J1939 Fault [650] .....	465
Modbus server (Customisable) [904] .....	465
CANopen fault [4750] .....	465
<b>Statuses .....</b>	<b>466</b>
Phase sequence match [306] .....	466
Engine start [4006] .....	466
Production request [4007] .....	466
Generator electrical fault summary [4656] .....	466
Mains electrical fault summary [4657] .....	466
Alarms summary [4658] .....	466
Soft shut down summary [4659] .....	466
Hard shut down summary [4660] .....	466
Default LED [4664] .....	466
Alarm LED [4665] .....	467
Auto mode LED [4666] .....	467
Test mode LED [4667] .....	467
Manu mode LED [4668] .....	467
Generator LED [4669] .....	467
Protection validation [4681] .....	467
Override ON (Fault is currently inhibited) [4708] .....	467
Mains failure summary [4731] .....	467
Generator breaker LED [4734] .....	467
Mains breaker LED [4735] .....	467
Mains LED [4736] .....	468
<b>Hysteresis .....</b>	<b>469</b>
Hysteresis 1 output [4710] .....	469
Hysteresis 2 output [4711] .....	469
Hysteresis 3 output [4712] .....	469
Hysteresis output activation on DI1 [4713] .....	469
Hysteresis output activation on DI2 [4714] .....	469
Hysteresis output activation on DI3 [4715] .....	469
Hysteresis output activation on DI4 [4716] .....	469
Hysteresis output activation on DI5 [4717] .....	469
Hysteresis output activation on DI6 [4718] .....	469
Hysteresis output activation on DI7 [4719] .....	470
Hysteresis output activation on DI8 [4720] .....	470
<b>Remote buttons .....</b>	<b>471</b>
Shift button [951.0] .....	471

## OPERATOR MANUAL

Right arrow button [951.1] .....	471
Down arrow button [951.2] .....	471
Left arrow button [951.3] .....	471
Up arrow button [951.4] .....	471
Enter button [951.5] .....	471
Esc button [951.6] .....	471
Fault/Alarm/info button [951.7] .....	471
Mains breaker button [951.8] .....	471
Generator breaker button [951.9] .....	471
Stop button [951.10] .....	472
Start button [951.11] .....	472
Man button [951.12] .....	472
Test button [951.13] .....	472
Auto button [951.14] .....	472



## GENERAL

### APPLICATION

#### General

<b>Variable</b>	Application type [2022]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	1: Two positions transfer switch (I - II) without transfer delay 2: Transfer switch with transfer delay (I - OFF - II) 3: Automatic start module (Mains monitoring and control is inhibited)
<b>Description</b>	<p>This parameter is used to select the type of application (see details and the image below):</p> <p>1- Two source positions (I - II) transfer switch without switching delay. Source selection in manual is done by pressing the corresponding source button.</p> <p>2- Transfer switch between normal utility power source and emergency power source with switching delay (I - 0 -II) adjustable (see parameter [2007] to modify the delay). Used in the case of Automatic Transfer Switches with delayed transfer or when the transfer switch is controlled by two independent circuit breakers. In manual each sources O/C position is controlled independently with the corresponding button.</p> <p>3- Mains power is not monitored (inhibition of Mains failure) and MCB command is disabled. Automatic GCB command is optional. if not used, remove the generator breaker feedback function from the logical inputs settings.</p>

<b>Variable</b>	Load CT location [2034]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Generator 1: Load
<b>Description</b>	<p>This parameter indicates where the current transformers are located. 2 choices are possible:</p> <ul style="list-style-type: none"> <li>- Generator: The current transformer is on the generator. In this case, it is necessary to have a current transformer on the mains to measure the mains current.</li> <li>- Load: The current transformer is on the load. The product can determine the current, active power and reactive power of each source, whether the load is on the generator or on the mains.</li> </ul>

## OPERATOR MANUAL

<b>Variable</b>	Load CT ratio [2035]
<b>Unit</b>	-
<b>Init value</b>	200.0
<b>Min value</b>	0.1
<b>Max value</b>	3250.0
<b>Description</b>	<p>This setpoint adjusts the CT ratio to adapt load current measurement on the module. This setpoint is calculated with load power current / current measurement on the controller. Globally, standard current measurement will be 5A or 1A on CT secondary.</p> <p>Example : Current on load 1000A / current on controller 5A : value of CT ratio = <math>1000/5 = 200</math>.</p> <p>This CT ratio can be calculated or indicated on the step down current measurement transformer.</p>

<b>Variable</b>	Connection type [2003]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	<p>0: Monophase            1: Biphase 180°            2: Triphase 120° (3 or 4 wires)            3: Triphase L1-N-L2            4: Triphase L2-N-L3            5: Triphase L3-N-L1</p>
<b>Description</b>	<p>This parameter is used to select the voltage system that will be applied to all the voltage sources managed by the product. 6 values can be selected:</p> <ul style="list-style-type: none"> <li>- Single phase: Connection of one active phase and one neutral. Connect the voltages on terminals L1-N. Connect the currents on I1-IN.</li> <li>- Two phase 180°: Connection of 2 active phases (and an optional neutral). Connect the voltages to terminals L1-L3 (and optional N). Connect the currents to I1-I3-IN. If the neutral is not connected to the voltage terminal block, the product will calculate a virtual neutral by itself.</li> <li>- Three-phase 120°: Connection of 3 active phases (and an optional neutral). Connect the voltages on terminals L1-L2-L3 (and optional N). Connect the currents to I1-I2-I3-IN. If the neutral is not connected to the voltage terminal block, the product will calculate a virtual neutral by itself.</li> <li>- Three-phase L1-N-L2: Connection of 3 active phases and a neutral. High leg on L3, neutral between L1 and L2. The neutral must be connected.</li> <li>- Three-phase L2-N-L3: Connection of 3 active phases and a neutral. High leg on L1, neutral between L2 and L3. The neutral must be connected.</li> <li>- Three-phase L3-N-L1: Connection of 3 active phases and a neutral. High leg on L2, neutral between L3 and L1. The neutral must be connected.</li> </ul>

## Mode

<b>Variable</b>	Power on mode [2012]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Manual 1: Test 2: Auto
<b>Description</b>	This parameter is used to select the mode of the product when the power supply is applied. 3 values can be used : - Manual : The product will switch-on on Manual mode - Test : The product will switch-on on Test mode - Auto : The product will switch-on on Auto mode

<b>Variable</b>	Test mode operation [2014]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: On load 1: Off load 2: On load with timer
<b>Description</b>	This parameter is used to select the actions for test mode on the product. 3 values can be used : - On load : The generator(s) start(s) and the breaker(s) close(s) to take the load. - Off load : The generator(s) start(s) but the breaker does not close. - On load with timer :The generator start, run without load during a configurable timer, and the breaker closes.

<b>Variable</b>	Limited time test mode [2015]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter is used to activate an operation delay in test mode. During this timer, the test mode is activated. At the end of this timer, the product will be forced on auto mode and the generator will stop if there is no active remote start.

<b>Variable</b>	Test mode duration [2016]
<b>Unit</b>	s
<b>Init value</b>	600
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	This parameter allows you to set the time for which the product will remain in test mode if the limited time test mode has been activated.

## TIMERS

## Start sequence

<b>Variable</b>	Pre-start timer (Glow plugs & Auxiliaries) [3456]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This timer determines how long the Pre-Start output will remain active. This output can be used to activate the glow plugs or any auxiliary functions of Pre-Start (water preheating, pre-lubrication, etc.).

<b>Variable</b>	Engine preheat timer (Idle or Nominal speed) [3467]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Engine preheat timer without load. During the entire engine preheat time, the engine can run at nominal speed or at idle: See page Engine / Start/Stop.

<b>Variable</b>	Speed stabilization timer [3469]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time during which the speed must remain stable between 95 and 105% of nominal before continuing the engine sequence. By default, the speed must remain stable for 3s between 95 and 105% of nominal. Not to be confused with the maximum time (available in the protection pages) at the end of which the product will stop the engine if the speed has not stabilized.

## OPERATOR MANUAL

<b>Variable</b>	Voltage stabilization timer [2056]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time during which the voltage must remain stable between 95 and 105% of nominal before continuing the engine sequence. By default, the voltage must remain stable for 3s between 95 and 105% of nominal. Not to be confused with the maximum time (available in the protection pages) at the end of which the product will stop the engine if the voltage has not stabilized.

<b>Variable</b>	Delay before activation of the protections [2004]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Waiting time before activating the protections once the engine is ready. By default, the time delay is 10s, i.e. the protections will be activated 10 seconds after the stabilization in voltage of the generator which is the last phase of the engine sequence.

<b>Variable</b>	Off load timer (Only for start with timer) [3478]
<b>Unit</b>	s
<b>Init value</b>	1800.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	This delay is used during a start on load with delay, either by activating a digital input configured as "Start on load with delay" in auto mode, or by using the test mode by having configured the product to do a "Start on load with delay" test. It corresponds to the waiting time between the end of the engine sequence and the closure of the generator breaker.

### Stop sequence

<b>Variable</b>	Cooling timer (Idle or Nominal speed) [3470]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time delay for the engine to cool down after the stop request. While the engine is cooling down, the engine can run at nominal speed or at idle: See page Engine / Start/Stop.

<b>Variable</b>	Energize to stop hold timer [3472]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Holding time of the energize to stop output after the speed measurement has reached zero.

## Gas

<b>Variable</b>	Time before ignition [3480]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Time during which the starter is active without ignition

<b>Variable</b>	Ignition time on start [3481]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Ignition activation time at engine start

<b>Variable</b>	Ignition time on stop [3482]
<b>Unit</b>	s
<b>Init value</b>	4.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Ignition activation time at engine stop

## Static paralleling

<b>Variable</b>	Waiting for deexcitation timer [2051]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	In the case of operation in static paralleling, if the generator circuit breaker has just opened, and the automatic control system wants to put the generator back on the busbar, either because the generator was in the stop phase and the production request has been reactivated, or because the automated system has opened the circuit breaker and is trying to close it again following the tripping of a protection configured as an electrical fault, then, if there is no voltage on the busbar, the automated system will try to de-energize the alternator for the time configured in this time delay in order to restart a static paralleling sequence. If the alternator fails to de-energize, the automated system will apply the standard sequence, without static paralleling.

## Others

<b>Variable</b>	Horn timer [2478]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Duration of activation of the horn which is activated each time an alarm or fault occurs on the product. The value 0 means that the horn will sound until the alarms/faults on the product are manually acknowledged.

## Mains timers

<b>Variable</b>	Mains back timer [2009]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Waiting time between the moment when the mains returns (no longer any protection configured as mains failure is active) and the moment when the sequence to return to the mains is started.

## OPERATOR MANUAL

<b>Variable</b>	Change over timer [2007]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	999.9
<b>Description</b>	This timer corresponds to the waiting time between the opening of the generator/bus breaker and the closing of the mains breaker or vice versa.



## CAN

### CAN 1

<b>Variable</b>	CAN 1 baud rate [3050]
<b>Unit</b>	-
<b>Init value</b>	125
<b>List</b>	125: 125 kBit/s 250: 250 kBit/s 500: 500 kBit/s 1000: 1000 kBit/s
<b>Description</b>	CAN bus speed 1: - Used for communication between products with the proprietary CRE protocol (Only for communicating products). - Used for the connection of inputs/outputs with the CANopen protocol when the MTU MDEC protocol is activated on CAN 2 (Only for products with engine control). Higher speed results in a reduction of the maximum bus distance.

### CAN 2

<b>Variable</b>	CAN 2 baud rate [3051]
<b>Unit</b>	-
<b>Init value</b>	125
<b>List</b>	125: 125 kBit/s 250: 250 kBit/s 500: 500 kBit/s 1000: 1000 kBit/s
<b>Description</b>	CAN bus speed 2: - Used for connecting inputs/outputs with the CANopen protocol (Except when using the MDEC protocol, in which case the CANopen inputs/outputs must be connected to CAN 1). If the J1939 protocol is disabled, this parameter determines the communication speed of the CAN 2 bus. - Used for the communication between the product and the ECU with the J1939 protocol (Only for products with engine control). When the J1939 protocol is enabled, the CAN 2 bus speed is forced to 250kb/s. This parameter will not impact the bus speed. - Used for the communication between the product and the ECU with the MDEC protocol (Only for products with engine control). When the MDEC protocol is enabled, the CAN 2 bus speed is forced to 125kb/s. This parameter will not impact the bus speed. A higher speed results in a reduction of the maximum bus distance.

## EVENTS

<b>Variable</b>	Record power up [8300]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records controller power up event

<b>Variable</b>	Record engine status (Start/Stop) [8301]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records engine start and stop events

<b>Variable</b>	Record mains status [8302]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records mains failure and mains back events

<b>Variable</b>	Record circuit breaker status (Open/Closed) [8303]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records breaker closing and opening events

<b>Variable</b>	Record operating mode [8304]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: No 1: Yes
<b>Description</b>	Records controller mode switching events (automatic, test, manual)

## METERS

### Generator meters

<b>Variable</b>	Generator KWh [79]
<b>Unit</b>	kWh
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Generator kWh (lower bytes)

<b>Variable</b>	Generator KVARh [81]
<b>Unit</b>	kVARh
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Generator kVARH (lower bytes)

<b>Variable</b>	Number of hours generator running [83]
<b>Unit</b>	h
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Generator run hours (lower bytes)

<b>Variable</b>	Number of generator starts [78]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	Number of starts (only information)

<b>Variable</b>	Number of hours in override mode [96]
<b>Unit</b>	h
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Running hours in override mode (lower bytes)

## Mains meters

<b>Variable</b>	Mains kWh [120]
<b>Unit</b>	kWh
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Mains kWh (lower bytes)

<b>Variable</b>	Mains kVARh energy [122]
<b>Unit</b>	kVARh
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	4294967295
<b>Description</b>	Mains kVARH (lower bytes)

**ELECTRICAL****GENERATOR****General**

<b>Variable</b>	Nominal active power [2105]
<b>Unit</b>	kW
<b>Init value</b>	300
<b>Min value</b>	1
<b>Max value</b>	32500
<b>Description</b>	This parameter is used to set the nominal active power (kW). All the protections based on the active power and the control loops are calculated as a percentage of this value.

<b>Variable</b>	Nominal reactive power [2106]
<b>Unit</b>	kVAR
<b>Init value</b>	220
<b>Min value</b>	1
<b>Max value</b>	32500
<b>Description</b>	This parameter is used to set the nominal reactive power (kVAR). All the protections based on the reactive power and the control loops are calculated as a percentage of this value.

<b>Variable</b>	Nominal voltage [2102]
<b>Unit</b>	V
<b>Init value</b>	400
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	<p>This parameter is used to set the nominal voltage:</p> <ul style="list-style-type: none"> <li>- Three-phase and two-phase: Enter a phase-to-phase voltage.</li> <li>- Single-phase: Enter a phase-to-neutral voltage.</li> </ul> <p>All the protections based on the voltage as well as the control loops are calculated as a percentage of this value. For low voltage (400VAC, 440VAC, 480VAC, etc...) or high voltage (20.000VAC, 33.000VAC, etc...) applications, this variable must be adjusted.</p>

## OPERATOR MANUAL

<b>Variable</b>	Nominal frequency [2153]
<b>Unit</b>	Hz
<b>Init value</b>	50.00
<b>Min value</b>	0.00
<b>Max value</b>	100.00
<b>Description</b>	This parameter is used to set the nominal frequency. All the protections based on the frequency as well as the control loops are calculated as a percentage of this value. For 50 or 60 Hz applications, this variable must be adjusted.

<b>Variable</b>	PT ratio [2100]
<b>Unit</b>	-
<b>Init value</b>	1.00
<b>Min value</b>	0.00
<b>Max value</b>	655.35
<b>Description</b>	This parameter allows you to set the ratio between the voltage present on the busbar and the voltage connected to the module. Example: Busbar voltage 20.000Vac / Voltage connected to the module 100 Vac: PT ratio value = $20.000/100 = 200$ . This PT ratio can be calculated or is indicated on the measuring transformers.

<b>Variable</b>	CT ratio [2101]
<b>Unit</b>	-
<b>Init value</b>	200.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	This parameter is used to set the ratio between the current on the busbar and the current connected to the module. Example: Busbar current 1000A / Current connected to the module 5A: CT ratio value = $1000/5 = 200$ . This CT ratio can be calculated or is indicated on the measuring current transformers.

## Static paralleling

<b>Variable</b>	Static paralleling [2050]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	<p>This parameter is used to enable static paralleling. 2 values can be selected:</p> <ul style="list-style-type: none"> <li>- No: Standard operation           <ol style="list-style-type: none"> <li>1/ Generator starts with its excitation.</li> <li>2/ Breaker closes with or without synchronization depending of the voltage on the busbar.</li> </ol> </li> <li>- Yes: Static paralleling is activated           <ol style="list-style-type: none"> <li>1/ Breaker(s) close(s).</li> <li>2/ Generator(s) start(s) without excitation.</li> <li>3/ Excitation is activated (on all generators at the same time in case of a power-plant).</li> </ol> </li> </ul>

## MAINS

<b>Variable</b>	Mains kW measure type [2155]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: CT 1: mA - Analog 1 2: mA - Analog 2 3: mA - Analog 3 4: Unused
<b>Description</b>	This parameter is used to determine how the mains active power will be measured. 5 values can be selected: - CT : The mains power will be measured with a current transformer. Earth fault protection not available. - mA - Analog 1 : The mains power will be measured with a 4-20mA converter signal connected to analog input 1. Earth fault protection available. - mA - Analog 2: The mains power will be measured with a 4-20mA converter signal connected to analog input 2. Earth fault protection available. - mA - Analog 3: The mains power will be measured with a 4-20mA converter signal connected to analog input 3. Earth fault protection available. - Not used: No measurement of mains active power. Earth fault protection available.

<b>Variable</b>	Nominal voltage [2152]
<b>Unit</b>	V
<b>Init value</b>	400
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	This parameter is used to set the nominal voltage: - Three-phase and two-phase: Enter a phase-to-phase voltage. - Single-phase: Enter a phase-to-neutral voltage.  All the protections based on the voltage are calculated as a percentage of this value. For low voltage (400VAC, 440VAC, 480VAC, etc...) or high voltage (20.000VAC, 33.000VAC, etc...) applications, this variable must be adjusted.

<b>Variable</b>	Nominal frequency [2153]
<b>Unit</b>	Hz
<b>Init value</b>	50.00
<b>Min value</b>	0.00
<b>Max value</b>	100.00
<b>Description</b>	This parameter is used to set the nominal frequency. All the protections based on the frequency as well as the control loops are calculated as a percentage of this value. For 50 or 60 Hz applications, this variable must be adjusted.



## OPERATOR MANUAL

<b>Variable</b>	PT ratio [2150]
<b>Unit</b>	-
<b>Init value</b>	1.00
<b>Min value</b>	0.00
<b>Max value</b>	655.35
<b>Description</b>	<p>This parameter allows you to set the ratio between the voltage present on the busbar and the voltage connected to the module.</p> <p>Example: Busbar voltage 20.000Vac / Voltage connected to the module 100 Vac: PT ratio value = <math>20.000/100 = 200</math>.</p> <p>This PT ratio can be calculated or is indicated on the measuring transformers.</p>

<b>Variable</b>	CT ratio [2151]
<b>Unit</b>	-
<b>Init value</b>	200.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	<p>This parameter is used to set the ratio between the current on the busbar and the current connected to the module.</p> <p>Example: Busbar current 1000A / Current connected to the module 5A: CT ratio value = <math>1000/5 = 200</math>.</p> <p>This CT ratio can be calculated or is indicated on the measuring current transformers.</p>

## POWER MANAGEMENT

<b>Variable</b>	Opening load on under frequency [3702]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Disabled 1: Enable
<b>Description</b>	Enables/Disables underfrequency monitoring for non-essential load shedding

<b>Variable</b>	Under frequency threshold 1 [3700]
<b>Unit</b>	%
<b>Init value</b>	96.0
<b>Min value</b>	0.0
<b>Max value</b>	100.0
<b>Description</b>	First underfrequency level

<b>Variable</b>	Under frequency threshold 2 [3701]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	100.0
<b>Description</b>	Second underfrequency level (must be lower than level 1)

<b>Variable</b>	Opening of the load on maximum kW [3705]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Disabled 1: Enable
<b>Description</b>	Enables/Disables overload monitoring for non-essential load shedding

<b>Variable</b>	Maximum kW threshold 1 [3703]
<b>Unit</b>	%
<b>Init value</b>	95.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	First overload level

## OPERATOR MANUAL

<b>Variable</b>	Maximum KW threshold 2 [3704]
<b>Unit</b>	%
<b>Init value</b>	100.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Second overload level (must be higher than level 1)

<b>Variable</b>	Timer for threshold 1 [3706]
<b>Unit</b>	s
<b>Init value</b>	6.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before first level activation (kW and Hz)

<b>Variable</b>	Timer for threshold 2 [3707]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before activation of the second level (kW and Hz). Must be lower than level 1.

<b>Variable</b>	Minimum delay between 2 openings [2861]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Minimum time between two load shedding requests

<b>Variable</b>	Action after last opening [2862]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

**ENGINE/ECU/ECM****ENGINE****General**

<b>Variable</b>	Engine type [3477]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Diesel 1: Gas
<b>Description</b>	This parameter allows you to define the engine type of the generator. 2 choices are available: - Diesel: Management of the fuel activation and starter(s), management of the pre-heating, stabilization, cooling phases, etc... - Gas: Management of the ignition in addition to the other elements common to diesel engines.

<b>Variable</b>	Type of engine speed measurement [2200]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Pick-up 1: Alternator 2: J1939/MTU MDEC
<b>Description</b>	This parameter allows you to determine the way in which the automatic system will get the speed measurement. 3 choices are available: - Pick-up : In this case the speed measurement is deduced from the frequency of the pick-up signal. An incorrect speed value may be due to a wrong setting of the number of teeth. - Alternator : In this case the speed measurement is deduced from the frequency measured on the alternator voltages. An incorrect speed value may be due to an incorrect setting of the number of pairs of poles. - J1939/MTU MDEC : In this case the speed measurement is read in J1939 or via the MDEC protocol. An incorrect speed value may be due to a wrong wiring (CAN2) or a wrong address configured for the ECU identifier.

<b>Variable</b>	Number of teeth for pick-up [2201]
<b>Unit</b>	-
<b>Init value</b>	100
<b>Min value</b>	1
<b>Max value</b>	65535
<b>Description</b>	This parameter sets the number of teeth for the pick-up that determines the speed value when measured from the pick-up input. A wrong value for the number of teeth will result in a wrong value for the speed.

## OPERATOR MANUAL

<b>Variable</b>	Number of pole pairs [2202]
<b>Unit</b>	-
<b>Init value</b>	2
<b>Min value</b>	0
<b>Max value</b>	50
<b>Description</b>	This parameter sets the number of pole pairs of the alternator, which is used to determine the value of the speed when it is measured from the frequency of the alternator. A wrong value of the number of pole pairs will result in a wrong value of the speed.

<b>Variable</b>	Nominal speed [2207]
<b>Unit</b>	rpm
<b>Init value</b>	1500
<b>Min value</b>	0
<b>Max value</b>	10000
<b>Description</b>	This parameter determines the speed at which the engine runs at steady state. A wrong value of this parameter can cause the speed and frequency protections to trip, the engine to stop during start-up sequences, and a wrong centering of the frequency. Set 1500 rpm for a 50Hz application and 1800 rpm for a 60Hz application.

<b>Variable</b>	Idle speed [3468]
<b>Unit</b>	rpm
<b>Init value</b>	700
<b>Min value</b>	0
<b>Max value</b>	10000
<b>Description</b>	This parameter allows you to define the idle speed that will be applied during the preheating phase and/or the cooling phase (depending on the configuration made). When the engine speed is controlled from the speed output of the module, a digital output configured as Idle speed must be wired on the speed control to apply the idle speed. In the case of speed control in J1939, the product will automatically apply the idle speed in the speed frame TSC1.

<b>Variable</b>	Hide engine measurement [2032]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter determines if the product should hide the engine measurements. - No: Engine measurements will be displayed - Yes: Engine measurements will not be displayed

<b>Variable</b>	Cooling fan activation threshold [3475]
<b>Unit</b>	°C
<b>Init value</b>	40.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	This parameter allows to define the temperature of the coolant above which the fan will be activated. A digital output of the module must be configured as Cooling fan.

## Start/Stop

### Start sequence

<b>Variable</b>	Engine speed during preheating [3479]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Nominal speed 1: Idle speed
<b>Description</b>	This parameter determines the speed at which the engine should run during the preheating phase.

<b>Variable</b>	External start sequence [3452]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Disabled 1: Enable
<b>Description</b>	This parameter allows to determine if the module must manage the engine sequence or if another device manages it. 2 values can be configured: - Disabled: The management of the start sequence externally is disabled. The module manages the entire engine sequence. - Enabled: The engine sequence is managed by another device. In this case, when a remote start is activated in Auto mode or when the start button is pressed in manual mode, the module gives a start command (via a digital output) to the module responsible for the engine sequence and waits for a configurable delay before going to fault if the engine has not started.

<b>Variable</b>	External module start failure timer [3453]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter, which takes effect when the external start sequence is activated, allows you to set the time after which the product activates a fault if the engine has not started.

## Stop sequence

<b>Variable</b>	Engine speed during cooling [3476]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Nominal speed 1: Idle speed
<b>Description</b>	This parameter determines the speed at which the engine should run during the cooling phase.

## Starter

<b>Variable</b>	Number of attempts per starter [3461]
<b>Unit</b>	-
<b>Init value</b>	3
<b>Min value</b>	0
<b>Max value</b>	15
<b>Description</b>	This parameter determines the number of start attempts made on each starter before stopping the sequence with a fault display.

<b>Variable</b>	Delay between each start [3458]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows you to determine the waiting time between start attempts (i.e. activation of the starters).

## OPERATOR MANUAL

<b>Variable</b>	Minimum holding time of the starter [3466]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter determines the minimum activation time of the starter. The starter will remain active for this time even if the speed reaches the threshold set in the parameter Crank drop out faster.

<b>Variable</b>	Maximum holding time of the starter [3457]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to determine the maximum activation time of the starter. If the speed has not reached the value configured in the parameter Crank drop out after this time, the starter will deactivate and the module will make further start attempts according to the configuration made.

<b>Variable</b>	Activation order of starters [3459]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Alternative 1: Consecutive
<b>Description</b>	This parameter determines the order in which the starters will activate if there are multiple starters configured. 2 choices are possible: - Alternative : The automated system activates the starters one after the other and repeats with the first. - Consecutive : Each starter executes several trials consecutively before handing over to the next starter.

<b>Variable</b>	First starter [3460]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	3
<b>Description</b>	This parameter determines the first starter that the module will activate if there are several starters configured.



## OPERATOR MANUAL

<b>Variable</b>	Stop threshold of the first starter [3462]
<b>Unit</b>	rpm
<b>Init value</b>	400
<b>Min value</b>	0
<b>Max value</b>	10000
<b>Description</b>	This parameter determines the speed threshold at which starter #1 will cut out (unless the threshold is reached faster than the minimum holding time of the starter, in which case the automated system will respect the minimum holding time).

<b>Variable</b>	Stop threshold of the second starter [3463]
<b>Unit</b>	rpm
<b>Init value</b>	400
<b>Min value</b>	0
<b>Max value</b>	10000
<b>Description</b>	This parameter determines the speed threshold at which starter #2 will cut out (unless the threshold is reached faster than the minimum holding time of the starter, in which case the automated system will respect the minimum holding time).

<b>Variable</b>	Stop threshold of the third starter [3464]
<b>Unit</b>	rpm
<b>Init value</b>	400
<b>Min value</b>	0
<b>Max value</b>	10000
<b>Description</b>	This parameter determines the speed threshold at which starter #3 will cut out (unless the threshold is reached faster than the minimum holding time of the starter, in which case the automated system will respect the minimum holding time).

## ECU/ECM

### ECU/ECM

#### ECU/ECM settings

<b>Variable</b>	Enable communication protocol [3118]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: J1939 2: MTU MDEC CAN module 201, 303 and 304 3: MTU MDEC CAN module 302
<b>Description</b>	This parameter enables the J1939 communication protocol or the MTU MDEC communication protocol (MTU MDEC can only be selected if the option has been enabled and the controller is connected.). When the J1939 protocol is activated, the CAN 2 bus speed is forced to 250kb/s. The parameter which allows the CAN 2 speed to be set no longer has any effect. When the MDEC protocol is activated, the speed of the CAN 2 bus is forced to 125kb/s. The parameter which allows the CAN 2 speed to be set no longer has any effect.

<b>Variable</b>	ECU Manufacturer [3100]
<b>Unit</b>	-
<b>Init value</b>	5
<b>List</b>	1: Scania 2: Volvo 3: Perkins 4: Iveco 5: Generic 6: Cummins 7: John Deere 8: Caterpillar 9: Deutz 10: MTU 11: Detroit diesel
<b>Description</b>	This parameter allows you to choose the manufacturer of your ECU/Engine. If the manufacturer of your ECU/Engine is not present in the list, set the parameter to Generic.

<b>Variable</b>	Units of measurement [3117]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Bar, °C, L/h 1: PSI, °F, G/h
<b>Description</b>	This parameter allows you to set the J1939 system of units of measurement.

<b>Variable</b>	ECU ID [3102]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	255
<b>Description</b>	This parameter allows to define the CAN identifier of the ECU. A wrong value configured on this parameter results in an impossibility of reading and displaying the measurements transmitted by the ECU.

<b>Variable</b>	COMPACT ID [3103]
<b>Unit</b>	-
<b>Init value</b>	234
<b>Min value</b>	0
<b>Max value</b>	255
<b>Description</b>	This parameter allows to define the CAN identifier of the module. A wrong value set on this parameter results in the impossibility to send commands to the ECU (i.e. to control the engine speed, the engine start and stop, etc.).

### Speed frame (TSC1)

<b>Variable</b>	TSC1 Message counter [3123]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter is used to integrate the message counter into the TSC1 speed frame.

<b>Variable</b>	TSC1 Message checksum [3124]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter is used to integrate the message checksum into the TSC1 speed frame.

## J1939 sniffer

<b>Variable</b>	Enable J1939 sniffer [3119]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Off 1: All received frames 2: Frames from ECU address only 3: All emitted frames 4: All frames
<b>Description</b>	<p>This parameter enables the J1939 frame sniffer. 5 choices are possible:</p> <ul style="list-style-type: none"> <li>- Off : No frame is recorded</li> <li>- All received frames : Only the frames received by the module are recorded.</li> <li>- Frames of the ECU address only : Only the frames whose identifier is the one indicated in the ECU ID parameter are recorded.</li> <li>- All transmitted frames: Only the frames transmitted by the module are recorded.</li> <li>- All the frames : All the frames are recorded, those sent by the module, those received by the module.</li> </ul> <p>The recording starts as soon as the selection is different from Off. Switch the parameter to Off to stop recording.</p>

## INPUTS/OUTPUTS

### DIGITAL INPUTS

#### Digital inputs

##### Input 1 (Customisable) [250]

<b>Variable</b>	Function configured on DI 1 [2700]
<b>Unit</b>	-
<b>Init value</b>	4501
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 1 associated function (Default value: Generator breaker feedback)

<b>Variable</b>	Polarity NO/NC on DI 1 [2736]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 1 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 1 [2727]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 1 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 1 [2709]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 1 activation timer

<b>Variable</b>	Timer OFF Digital Input 1 [2718]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 1 desactivation timer

### Input 2 (Customisable) [251]

<b>Variable</b>	Function configured on DI 2 [2701]
<b>Unit</b>	-
<b>Init value</b>	4502
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 2 associated function (Default value: Remote start)

<b>Variable</b>	Polarity NO/NC on DI 2 [2737]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 2 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 2 [2728]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 2 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 2 [2710]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 2 activation timer

<b>Variable</b>	Timer OFF Digital Input 2 [2719]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 2 desactivation timer

### Input 3 (Customisable) [252]

<b>Variable</b>	Function configured on DI 3 [2702]
<b>Unit</b>	-
<b>Init value</b>	4505
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 3 associated function (Default value: Emergency stop)

<b>Variable</b>	Polarity NO/NC on DI 3 [2738]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 3 (0=Normaly Open/1=Normaly Close)

## OPERATOR MANUAL

<b>Variable</b>	Validity on digital input 3 [2729]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 3 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 3 [2711]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 3 activation timer

<b>Variable</b>	Timer OFF Digital Input 3 [2720]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 3 desactivation timer

### Input 4 (Customisable) [253]

<b>Variable</b>	Function configured on DI 4 [2703]
<b>Unit</b>	-
<b>Init value</b>	4500
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 4 associated function (Default value: Mains breaker feedback on COMPACT MAINS )



## OPERATOR MANUAL

<b>Variable</b>	Polarity NO/NC on DI 4 [2739]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 4 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 4 [2730]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 4 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 4 [2712]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 4 activation timer

<b>Variable</b>	Timer OFF Digital Input 4 [2721]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 4 desactivation timer

**Input 5 (Customisable) [254]**

<b>Variable</b>	Function configured on DI 5 [2704]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 5 associated function

<b>Variable</b>	Polarity NO/NC on DI 5 [2740]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 5 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 5 [2731]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 5 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 5 [2713]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 5 activation timer

<b>Variable</b>	Timer OFF Digital Input 5 [2722]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 5 desactivation timer

### Input 6 (Customisable) [255]

<b>Variable</b>	Function configured on DI 6 [2705]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 6 associated function

<b>Variable</b>	Polarity NO/NC on DI 6 [2741]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 6 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 6 [2732]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 6 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 6 [2714]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 6 activation timer

<b>Variable</b>	Timer OFF Digital Input 6 [2723]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 6 desactivation timer

### Input 7 (Customisable) [256]

<b>Variable</b>	Function configured on DI 7 [2706]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 7 associated function

<b>Variable</b>	Polarity NO/NC on DI 7 [2742]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 7 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 7 [2733]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 7 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 7 [2715]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 7 activation timer

<b>Variable</b>	Timer OFF Digital Input 7 [2724]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 7 desactivation timer

### Input 8 (Customisable) [257]

<b>Variable</b>	Function configured on DI 8 [2707]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 8 associated function

## OPERATOR MANUAL

<b>Variable</b>	Polarity NO/NC on DI 8 [2743]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 8 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 8 [2734]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 8 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 8 [2716]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 8 activation timer

<b>Variable</b>	Timer OFF Digital Input 8 [2725]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 8 desactivation timer

**Input 9 (Customisable) [258]**

<b>Variable</b>	Function configured on DI 9 [2708]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Digital Input 9 associated function

<b>Variable</b>	Polarity NO/NC on DI 9 [2744]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of Digital Input 9 (0=Normaly Open/1=Normaly Close)

<b>Variable</b>	Validity on digital input 9 [2735]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Digital Input 9 activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	Timer ON Digital Input 9 [2717]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 9 activation timer

<b>Variable</b>	Timer OFF Digital Input 9 [2726]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital Input 9 desactivation timer

## Hysteresis on digital input

### Hysteresis on digital input 1

<b>Variable</b>	Hysteresis 1 enable for digital input [2769]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	<p>This parameter enables the first hysteresis function on logic threshold to be activated.</p> <p>To do this:</p> <ul style="list-style-type: none"> <li>- Configure a digital input as 'Hysteresis low threshold DI1' and wire the hysteresis low threshold logic signal to this input.</li> <li>- Configure a digital input as 'Hysteresis high threshold DI1' and wire the hysteresis high threshold logic signal to this input.</li> <li>- Configure a digital output as 'Hysteresis output activation on DI1' and wire this output to the hysteresis control</li> <li>- Select the direction of activation/deactivation of the control</li> </ul>

<b>Variable</b>	Timer ON hysteresis 1 [2777]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.



<b>Variable</b>	Direction hysteresis 1 [2785]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

## Hysteresis on digital input 2

<b>Variable</b>	Hysteresis 2 enable for digital input [2770]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the second hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI2' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI2' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI2' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 2 [2778]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 2 [2786]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 3

<b>Variable</b>	Hysteresis 3 enable for digital input [2771]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the third hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI3' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI3' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI3' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 3 [2779]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 3 [2787]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 4

<b>Variable</b>	Hysteresis 4 enable for digital input [2772]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the fourth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI4' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI4' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI4' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 4 [2780]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 4 [2788]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 5

<b>Variable</b>	Hysteresis 5 enable for digital input [2773]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the fifth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI5' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI5' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI5' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 5 [2781]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 5 [2789]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 6

<b>Variable</b>	Hysteresis 6 enable for digital input [2774]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the sixth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI6' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI6' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI6' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 6 [2782]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 6 [2790]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 7

<b>Variable</b>	Hysteresis 7 enable for digital input [2775]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the seventh hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI7' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI7' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI7' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 7 [2783]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

<b>Variable</b>	Direction hysteresis 7 [2791]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active

### Hysteresis on digital input 8

<b>Variable</b>	Hysteresis 8 enable for digital input [2776]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This parameter enables the eighth hysteresis function on logic threshold to be activated. To do this: - Configure a digital input as 'Hysteresis low threshold DI8' and wire the hysteresis low threshold logic signal to this input. - Configure a digital input as 'Hysteresis high threshold DI8' and wire the hysteresis high threshold logic signal to this input. - Configure a digital output as 'Hysteresis output activation on DI8' and wire this output to the hysteresis control - Select the direction of activation/deactivation of the control

<b>Variable</b>	Timer ON hysteresis 8 [2784]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	This parameter allows to set the time between the moment when the activation threshold is reached and the moment when the command is activated.

## OPERATOR MANUAL

<b>Variable</b>	Direction hysteresis 8 [2792]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	This parameter allows to set the direction in which the hysteresis should work. 2 choices are possible: - Activate the command when the low threshold is active and deactivate it when the high threshold is active - Activate the command when the high threshold is active and deactivate it when the low threshold is active



## DIGITAL/RELAYS OUTPUTS

### Digital outputs

#### Output 1 (Customisable) [4350]

<b>Variable</b>	Function configured DO 1 [2745]
<b>Unit</b>	-
<b>Init value</b>	4652
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 1 Associated function

<b>Variable</b>	Polarity NE/ND DO 1 [2751]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 1

<b>Variable</b>	Pulse length DO 1 [2761]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 1 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 01 [2793]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 1

**Output 2 (Customisable) [4351]**

<b>Variable</b>	Function configured DO 2 [2746]
<b>Unit</b>	-
<b>Init value</b>	4655
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 2 Associated function

<b>Variable</b>	Polarity NE/ND DO 2 [2752]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 2

<b>Variable</b>	Pulse length DO 2 [2762]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 2 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 02 [2794]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 2

**Output 3 (Customisable) [4352]**

<b>Variable</b>	Function configured DO 3 [2747]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 3 Associated function

<b>Variable</b>	Polarity NE/ND DO 3 [2753]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 3

<b>Variable</b>	Pulse length DO 3 [2763]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 3 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 03 [2795]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 3

**Output 4 (Customisable) [4353]**

<b>Variable</b>	Function configured DO 4 [2748]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 4 Associated function

<b>Variable</b>	Polarity NE/ND DO 4 [2754]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 4

<b>Variable</b>	Pulse length DO 4 [2764]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 4 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 04 [2796]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 4

**Output 5 (Customisable) [4354]**

<b>Variable</b>	Function configured DO 5 [2749]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 5 Associated function

<b>Variable</b>	Polarity NE/ND DO 5 [2755]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 5

<b>Variable</b>	Pulse length DO 5 [2765]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 5 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 05 [2797]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 5

**Output 6 (Customisable) [4355]**

<b>Variable</b>	Function configured DO 6 [2750]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Output 6 Associated function

<b>Variable</b>	Polarity NE/ND DO 6 [2756]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Polarity (0=Normaly De-energized / 1=Normaly Energized) Digital output 6

<b>Variable</b>	Pulse length DO 6 [2766]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Digital ouput 6 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay DO 06 [2798]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of logic output 6

## Relay outputs

### Relay 1 (Customisable) [4356]

<b>Variable</b>	Output function Relay 1 [2757]
<b>Unit</b>	-
<b>Init value</b>	4676
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Relay 1 Associated function

<b>Variable</b>	Direction NO/NC Relay 1 [2759]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Relay 1 Direction (0=Normaly Open / 1=Normaly Closed)

<b>Variable</b>	Pulse length R 1 [2767]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Relay ouput 1 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay relay 1 [8250]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of relay 1

**Relay 2 (Customisable) [4357]**

<b>Variable</b>	Output function Relay 2 [2758]
<b>Unit</b>	-
<b>Init value</b>	4675
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Relay 2 Associated function

<b>Variable</b>	Direction NO/NC Relay 2 [2760]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Relay 2 Direction (0=Normaly Open / 1=Normaly Closed)

<b>Variable</b>	Pulse length R 2 [2768]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Relay ouput 2 pulse timer (0 = no pulse, continous activation)

<b>Variable</b>	Activation delay relay 2 [8251]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Delay before physical activation of relay 2



# BREAKER

## General

<b>Variable</b>	Delay before new attempt [2806]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before another attempt for an electrical fault. When an electrical fault is detected, the module opens its breaker and waits for an amount of time specified in this variable to attempt to close it again.

<b>Variable</b>	Fail to open/close breaker timer [2304]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Circuit breaker max command delay (timer for discrepancy between command and feedback), identical for both generator circuit breaker and mais circuit breaker, is generating a fault.

<b>Variable</b>	Unexpected close/open breaker timer [2317]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	10.0
<b>Description</b>	Timer before taking into account an unexpected change of a breaker feedback input state.

## Generator breaker

### Attempts number

<b>Variable</b>	Number of closing attempts [2807]
<b>Unit</b>	-
<b>Init value</b>	3
<b>Min value</b>	0
<b>Max value</b>	15
<b>Description</b>	Number of attempts for an electrical fault. When an electrical fault is detected, the module automatically tries to close its breaker to see if the fault has disappeared. If it isn't the case the module will try again until it has reached the number set in this variable

### Control

<b>Variable</b>	Generator circuit breaker control type [2300]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Open Contact - Close Pulse 1: Open Contact - Close Contact 2: Open MNcoil - Close Pulse 3: Open MNcoil - Close Contact 4: Open Pulse - Close Pulse 5: Open Pulse - Close Contact
<b>Description</b>	Control type of the relay for the genset circuit breaker of the genset (pulse, hold, coil...)

### Pulse

<b>Variable</b>	Generator breaker control pulse length [2301]
<b>Unit</b>	s
<b>Init value</b>	2.5
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Generator circuit breaker pulse length

<b>Variable</b>	Undervoltage coil deenergized time [2302]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Time during which the coil is no longer energized after a request to open the circuit breaker.

<b>Variable</b>	Undervoltage coil security timer [2303]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Minimum safety time between the moment the coil has been reenergized and the next request to close the circuit breaker.

## Mains breaker

### Attempts number

<b>Variable</b>	Number of closing attempts [2814]
<b>Unit</b>	-
<b>Init value</b>	3
<b>Min value</b>	0
<b>Max value</b>	15
<b>Description</b>	Number of attempts for an electrical fault. When an electrical fault is detected, the module automatically tries to close its breaker to see if the fault has disappeared. If it isn't the case the module will try again until it has reached the number set in this variable

## Control

<b>Variable</b>	Mains circuit breaker control type [2307]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Open Contact - Close Pulse 1: Open Contact - Close Contact 2: Open MNcoil - Close Pulse 3: Open MNcoil - Close Contact 4: Open Pulse - Close Pulse 5: Open Pulse - Close Contact
<b>Description</b>	Control type of the relay for the Mains circuit breaker of the genset (pulse, hold, coil...)

## Pulse

<b>Variable</b>	Mains breaker control pulse length [2314]
<b>Unit</b>	s
<b>Init value</b>	2.5
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Mains circuit breaker pulse length

<b>Variable</b>	Undervoltage coil deenergized time [2315]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Time during which the coil is no longer energized after a request to open the circuit breaker.

<b>Variable</b>	Undervoltage coil security timer [2316]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.1
<b>Max value</b>	10.0
<b>Description</b>	Minimum safety time between the moment the coil has been reenergized and the next request to close the circuit breaker.

**Mains failure**

<b>Variable</b>	Mains breaker tripping mode on mains failure [2312]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	0: Immediately 2: After generator ready 3: After timer
<b>Description</b>	Mains breaker opening mode on Mains electrical fault (0: immediately/1:After start/2:After GE ready/3:After timer )

<b>Variable</b>	Timer to open mains breaker on mains failure [2313]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Delay before MCB open command on fault if E2312 = 3

# CANOPEN

## Digital inputs

### CANopen DI 1 (Customisable) [800]

<b>Variable</b>	CANopenFuncI1 [3200]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I1 [3296]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 1 [3264]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I1 [3232]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 2 (Customisable) [801]**

<b>Variable</b>	CANopenFuncI2 [3201]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I2 [3297]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 2 [3265]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I2 [3233]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 3 (Customisable) [802]**

<b>Variable</b>	CANopenFuncI3 [3202]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I3 [3298]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 3 [3266]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I3 [3234]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 4 (Customisable) [803]**

<b>Variable</b>	CANopenFuncI4 [3203]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I4 [3299]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 4 [3267]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I4 [3235]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 5 (Customisable) [804]**

<b>Variable</b>	CANopenFuncI5 [3204]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I5 [3300]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 5 [3268]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I5 [3236]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 6 (Customisable) [805]**

<b>Variable</b>	CANopenFuncI6 [3205]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I6 [3301]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 6 [3269]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I6 [3237]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 7 (Customisable) [806]**

<b>Variable</b>	CANopenFuncI7 [3206]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I7 [3302]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 7 [3270]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I7 [3238]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 8 (Customisable) [807]**

<b>Variable</b>	CANopenFuncI8 [3207]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I8 [3303]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 8 [3271]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I8 [3239]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 9 (Customisable) [808]**

<b>Variable</b>	CANopenFuncI9 [3208]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I9 [3304]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 9 [3272]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I9 [3240]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 10 (Customisable) [809]**

<b>Variable</b>	CANopenFuncI10 [3209]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I10 [3305]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 10 [3273]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I10 [3241]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 11 (Customisable) [810]**

<b>Variable</b>	CANopenFuncI11 [3210]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I11 [3306]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 11 [3274]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I11 [3242]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 12 (Customisable) [811]**

<b>Variable</b>	CANopenFunc12 [3211]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I12 [3307]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 12 [3275]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I12 [3243]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 13 (Customisable) [812]**

<b>Variable</b>	CANopenFuncI13 [3212]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I13 [3308]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 13 [3276]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I13 [3244]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 14 (Customisable) [813]**

<b>Variable</b>	CANopenFunc14 [3213]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I14 [3309]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 14 [3277]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I14 [3245]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 15 (Customisable) [814]**

<b>Variable</b>	CANopenFunc15 [3214]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I15 [3310]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 15 [3278]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I15 [3246]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 16 (Customisable) [815]**

<b>Variable</b>	CANopenFunc16 [3215]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I16 [3311]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 16 [3279]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I16 [3247]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 17 (Customisable) [816]**

<b>Variable</b>	CANopenFunc17 [3216]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I17 [3312]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 17 [3280]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I17 [3248]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 18 (Customisable) [817]**

<b>Variable</b>	CANopenFunc18 [3217]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I18 [3313]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 18 [3281]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I18 [3249]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 19 (Customisable) [818]**

<b>Variable</b>	CANopenFunc19 [3218]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I19 [3314]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 19 [3282]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I19 [3250]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 20 (Customisable) [819]**

<b>Variable</b>	CANopenFuncI20 [3219]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I20 [3315]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 20 [3283]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I20 [3251]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 21 (Customisable) [820]**

<b>Variable</b>	CANopenFuncI21 [3220]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I21 [3316]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 21 [3284]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I21 [3252]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 22 (Customisable) [821]**

<b>Variable</b>	CANopenFuncI22 [3221]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I22 [3317]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 22 [3285]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I22 [3253]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 23 (Customisable) [822]**

<b>Variable</b>	CANopenFuncI23 [3222]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I23 [3318]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 23 [3286]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I23 [3254]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 24 (Customisable) [823]**

<b>Variable</b>	CANopenFuncI24 [3223]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I24 [3319]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 24 [3287]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I24 [3255]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 25 (Customisable) [824]**

<b>Variable</b>	CANopenFuncI25 [3224]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I25 [3320]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 25 [3288]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I25 [3256]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 26 (Customisable) [825]**

<b>Variable</b>	CANopenFuncI26 [3225]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I26 [3321]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 26 [3289]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I26 [3257]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 27 (Customisable) [826]**

<b>Variable</b>	CANopenFuncI27 [3226]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I27 [3322]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 27 [3290]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I27 [3258]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 28 (Customisable) [827]**

<b>Variable</b>	CANopenFuncI28 [3227]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I28 [3323]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 28 [3291]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I28 [3259]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 29 (Customisable) [828]**

<b>Variable</b>	CANopenFuncI29 [3228]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I29 [3324]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 29 [3292]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I29 [3260]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 30 (Customisable) [829]**

<b>Variable</b>	CANopenFuncI30 [3229]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I30 [3325]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 30 [3293]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I30 [3261]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 31 (Customisable) [830]**

<b>Variable</b>	CANopenFuncI31 [3230]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I31 [3326]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 31 [3294]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I31 [3262]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 32 (Customisable) [831]**

<b>Variable</b>	CANopenFuncI32 [3231]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I32 [3327]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 32 [3295]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I32 [3263]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 33 (Customisable) [1250]**

<b>Variable</b>	CANopenFuncI33 [8550]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I33 [8646]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 33 [8614]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I33 [8582]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 34 (Customisable) [1251]**

<b>Variable</b>	CANopenFuncI34 [8551]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I34 [8647]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 34 [8615]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I34 [8583]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 35 (Customisable) [1252]**

<b>Variable</b>	CANopenFuncI35 [8552]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I35 [8648]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 35 [8616]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I35 [8584]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 36 (Customisable) [1253]**

<b>Variable</b>	CANopenFuncI36 [8553]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I36 [8649]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 36 [8617]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I36 [8585]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 37 (Customisable) [1254]**

<b>Variable</b>	CANopenFuncI37 [8554]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I37 [8650]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 37 [8618]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I37 [8586]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 38 (Customisable) [1255]**

<b>Variable</b>	CANopenFuncI38 [8555]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I38 [8651]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 38 [8619]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I38 [8587]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 39 (Customisable) [1256]**

<b>Variable</b>	CANopenFuncI39 [8556]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I39 [8652]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 39 [8620]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I39 [8588]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 40 (Customisable) [1257]**

<b>Variable</b>	CANopenFuncI40 [8557]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I40 [8653]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 40 [8621]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I40 [8589]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 41 (Customisable) [1258]**

<b>Variable</b>	CANopenFuncI41 [8558]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I41 [8654]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 41 [8622]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I41 [8590]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 42 (Customisable) [1259]**

<b>Variable</b>	CANopenFuncI42 [8559]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I42 [8655]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 42 [8623]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I42 [8591]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 43 (Customisable) [1260]**

<b>Variable</b>	CANopenFuncI43 [8560]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I43 [8656]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 43 [8624]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I43 [8592]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 44 (Customisable) [1261]**

<b>Variable</b>	CANopenFuncI44 [8561]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I44 [8657]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 44 [8625]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I44 [8593]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 45 (Customisable) [1262]**

<b>Variable</b>	CANopenFuncI45 [8562]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I45 [8658]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 45 [8626]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I45 [8594]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 46 (Customisable) [1263]**

<b>Variable</b>	CANopenFuncI46 [8563]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I46 [8659]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 46 [8627]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I46 [8595]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 47 (Customisable) [1264]**

<b>Variable</b>	CANopenFuncI47 [8564]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I47 [8660]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 47 [8628]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I47 [8596]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 48 (Customisable) [1265]**

<b>Variable</b>	CANopenFuncI48 [8565]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I48 [8661]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 48 [8629]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I48 [8597]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 49 (Customisable) [1266]**

<b>Variable</b>	CANopenFuncI49 [8566]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I49 [8662]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 49 [8630]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I49 [8598]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 50 (Customisable) [1267]**

<b>Variable</b>	CANopenFuncI50 [8567]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I50 [8663]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 50 [8631]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I50 [8599]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 51 (Customisable) [1268]**

<b>Variable</b>	CANopenFuncI51 [8568]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I51 [8664]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 51 [8632]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I51 [8600]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 52 (Customisable) [1269]**

<b>Variable</b>	CANopenFuncI52 [8569]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I52 [8665]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 52 [8633]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I52 [8601]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 53 (Customisable) [1270]**

<b>Variable</b>	CANopenFuncI53 [8570]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I53 [8666]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 53 [8634]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I53 [8602]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 54 (Customisable) [1271]**

<b>Variable</b>	CANopenFuncI54 [8571]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I54 [8667]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 54 [8635]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I54 [8603]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 55 (Customisable) [1272]**

<b>Variable</b>	CANopenFuncI55 [8572]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I55 [8668]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 55 [8636]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I55 [8604]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 56 (Customisable) [1273]**

<b>Variable</b>	CANopenFuncI56 [8573]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I56 [8669]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 56 [8637]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I56 [8605]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 57 (Customisable) [1274]**

<b>Variable</b>	CANopenFuncI57 [8574]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I57 [8670]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 57 [8638]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I57 [8606]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 58 (Customisable) [1275]**

<b>Variable</b>	CANopenFuncI58 [8575]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I58 [8671]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 58 [8639]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I58 [8607]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 59 (Customisable) [1276]**

<b>Variable</b>	CANopenFuncI59 [8576]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I59 [8672]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 59 [8640]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I59 [8608]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change



**CANopen DI 60 (Customisable) [1277]**

<b>Variable</b>	CANopenFuncI60 [8577]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I60 [8673]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 60 [8641]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I60 [8609]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 61 (Customisable) [1278]**

<b>Variable</b>	CANopenFuncI61 [8578]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I61 [8674]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 61 [8642]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I61 [8610]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 62 (Customisable) [1279]**

<b>Variable</b>	CANopenFuncI62 [8579]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I62 [8675]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 62 [8643]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I62 [8611]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 63 (Customisable) [1280]**

<b>Variable</b>	CANopenFuncI63 [8580]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I63 [8676]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 63 [8644]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I63 [8612]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

**CANopen DI 64 (Customisable) [1281]**

<b>Variable</b>	CANopenFuncI64 [8581]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	selection of the function, which will be executed when the logic input changes state . (see functions on logic inputs for more details about functions)

<b>Variable</b>	CANopenDir I64 [8677]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	Direction of logic input Normally open or Normally closed

<b>Variable</b>	Validity on CANopen digital input 64 [8645]
<b>Unit</b>	-
<b>Init value</b>	1
<b>Min value</b>	0
<b>Max value</b>	3
<b>Description</b>	Activation validity (0=Never/1=Always/2=Post Starting/3= rpm & Volt Stabilized)

<b>Variable</b>	CANopenTM I64 [8613]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Function execution delay, user can add execution delay after logic input status change

## Digital outputs

### CANopen DO 1 (Customisable) [4751]

<b>Variable</b>	CANopenFuncO1 [3350]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO1 [3382]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 2 (Customisable) [4752]

<b>Variable</b>	CANopenFuncO2 [3351]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO2 [3383]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 3 (Customisable) [4753]

<b>Variable</b>	CANopenFuncO3 [3352]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO3 [3384]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 4 (Customisable) [4754]

<b>Variable</b>	CANopenFuncO4 [3353]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO4 [3385]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 5 (Customisable) [4755]**

<b>Variable</b>	CANopenFuncO5 [3354]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO5 [3386]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 6 (Customisable) [4756]**

<b>Variable</b>	CANopenFuncO6 [3355]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO6 [3387]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



### CANopen DO 7 (Customisable) [4757]

<b>Variable</b>	CANopenFuncO7 [3356]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO7 [3388]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 8 (Customisable) [4758]

<b>Variable</b>	CANopenFuncO8 [3357]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO8 [3389]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 9 (Customisable) [4759]**

<b>Variable</b>	CANopenFuncO9 [3358]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO9 [3390]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 10 (Customisable) [4760]**

<b>Variable</b>	CANopenFuncO10 [3359]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO10 [3391]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 11 (Customisable) [4761]**

<b>Variable</b>	CANopenFuncO11 [3360]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO11 [3392]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 12 (Customisable) [4762]**

<b>Variable</b>	CANopenFuncO12 [3361]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO12 [3393]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 13 (Customisable) [4763]**

<b>Variable</b>	CANopenFuncO13 [3362]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO13 [3394]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 14 (Customisable) [4764]**

<b>Variable</b>	CANopenFuncO14 [3363]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO14 [3395]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 15 (Customisable) [4765]**

<b>Variable</b>	CANopenFuncO15 [3364]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO15 [3396]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 16 (Customisable) [4766]**

<b>Variable</b>	CANopenFuncO16 [3365]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO16 [3397]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 17 (Customisable) [4767]**

<b>Variable</b>	CANopenFuncO17 [3366]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO17 [3398]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 18 (Customisable) [4768]**

<b>Variable</b>	CANopenFuncO18 [3367]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO18 [3399]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 19 (Customisable) [4769]

<b>Variable</b>	CANopenFuncO19 [3368]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO19 [3400]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 20 (Customisable) [4770]

<b>Variable</b>	CANopenFuncO20 [3369]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO20 [3401]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 21 (Customisable) [4771]**

<b>Variable</b>	CANopenFuncO21 [3370]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO21 [3402]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 22 (Customisable) [4772]**

<b>Variable</b>	CANopenFuncO22 [3371]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO22 [3403]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



**CANopen DO 23 (Customisable) [4773]**

<b>Variable</b>	CANopenFuncO23 [3372]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO23 [3404]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 24 (Customisable) [4774]**

<b>Variable</b>	CANopenFuncO24 [3373]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO24 [3405]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 25 (Customisable) [4775]**

<b>Variable</b>	CANopenFuncO25 [3374]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO25 [3406]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 26 (Customisable) [4776]**

<b>Variable</b>	CANopenFuncO26 [3375]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO26 [3407]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 27 (Customisable) [4777]

<b>Variable</b>	CANopenFuncO27 [3376]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO27 [3408]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 28 (Customisable) [4778]

<b>Variable</b>	CANopenFuncO28 [3377]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO28 [3409]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 29 (Customisable) [4779]**

<b>Variable</b>	CANopenFuncO29 [3378]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO29 [3410]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 30 (Customisable) [4780]**

<b>Variable</b>	CANopenFuncO30 [3379]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO30 [3411]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 31 (Customisable) [4781]**

<b>Variable</b>	CANopenFuncO31 [3380]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO31 [3412]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 32 (Customisable) [4782]**

<b>Variable</b>	CANopenFuncO32 [3381]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO32 [3413]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 33 (Customisable) [5100]

<b>Variable</b>	CANopenFuncO33 [8700]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO33 [8732]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 34 (Customisable) [5101]

<b>Variable</b>	CANopenFuncO34 [8701]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO34 [8733]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 35 (Customisable) [5102]

<b>Variable</b>	CANopenFuncO35 [8702]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO35 [8734]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 36 (Customisable) [5103]

<b>Variable</b>	CANopenFuncO36 [8703]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO36 [8735]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 37 (Customisable) [5104]**

<b>Variable</b>	CANopenFuncO37 [8704]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO37 [8736]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 38 (Customisable) [5105]**

<b>Variable</b>	CANopenFuncO38 [8705]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO38 [8737]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



### CANopen DO 39 (Customisable) [5106]

<b>Variable</b>	CANopenFuncO39 [8706]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO39 [8738]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 40 (Customisable) [5107]

<b>Variable</b>	CANopenFuncO40 [8707]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO40 [8739]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 41 (Customisable) [5108]**

<b>Variable</b>	CANopenFuncO41 [8708]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO41 [8740]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 42 (Customisable) [5109]**

<b>Variable</b>	CANopenFuncO42 [8709]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO42 [8741]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 43 (Customisable) [5110]**

<b>Variable</b>	CANopenFuncO43 [8710]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO43 [8742]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 44 (Customisable) [5111]**

<b>Variable</b>	CANopenFuncO44 [8711]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO44 [8743]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 45 (Customisable) [5112]

<b>Variable</b>	CANopenFuncO45 [8712]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO45 [8744]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 46 (Customisable) [5113]

<b>Variable</b>	CANopenFuncO46 [8713]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO46 [8745]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 47 (Customisable) [5114]

<b>Variable</b>	CANopenFuncO47 [8714]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO47 [8746]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 48 (Customisable) [5115]

<b>Variable</b>	CANopenFuncO48 [8715]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO48 [8747]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 49 (Customisable) [5116]**

<b>Variable</b>	CANopenFuncO49 [8716]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO49 [8748]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 50 (Customisable) [5117]**

<b>Variable</b>	CANopenFuncO50 [8717]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO50 [8749]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 51 (Customisable) [5118]**

<b>Variable</b>	CANopenFuncO51 [8718]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO51 [8750]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 52 (Customisable) [5119]**

<b>Variable</b>	CANopenFuncO52 [8719]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO52 [8751]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 53 (Customisable) [5120]

<b>Variable</b>	CANopenFuncO53 [8720]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO53 [8752]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 54 (Customisable) [5121]

<b>Variable</b>	CANopenFuncO54 [8721]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO54 [8753]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized



**CANopen DO 55 (Customisable) [5122]**

<b>Variable</b>	CANopenFuncO55 [8722]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO55 [8754]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 56 (Customisable) [5123]**

<b>Variable</b>	CANopenFuncO56 [8723]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO56 [8755]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 57 (Customisable) [5124]**

<b>Variable</b>	CANopenFuncO57 [8724]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO57 [8756]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 58 (Customisable) [5125]**

<b>Variable</b>	CANopenFuncO58 [8725]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO58 [8757]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 59 (Customisable) [5126]

<b>Variable</b>	CANopenFuncO59 [8726]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO59 [8758]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 60 (Customisable) [5127]

<b>Variable</b>	CANopenFuncO60 [8727]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO60 [8759]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 61 (Customisable) [5128]**

<b>Variable</b>	CANopenFuncO61 [8728]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO61 [8760]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

**CANopen DO 62 (Customisable) [5129]**

<b>Variable</b>	CANopenFuncO62 [8729]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO62 [8761]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 63 (Customisable) [5130]

<b>Variable</b>	CANopenFuncO63 [8730]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO63 [8762]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

### CANopen DO 64 (Customisable) [5131]

<b>Variable</b>	CANopenFuncO64 [8731]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Status change of the open or closed logic output, depending on the selected function

<b>Variable</b>	CANopenModeO64 [8763]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	1
<b>Description</b>	selection of the direction of the logic output, normally energized or de-energized

## Analog inputs

### Analog inputs 1

<b>Variable</b>	CANopen AI 1 (Customisable) [1050]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 1

<b>Variable</b>	CANopen Gain AI 01 [8351]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 1 value

<b>Variable</b>	CANopen Offset AI 01 [8350]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 1 value

### Analog inputs 2

<b>Variable</b>	CANopen AI 2 (Customisable) [1051]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 2

<b>Variable</b>	CANopen Gain AI 02 [8353]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 2 value

<b>Variable</b>	CANopen Offset AI 02 [8352]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 2 value

### Analog inputs 3

<b>Variable</b>	CANopen AI 3 (Customisable) [1052]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 3

<b>Variable</b>	CANopen Gain AI 03 [8355]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 3 value

<b>Variable</b>	CANopen Offset AI 03 [8354]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 3 value

### Analog inputs 4

<b>Variable</b>	CANopen AI 4 (Customisable) [1053]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 4

<b>Variable</b>	CANopen Gain AI 04 [8357]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 4 value

<b>Variable</b>	CANopen Offset AI 04 [8356]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 4 value

### Analog inputs 5

<b>Variable</b>	CANopen AI 5 (Customisable) [1054]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 5



<b>Variable</b>	CANopen Gain AI 05 [8359]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 5 value

<b>Variable</b>	CANopen Offset AI 05 [8358]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 5 value

## Analog inputs 6

<b>Variable</b>	CANopen AI 6 (Customisable) [1055]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 6

<b>Variable</b>	CANopen Gain AI 06 [8361]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 6 value

<b>Variable</b>	CANopen Offset AI 06 [8360]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 6 value

## Analog inputs 7

<b>Variable</b>	CANopen AI 7 (Customisable) [1056]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 7

<b>Variable</b>	CANopen Gain AI 07 [8363]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 7 value

<b>Variable</b>	CANopen Offset AI 07 [8362]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 7 value

## Analog inputs 8

<b>Variable</b>	CANopen AI 8 (Customisable) [1057]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 8

<b>Variable</b>	CANopen Gain AI 08 [8365]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 8 value

<b>Variable</b>	CANopen Offset AI 08 [8364]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 8 value

## Analog inputs 9

<b>Variable</b>	CANopen AI 9 (Customisable) [1058]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 9

<b>Variable</b>	CANopen Gain AI 09 [8367]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 9 value

<b>Variable</b>	CANopen Offset AI 09 [8366]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 9 value

## Analog inputs 10

<b>Variable</b>	CANopen AI 10 (Customisable) [1059]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 10

<b>Variable</b>	CANopen Gain AI 10 [8369]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 10 value

<b>Variable</b>	CANopen Offset AI 10 [8368]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 10 value

## Analog inputs 11

<b>Variable</b>	CANopen AI 11 (Customisable) [1060]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 11

<b>Variable</b>	CANopen Gain AI 11 [8371]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 11 value

<b>Variable</b>	CANopen Offset AI 11 [8370]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 11 value

## Analog inputs 12

<b>Variable</b>	CANopen AI 12 (Customisable) [1061]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 12

<b>Variable</b>	CANopen Gain AI 12 [8373]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 12 value

<b>Variable</b>	CANopen Offset AI 12 [8372]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 12 value

### Analog inputs 13

<b>Variable</b>	CANopen AI 13 (Customisable) [1062]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 13

<b>Variable</b>	CANopen Gain AI 13 [8375]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 13 value

<b>Variable</b>	CANopen Offset AI 13 [8374]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 13 value

### Analog inputs 14

<b>Variable</b>	CANopen AI 14 (Customisable) [1063]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 14

<b>Variable</b>	CANopen Gain AI 14 [8377]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 14 value

<b>Variable</b>	CANopen Offset AI 14 [8376]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 14 value

## Analog inputs 15

<b>Variable</b>	CANopen AI 15 (Customisable) [1064]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 15

<b>Variable</b>	CANopen Gain AI 15 [8379]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 15 value

<b>Variable</b>	CANopen Offset AI 15 [8378]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 15 value

## Analog inputs 16

<b>Variable</b>	CANopen AI 16 (Customisable) [1065]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	CANopen analog input 16

<b>Variable</b>	CANopen Gain AI 16 [8381]
<b>Unit</b>	-
<b>Init value</b>	1.000
<b>Min value</b>	0.000
<b>Max value</b>	10.000
<b>Description</b>	Gain for CANopen analog input 16 value

<b>Variable</b>	CANopen Offset AI 16 [8380]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Offset for CANopen analog input 16 value



## PROTECTIONS

### GENERATOR PROTECTIONS

#### Over/under frequency

##### Over frequency

<b>Variable</b>	Over frequency threshold [2400]
<b>Unit</b>	%
<b>Init value</b>	105.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over frequency timer [2401]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control [2402]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under frequency

<b>Variable</b>	Under frequency threshold [2403]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer [2404]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control [2405]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over frequency 2

<b>Variable</b>	Over frequency threshold 2 [2436]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Over frequency timer 2 [2437]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control 2 [2438]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Under frequency 2

<b>Variable</b>	Under frequency threshold 2 [2439]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer 2 [2440]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control 2 [2441]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over/under voltage

### Over voltage

<b>Variable</b>	Over voltage threshold [2406]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over voltage timer [2407]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control [2408]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under voltage

<b>Variable</b>	Under voltage threshold [2409]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer [2410]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control [2411]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over voltage 2

<b>Variable</b>	Over voltage threshold 2 [2442]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over voltage timer 2 [2443]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control 2 [2444]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under voltage 2

<b>Variable</b>	Under voltage threshold 2 [2445]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer 2 [2446]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control 2 [2447]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over current/neutral

### Over current

<b>Variable</b>	Over current threshold [2430]
<b>Unit</b>	A
<b>Init value</b>	500
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over current timer [2431]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over current control [2432]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Neutral current

<b>Variable</b>	Neutral current threshold [2433]
<b>Unit</b>	A
<b>Init value</b>	300
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Neutral current timer [2434]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Neutral current control [2435]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over current 2

<b>Variable</b>	Over current threshold 2 [2466]
<b>Unit</b>	A
<b>Init value</b>	500
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.



<b>Variable</b>	Over current timer 2 [2467]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over current control 2 [2468]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Neutral current 2

<b>Variable</b>	Neutral current threshold 2 [2469]
<b>Unit</b>	A
<b>Init value</b>	300
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Neutral current timer 2 [2470]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Neutral current control 2 [2471]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum/Minimum kW

### Maximum kW

<b>Variable</b>	Maximum kW threshold [2415]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kW timer [2416]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kW control [2417]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum kW

<b>Variable</b>	Minimum kW threshold [2412]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kW timer [2413]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kW control [2414]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum kW 2

<b>Variable</b>	Maximum kW threshold 2 [2451]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Maximum kW timer 2 [2452]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kW control 2 [2453]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Minimum kW 2

<b>Variable</b>	Minimum kW threshold 2 [2448]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kW timer 2 [2449]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kW control 2 [2450]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maxi kVAR/Mini kVAR

### Maximum kVAR

<b>Variable</b>	Maximum kVAR threshold [2424]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kVAR timer [2425]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kVAR control [2426]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum kVar

<b>Variable</b>	Minimum kVAR threshold [2421]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kVAR timer [2422]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kVAR control [2423]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum kVAR 2

<b>Variable</b>	Maximum kVAR threshold 2 [2460]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Maximum kVAR timer 2 [2461]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kVAR control 2 [2462]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Minimum kVar 2

<b>Variable</b>	Minimum kVAR threshold 2 [2457]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kVAR timer 2 [2458]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kVAR control 2 [2459]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage/Current unbalance

### Voltage unbalance

<b>Variable</b>	Voltage unbalance threshold [2486]
<b>Unit</b>	%
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Voltage unbalance timer [2487]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control [2488]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.



## Current unbalance

<b>Variable</b>	Current unbalance threshold [2492]
<b>Unit</b>	%
<b>Init value</b>	40.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Current unbalance timer [2493]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Current unbalance control [2494]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage unbalance 2

<b>Variable</b>	Voltage unbalance threshold 2 [2489]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Voltage unbalance timer 2 [2490]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control 2 [2491]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Current unbalance 2

<b>Variable</b>	Current unbalance threshold 2 [2495]
<b>Unit</b>	%
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Current unbalance timer 2 [2496]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Current unbalance control 2 [2497]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Short circuit

<b>Variable</b>	Generator Short Circuit Control [2477]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Single phase nominal current [2103]
<b>Unit</b>	A
<b>Init value</b>	250
<b>Min value</b>	0
<b>Max value</b>	65535
<b>Description</b>	Nominal Current

## OPERATOR MANUAL

<b>Variable</b>	Curve type [2498]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: IEC Inverse 1: IEC Very Inverse 2: IEC Extremely Inverse 3: IEEE Moderately Inverse 4: IEEE Very Inverse 5: IEEE Extremely Inverse 6: Custom
<b>Description</b>	Different standard short circuit protection curves can be chosen: - 0: IEC Inverse - 1: IEC Very Inverse - 2: IEC Extremely Inverse - 3: IEEE Moderately Inverse - 4: IEEE Very Inverse - 5: IEEE Extremely Inverse - 6: Custom Note: The short circuit protection parameters can only be modified if 'Custom' is selected.

<b>Variable</b>	Short Circuit K constant characteristic [2472]
<b>Unit</b>	s
<b>Init value</b>	0.14
<b>Min value</b>	0.00
<b>Max value</b>	655.35
<b>Description</b>	Generator Current Short Circuit Protection : K constant characteristic

<b>Variable</b>	Short Circuit C constant characteristic [2473]
<b>Unit</b>	s
<b>Init value</b>	0.000
<b>Min value</b>	0.000
<b>Max value</b>	65.535
<b>Description</b>	Generator Current Short Circuit Protection : C constant characteristic

<b>Variable</b>	Short Circuit Alpha constant characteristic [2474]
<b>Unit</b>	-
<b>Init value</b>	0.02
<b>Min value</b>	0.00
<b>Max value</b>	655.35
<b>Description</b>	Generator Current Short Circuit Protection : Alpha constant characteristic

<b>Variable</b>	Short Circuit Is constant [2476]
<b>Unit</b>	%
<b>Init value</b>	110
<b>Min value</b>	0
<b>Max value</b>	1000
<b>Description</b>	Generator Current Short Circuit Protection : IS constant characteristic

<b>Variable</b>	Short Circuit TMS (Time Multiplier Setting) [2475]
<b>Unit</b>	-
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	1.0
<b>Description</b>	Generator Current Short Circuit Protection : TMS (Time Multiplier Setting) constant characteristic

## Earth fault

### Earth fault ratio

<b>Variable</b>	Earth Current CT ratio [2485]
<b>Unit</b>	-
<b>Init value</b>	1.0
<b>Min value</b>	0.1
<b>Max value</b>	3250.0
<b>Description</b>	Earth Current Transformers Ratio. CT must be connected to J5 for earth fault measurement.

### Earth fault

<b>Variable</b>	Earth fault threshold [2479]
<b>Unit</b>	A
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Earth fault timer [2480]
<b>Unit</b>	s
<b>Init value</b>	1.0
<b>Min value</b>	0.0
<b>Max value</b>	10.0
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Earth fault control [2481]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Earth fault 2

<b>Variable</b>	Earth fault threshold 2 [2482]
<b>Unit</b>	A
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Earth fault timer 2 [2483]
<b>Unit</b>	s
<b>Init value</b>	0.5
<b>Min value</b>	0.0
<b>Max value</b>	10.0
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Earth fault control 2 [2484]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Rotophase

<b>Variable</b>	Rotophase protection control [8501]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Rotophase activation direction (0 = Indirect, 1 = Direct) [8500]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Indirect 1: Direct
<b>Description</b>	This setpoint define wich direction of rotophase will activate rotophase protection. If the setpoint is on direct then the action of variables 8500 will activate if voltage phases are plugged on a direct direction. If the setpoint is on indirect then the action of variables 8500 will activate if voltage phases are plugged on an indirect direction.

## MAINS PROTECTIONS

### Over/under frequency

#### Over frequency

<b>Variable</b>	Over frequency threshold [2500]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over frequency timer [2501]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control [2502]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.



## Under frequency

<b>Variable</b>	Under frequency threshold [2503]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer [2504]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control [2505]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over frequency 2

<b>Variable</b>	Over frequency threshold 2 [2530]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over frequency timer 2 [2531]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over frequency control 2 [2532]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under frequency 2

<b>Variable</b>	Under frequency threshold 2 [2533]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under frequency timer 2 [2534]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under frequency control 2 [2535]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over/under voltage

### Over voltage

<b>Variable</b>	Over voltage threshold [2506]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over voltage timer [2507]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control [2508]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Under voltage

<b>Variable</b>	Under voltage threshold [2509]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer [2510]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control [2511]
<b>Unit</b>	-
<b>Init value</b>	2
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over voltage 2

<b>Variable</b>	Over voltage threshold 2 [2536]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over voltage timer 2 [2537]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over voltage control 2 [2538]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under voltage 2

<b>Variable</b>	Under voltage threshold 2 [2539]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under voltage timer 2 [2540]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under voltage control 2 [2541]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage unbalance

### Voltage unbalance

<b>Variable</b>	Voltage unbalance threshold [2565]
<b>Unit</b>	%
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Voltage unbalance timer [2566]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control [2567]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Voltage unbalance 2

<b>Variable</b>	Voltage unbalance threshold 2 [2568]
<b>Unit</b>	%
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Voltage unbalance timer 2 [2569]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Voltage unbalance control 2 [2570]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Rotophase

<b>Variable</b>	Rotophase protection control [2585]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Rotophase activation direction (0 = Indirect, 1 = Direct) [2584]
<b>Unit</b>	-
<b>Init value</b>	1
<b>List</b>	0: Indirect 1: Direct
<b>Description</b>	This setpoint define wich direction of rotophase will activate rotophase protection If the setpoint is on direct then the action of variables 2584 will activate if voltage phases are plugged on a direct direction. If the setpoint is on indirect then the action of variables 2584 will activate if voltage phases are plugged on an indirect direction.

## Maximum/Minimum kW

### Maximum kW

<b>Variable</b>	Maximum kW threshold [2515]
<b>Unit</b>	kW
<b>Init value</b>	110
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.



## OPERATOR MANUAL

<b>Variable</b>	Maximum kW timer [2516]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kW control [2517]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Minimum kW

<b>Variable</b>	Minimum kW threshold [2512]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kW timer [2513]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kW control [2514]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum kW 2

<b>Variable</b>	Maximum kW threshold 2 [2545]
<b>Unit</b>	kW
<b>Init value</b>	110
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kW timer 2 [2546]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kW control 2 [2547]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum kW 2

<b>Variable</b>	Minimum kW threshold 2 [2542]
<b>Unit</b>	kW
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kW timer 2 [2543]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kW control 2 [2544]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maxi kVAR/Mini kVAR

### Maximum kVAR

<b>Variable</b>	Maximum kVAR threshold [2524]
<b>Unit</b>	kVAR
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Maximum kVAR timer [2525]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kVAR control [2526]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Minimum kVar

<b>Variable</b>	Minimum kVAR threshold [2521]
<b>Unit</b>	kVAR
<b>Init value</b>	200
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kVAR timer [2522]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kVAR control [2523]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum kVAR 2

<b>Variable</b>	Maximum kVAR threshold 2 [2554]
<b>Unit</b>	kVAR
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Maximum kVAR timer 2 [2555]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Maximum kVAR control 2 [2556]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum kVar 2

<b>Variable</b>	Minimum kVAR threshold 2 [2551]
<b>Unit</b>	kVAR
<b>Init value</b>	200
<b>Min value</b>	0
<b>Max value</b>	32500
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Minimum kVAR timer 2 [2552]
<b>Unit</b>	s
<b>Init value</b>	120.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Minimum kVAR control 2 [2553]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## ENGINE PROTECTIONS

### Speed

#### Over speed

<b>Variable</b>	Over speed threshold [2350]
<b>Unit</b>	%
<b>Init value</b>	110.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over speed timer [2351]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Over speed control [2352]
<b>Unit</b>	-
<b>Init value</b>	5
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

#### Under speed

<b>Variable</b>	Under speed threshold [2353]
<b>Unit</b>	%
<b>Init value</b>	90.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under speed timer [2354]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under speed control [2355]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Over speed 2

<b>Variable</b>	Over speed threshold 2 [2368]
<b>Unit</b>	%
<b>Init value</b>	115.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Over speed timer 2 [2369]
<b>Unit</b>	s
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.



<b>Variable</b>	Over speed control 2 [2370]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Under speed 2

<b>Variable</b>	Under speed threshold 2 [2371]
<b>Unit</b>	%
<b>Init value</b>	85.0
<b>Min value</b>	0.0
<b>Max value</b>	200.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Under speed timer 2 [2372]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Under speed control 2 [2373]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Oil pressure

### Minimum oil pressure

<b>Variable</b>	Oil pressure threshold [2362]
<b>Unit</b>	bar
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Oil pressure timer [2363]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Oil pressure control [2364]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Minimum oil pressure 2

<b>Variable</b>	Oil pressure threshold 2 [2380]
<b>Unit</b>	bar
<b>Init value</b>	2.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Oil pressure timer 2 [2381]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Oil pressure control 2 [2382]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Water temperature

### Maximum water temperature

<b>Variable</b>	Water temperature threshold [2365]
<b>Unit</b>	°C
<b>Init value</b>	110.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Water temperature timer [2366]
<b>Unit</b>	s
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Water temperature control [2367]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum water temperature 2

<b>Variable</b>	Water temperature threshold 2 [2383]
<b>Unit</b>	°C
<b>Init value</b>	120.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Water temperature timer 2 [2384]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Water temperature control 2 [2385]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Start sequence

### Out of speed range

<b>Variable</b>	Out of speed range timer [2393]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Out of speed range control [2394]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Out of voltage range

<b>Variable</b>	Out of voltage range timer [2395]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Out of voltage range control [2396]
<b>Unit</b>	-
<b>Init value</b>	4
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Stop sequence

<b>Variable</b>	Fail to stop engine [3471]
<b>Unit</b>	s
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Fail to stop engine timer

<b>Variable</b>	Unexpected stop timer [2203]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	If the module measures a zero speed and no stop request has been made, the module displays a fault after this delay.

## ECU/ECM

### Lamp error

<b>Variable</b>	Control on Malfunction Indicator Lamp [3110]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## OPERATOR MANUAL

<b>Variable</b>	Control on Protection Lamp [3111]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on Amber Warning Lamp [3112]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on Red Stop Lamp [3113]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on Combined Alarm Yellow [3121]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Control on Combined Alarm Red [3122]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

### Communication error

<b>Variable</b>	Control on ECU error [3058]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Timer before ECU error [3116]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Timer before triggering the CAN error related to the communication between the controller and the ECU/ECM.



## OTHER PROTECTIONS

### Analog inputs

#### Analog input 1

<b>Variable</b>	Analog input 1 threshold [2600]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 1 timer [2601]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 1 control [2602]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Analog input 1 threshold 2 [2603]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Analog input 1 timer 2 [2604]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 1 control 2 [2605]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Direction analog input 1 protection [2606]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Minimum 1: Maximum
<b>Description</b>	This setpoint define if the both threshold level for analog input 1 are minimum or maximum limit. If the setpoint is on "Minimum" then the action of variables 2602 and 2605 will activate from thresholds level set and below. If the setpoint is on "Maximum" then the action of variables 2602 and 2605 will activate from thresholds level set and above.

### Analog input 2

<b>Variable</b>	Analog input 2 threshold [2608]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Analog input 2 timer [2609]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 2 control [2610]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Analog input 2 threshold 2 [2611]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 2 timer 2 [2612]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 2 control 2 [2613]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Direction analog input 2 protection [2614]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Minimum 1: Maximum
<b>Description</b>	This setpoint define if the both threshold level for analog input 2 are minimum or maximum limit. If the setpoint is on "Minimum" then the action of vaiables 2610 and 2613 will activate from thresholds level set and below. If the setpoint is on "Maximum" then the action of vaiables 2610 and 2613 will activate from thresholds level set and above.

### Analog input 3

<b>Variable</b>	Analog input 3 threshold [2616]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 3 timer [2617]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## OPERATOR MANUAL

<b>Variable</b>	Analog input 3 control [2618]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Analog input 3 threshold 2 [2619]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 3 timer 2 [2620]
<b>Unit</b>	s
<b>Init value</b>	0.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Analog input 3 control 2 [2621]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 2: Mains failure 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown) 9: Mains electrical fault
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	Direction analog input 3 protection [2622]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Minimum 1: Maximum
<b>Description</b>	This setpoint define if the both threshold level for analog input 3 are minimum or maximum limit. If the setpoint is on "Minimum" then the action of vaiables 2618 and 2621 will activate from thresholds level set and below. If the setpoint is on "Maximum" then the action of vaiables 2618 and 2621 will activate from thresholds level set and above.

## Battery

### Maximum battery voltage

<b>Variable</b>	Max. voltage battery threshold [2359]
<b>Unit</b>	V
<b>Init value</b>	30.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Max. voltage battery timer [2360]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Max. voltage battery control [2361]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum battery voltage

<b>Variable</b>	Min. voltage battery threshold [2356]
<b>Unit</b>	V
<b>Init value</b>	18.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Min. voltage battery timer [2357]
<b>Unit</b>	s
<b>Init value</b>	60.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Min. voltage battery control [2358]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Maximum battery voltage 2

<b>Variable</b>	Max. voltage battery threshold 2 [2377]
<b>Unit</b>	V
<b>Init value</b>	32.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Max. voltage battery timer 2 [2378]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.

<b>Variable</b>	Max. voltage battery control 2 [2379]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Minimum battery voltage 2

<b>Variable</b>	Min. voltage battery threshold 2 [2374]
<b>Unit</b>	V
<b>Init value</b>	15.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	Min. voltage battery timer 2 [2375]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer defining how long the value should exceed the treshold before triggering the control associated to this protection.



<b>Variable</b>	Min. voltage battery control 2 [2376]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 3: Alarm
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## Boost battery

<b>Variable</b>	Control boost battery [2388]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	This setpoint activate the boost battery function. This function activate the boost battery output with a low threshold (variable 2386) of the battery voltage and deactivate the output with high threshold (variable 2387).

<b>Variable</b>	Low threshold boost battery [2386]
<b>Unit</b>	V
<b>Init value</b>	20.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

<b>Variable</b>	High threshold boost battery [2387]
<b>Unit</b>	V
<b>Init value</b>	28.0
<b>Min value</b>	0.0
<b>Max value</b>	35.0
<b>Description</b>	Threshold to be exceeded to trigger the associated control for this protection.

## CANopen

<b>Variable</b>	Control on CANopen error [3059]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

<b>Variable</b>	CANopen error timer [3152]
<b>Unit</b>	s
<b>Init value</b>	10.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	CANopen error timer

## Mismatch rotophase

<b>Variable</b>	Mismatch rotophases protection control [2397]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Unused 1: Generator electrical fault 3: Alarm 4: Fault (soft shutdown) 5: Security (hard shutdown)
<b>Description</b>	Action performed on protection's trigger. Actions' description is available in the technical documentation.

## PROGRAMMING

### HYSTERESIS

#### Hysteresis 1

<b>Variable</b>	Enable Hysteresis 1 [2657]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable hysteresis on analog input 1 with thresholds E2660 (Low Level) & E2663 (High Level)

<b>Variable</b>	Low level threshold [2660]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Low level threshold for digital output activation on hysteresis 1

<b>Variable</b>	Timer on low level threshold [2666]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis low threshold 1

<b>Variable</b>	High level threshold [2663]
<b>Unit</b>	bar
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	High level threshold for digital output activation on hysteresis 1

<b>Variable</b>	Timer on high level threshold [2669]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis high threshold 1

<b>Variable</b>	Hysteresis Direction 1 [2672]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	Hysteresis 1 Direction (0 : Set on low thresh. - Reset on high thresh. / 1 : Set on high thresh. - Reset on low thresh)

## Hysteresis 2

<b>Variable</b>	Enable Hysteresis 2 [2658]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable hysteresis on analog input 2 with thresholds E2661 (Low Level) & E2664 (High Level)

<b>Variable</b>	Low level threshold [2661]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	Low level threshold for digital output activation on hysteresis 2

## OPERATOR MANUAL

<b>Variable</b>	Timer on low level threshold [2667]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis low threshold 2

<b>Variable</b>	High level threshold [2664]
<b>Unit</b>	°C
<b>Init value</b>	0.0
<b>Min value</b>	-3276.8
<b>Max value</b>	3276.7
<b>Description</b>	High level threshold for digital output activation on hysteresis 2

<b>Variable</b>	Timer on high level threshold [2670]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis high threshold 2

<b>Variable</b>	Hysteresis Direction 2 [2673]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	Hysteresis 2 Direction (0 : Set on low thresh. - Reset on high thresh. / 1 : Set on high thresh. - Reset on low thresh)

### Hysteresis 3

<b>Variable</b>	Enable Hysteresis 3 [2659]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable hysteresis on analog input 3 with thresholds E2662 (Low Level) & E2665 (High Level)

<b>Variable</b>	Low level threshold [2662]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	Low level threshold for digital output activation on hysteresis 3

<b>Variable</b>	Timer on low level threshold [2668]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis low threshold 3

<b>Variable</b>	High level threshold [2665]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	-32768
<b>Max value</b>	32767
<b>Description</b>	High level threshold for digital output activation on hysteresis 3

<b>Variable</b>	Timer on high level threshold [2671]
<b>Unit</b>	s
<b>Init value</b>	3.0
<b>Min value</b>	0.0
<b>Max value</b>	999.9
<b>Description</b>	Timer before set/reset digital output on hysteresis high threshold 3

## OPERATOR MANUAL

<b>Variable</b>	Hysteresis Direction 3 [2674]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Set on low threshold, reset on high threshold 1: Set on high threshold, reset on low threshold
<b>Description</b>	Hysteresis 3 Direction (0 : Set on low thresh. - Reset on high thresh. / 1 : Set on high thresh. - Reset on low thresh)

# MODBUS

## Connection settings

<b>Variable</b>	Enable connection to Modbus server [3031]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: No 1: Yes
<b>Description</b>	Enable connection to a Modbus server for custom read/write requests

<b>Variable</b>	Control on Modbus server timeouts [3030]
<b>Unit</b>	-
<b>Init value</b>	3
<b>List</b>	0: Unused 3: Alarm 4: Fault (soft shutdown)
<b>Description</b>	Control on TCP connection loss or frame timeout with Modbus server

<b>Variable</b>	Modbus server frame timeout [3032]
<b>Unit</b>	s
<b>Init value</b>	5.0
<b>Min value</b>	0.0
<b>Max value</b>	6553.5
<b>Description</b>	Timeout in ms for no response to a frame emitted from the Modbus server

## Modbus rights

<b>Variable</b>	Write date/time [3015.0]
<b>Description</b>	-

<b>Variable</b>	Write engine meters [3015.1]
<b>Description</b>	-

<b>Variable</b>	Write input functions [3015.3]
<b>Description</b>	-



## OPERATOR MANUAL

<b>Variable</b>	Reading via Modbus TCP [3015.8]
<b>Description</b>	-

<b>Variable</b>	Writing via Modbus TCP [3015.9]
<b>Description</b>	-

# LOGGER

## Activation

<b>Variable</b>	Activation [3610]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Off 1: Always ON 2: Post starting 3: Stabilized
<b>Description</b>	Archiving mode OFF = NEVER / ALWAYS / POST STARTING / STABILIZED, event archiving can be activated depending on engine status. Warning: erase will delete all faults, alarms and archived data.

## Variables 1-5

### Log 1

<b>Variable</b>	Variable 1 to log [3600]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 1 on [3622]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at specific intervals, defined by the user ([3612]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 1 [3612]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 2

<b>Variable</b>	Variable 2 to log [3601]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 2 on [3623]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3613]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 2 [3613]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 3

<b>Variable</b>	Variable 3 to log [3602]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 3 on [3624]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3614]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 3 [3614]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 4

<b>Variable</b>	Variable 4 to log [3603]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 4 on [3625]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3615]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 4 [3615]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 5

<b>Variable</b>	Variable 5 to log [3604]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 5 on [3626]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3616]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 5 [3616]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Variables 6-10

### Log 6

<b>Variable</b>	Variable 6 to log [3605]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 6 on [3627]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3617]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 6 [3617]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 7

<b>Variable</b>	Variable 7 to log [3606]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 7 on [3628]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3618]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 7 [3618]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

Log 8

<b>Variable</b>	Variable 8 to log [3607]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 8 on [3629]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3619]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 8 [3619]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 9

<b>Variable</b>	Variable 9 to log [3608]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 9 on [3630]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3620]) - Value change: The variable will be logged each time the value of the variable has been changed



<b>Variable</b>	Logging period variable 9 [3620]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## Log 10

<b>Variable</b>	Variable 10 to log [3609]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	10299
<b>Description</b>	Logger of the variable to archive

<b>Variable</b>	Log variable 10 on [3631]
<b>Unit</b>	-
<b>Init value</b>	0
<b>List</b>	0: Value change 1: Interval
<b>Description</b>	A variable can be logged in two different ways: - Interval: The variable will be logged at a periodic interval, defined by the user ([3621]) - Value change: The variable will be logged each time the value of the variable has been changed

<b>Variable</b>	Logging period variable 10 [3621]
<b>Unit</b>	s
<b>Init value</b>	1
<b>Min value</b>	1
<b>Max value</b>	9999
<b>Description</b>	Time in second of interval between each archiving

## SYSTEM

### LCD DISPLAY

#### Screen saving

<b>Variable</b>	Screensaver timeout [3551]
<b>Unit</b>	min
<b>Init value</b>	5
<b>Min value</b>	0
<b>Max value</b>	120
<b>Description</b>	Timeout Screen saver (0=infini)

#### Backlight

<b>Variable</b>	Backlight timeout [3552]
<b>Unit</b>	min
<b>Init value</b>	5
<b>Min value</b>	0
<b>Max value</b>	120
<b>Description</b>	Timeout Backlight (0=infini)

<b>Variable</b>	LCD screen backlight [3555]
<b>Unit</b>	%
<b>Init value</b>	100
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	LCD backlight intensity

<b>Variable</b>	LCD screen contrast [3554]
<b>Unit</b>	%
<b>Init value</b>	50
<b>Min value</b>	0
<b>Max value</b>	100
<b>Description</b>	LCD contrast intensity

## DATE/TIME

<b>Variable</b>	Day of the week [10]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	6
<b>Description</b>	Day of the week (RTC)

<b>Variable</b>	Day [11]
<b>Unit</b>	days
<b>Init value</b>	0
<b>Min value</b>	1
<b>Max value</b>	31
<b>Description</b>	Day (RTC)

<b>Variable</b>	Month [12]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	1
<b>Max value</b>	12
<b>Description</b>	Month (RTC)

<b>Variable</b>	Year [13]
<b>Unit</b>	-
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	99
<b>Description</b>	Year (RTC)

<b>Variable</b>	Hours [14]
<b>Unit</b>	h
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	23
<b>Description</b>	Hours (RTC)

## OPERATOR MANUAL

<b>Variable</b>	Minutes [15]
<b>Unit</b>	min
<b>Init value</b>	0
<b>Min value</b>	0
<b>Max value</b>	59
<b>Description</b>	Minutes (RTC)

## BUTTONS INHIBITION

<b>Variable</b>	Auto button inhibition [8102.14]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Test button inhibition [8102.13]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Man button inhibition [8102.12]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Start button inhibition [8102.11]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Stop button inhibition [8102.10]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Gen breaker button inhibition [8102.9]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Mains breaker button inhibition [8102.8]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Fault/Alarm/info button inhibition [8102.7]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Esc button inhibition [8102.6]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Enter button inhibition [8102.5]
<b>Description</b>	Allows to disable (1) or enable (0) the button

## OPERATOR MANUAL

<b>Variable</b>	Up arrow button inhibition [8102.4]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Left arrow button inhibition [8102.3]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Down arrow button inhibition [8102.2]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Right arrow button inhibition [8102.1]
<b>Description</b>	Allows to disable (1) or enable (0) the button

<b>Variable</b>	Shift button inhibition [8102.0]
<b>Description</b>	Allows to disable (1) or enable (0) the button

## LIST OF INPUTS

### GENERATOR

<b>Variable</b>	Generator breaker feedback [4501]
<b>Description</b>	Breaker position feedback, when active the breaker is considered closed.

<b>Variable</b>	Remote start on load [4502]
<b>Description</b>	Activation will start generator in automatic mode and close the generator breaker on load. If Load dependant start stop is used this input must remain active all the time to allow load dependent start stop to manage start/stop sequences.

<b>Variable</b>	Generator ready [4523]
<b>Description</b>	<p>To be used only if the external start sequence is activated, and to indicate to the automated system when motor speed stability must be checked.</p> <p>If this function is not used during an external start sequence, the generator switches to speed stabilization check as soon as speed exceeds 95% of nominal.</p> <p>If this function is used during an external start sequence, the generator switches to speed stabilization check as soon as this input is activated.</p> <p>If the input is declared and missing while the generator is on load, a critical fault will be triggered.</p> <p>If the input is declared and missing while the generator is starting, a start fault will be triggered after the corresponding time delay.</p>

<b>Variable</b>	Start inhibition [4524]
<b>Description</b>	Prevents engine from starting, input will block start sequence only if active before starting demand.

<b>Variable</b>	Override (NFE37312) [4610]
<b>Description</b>	Override mode: will disable all configured protections of the controller except : Over-speed, Emergency stop and short-circuit. Other fault will be displayed as alarm dedicated override running hours counter will be incremented in override mode.

<b>Variable</b>	Remote start off load [4611]
<b>Description</b>	Activation will start generator(s) in automatic mode and keep breaker open: used for off load tests.

## OPERATOR MANUAL

<b>Variable</b>	Remote start with timer [4612]
<b>Description</b>	Activation starts the generator(s) in automatic mode and waits for an adjustable delay until the generator(s) are ready before closing the circuit breaker. Used to extend the start sequence and preheat the generator(s) at nominal frequency.



## MAINS

<b>Variable</b>	Mains breaker feedback [4500]
<b>Description</b>	Mains breaker position feedback. when active the mains breaker is considered closed.

<b>Variable</b>	Manual mains back [4544]
<b>Description</b>	When configured, the sequence to switch back on Mains after generator start on Mains failure will be on hold until this input is activated. Load will remain on generator even if Mains back timer is elapsed, input will be mandatory to come back on Mains power.

<b>Variable</b>	Mains failure [4638]
<b>Description</b>	Mains failure. will consider Mains as not valid and request generator to start on load. Mains back timer will run once input is off, timer is adjustable in Timer settings. Mains failure will be logged as an event.

<b>Variable</b>	Mains available [4642]
<b>Description</b>	External signal to simulate Mains as available. Mains LED will lit when input is activated.

**ENGINE**

<b>Variable</b>	Preglow request [4534]
<b>Description</b>	Manual prestart auxiliary request, will activate the output 'Pre-start (Glow plugs & Auxiliaries)' when in manual mode

## INPUTS/OUTPUTS

<b>Variable</b>	Digital output 1 forced [4630]
<b>Description</b>	Activating this input will force activation of digital ouput 1.

<b>Variable</b>	Digital output 2 forced [4631]
<b>Description</b>	Activating this input will force activation of digital ouput 2.

<b>Variable</b>	Digital output 3 forced [4632]
<b>Description</b>	Activating this input will force activation of digital ouput 3.

<b>Variable</b>	Digital output 4 forced [4633]
<b>Description</b>	Activating this input will force activation of digital ouput 4.

<b>Variable</b>	Digital output 5 forced [4634]
<b>Description</b>	Activating this input will force activation of digital ouput 5.

<b>Variable</b>	Digital output 6 forced [4635]
<b>Description</b>	Activating this input will force activation of digital ouput 6.

<b>Variable</b>	Relay 1 forced [4950]
<b>Description</b>	Activating this input will force activation of relay ouput 1.

<b>Variable</b>	Relay 2 forced [4951]
<b>Description</b>	Activating this input will force activation of relay ouput 2.

## POWER PLANT

<b>Variable</b>	External non essential trip request [4537]
<b>Description</b>	External activation of the load shedding protection outputs. Use only if load shedding is enable.

## ENGINE PROTECTIONS

<b>Variable</b>	Oil pressure fault [4503]
<b>Description</b>	External oil pressure switch. Immediate shut down protection. Function is normally closed as standard and disable when engine is stopped.

<b>Variable</b>	Coolant temperature fault [4504]
<b>Description</b>	External coolant temperature switch. Protection is stopping engine after cooling down timer.

## ALARMS/FAULTS

<b>Variable</b>	Emergency stop [4505]
<b>Description</b>	Emergency stop activation: Will immediately stop the generator(s) and force circuit breaker open.

<b>Variable</b>	Generator fault request (Trip) [4507]
<b>Description</b>	<p>External electrical fault : Activation opens the circuit-breaker and keeps it open. After an adjustable delay (circuit-breaker menu/Delay before new attempt), a new attempt will be performed to close the circuit-breaker.</p> <p>The maximum number of attempts can be set in breaker settings (number of closing attempts).</p> <p>If the fault is still present after the last attempt, the circuit-breaker will open and the system will stop on fault.</p>

<b>Variable</b>	Mains fault request [4508]
<b>Description</b>	<p>External electrical fault : Activation will trip the Mains circuit breaker, and after an adjustable timer (breaker menu/Delay before new attempt), a new attempts of running Mains circuit breaker closed on load will be effective.</p> <p>The number of attempts is adjustable in breaker settings (number of closing attempts), if the fault is still present after the last attempt, Mains breaker will remain on fault. Remote start to generator is not provided in this case, only 'Mains failure' function will provide generator start request.</p>

<b>Variable</b>	Remote hard shut down [4525]
<b>Description</b>	Immediate stop of the generator, activated from external device.

<b>Variable</b>	Remote soft shut down [4526]
<b>Description</b>	Immediate opening of generator circuit breaker and stop of generators after cooling down, activated by external command.

<b>Variable</b>	Remote alarm [4527]
<b>Description</b>	Alarm only - non critical event activated by external device - Orange led is displayed an event logged.

## ALTERNATIVE SELECTIONS

<b>Variable</b>	Alternative selection 1 [4594]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 2 [4595]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 3 [4596]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 4 [4597]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 5 [4598]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 6 [4599]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 7 [4600]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 8 [4601]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 9 [4602]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

## OPERATOR MANUAL

<b>Variable</b>	Alternative selection 10 [4603]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 11 [4604]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 12 [4605]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 13 [4606]
<b>Description</b>	Available variable to toggle a parameter between 2 values. See Alternative selection function.

<b>Variable</b>	Alternative selection 14 [4607]
<b>Description</b>	14th available variable to switch a parameter between 2 values

<b>Variable</b>	Alternative selection 15 [4608]
<b>Description</b>	15th available variable to switch a parameter between 2 values

<b>Variable</b>	Alternative selection 16 [4609]
<b>Description</b>	16th available variable to switch a parameter between 2 values



## HYSTERESIS

<b>Variable</b>	Hysteresis low threshold DI1 [4614]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI2 [4615]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI3 [4616]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI4 [4617]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI5 [4618]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI6 [4619]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI7 [4620]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis low threshold DI8 [4621]
<b>Description</b>	Activate to trigger the corresponding hysteresis low threshold.

<b>Variable</b>	Hysteresis high threshold DI1 [4622]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI2 [4623]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

## OPERATOR MANUAL

<b>Variable</b>	Hysteresis high threshold DI3 [4624]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI4 [4625]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI5 [4626]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI6 [4627]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI7 [4628]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

<b>Variable</b>	Hysteresis high threshold DI8 [4629]
<b>Description</b>	Activate to trigger the corresponding hysteresis high threshold.

## REMOTE BUTTONS

<b>Variable</b>	Remote faults reset [4506]
<b>Description</b>	External reset. Acknowledgement of alarm/fault present in display pages (same action as shift+I reset).

<b>Variable</b>	Manual start request [4509]
<b>Description</b>	Manual start command (alternative to front panel push button). Active in manual mode only.

<b>Variable</b>	Manual stop request [4510]
<b>Description</b>	Manual stop command (alternative to front panel push button). Active in manual mode only.

<b>Variable</b>	Manual mode request [4511]
<b>Description</b>	Force controller in manual mode, same effect as MAN button.

<b>Variable</b>	Manual mode inhibition [4512]
<b>Description</b>	Prevent controller to go in manual mode (Remotely or front panel).

<b>Variable</b>	Auto mode request [4513]
<b>Description</b>	Force controller in auto mode, same effect as AUTO button.

<b>Variable</b>	Generator breaker opening in manual mode [4518]
<b>Description</b>	Remote manual opening of generator breaker in manual mode (alternative to front button). Active in manual mode only.

<b>Variable</b>	Mains breaker opening in manual mode [4519]
<b>Description</b>	Remote manual opening of mains breaker in manual mode (alternative to front button). Active in manual mode only.

<b>Variable</b>	Generator breaker closing in manual mode [4520]
<b>Description</b>	Remote manual close of generator breaker in manual mode (alternative to front button). Active in manual mode only.

## OPERATOR MANUAL

<b>Variable</b>	Mains breaker closing in manual mode [4521]
<b>Description</b>	Remote manual close of mains breaker in manual mode (alternative to front button). Active in manual mode only.

<b>Variable</b>	Stop horn [4530]
<b>Description</b>	External horn stop request. Used when Horn output is configured.

<b>Variable</b>	Led test [4580]
<b>Description</b>	Activates all LEDs of the module in order to check that the LEDs work

<b>Variable</b>	Test mode request [4590]
<b>Description</b>	Force controller in test mode, same effect as TEST button.

## LIST OF OUTPUTS

### COMMANDS

<b>Variable</b>	Starter n°1 [4652]
<b>Description</b>	Starter n°1 - cranking output.

<b>Variable</b>	Starter n°2 [4653]
<b>Description</b>	Starter n°2 - cranking output.

<b>Variable</b>	Starter n°3 [4654]
<b>Description</b>	Starter n°3 - cranking output.

<b>Variable</b>	Fuel / Gas [4655]
<b>Description</b>	Fuel output - Output is activated at start up and shut down to stop the engine. Also used as logical remote start command on local engine controllers such as Diesel Control Unit or ECU, when 'external start sequence' function is enable.

<b>Variable</b>	Horn [4663]
<b>Description</b>	External horn or warning light. Activated whenever a fault/alarm triggers. The output is disable on acknowledgment or reset. Horn timer is adjustable in timer menu (0s = permanent activation).

<b>Variable</b>	Energize to stop [4674]
<b>Description</b>	Output is energized to stop the engine fuel, activation remains from shutdown request untill engine is completely stopped (0rpm), an additionnal timer can be adjusted in timer menu.

<b>Variable</b>	Generator breaker close [4675]
<b>Description</b>	Command to close the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings.

<b>Variable</b>	Mains breaker close [4676]
<b>Description</b>	Command to close the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings.

## OPERATOR MANUAL

<b>Variable</b>	Generator breaker open [4677]
<b>Description</b>	Command to open the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings.

<b>Variable</b>	Mains breaker open [4678]
<b>Description</b>	Command to open the breaker. Output signal (pulse or continue) will depend on configuration in Breaker settings.

<b>Variable</b>	Excitation command [4680]
<b>Description</b>	Used for static paralleling: energizes the AVR excitation relay after startup of synchronized generator if nominal speed is reached, excitation will be disabled at stop or on protections.

<b>Variable</b>	Pre-start (Glow plugs & Auxiliaries) [4685]
<b>Description</b>	This output is used to activate the glow plugs or any auxiliary functions before starting (water preheating, pre-lubrication, etc.) output is active at start command for a defines timer (adjustable in timer menu) and release before cranking.

<b>Variable</b>	Smoke limit / Position limiting [4686]
<b>Description</b>	Smoke limit / Position limiting. Output will be activated from cranking to speed stabilisation. dedicated to activate a smoke limiter function on engine.

<b>Variable</b>	Damper [4687]
<b>Description</b>	Damping flap, activated during stop sequence untill reset in case of a fault resulting in a shut down.

<b>Variable</b>	Cooling fan [4688]
<b>Description</b>	Cooling fan output, activated if the water temperature is above the Cooling fan activation threshold parameter (Configuration/engine menu)

<b>Variable</b>	1st non essential trip [4689]
<b>Description</b>	In case Load Shedding function is used: Load 1 to be shed in first

<b>Variable</b>	2nd non essential trip [4690]
<b>Description</b>	In case Load Shedding function is used: Load 2 to be shed after load 1

## OPERATOR MANUAL

<b>Variable</b>	3rd non essential trip [4691]
<b>Description</b>	In case Load Shedding function is used: Load 3 to be shed after load 2

<b>Variable</b>	4th non essential trip [4692]
<b>Description</b>	In case Load Shedding function is used: Load 4 to be shed after load 3

<b>Variable</b>	5th non essential trip [4693]
<b>Description</b>	In case Load Shedding function is used: Load 5 to be shed after load 4

<b>Variable</b>	Idle speed [4704]
<b>Description</b>	Idle request on speed governor activated during 'Engine preheat timer' and optionally on cooling down if configured. Must be connect to idle speed input of speed regulation.

<b>Variable</b>	Ignition [4707]
<b>Description</b>	Ignition (Gas sequence). Output activated before starting sequence.

<b>Variable</b>	Battery boost DO [4709]
<b>Description</b>	Battery boost digital output. Activated with 'Boost battery' function (configuration/protection).

<b>Variable</b>	Faults reset [4737]
<b>Description</b>	Active when a Fault RESET is requested on controller.

## GENERATOR

<b>Variable</b>	Fail to close generator breaker [4154]
<b>Description</b>	Fault report: The automated system tried to close the circuit breaker without success

<b>Variable</b>	Fail to open generator breaker [4155]
<b>Description</b>	Fault report: The automated system tried to open the circuit breaker without success

<b>Variable</b>	Generator breaker open suddenly [4156]
<b>Description</b>	Fault report: The circuit breaker has opened without any request for opening from the automated system

<b>Variable</b>	Generator breaker close suddenly [4170]
<b>Description</b>	Fault report: The circuit breaker has closed without any request for closing from the automated system

<b>Variable</b>	Fail to stabilize speed [4477]
<b>Description</b>	Fault report: The speed is not stable, it is not maintained between 95% and 105% of the nominal speed

<b>Variable</b>	Fail to stabilize voltage [4478]
<b>Description</b>	Fault report: The voltage is not stable, it is not maintained between 95% and 105% of the nominal voltage

<b>Variable</b>	Generator breaker state [4650]
<b>Description</b>	Status report: Gives the state desired by the automated system for the circuit breaker (0: opening / 1: closing). Not to be confused with the closing command, whose behaviour depends on the configuration (Contact, Impulse, etc).

<b>Variable</b>	Generator ready [4670]
<b>Description</b>	Status report: Active when start sequence is successful and generator at its nominal frequency and voltage. The variable remains active until the engine is requested to stopped.



## OPERATOR MANUAL

<b>Variable</b>	Generator ready and breaker closed [4672]
<b>Description</b>	Status report: Active if generator(s) are producing

<b>Variable</b>	Generator stop [4673]
<b>Description</b>	Status report: Activated if generator is stopped (speed <10rpm)

## MAINS

<b>Variable</b>	Fail to close mains breaker [4157]
<b>Description</b>	Fault report: The automated system tried to close the circuit breaker without success

<b>Variable</b>	Fail to open mains breaker [4158]
<b>Description</b>	Fault report: The automated system tried to open the circuit breaker without success

<b>Variable</b>	Mains breaker open suddenly [4159]
<b>Description</b>	Fault report: The circuit breaker has opened without any request for opening from the automated system

<b>Variable</b>	Mains breaker close suddenly [4171]
<b>Description</b>	Fault report: The circuit breaker has closed without any request for closing from the automated system

<b>Variable</b>	Mains breaker state [4651]
<b>Description</b>	Status report: Gives the state desired by the automated system for the circuit breaker (0: opening / 1: closing). Not to be confused with the closing command, whose behaviour depends on the configuration (Contact, Impulse, etc).

<b>Variable</b>	Bus/Mains voltage presence [4703]
<b>Description</b>	Status report: Activated when mains is present, and valid (i.e after mains back delay [2009] occurred) and no mains electrical fault activated.

## ENGINE

<b>Variable</b>	Unexpected stop [4451]
<b>Description</b>	Fault report: The engine has stopped without a stop request from the automated system

<b>Variable</b>	Fail to stop engine [4472]
<b>Description</b>	Fault report: The automated system tried to stop the engine without success

<b>Variable</b>	Fail to start engine [4475]
<b>Description</b>	Fault report: The automated system tried to start the engine without success

## CAN BUS ECU/ECM

<b>Variable</b>	Protection Lamp [658]
<b>Description</b>	Protection Lamp status (PGN : 65226 / SPN: 987)

<b>Variable</b>	Amber Warning Lamp [659]
<b>Description</b>	Amber Warning Lamp status (PGN : 65226 / SPN: 624)

<b>Variable</b>	Red Stop Lamp [660]
<b>Description</b>	Red Stop Lamp status (PGN : 65226 / SPN: 623)

<b>Variable</b>	Malfunction Indicator Lamp [661]
<b>Description</b>	Malfunction Indicator Lamp status (PGN : 65226 / SPN: 1213)

<b>Variable</b>	MDEC module is alive [1200]
<b>Description</b>	MTU MDEC module is alive (NMT messages seen on dedicated CAN bus)

<b>Variable</b>	MDEC module communication error [1201]
<b>Description</b>	MTU MDEC module communication error (No NMT message on dedicated CAN bus)

<b>Variable</b>	Combined Alarm Yellow [1213]
<b>Description</b>	Combined Alarm Yellow - From MTU MDEC module

<b>Variable</b>	Combined Alarm Red [1214]
<b>Description</b>	Combined Alarm Red - From MTU MDEC module

## INPUTS/OUTPUTS

<b>Variable</b>	Input 1 (Customisable) [250]
<b>Description</b>	<p>Digital input n°1 of the product.                      Select a normally open polarity if the input is connected to 0V when the input should be considered active.                      Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.                      The validity indicates when the digital input should be taken into account.                      The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.                      The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 2 (Customisable) [251]
<b>Description</b>	<p>Digital input n°2 of the product.                      Select a normally open polarity if the input is connected to 0V when the input should be considered active.                      Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.                      The validity indicates when the digital input should be taken into account.                      The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.                      The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 3 (Customisable) [252]
<b>Description</b>	<p>Digital input n°3 of the product.                      Select a normally open polarity if the input is connected to 0V when the input should be considered active.                      Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.                      The validity indicates when the digital input should be taken into account.                      The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.                      The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

## OPERATOR MANUAL

<b>Variable</b>	Input 4 (Customisable) [253]
<b>Description</b>	<p>Digital input n°4 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 5 (Customisable) [254]
<b>Description</b>	<p>Digital input n°5 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 6 (Customisable) [255]
<b>Description</b>	<p>Digital input n°6 of the product.</p> <p>Select a normally open polarity if the input is connected to 0V when the input should be considered active.</p> <p>Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.</p> <p>The validity indicates when the digital input should be taken into account.</p> <p>The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.</p> <p>The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

## OPERATOR MANUAL

<b>Variable</b>	Input 7 (Customisable) [256]
<b>Description</b>	<p>Digital input n°7 of the product.            Select a normally open polarity if the input is connected to 0V when the input should be considered active.            Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.            The validity indicates when the digital input should be taken into account.            The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.            The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 8 (Customisable) [257]
<b>Description</b>	<p>Digital input n°8 of the product.            Select a normally open polarity if the input is connected to 0V when the input should be considered active.            Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.            The validity indicates when the digital input should be taken into account.            The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.            The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Input 9 (Customisable) [258]
<b>Description</b>	<p>Digital input n°9 of the product.            Select a normally open polarity if the input is connected to 0V when the input should be considered active.            Select a normally closed polarity if the input is connected to 0V when the input must be considered inactive.            The validity indicates when the digital input should be taken into account.            The T ON delay allows you to add a delay between the moment when the digital input is physically activated and the moment when the product considers it active for the automated system.            The T OFF time delay allows you to add a delay between the moment when the digital input is physically disabled and the moment when the product considers it inactive for the automated system.</p>

<b>Variable</b>	Analog 1 (Customisable) [259]
<b>Description</b>	Digital input 10 (Analog1 set as Digital input)

<b>Variable</b>	Analog 2 (Customisable) [260]
<b>Description</b>	Digital input 11 (Analog2 set as Digital input)

## OPERATOR MANUAL

<b>Variable</b>	Analog 3 (Customisable) [261]
<b>Description</b>	Digital input 12 (Analog3 set as Digital input)

<b>Variable</b>	Physical status of digital input 1 [953.0]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 2 [953.1]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 3 [953.2]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 4 [953.3]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 5 [953.4]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 6 [953.5]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 7 [953.6]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Physical status of digital input 8 [953.7]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)



## OPERATOR MANUAL

<b>Variable</b>	Physical status of digital input 9 [953.8]
<b>Description</b>	Physical state of the digital input (without application of polarity, validity and time delays)

<b>Variable</b>	Output 1 (Customisable) [4350]
<b>Description</b>	Real time displayed status of Digital Output 1

<b>Variable</b>	Output 2 (Customisable) [4351]
<b>Description</b>	Real time displayed status of Digital Output 2

<b>Variable</b>	Output 3 (Customisable) [4352]
<b>Description</b>	Real time displayed status of Digital Output 3

<b>Variable</b>	Output 4 (Customisable) [4353]
<b>Description</b>	Real time displayed status of Digital Output 4

<b>Variable</b>	Output 5 (Customisable) [4354]
<b>Description</b>	Real time displayed status of Digital Output 5

<b>Variable</b>	Output 6 (Customisable) [4355]
<b>Description</b>	Real time displayed status of Digital Output 6

<b>Variable</b>	Relay 1 (Customisable) [4356]
<b>Description</b>	Real time displayed status of Relay Output 1

<b>Variable</b>	Relay 2 (Customisable) [4357]
<b>Description</b>	Real time displayed status of Relay Output 2

## I/O CAN BUS EXPANSION

<b>Variable</b>	CANopen DI 1 (Customisable) [800]
<b>Description</b>	CANopen digital Input 1

<b>Variable</b>	CANopen DI 2 (Customisable) [801]
<b>Description</b>	CANopen digital Input 2

<b>Variable</b>	CANopen DI 3 (Customisable) [802]
<b>Description</b>	CANopen digital Input 3

<b>Variable</b>	CANopen DI 4 (Customisable) [803]
<b>Description</b>	CANopen digital Input 4

<b>Variable</b>	CANopen DI 5 (Customisable) [804]
<b>Description</b>	CANopen digital Input 5

<b>Variable</b>	CANopen DI 6 (Customisable) [805]
<b>Description</b>	CANopen digital Input 6

<b>Variable</b>	CANopen DI 7 (Customisable) [806]
<b>Description</b>	CANopen digital Input 7

<b>Variable</b>	CANopen DI 8 (Customisable) [807]
<b>Description</b>	CANopen digital Input 8

<b>Variable</b>	CANopen DI 9 (Customisable) [808]
<b>Description</b>	CANopen digital Input 9

<b>Variable</b>	CANopen DI 10 (Customisable) [809]
<b>Description</b>	CANopen digital Input 10

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 11 (Customisable) [810]
<b>Description</b>	CANopen digital Input 11

<b>Variable</b>	CANopen DI 12 (Customisable) [811]
<b>Description</b>	CANopen digital Input 12

<b>Variable</b>	CANopen DI 13 (Customisable) [812]
<b>Description</b>	CANopen digital Input 13

<b>Variable</b>	CANopen DI 14 (Customisable) [813]
<b>Description</b>	CANopen digital Input 14

<b>Variable</b>	CANopen DI 15 (Customisable) [814]
<b>Description</b>	CANopen digital Input 15

<b>Variable</b>	CANopen DI 16 (Customisable) [815]
<b>Description</b>	CANopen digital Input 16

<b>Variable</b>	CANopen DI 17 (Customisable) [816]
<b>Description</b>	CANopen digital Input 17

<b>Variable</b>	CANopen DI 18 (Customisable) [817]
<b>Description</b>	CANopen digital Input 18

<b>Variable</b>	CANopen DI 19 (Customisable) [818]
<b>Description</b>	CANopen digital Input 19

<b>Variable</b>	CANopen DI 20 (Customisable) [819]
<b>Description</b>	CANopen digital Input 20

<b>Variable</b>	CANopen DI 21 (Customisable) [820]
<b>Description</b>	CANopen digital Input 21

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 22 (Customisable) [821]
<b>Description</b>	CANopen digital Input 22

<b>Variable</b>	CANopen DI 23 (Customisable) [822]
<b>Description</b>	CANopen digital Input 23

<b>Variable</b>	CANopen DI 24 (Customisable) [823]
<b>Description</b>	CANopen digital Input 24

<b>Variable</b>	CANopen DI 25 (Customisable) [824]
<b>Description</b>	CANopen digital Input 25

<b>Variable</b>	CANopen DI 26 (Customisable) [825]
<b>Description</b>	CANopen digital Input 26

<b>Variable</b>	CANopen DI 27 (Customisable) [826]
<b>Description</b>	CANopen digital Input 27

<b>Variable</b>	CANopen DI 28 (Customisable) [827]
<b>Description</b>	CANopen digital Input 28

<b>Variable</b>	CANopen DI 29 (Customisable) [828]
<b>Description</b>	CANopen digital Input 29

<b>Variable</b>	CANopen DI 30 (Customisable) [829]
<b>Description</b>	CANopen digital Input 30

<b>Variable</b>	CANopen DI 31 (Customisable) [830]
<b>Description</b>	CANopen digital Input 31

<b>Variable</b>	CANopen DI 32 (Customisable) [831]
<b>Description</b>	CANopen digital Input 32

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 33 (Customisable) [1250]
<b>Description</b>	CANopen digital Input 33

<b>Variable</b>	CANopen DI 34 (Customisable) [1251]
<b>Description</b>	CANopen digital Input 34

<b>Variable</b>	CANopen DI 35 (Customisable) [1252]
<b>Description</b>	CANopen digital Input 35

<b>Variable</b>	CANopen DI 36 (Customisable) [1253]
<b>Description</b>	CANopen digital Input 36

<b>Variable</b>	CANopen DI 37 (Customisable) [1254]
<b>Description</b>	CANopen digital Input 37

<b>Variable</b>	CANopen DI 38 (Customisable) [1255]
<b>Description</b>	CANopen digital Input 38

<b>Variable</b>	CANopen DI 39 (Customisable) [1256]
<b>Description</b>	CANopen digital Input 39

<b>Variable</b>	CANopen DI 40 (Customisable) [1257]
<b>Description</b>	CANopen digital Input 40

<b>Variable</b>	CANopen DI 41 (Customisable) [1258]
<b>Description</b>	CANopen digital Input 41

<b>Variable</b>	CANopen DI 42 (Customisable) [1259]
<b>Description</b>	CANopen digital Input 42

<b>Variable</b>	CANopen DI 43 (Customisable) [1260]
<b>Description</b>	CANopen digital Input 43

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 44 (Customisable) [1261]
<b>Description</b>	CANopen digital Input 44

<b>Variable</b>	CANopen DI 45 (Customisable) [1262]
<b>Description</b>	CANopen digital Input 45

<b>Variable</b>	CANopen DI 46 (Customisable) [1263]
<b>Description</b>	CANopen digital Input 46

<b>Variable</b>	CANopen DI 47 (Customisable) [1264]
<b>Description</b>	CANopen digital Input 47

<b>Variable</b>	CANopen DI 48 (Customisable) [1265]
<b>Description</b>	CANopen digital Input 48

<b>Variable</b>	CANopen DI 49 (Customisable) [1266]
<b>Description</b>	CANopen digital Input 49

<b>Variable</b>	CANopen DI 50 (Customisable) [1267]
<b>Description</b>	CANopen digital Input 50

<b>Variable</b>	CANopen DI 51 (Customisable) [1268]
<b>Description</b>	CANopen digital Input 51

<b>Variable</b>	CANopen DI 52 (Customisable) [1269]
<b>Description</b>	CANopen digital Input 52

<b>Variable</b>	CANopen DI 53 (Customisable) [1270]
<b>Description</b>	CANopen digital Input 53

<b>Variable</b>	CANopen DI 54 (Customisable) [1271]
<b>Description</b>	CANopen digital Input 54

## OPERATOR MANUAL

<b>Variable</b>	CANopen DI 55 (Customisable) [1272]
<b>Description</b>	CANopen digital Input 55

<b>Variable</b>	CANopen DI 56 (Customisable) [1273]
<b>Description</b>	CANopen digital Input 56

<b>Variable</b>	CANopen DI 57 (Customisable) [1274]
<b>Description</b>	CANopen digital Input 57

<b>Variable</b>	CANopen DI 58 (Customisable) [1275]
<b>Description</b>	CANopen digital Input 58

<b>Variable</b>	CANopen DI 59 (Customisable) [1276]
<b>Description</b>	CANopen digital Input 59

<b>Variable</b>	CANopen DI 60 (Customisable) [1277]
<b>Description</b>	CANopen digital Input 60

<b>Variable</b>	CANopen DI 61 (Customisable) [1278]
<b>Description</b>	CANopen digital Input 61

<b>Variable</b>	CANopen DI 62 (Customisable) [1279]
<b>Description</b>	CANopen digital Input 62

<b>Variable</b>	CANopen DI 63 (Customisable) [1280]
<b>Description</b>	CANopen digital Input 63

<b>Variable</b>	CANopen DI 64 (Customisable) [1281]
<b>Description</b>	CANopen digital Input 64

<b>Variable</b>	CANopen DO 1 (Customisable) [4751]
<b>Description</b>	CANopen digital output 1

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 2 (Customisable) [4752]
<b>Description</b>	CANopen digital output 2

<b>Variable</b>	CANopen DO 3 (Customisable) [4753]
<b>Description</b>	CANopen digital output 3

<b>Variable</b>	CANopen DO 4 (Customisable) [4754]
<b>Description</b>	CANopen digital output 4

<b>Variable</b>	CANopen DO 5 (Customisable) [4755]
<b>Description</b>	CANopen digital output 5

<b>Variable</b>	CANopen DO 6 (Customisable) [4756]
<b>Description</b>	CANopen digital output 6

<b>Variable</b>	CANopen DO 7 (Customisable) [4757]
<b>Description</b>	CANopen digital output 7

<b>Variable</b>	CANopen DO 8 (Customisable) [4758]
<b>Description</b>	CANopen digital output 8

<b>Variable</b>	CANopen DO 9 (Customisable) [4759]
<b>Description</b>	CANopen digital output 9

<b>Variable</b>	CANopen DO 10 (Customisable) [4760]
<b>Description</b>	CANopen digital output 10

<b>Variable</b>	CANopen DO 11 (Customisable) [4761]
<b>Description</b>	CANopen digital output 11

<b>Variable</b>	CANopen DO 12 (Customisable) [4762]
<b>Description</b>	CANopen digital output 12



## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 13 (Customisable) [4763]
<b>Description</b>	CANopen digital output 13

<b>Variable</b>	CANopen DO 14 (Customisable) [4764]
<b>Description</b>	CANopen digital output 14

<b>Variable</b>	CANopen DO 15 (Customisable) [4765]
<b>Description</b>	CANopen digital output 15

<b>Variable</b>	CANopen DO 16 (Customisable) [4766]
<b>Description</b>	CANopen digital output 16

<b>Variable</b>	CANopen DO 17 (Customisable) [4767]
<b>Description</b>	CANopen digital output 17

<b>Variable</b>	CANopen DO 18 (Customisable) [4768]
<b>Description</b>	CANopen digital output 18

<b>Variable</b>	CANopen DO 19 (Customisable) [4769]
<b>Description</b>	CANopen digital output 19

<b>Variable</b>	CANopen DO 20 (Customisable) [4770]
<b>Description</b>	CANopen digital output 20

<b>Variable</b>	CANopen DO 21 (Customisable) [4771]
<b>Description</b>	CANopen digital output 21

<b>Variable</b>	CANopen DO 22 (Customisable) [4772]
<b>Description</b>	CANopen digital output 22

<b>Variable</b>	CANopen DO 23 (Customisable) [4773]
<b>Description</b>	CANopen digital output 23

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 24 (Customisable) [4774]
<b>Description</b>	CANopen digital output 24

<b>Variable</b>	CANopen DO 25 (Customisable) [4775]
<b>Description</b>	CANopen digital output 25

<b>Variable</b>	CANopen DO 26 (Customisable) [4776]
<b>Description</b>	CANopen digital output 26

<b>Variable</b>	CANopen DO 27 (Customisable) [4777]
<b>Description</b>	CANopen digital output 27

<b>Variable</b>	CANopen DO 28 (Customisable) [4778]
<b>Description</b>	CANopen digital output 28

<b>Variable</b>	CANopen DO 29 (Customisable) [4779]
<b>Description</b>	CANopen digital output 29

<b>Variable</b>	CANopen DO 30 (Customisable) [4780]
<b>Description</b>	CANopen digital output 30

<b>Variable</b>	CANopen DO 31 (Customisable) [4781]
<b>Description</b>	CANopen digital output 31

<b>Variable</b>	CANopen DO 32 (Customisable) [4782]
<b>Description</b>	CANopen digital output 32

<b>Variable</b>	CANopen DO 33 (Customisable) [5100]
<b>Description</b>	CANopen digital output 33

<b>Variable</b>	CANopen DO 34 (Customisable) [5101]
<b>Description</b>	CANopen digital output 34

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 35 (Customisable) [5102]
<b>Description</b>	CANopen digital output 35

<b>Variable</b>	CANopen DO 36 (Customisable) [5103]
<b>Description</b>	CANopen digital output 36

<b>Variable</b>	CANopen DO 37 (Customisable) [5104]
<b>Description</b>	CANopen digital output 37

<b>Variable</b>	CANopen DO 38 (Customisable) [5105]
<b>Description</b>	CANopen digital output 38

<b>Variable</b>	CANopen DO 39 (Customisable) [5106]
<b>Description</b>	CANopen digital output 39

<b>Variable</b>	CANopen DO 40 (Customisable) [5107]
<b>Description</b>	CANopen digital output 40

<b>Variable</b>	CANopen DO 41 (Customisable) [5108]
<b>Description</b>	CANopen digital output 41

<b>Variable</b>	CANopen DO 42 (Customisable) [5109]
<b>Description</b>	CANopen digital output 42

<b>Variable</b>	CANopen DO 43 (Customisable) [5110]
<b>Description</b>	CANopen digital output 43

<b>Variable</b>	CANopen DO 44 (Customisable) [5111]
<b>Description</b>	CANopen digital output 44

<b>Variable</b>	CANopen DO 45 (Customisable) [5112]
<b>Description</b>	CANopen digital output 45

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 46 (Customisable) [5113]
<b>Description</b>	CANopen digital output 46

<b>Variable</b>	CANopen DO 47 (Customisable) [5114]
<b>Description</b>	CANopen digital output 47

<b>Variable</b>	CANopen DO 48 (Customisable) [5115]
<b>Description</b>	CANopen digital output 48

<b>Variable</b>	CANopen DO 49 (Customisable) [5116]
<b>Description</b>	CANopen digital output 49

<b>Variable</b>	CANopen DO 50 (Customisable) [5117]
<b>Description</b>	CANopen digital output 50

<b>Variable</b>	CANopen DO 51 (Customisable) [5118]
<b>Description</b>	CANopen digital output 51

<b>Variable</b>	CANopen DO 52 (Customisable) [5119]
<b>Description</b>	CANopen digital output 52

<b>Variable</b>	CANopen DO 53 (Customisable) [5120]
<b>Description</b>	CANopen digital output 53

<b>Variable</b>	CANopen DO 54 (Customisable) [5121]
<b>Description</b>	CANopen digital output 54

<b>Variable</b>	CANopen DO 55 (Customisable) [5122]
<b>Description</b>	CANopen digital output 55

<b>Variable</b>	CANopen DO 56 (Customisable) [5123]
<b>Description</b>	CANopen digital output 56

## OPERATOR MANUAL

<b>Variable</b>	CANopen DO 57 (Customisable) [5124]
<b>Description</b>	CANopen digital output 57

<b>Variable</b>	CANopen DO 58 (Customisable) [5125]
<b>Description</b>	CANopen digital output 58

<b>Variable</b>	CANopen DO 59 (Customisable) [5126]
<b>Description</b>	CANopen digital output 59

<b>Variable</b>	CANopen DO 60 (Customisable) [5127]
<b>Description</b>	CANopen digital output 60

<b>Variable</b>	CANopen DO 61 (Customisable) [5128]
<b>Description</b>	CANopen digital output 61

<b>Variable</b>	CANopen DO 62 (Customisable) [5129]
<b>Description</b>	CANopen digital output 62

<b>Variable</b>	CANopen DO 63 (Customisable) [5130]
<b>Description</b>	CANopen digital output 63

<b>Variable</b>	CANopen DO 64 (Customisable) [5131]
<b>Description</b>	CANopen digital output 64

## GENERATOR PROTECTIONS

<b>Variable</b>	Mismatch rotophases level 1 [4053.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mismatch rotophases level 2 [4053.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Minimum AVR output level 2 [4211.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Maximum AVR output level 1 [4212.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Maximum AVR output level 2 [4212.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator over frequency level 1 [4250.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator over frequency level 2 [4250.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator under frequency level 1 [4251.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator under frequency level 2 [4251.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator over voltage level 1 [4252.0]
<b>Description</b>	Active when the level 1 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Generator over voltage level 2 [4252.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator under voltage level 1 [4253.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator under voltage level 2 [4253.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator minimum KW level 1 [4254.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator minimum KW level 2 [4254.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator maximum KW level 1 [4255.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator maximum KW level 2 [4255.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator reverse KW level 1 [4256.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator reverse KW level 2 [4256.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator minimum KVAR level 1 [4257.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator minimum KVAR level 2 [4257.1]
<b>Description</b>	Active when the level 2 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Generator maximum KVAR level 1 [4258.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator maximum KVAR level 2 [4258.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator reverse KVAR level 1 [4259.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator reverse KVAR level 2 [4259.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator maximum current level 1 [4260.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator maximum current level 2 [4260.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator maximum neutral current level 1 [4261.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator maximum neutral current level 2 [4261.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator short-circuit level 1 [4262.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator short-circuit level 2 [4262.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator earth fault current level 1 [4267.0]
<b>Description</b>	Active when the level 1 protection triggered.



## OPERATOR MANUAL

<b>Variable</b>	Generator earth fault current level 2 [4267.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator voltage unbalance level 1 [4268.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator voltage unbalance level 2 [4268.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator current unbalance level 1 [4269.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator current unbalance level 2 [4269.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Generator rotophase level 1 [4272.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Generator rotophase level 2 [4272.1]
<b>Description</b>	Active when the level 2 protection triggered.

## MAINS PROTECTIONS

<b>Variable</b>	Mains over frequency level 1 [4300.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains over frequency level 2 [4300.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains under frequency level 1 [4301.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains under frequency level 2 [4301.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains over voltage level 1 [4302.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains over voltage level 2 [4302.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains under voltage level 1 [4303.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains under voltage level 2 [4303.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains minimum KW level 1 [4304.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains minimum KW level 2 [4304.1]
<b>Description</b>	Active when the level 2 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Mains maximum KW level 1 [4305.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains maximum KW level 2 [4305.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains reverse KW level 1 [4306.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains reverse KW level 2 [4306.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains minimum KVAR level 1 [4307.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains minimum KVAR level 2 [4307.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains maximum KVAR level 1 [4308.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains maximum KVAR level 2 [4308.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains reverse KVAR level 1 [4309.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains reverse KVAR level 2 [4309.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains voltage unbalance level 1 [4314.0]
<b>Description</b>	Active when the level 1 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Mains voltage unbalance level 2 [4314.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Mains rotophase level 1 [4318.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Mains rotophase level 2 [4318.1]
<b>Description</b>	Active when the level 2 protection triggered.

## ENGINE PROTECTIONS

<b>Variable</b>	Engine over speed level 1 [4200.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Engine over speed level 2 [4200.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Engine under speed level 1 [4201.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Engine under speed level 2 [4201.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Battery minimum voltage level 1 [4202.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Battery minimum voltage level 2 [4202.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Battery maximum voltage level 1 [4203.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Battery maximum voltage level 2 [4203.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Engine minimum oil pressure level 1 [4204.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Engine minimum oil pressure level 2 [4204.1]
<b>Description</b>	Active when the level 2 protection triggered.

## OPERATOR MANUAL

<b>Variable</b>	Engine maximum water temperature level 1 [4205.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Engine maximum water temperature level 2 [4205.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Minimum speed output level 2 [4209.1]
<b>Description</b>	Active when the level 2 protection triggered.

<b>Variable</b>	Maximum speed output level 1 [4210.0]
<b>Description</b>	Active when the level 1 protection triggered.

<b>Variable</b>	Maximum speed output level 2 [4210.1]
<b>Description</b>	Active when the level 2 protection triggered.

## COMMUNICATION

<b>Variable</b>	J1939 Fault [650]
<b>Description</b>	Communication with ECU cannot be established. Check ECU wiring and power supply.

<b>Variable</b>	Modbus server (Customisable) [904]
<b>Description</b>	Modbus server connection timeout. The associated label can be changed for display when the error occurs.

<b>Variable</b>	CANopen fault [4750]
<b>Description</b>	Communication with I/O extension cannot be established. Check the wiring and power supply of the CANopen extension module

## STATUSES

<b>Variable</b>	Phase sequence match [306]
<b>Description</b>	Identical phase order on both sides of the circuit breaker (OK = 1 or NOK = 0)

<b>Variable</b>	Engine start [4006]
<b>Description</b>	Active if the automated system wants to start the engine. Inactive if the automated system wants to stop the engine.

<b>Variable</b>	Production request [4007]
<b>Description</b>	Active if the automated system wants to produce power with the generator(s). Inactive if the automated system does not want to produce power with the generator(s).

<b>Variable</b>	Generator electrical fault summary [4656]
<b>Description</b>	Fault report: Active if at least one protection configured as a generator electrical fault is active.

<b>Variable</b>	Mains electrical fault summary [4657]
<b>Description</b>	Fault report: Active if at least one protection configured as a mains electrical fault is active.

<b>Variable</b>	Alarms summary [4658]
<b>Description</b>	Fault report: Active if at least one protection configured as an alarm is active.

<b>Variable</b>	Soft shut down summary [4659]
<b>Description</b>	Fault report: Active if at least one protection configured as Soft shut down is active.

<b>Variable</b>	Hard shut down summary [4660]
<b>Description</b>	Fault report: Active if at least one protection configured as Hard shut down is active.

<b>Variable</b>	Default LED [4664]
<b>Description</b>	Status report: Active if the fault LED on the front of the product is lit (active on fault, reset on acknowledge and reset command).



## OPERATOR MANUAL

<b>Variable</b>	Alarm LED [4665]
<b>Description</b>	Status report: Active if the alarm LED on the front of the product is lit (active on alarm, reset on acknowledge and reset command).

<b>Variable</b>	Auto mode LED [4666]
<b>Description</b>	Status report: Active if the Auto mode LED on the front of the product is lit

<b>Variable</b>	Test mode LED [4667]
<b>Description</b>	Status report: Active if the Test mode LED on the front of the product is lit

<b>Variable</b>	Manu mode LED [4668]
<b>Description</b>	Status report: Active if the Manu mode LED on the front of the product is lit

<b>Variable</b>	Generator LED [4669]
<b>Description</b>	Status report: Active if the Generator LED on the front of the product is lit (active when speed is detected)

<b>Variable</b>	Protection validation [4681]
<b>Description</b>	Status report: Active when all protections are activated after starting sequence (Under frequency, under voltage, oil pressure, temperature, etc...)

<b>Variable</b>	Override ON (Fault is currently inhibited) [4708]
<b>Description</b>	Status report: Override mode is ON, at least one protection is currently inhibited by the override mode

<b>Variable</b>	Mains failure summary [4731]
<b>Description</b>	Active if at least one protection configured as Mains failure is activate.

<b>Variable</b>	Generator breaker LED [4734]
<b>Description</b>	Status report: Active if the Generator breaker LED on the front of the product is lit

<b>Variable</b>	Mains breaker LED [4735]
<b>Description</b>	Status report: Active if the Mains breaker LED on the front of the product is lit

## OPERATOR MANUAL

<b>Variable</b>	Mains LED [4736]
<b>Description</b>	Status report: Active if the Mains LED on the front of the product is lit (voltage presence on Mains)

## HYSTERESIS

<b>Variable</b>	Hysteresis 1 output [4710]
<b>Description</b>	Activation of analog Hysteresis function n°1, configuration of function is in Configuration/programming/Hysteresis

<b>Variable</b>	Hysteresis 2 output [4711]
<b>Description</b>	Activation of analog Hysteresis function n°2, configuration of function is in Configuration/programming/Hysteresis

<b>Variable</b>	Hysteresis 3 output [4712]
<b>Description</b>	Activation of analog Hysteresis function n°3, configuration of function is in Configuration/programming/Hysteresis

<b>Variable</b>	Hysteresis output activation on DI1 [4713]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°1. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI2 [4714]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°2. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI3 [4715]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°3. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI4 [4716]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°4. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI5 [4717]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°5. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI6 [4718]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°6. Function is managed by configurable low/high digital inputs in Digital Input menu.

## OPERATOR MANUAL

<b>Variable</b>	Hysteresis output activation on DI7 [4719]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°7. Function is managed by configurable low/high digital inputs in Digital Input menu.

<b>Variable</b>	Hysteresis output activation on DI8 [4720]
<b>Description</b>	Output activation for 'Hysteresis on digital input' n°8. Function is managed by configurable low/high digital inputs in Digital Input menu.

## REMOTE BUTTONS

<b>Variable</b>	Shift button [951.0]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Right arrow button [951.1]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Down arrow button [951.2]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Left arrow button [951.3]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Up arrow button [951.4]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Enter button [951.5]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Esc button [951.6]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Fault/Alarm/info button [951.7]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Mains breaker button [951.8]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Generator breaker button [951.9]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

## OPERATOR MANUAL

<b>Variable</b>	Stop button [951.10]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Start button [951.11]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Man button [951.12]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Test button [951.13]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.

<b>Variable</b>	Auto button [951.14]
<b>Description</b>	Active (1) if the button is pressed. Inactive (0) otherwise.